


FAMO SD.KFZ.9/18 TON HALFTRACK

德国18吨“法莫”半履带车

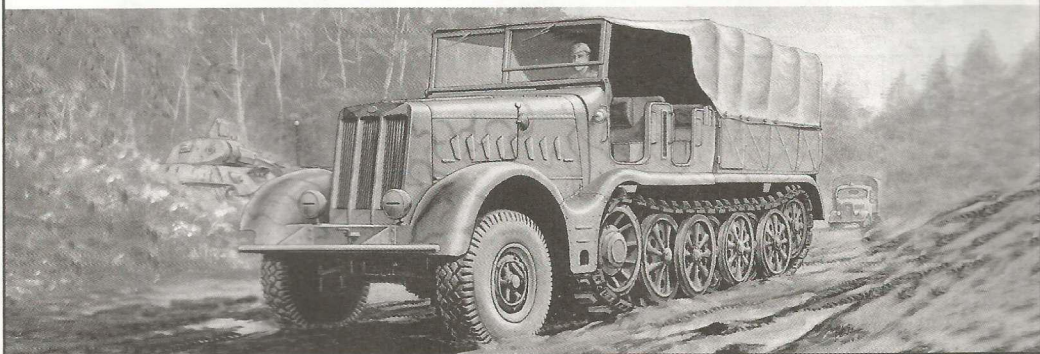

READ BEFORE ASSEMBLY:

- This kit is not recommended for inexperienced modelers or for children under 14 years of age
- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.
- Keep out of reach of children. They must not be allowed to ingest small parts or handle plastic bags in any way.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。
- 谨防小孩吸吮塑料零件，或者将塑料袋套在头上，制作时应将套材远离小孩接触。
- 本产品不适合14岁以下没有经验的模型爱好者

cyanoacrylate glue
使用强力胶weight
配重make hole
钻孔cut / remove
切除bend
弯曲file / sand
锉平option
选择no cement
不涂胶水decal
贴纸

水贴纸的使用:

1. 从水贴上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干净布上.
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 气泡消失.


DECAL APPLICATION

1. Cut off decal from sheet.
2. Dip the decal in tepid water 40°C for about 10 sec. and place on a clean cloth.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.


部品图 Parts

A


<<履带>>X2
TrackX2

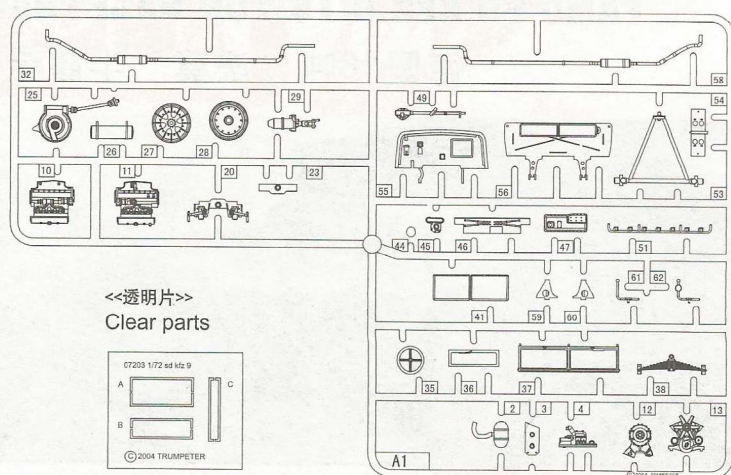


<<透明片>>
Clear parts




C

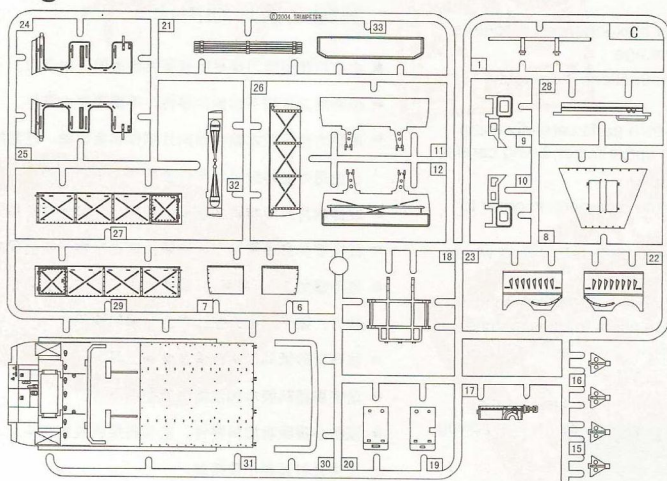


<<车架>>
Chassis



D

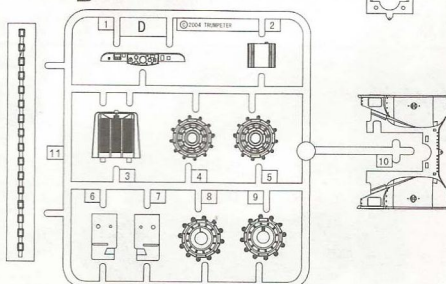


BX2

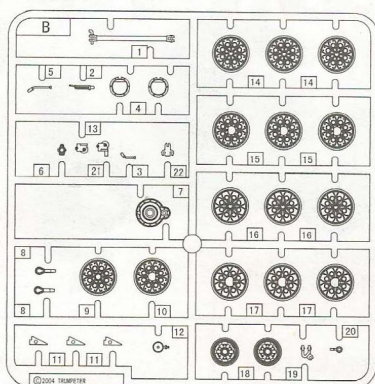

<<水贴纸>> <<棉绳>> ϕ 0.5X450mm 轮胎x3
Decal Rope ϕ 0.5X450mm Tirex3




EX4

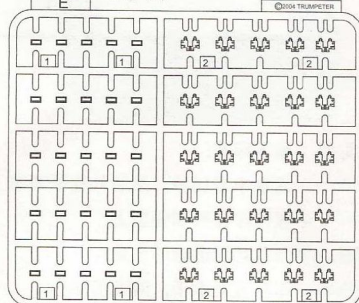

1


底盘组装 Chassis assembly

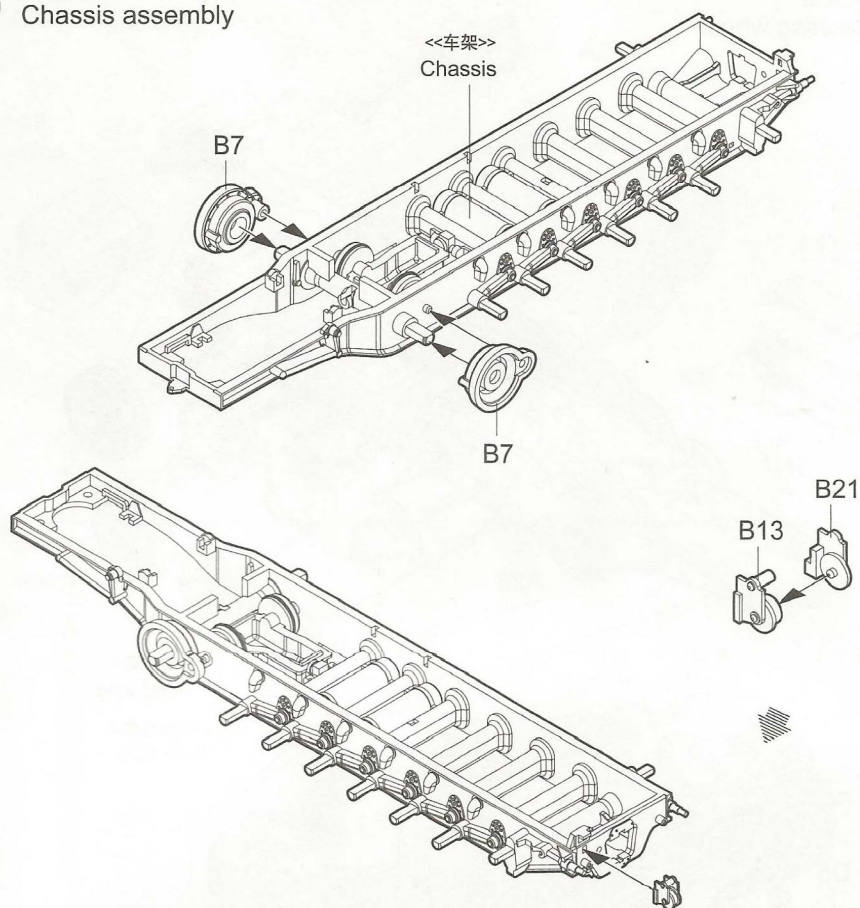


2

车轮组装 Assembly wheel

<<诱导轮>>
Idler wheel

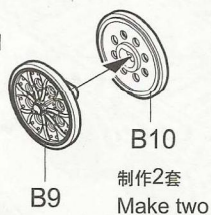






<<负重轮>>
Road wheel

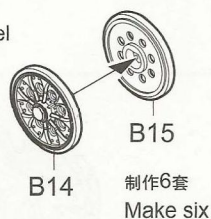

3


发动机组装 Engine assembly

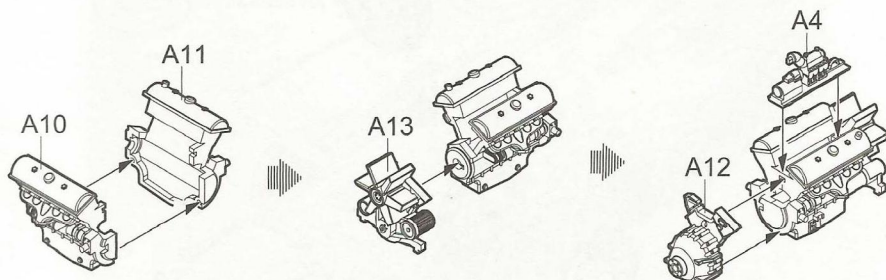

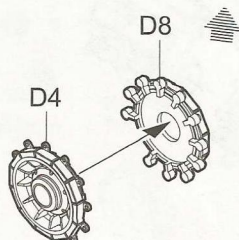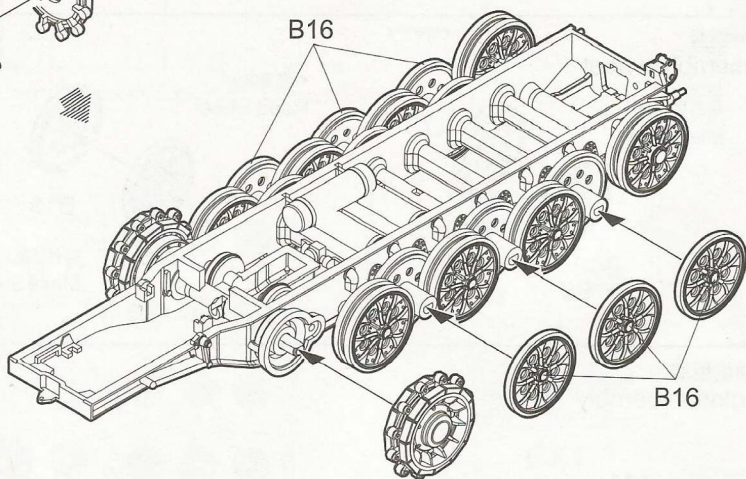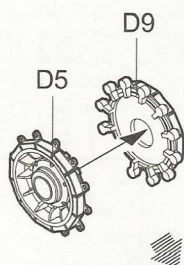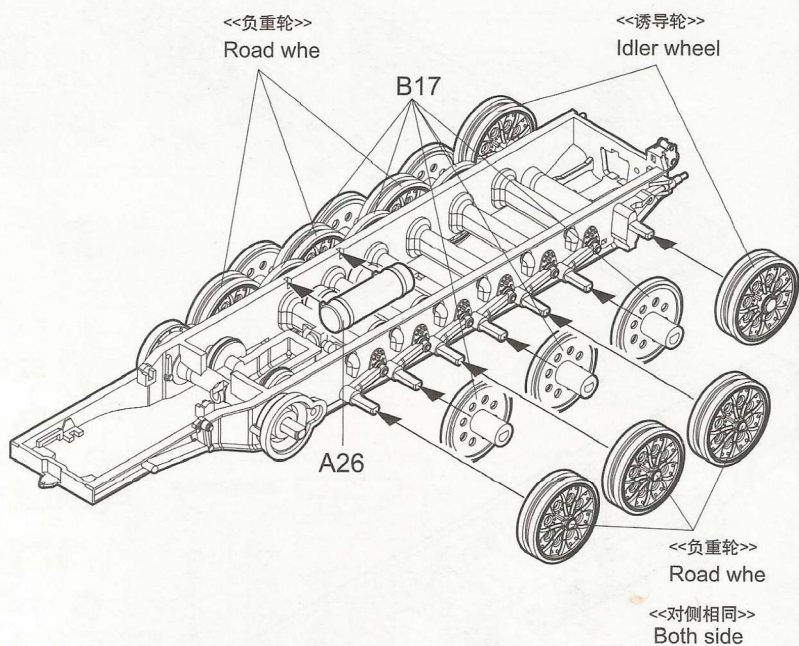


5

发动机安装 Attaching enging

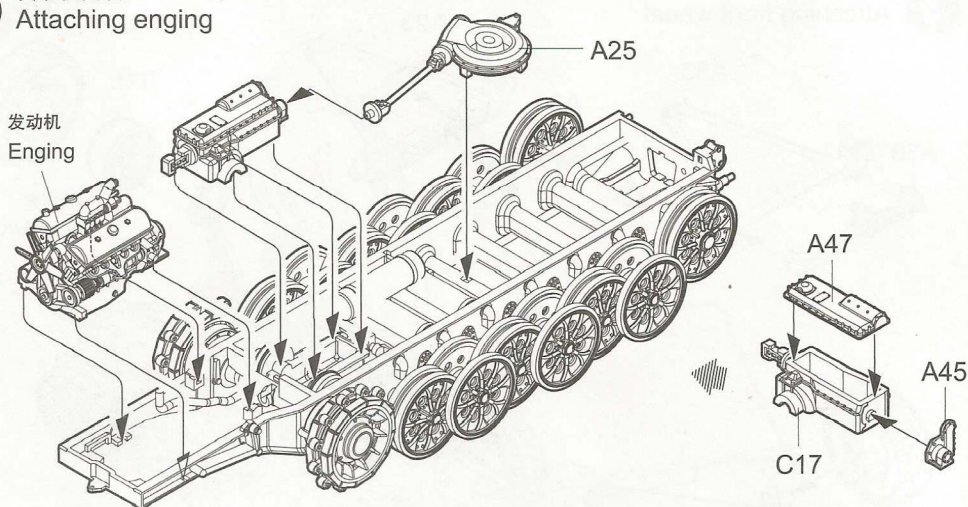

6


排气管安装 Attaching exhaust

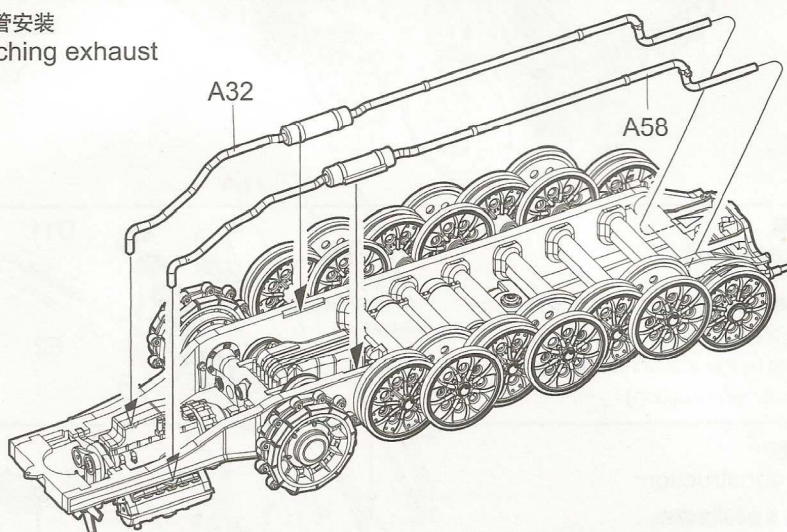

7

绞盘安装 Attaching winch


棉绳 $\varnothing 0.5 \times 350\text{mm}$
Rope $\varnothing 0.5 \times 350\text{mm}$

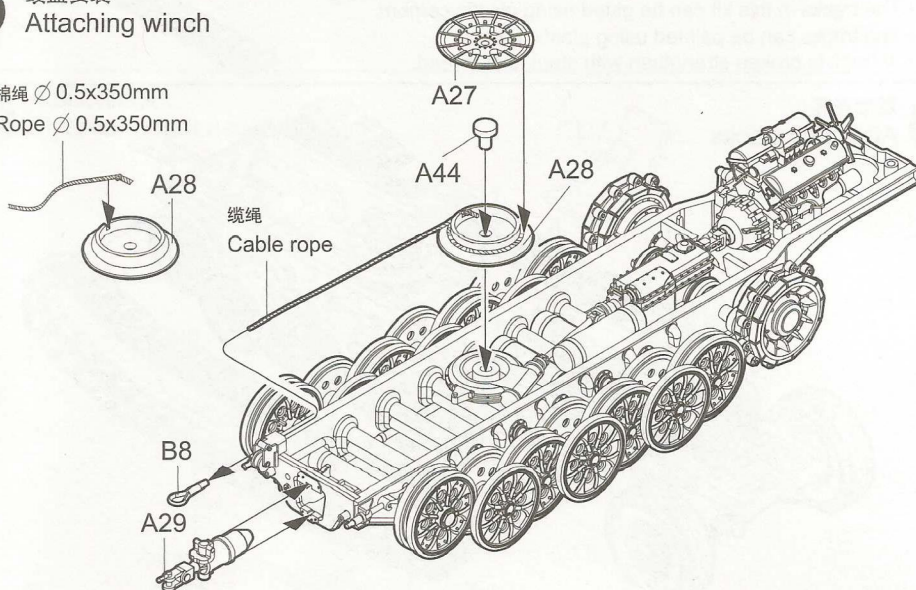

8

前轮安装

Attaching front wheel

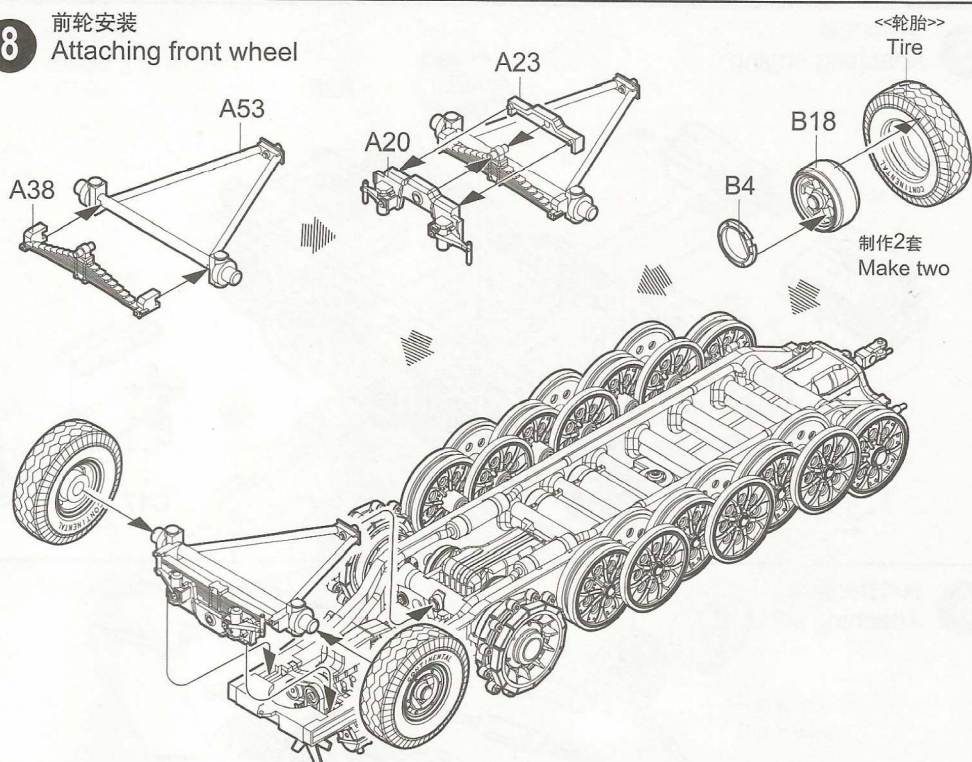


?

履带组装

Track assembly

根据实际要求选择履带节数。(47-49节)

Choose the track stanza the number according to the actual request.(forty seven-forty nine section)

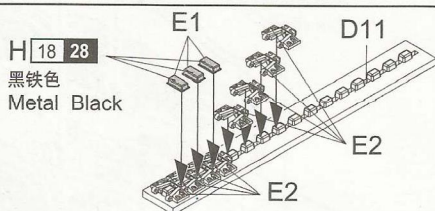


?

履带联接

Track construction


- * 履带可用塑料胶水粘合。
- * 履带可用模型油漆喷涂。
- * 若履带断裂，用细丝线固定。
- * The tracks in this kit can be glued using plastic cement.
- * The tracks can be painted using plastic paints.
- * If track is broken strengthen with staples or thread.

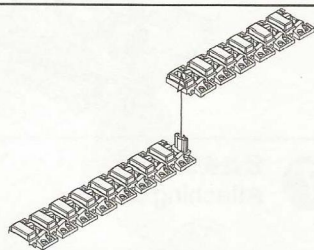



9

履带安装


Attaching tracks

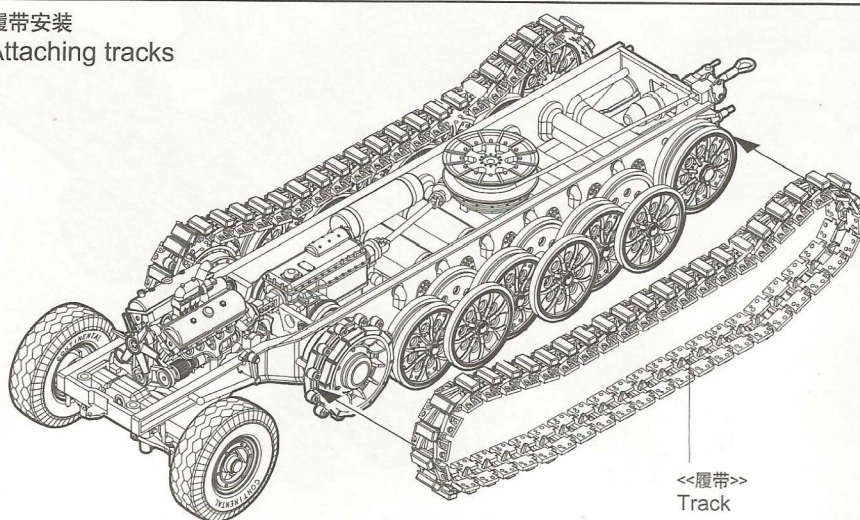


10 驾驶室组装
Cab assembly

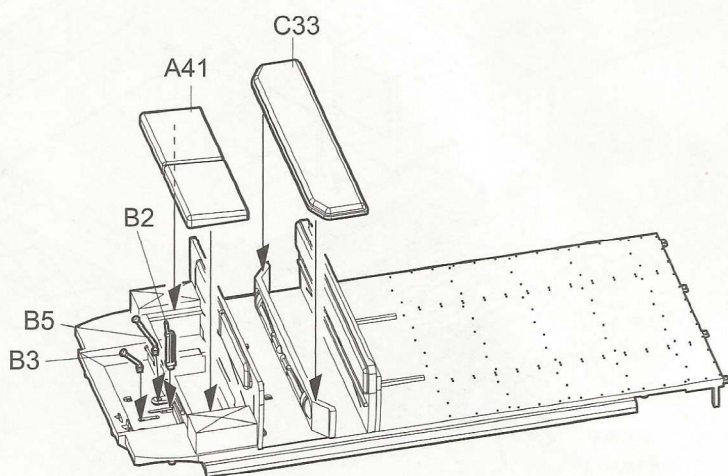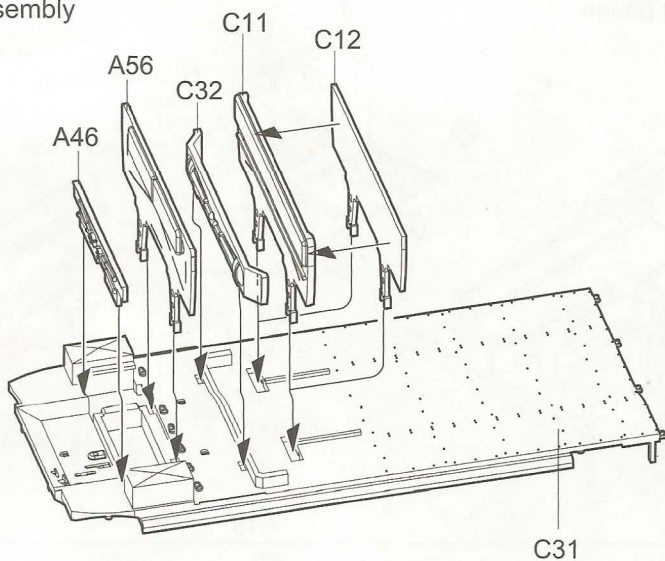


11 车厢支柱组装
Flatbed mount assembly

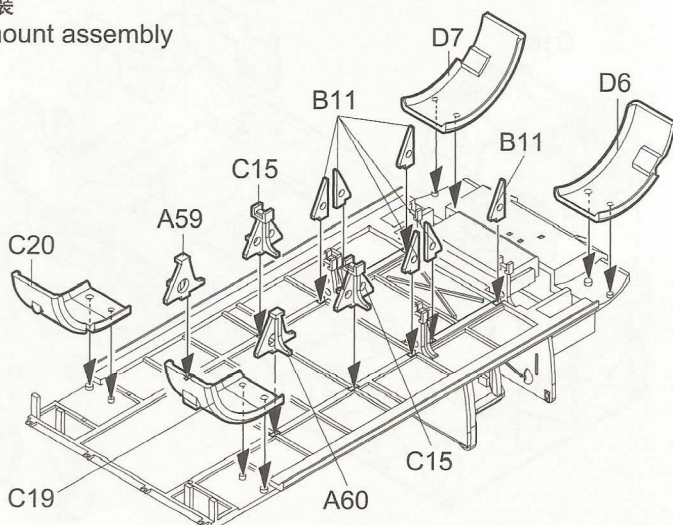


12 仪表板安装 Attaching gauge

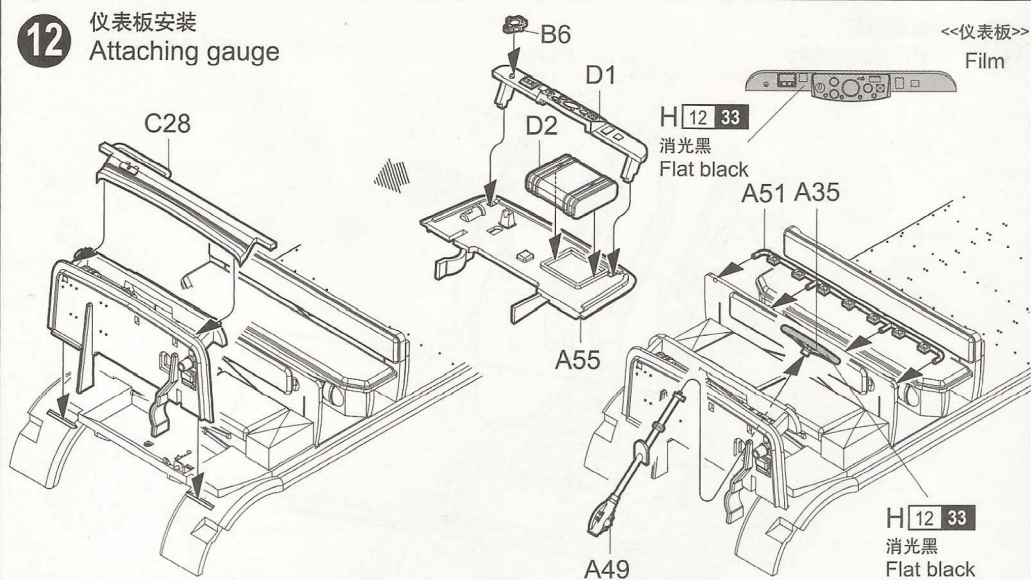

13 车厢组装 Trunk assembly

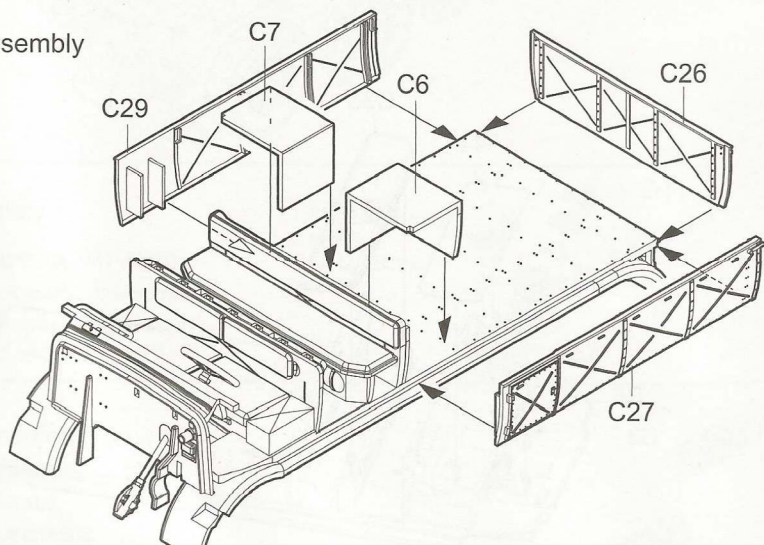


14 备用车轮安装 Attaching spare wheel

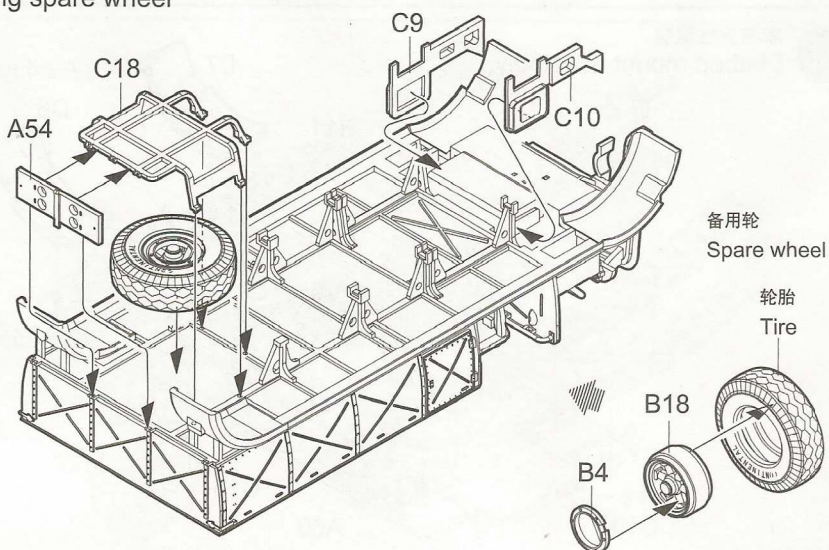




15 车体安装 Attaching bodywork

H 11 62


哑光白
Flat white

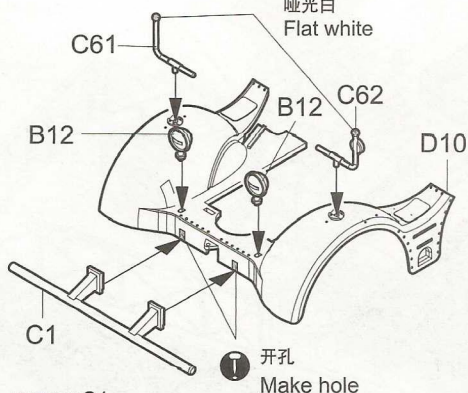

车体上部
Upper hull

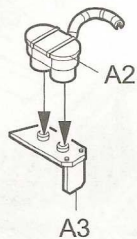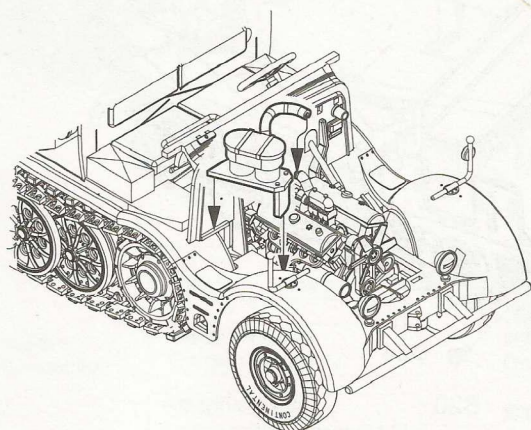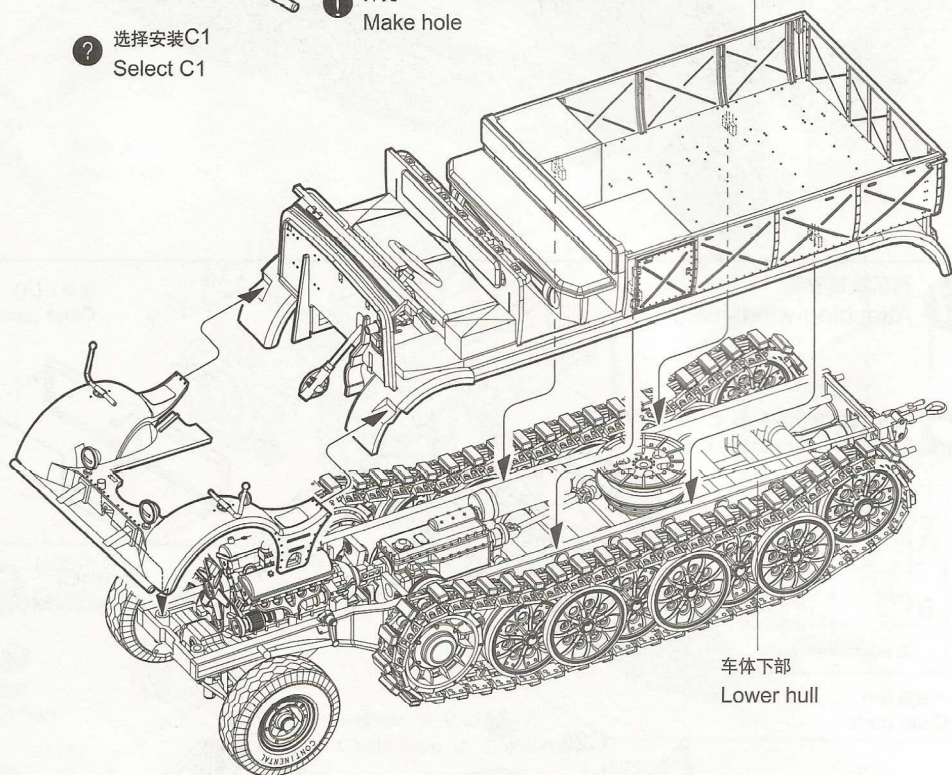


16 盖板安装 Attaching cover plank


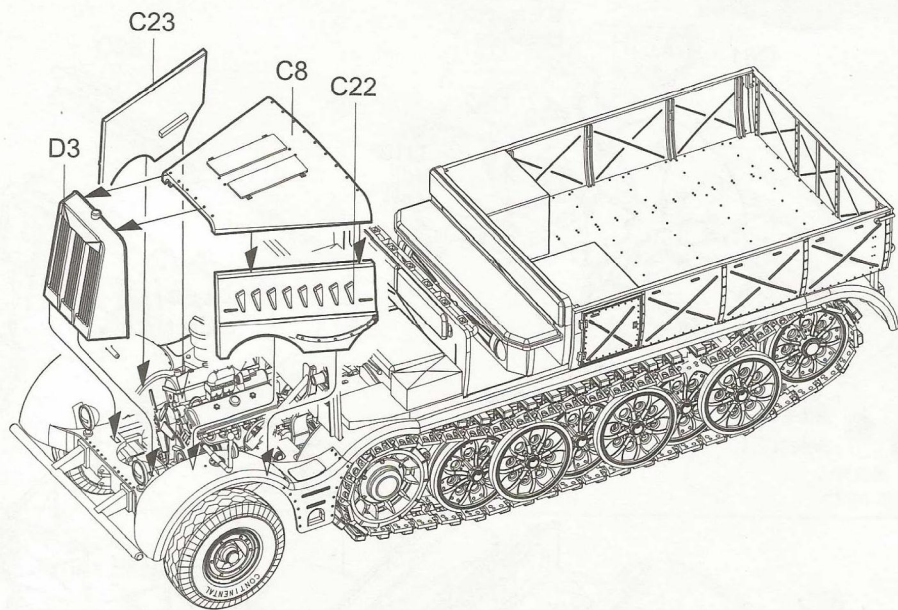


17 挡风玻璃安装 Attaching windshield

用小刀切下透明片A.B.C
Cut out Clear part A.B.C

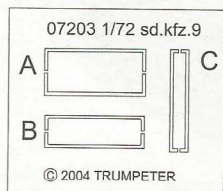

<<透明片>>
Clear parts

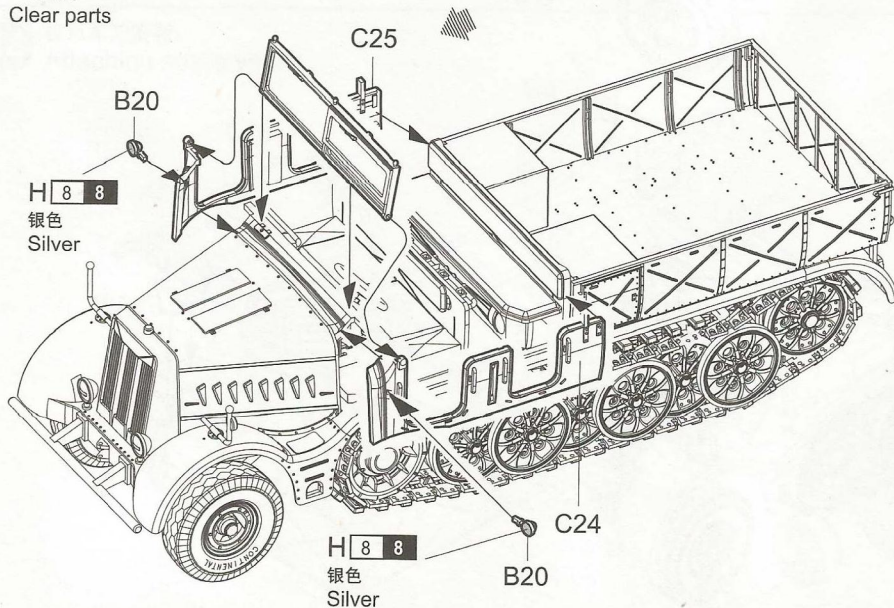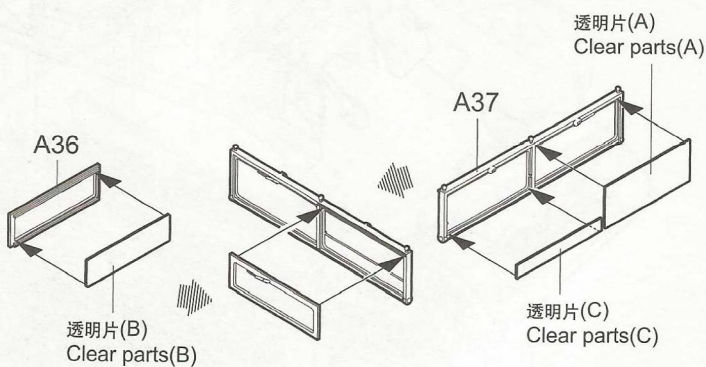

18 车体附件安装 Attaching body parts

选择
Option

<<自备>>
Provide for oneself

<<铜丝>> ϕ 0.5x57mm
Wire ϕ 0.5x57mm



C30

制作5件
Make five

C21


<<收纳状态>>
Folded

<<铜丝>>
Wire

19 拖接坦克车 Draw-bar connection

选择
Option


<<缆绳>> ϕ 0.5x65mm
Cable rope ϕ 0.5x65mm

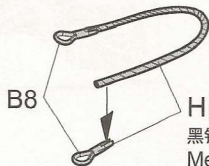

B8

H 18 28
黑铁色
Metal Black

<<连接器>>
Draw-bar

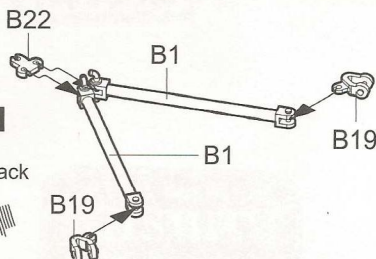

B22

B1

B1

B19

B19

<<连接>>
Connection

<<虎王>>
Tiger I

<<黑豹>>
Panther

需要3辆18吨拖车以缆绳前后连接才能拖动。
Three 18t half-tracks are connected using cable rope.

<<德国IV号战车>>
German panzer IV

需要1辆18吨拖车连接拖动。
Only one 18t half-tracks is connected using draw-bar.

<<德国III号突击炮>>
German sturmgeschutz III

需要1辆18吨拖车连接拖动。
Only one 18t half-tracks is connected using draw-bar.