


Panzerjäger-Triebwagen 51

Trumpeter | No. 01516 | 1:35

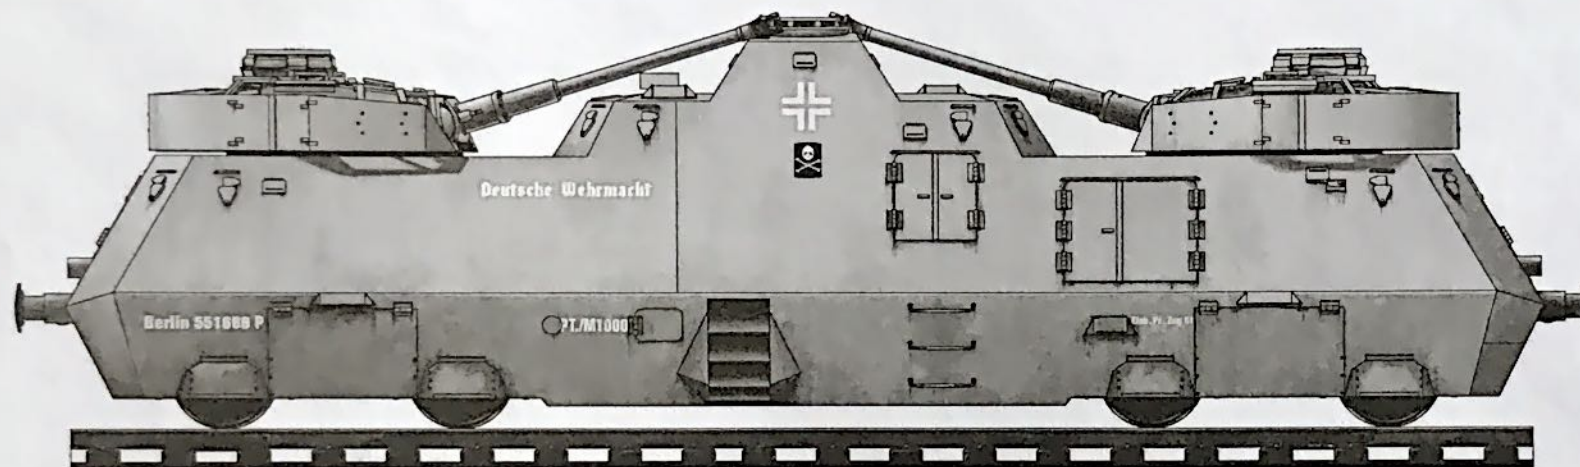



1:35 SCALE

Panzerjager-Triebwagen 51

德国BP-51型铁道列车

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed

- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴水上贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。

水贴纸的使用:

1. 从水贴纸上剪下印花;
2. 将印花放入温水中浸10秒，然后放在干净布上。
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干，气泡消失。

DECAL APPLICATION:


1. Cut decals from sheet as needed
2. Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
3. Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.

4. While still wet, decal can be adjusted for better fit on model by dampening it gently with your finger.
5. When placed in the proper position, gently press decal down with a soft cloth until excess water and air bubbles are gone.
6. Allow decal to dry completely before handling model


cyanoacrylate glue
使用强力胶weight
配重make hole
钻孔cut / remove
切除option
选择no cement
不涂胶水decal
贴纸bend
弯曲file / sand
锉平

部品图Parts


A X 2

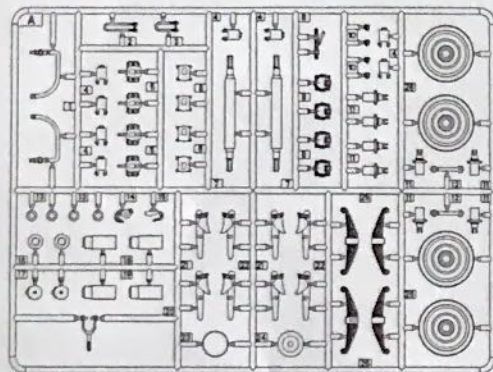

B X 2

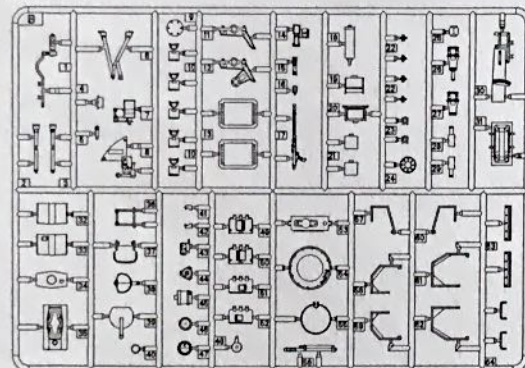


C X 2

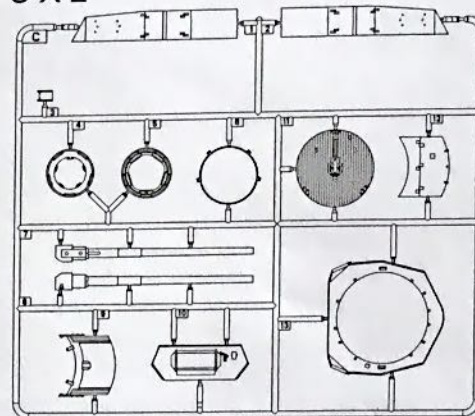


C1.C2 X 2




《炮塔》X 2
Turret

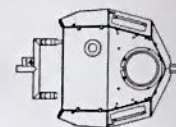


D

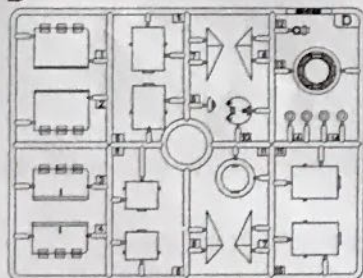


E x 2

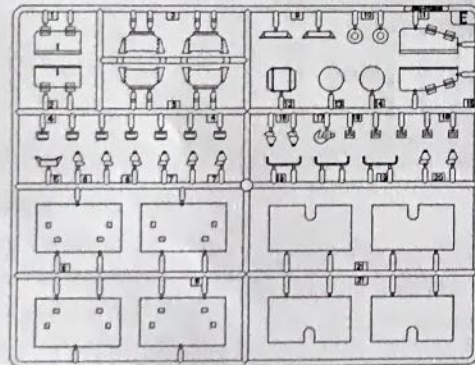


L

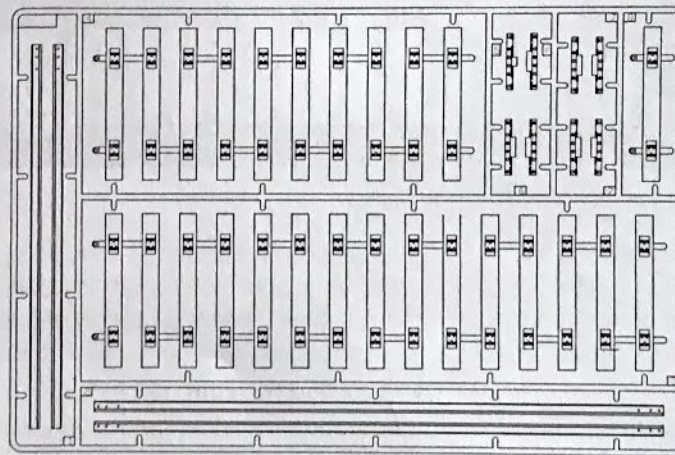


路基-A X 2
Road A




路基-B X 2
Road B

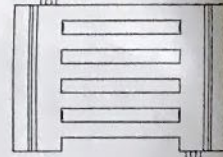


路基-C
Road C

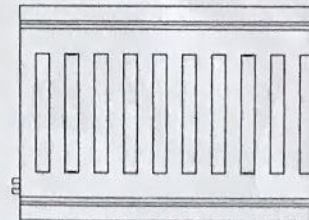


《车底》
Lower hull

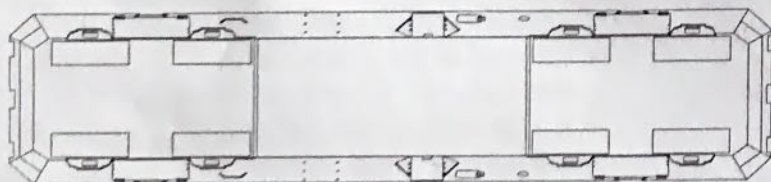


《车面》
Upper hull

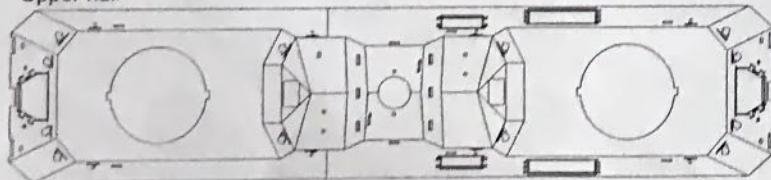


《蚀刻片》
PE-L X 2

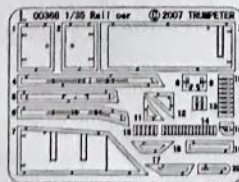

《蚀刻片》
PE-R X 2(PE)


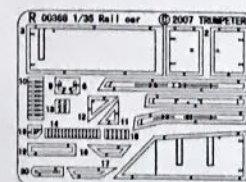


《水贴纸》
Decal


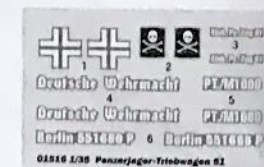


不用部品:A1, A2, A3, A6, A8, A9, A10, A12, A14, A15, A16, A17, A18, A19, A20, A23, A24
Unused parts




1 枕木安装
Attaching crosstie

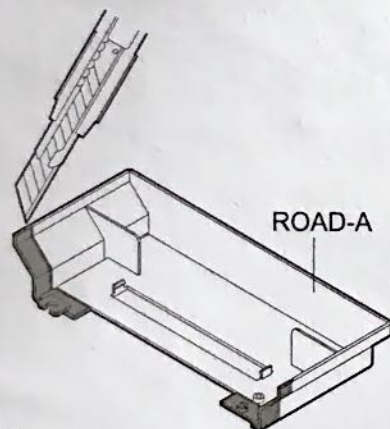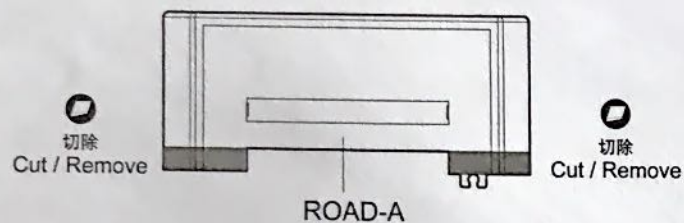



* 沿线切取其中1件
Cut only one sheet along this line.

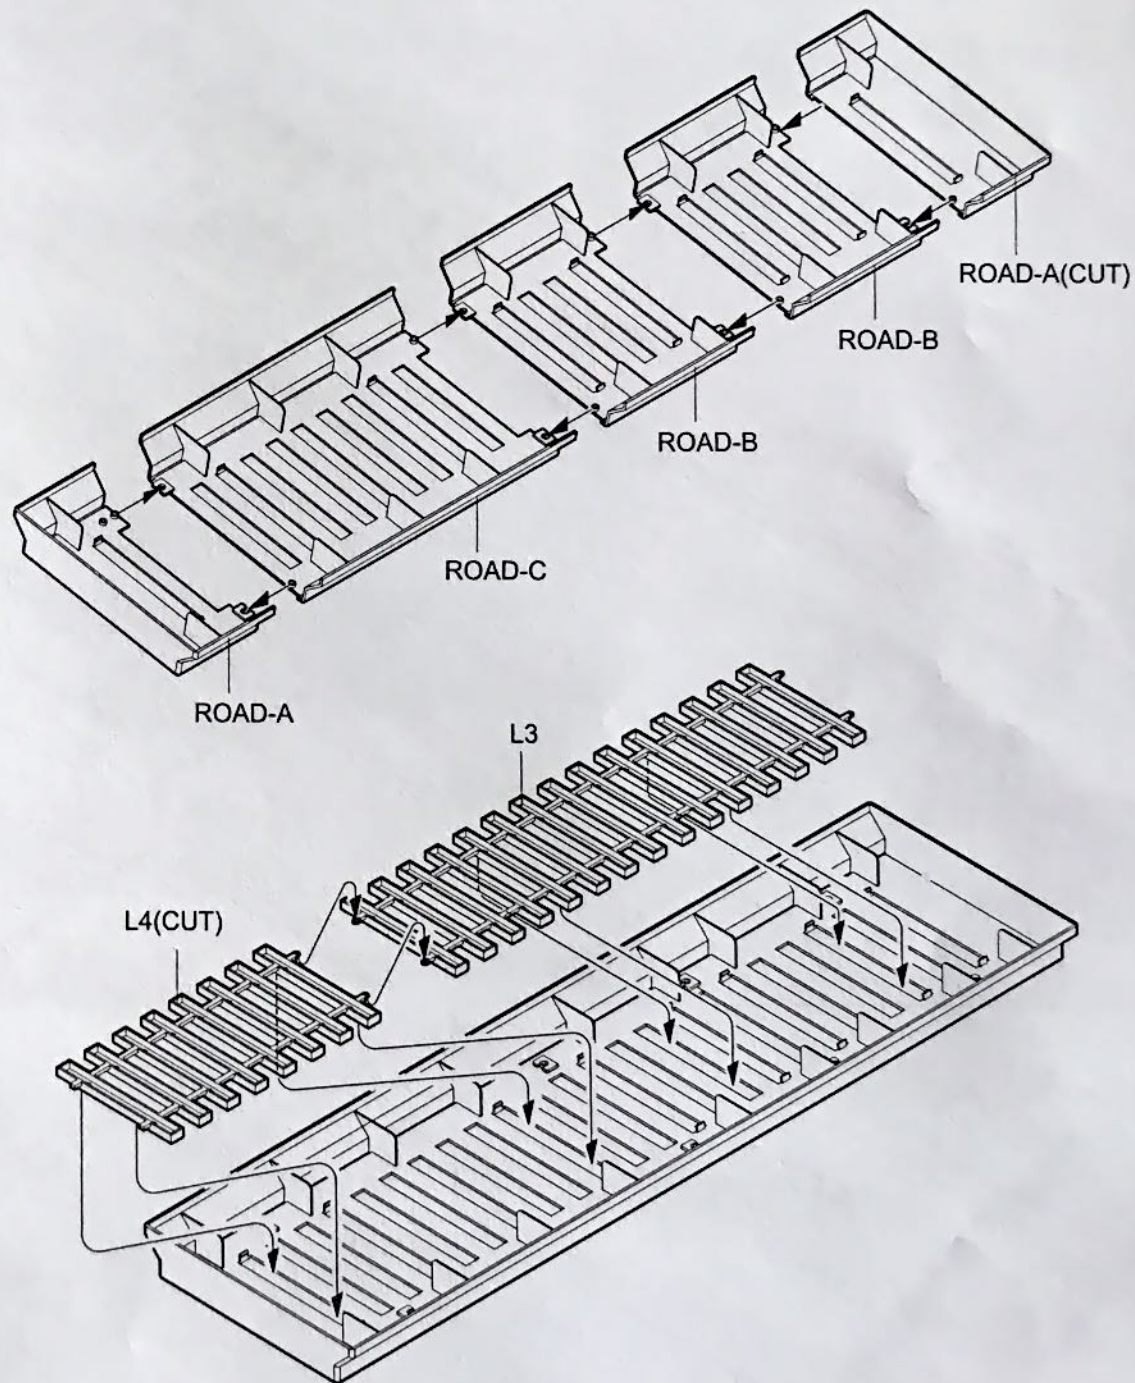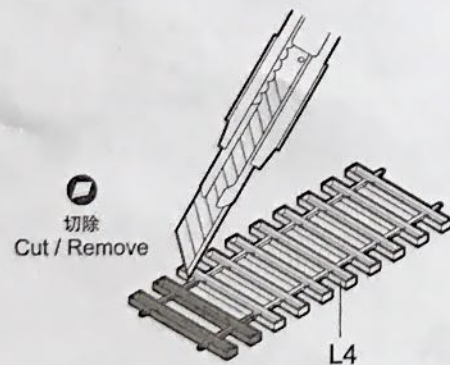



2 铁轨安装
Attaching rail

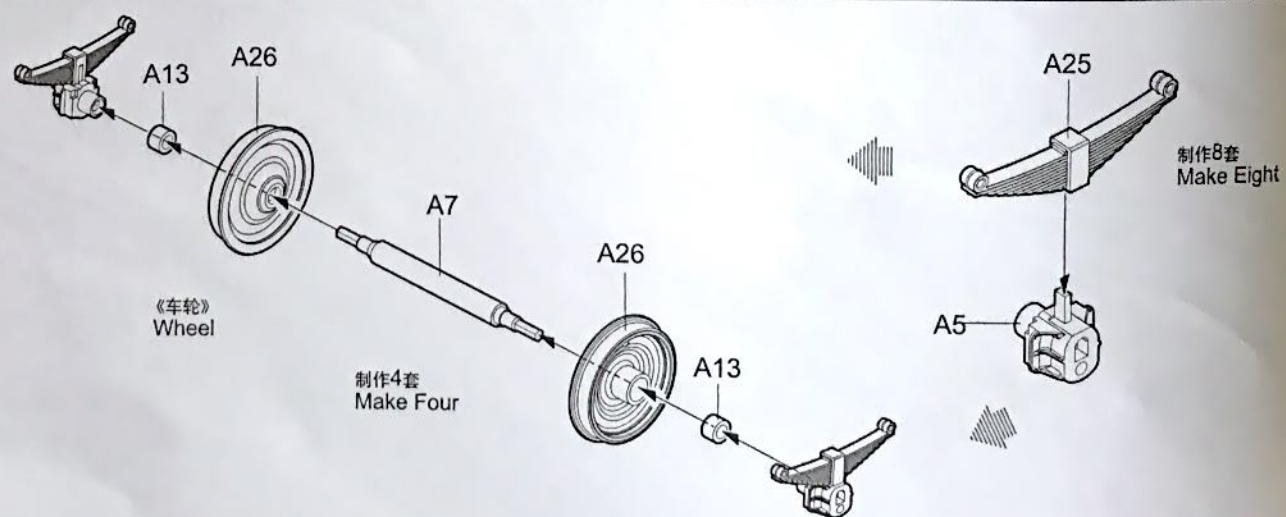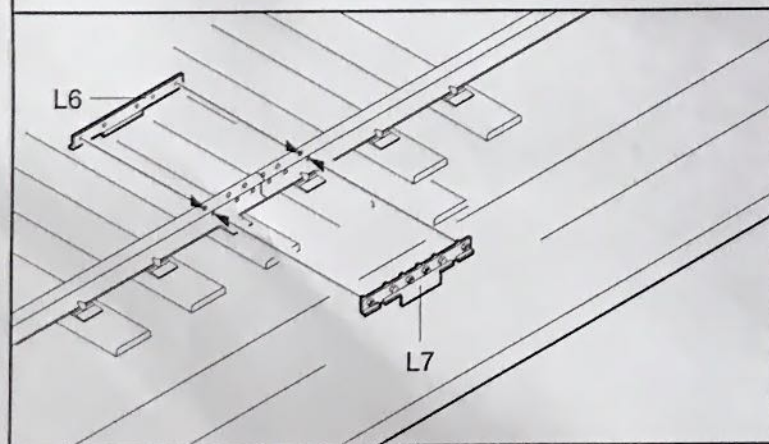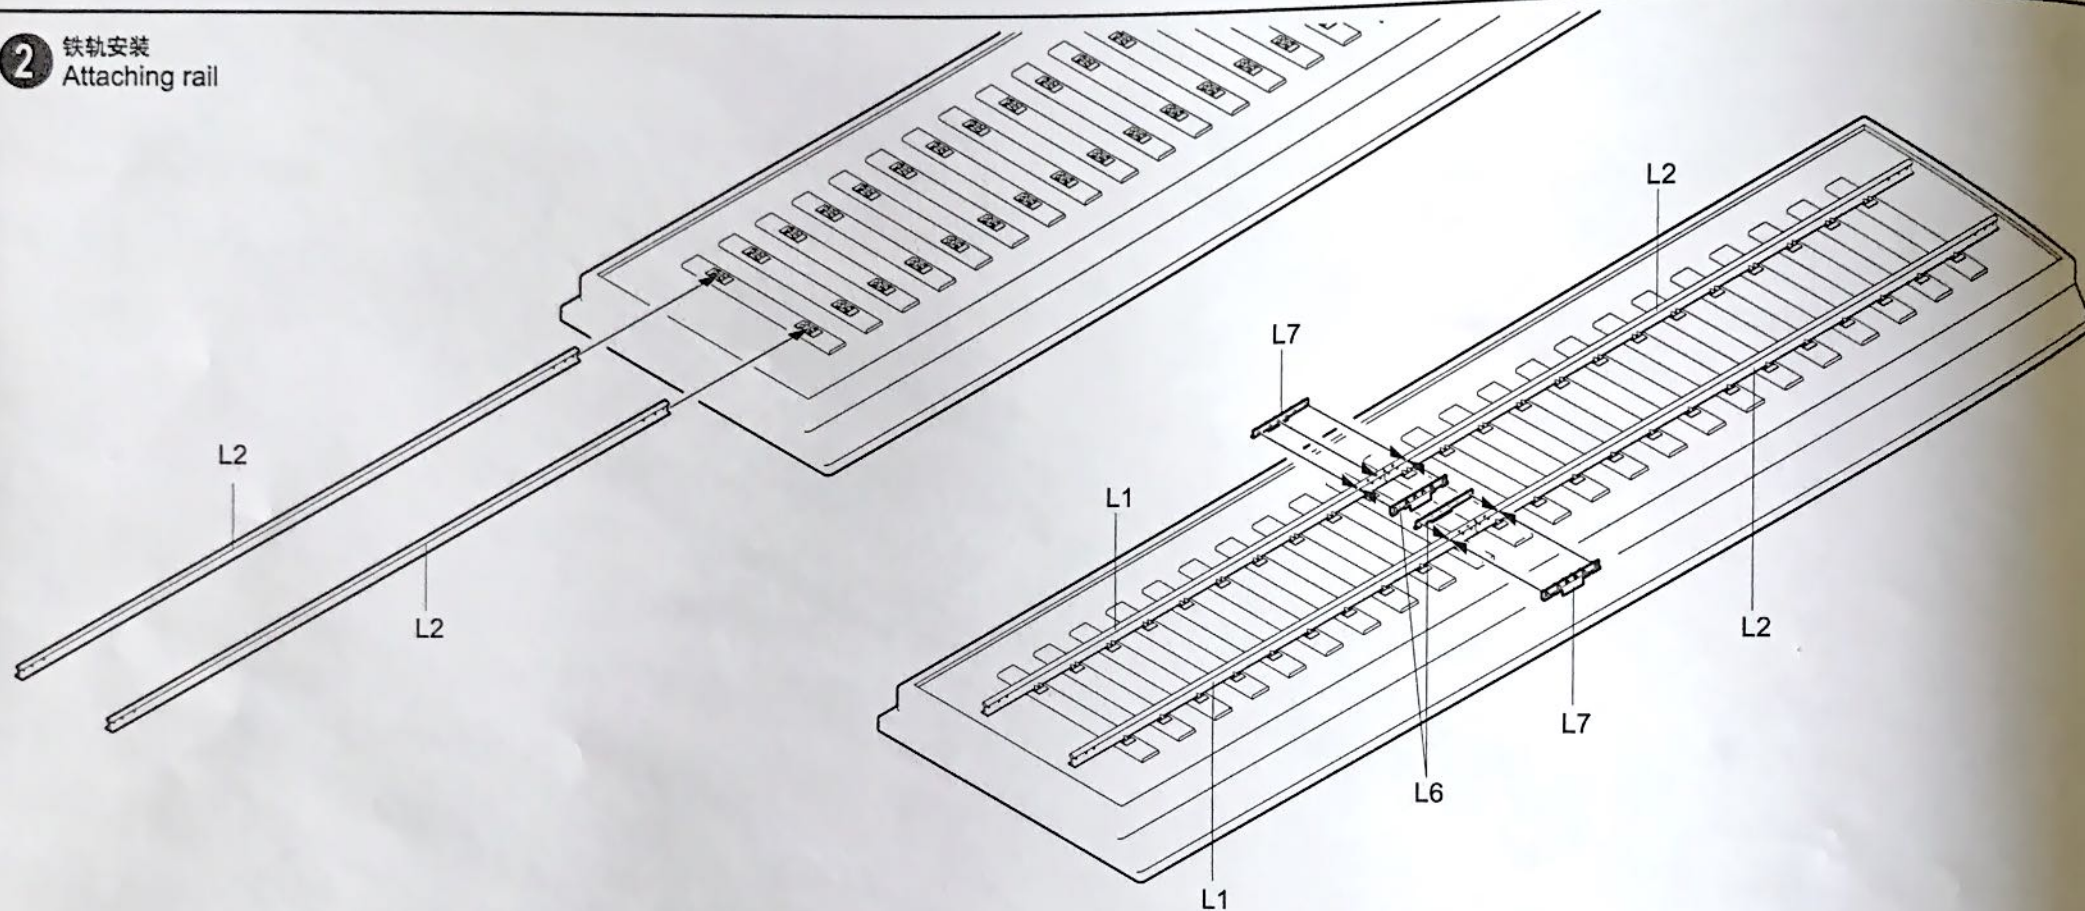

3

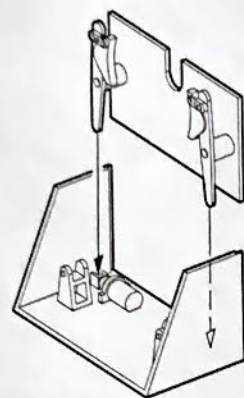
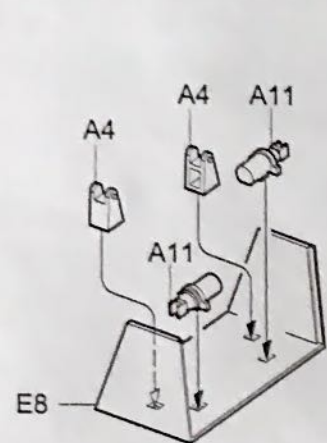


制作8套
Make Eight

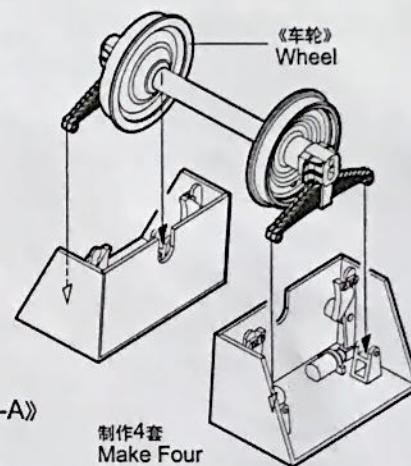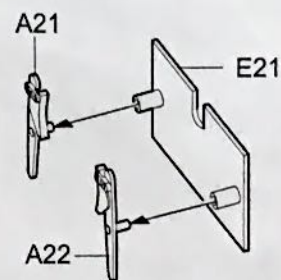

《A-A》

制作4套
Make Four

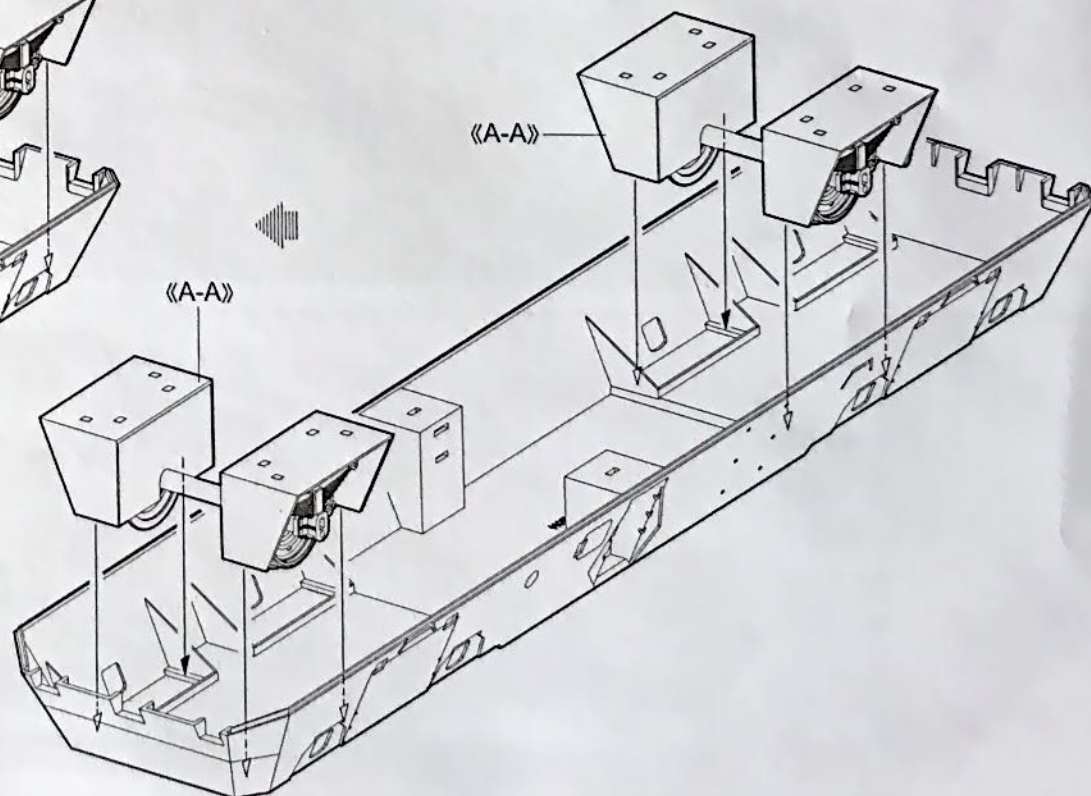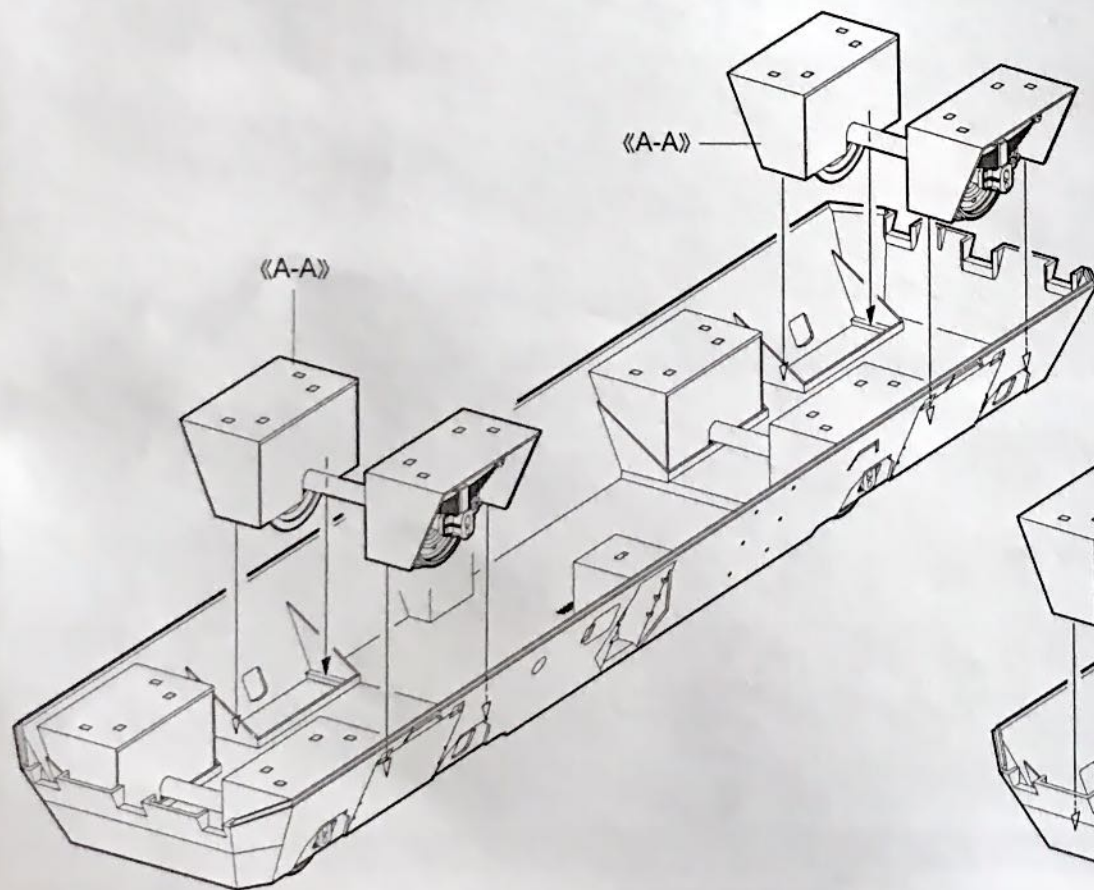

4

《对侧相同》 Both sides

D5

D15

E5

E9

E18

E19

E3

D6

D7

D8

E3

《对侧相同》 Both sides

《B-B》

D11

D9

D10

D13

《B-B》

D14

《对侧相同》 Both sides

《对侧E11》 Side E11

E15

《对侧E15》 Side E15

E11

E1

E2

E4

《对侧相同》 Both sides

E20

《对侧E16》 Side E16

E6

《对侧E7》 Side E7

E7

D12

E12

E12

E20


《对侧E16》 Side E16

E2




《对侧E1》 Side E1






E1





《对侧E2》 Side E2

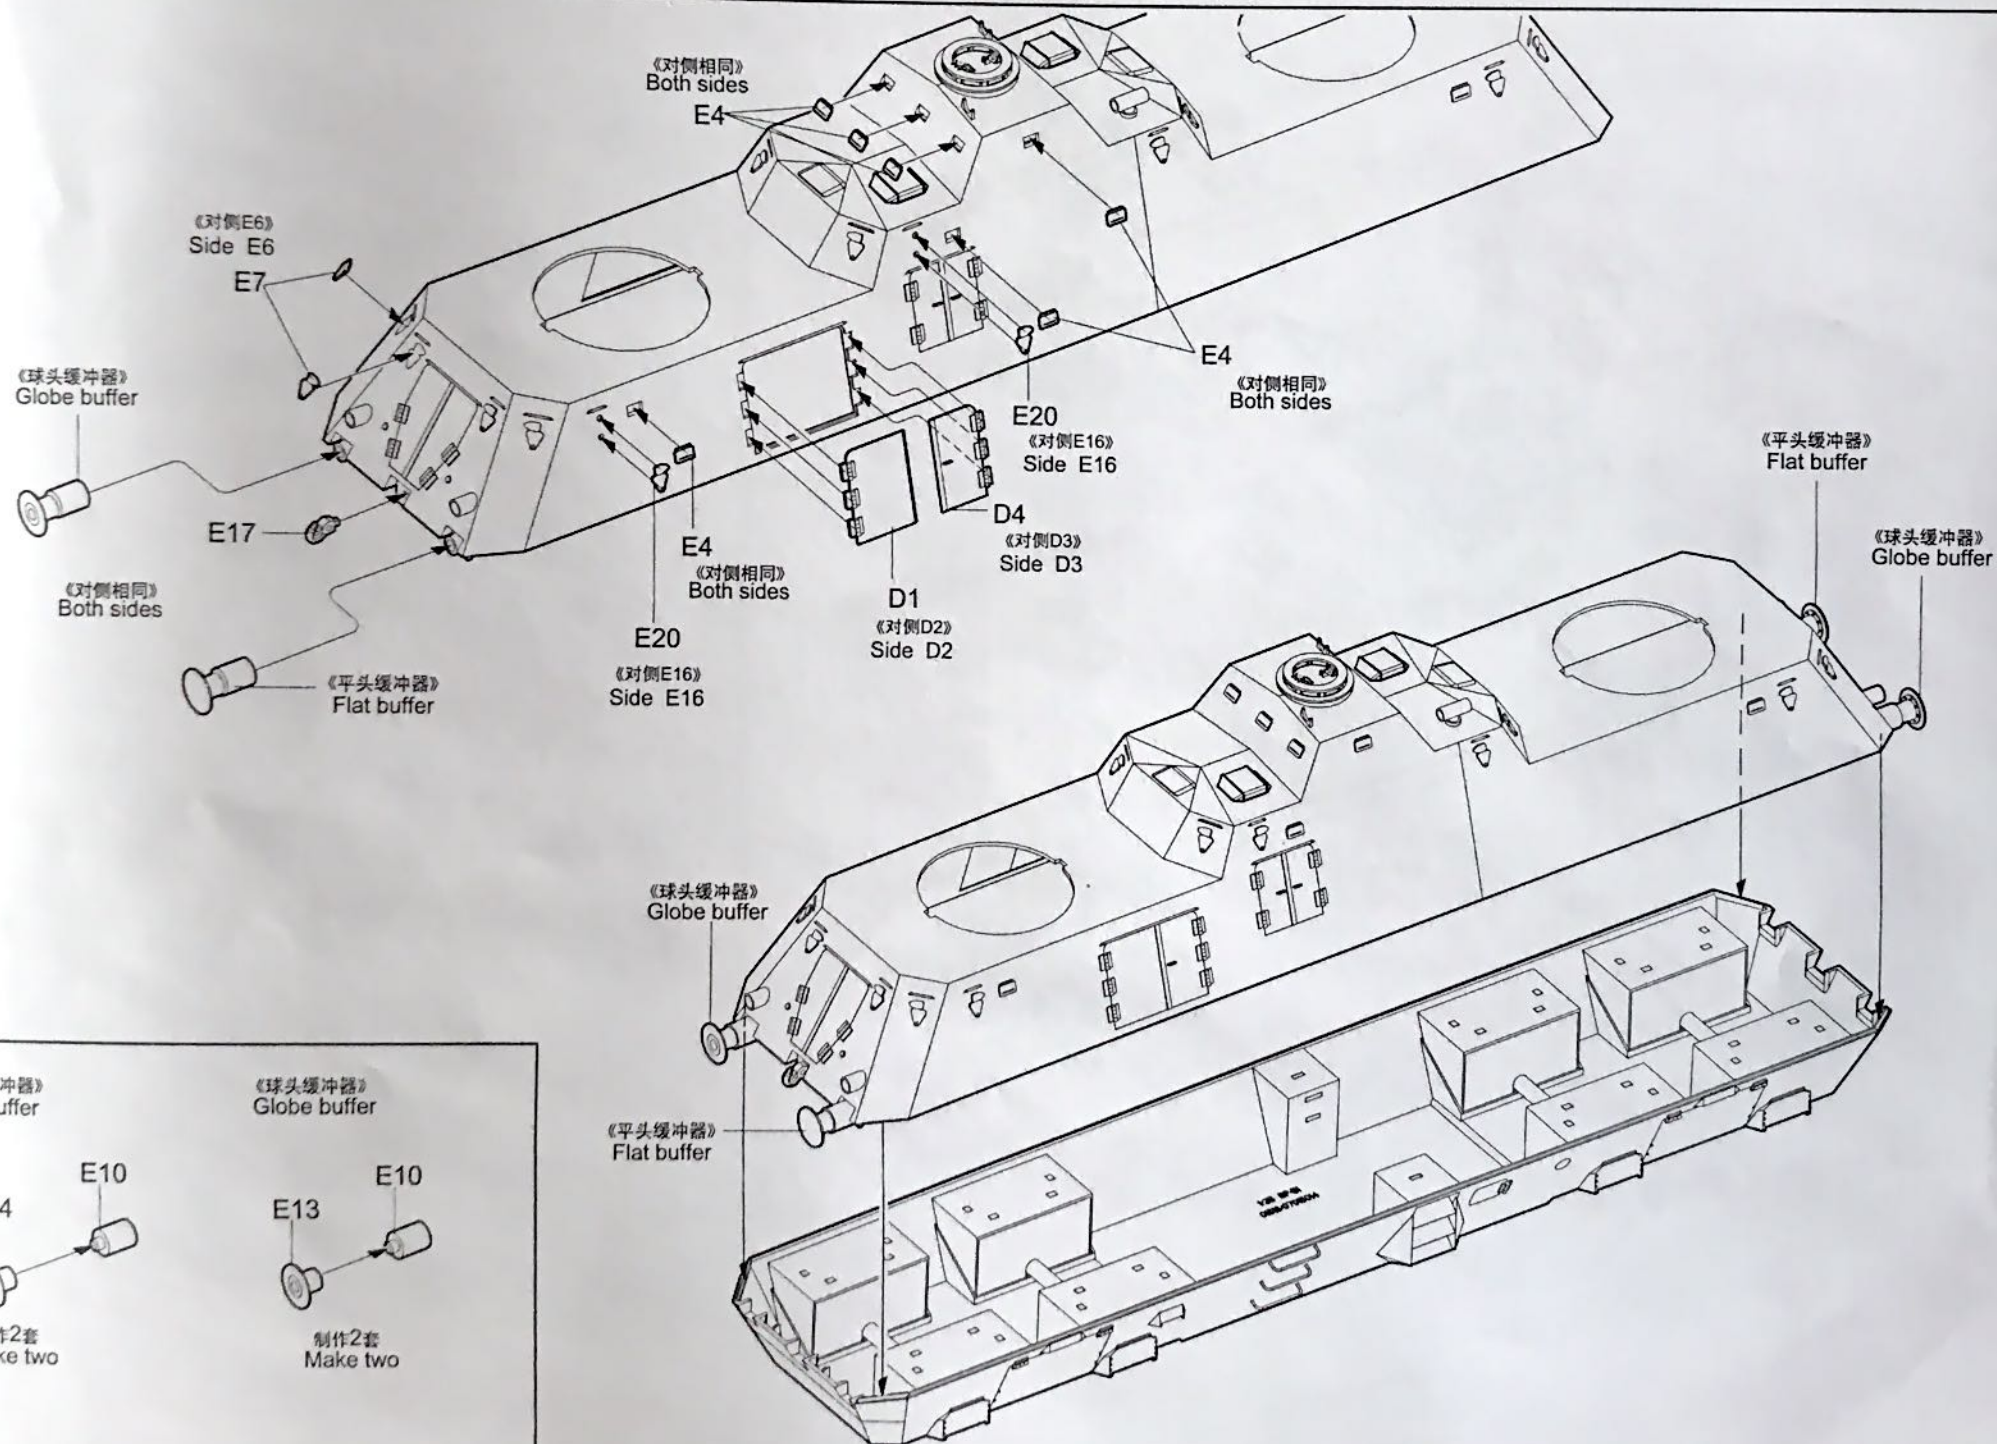


6

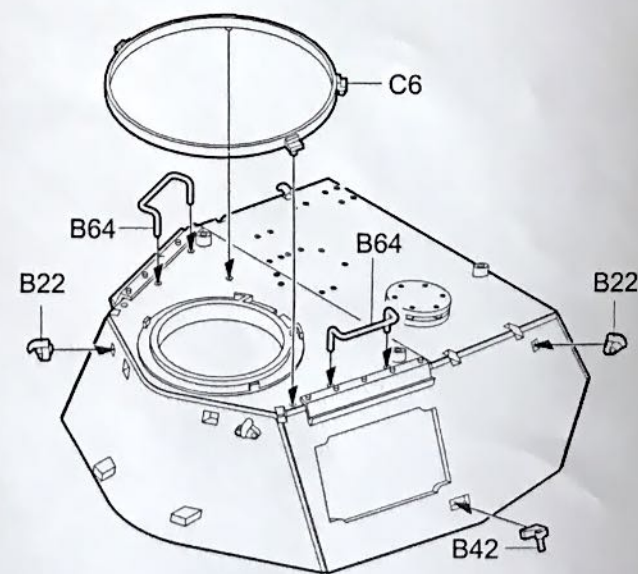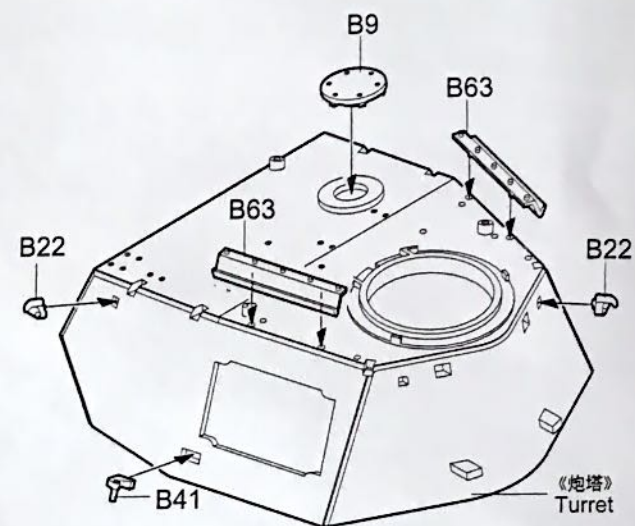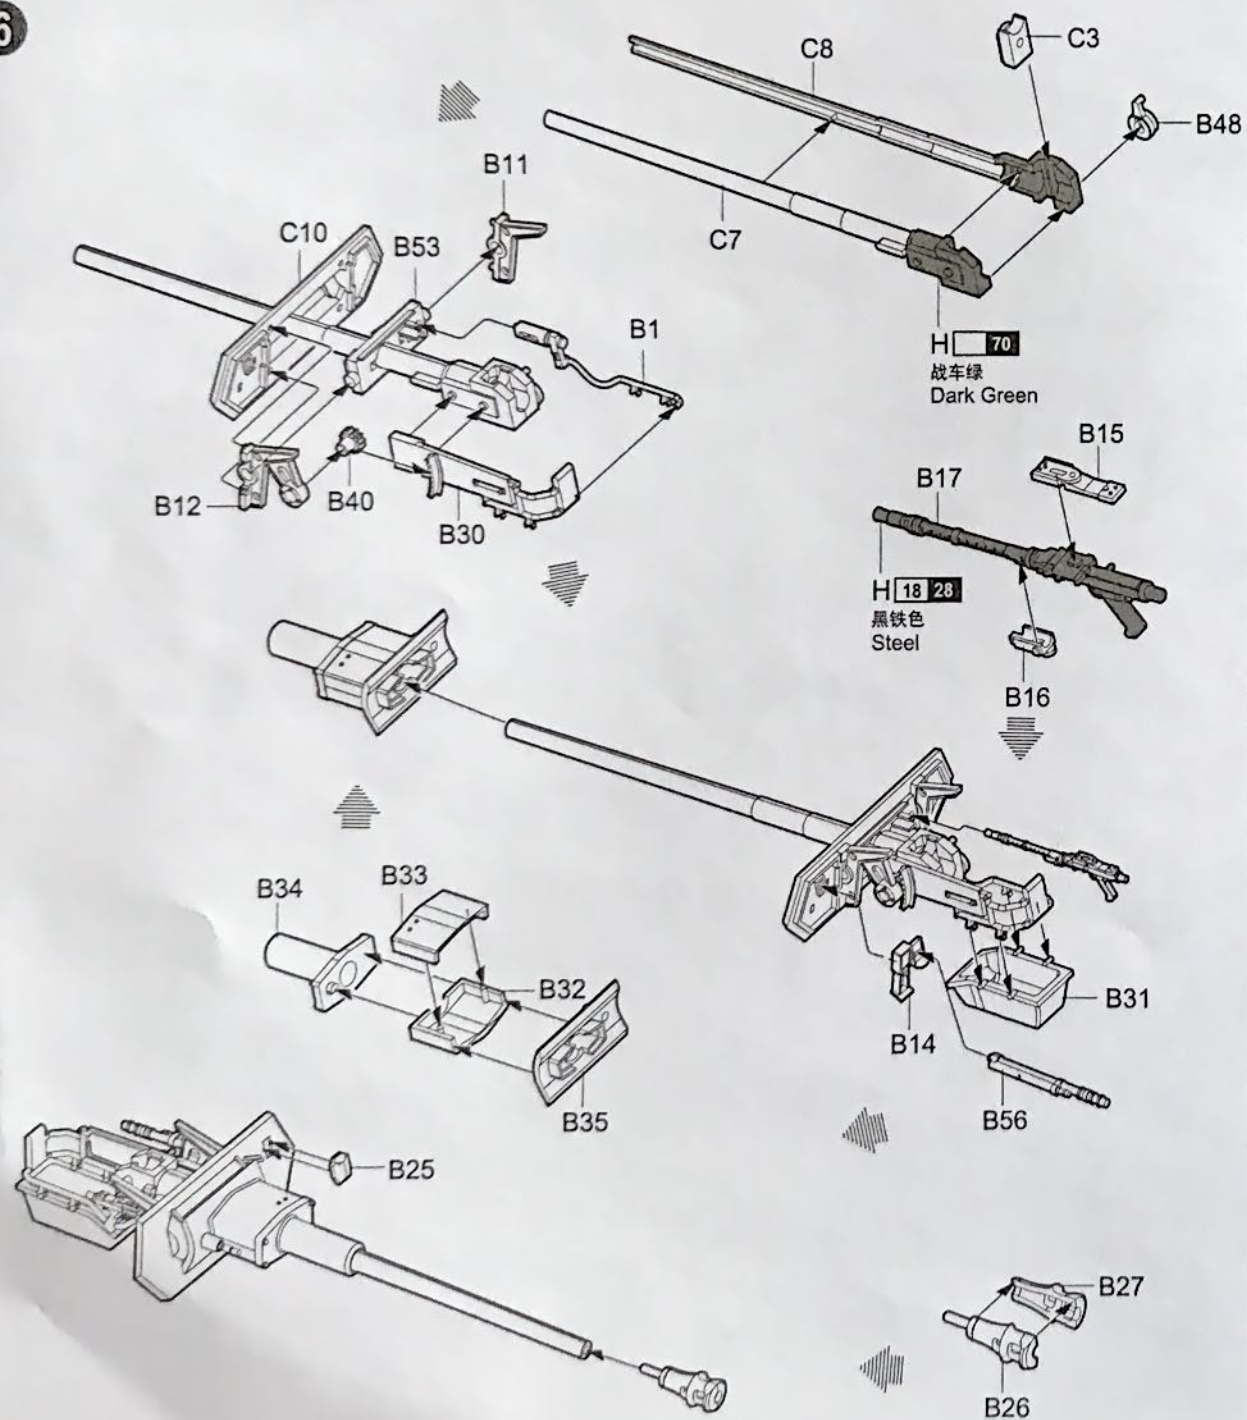

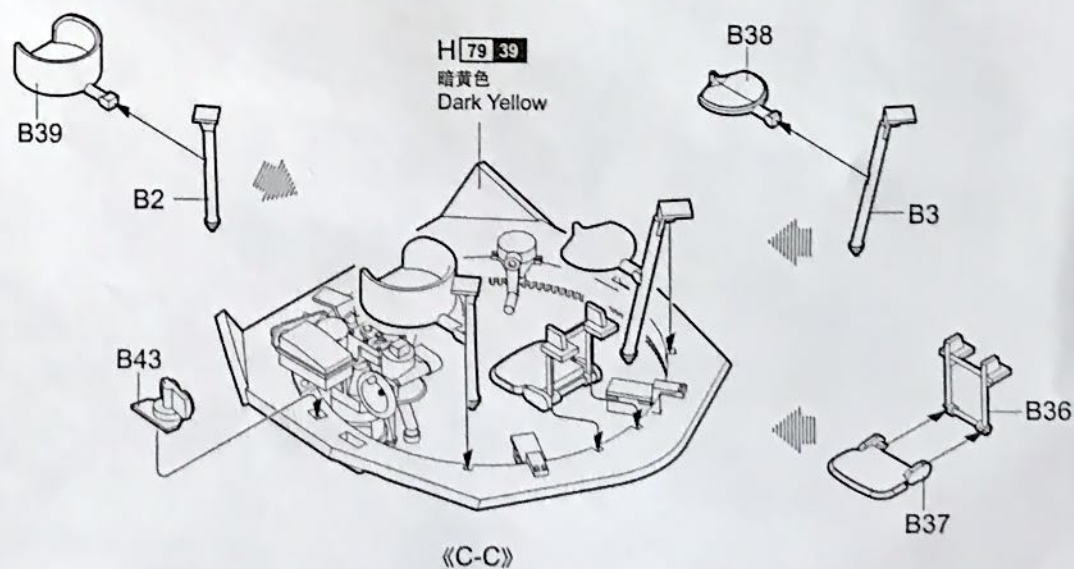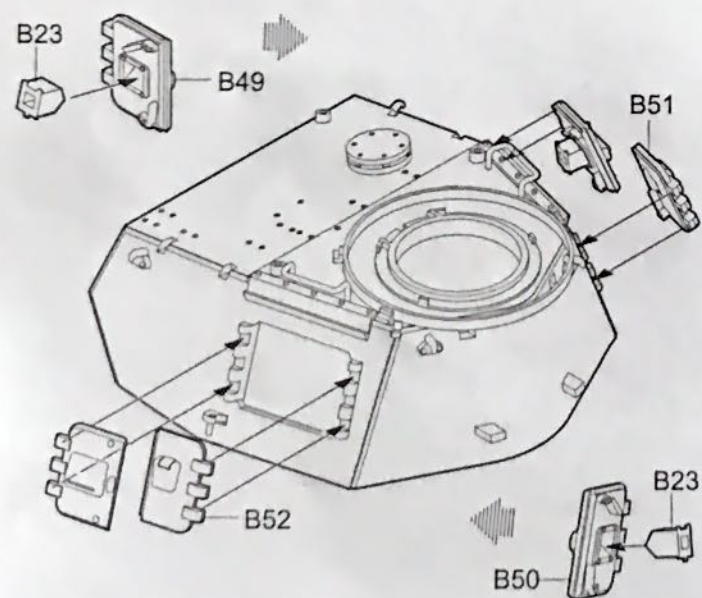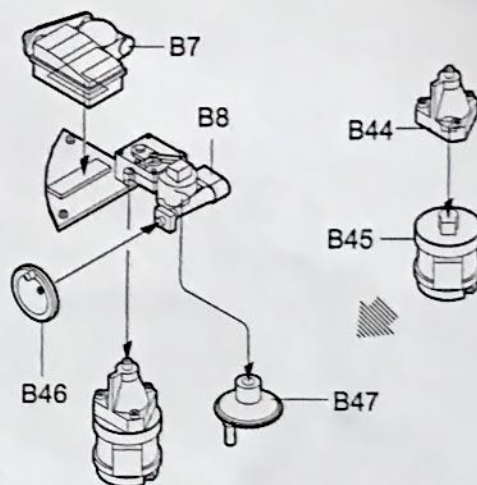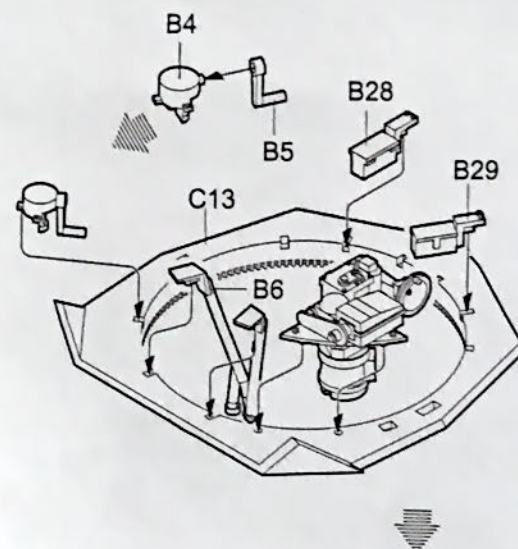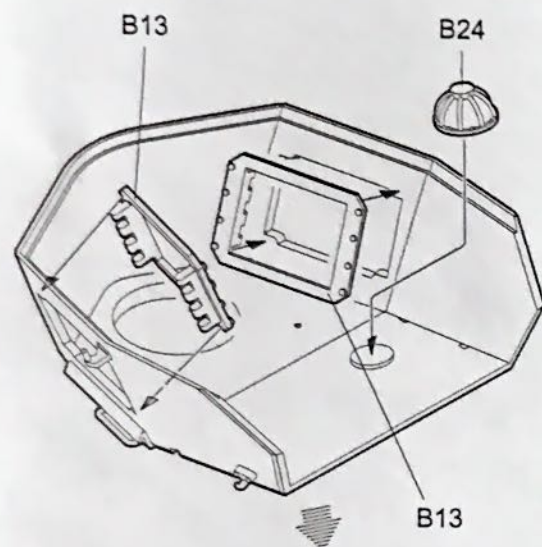

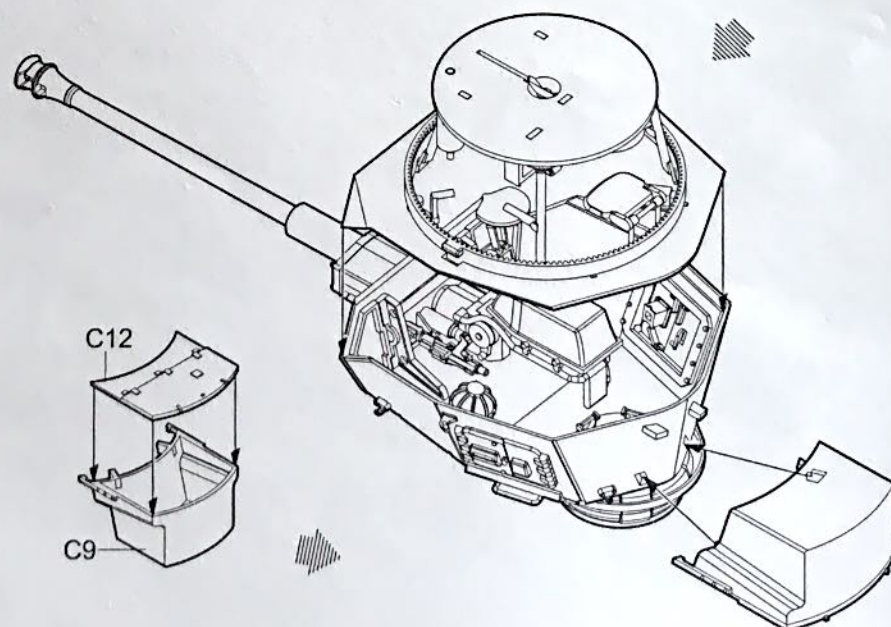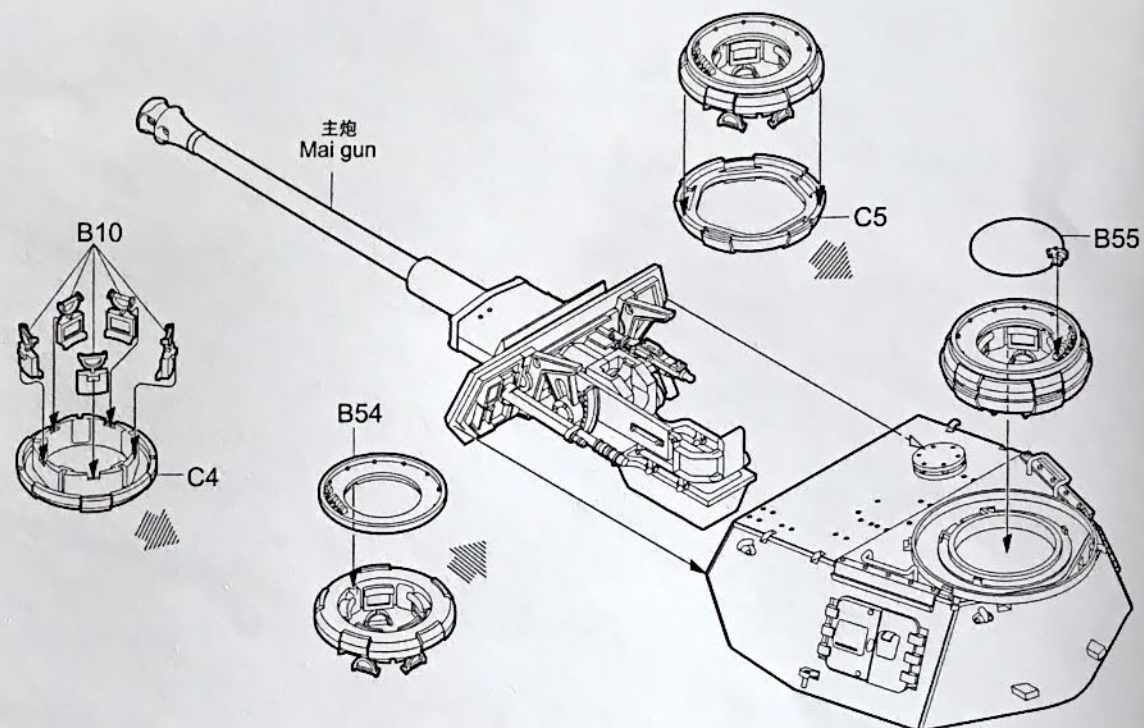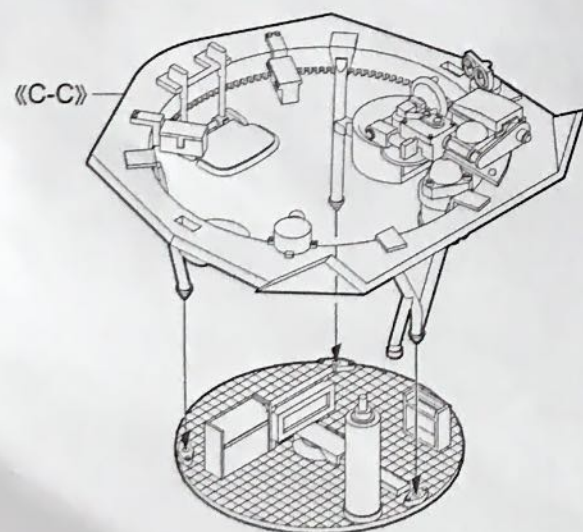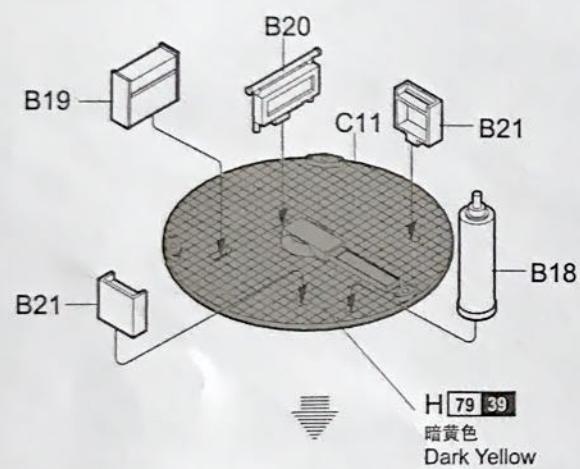

9

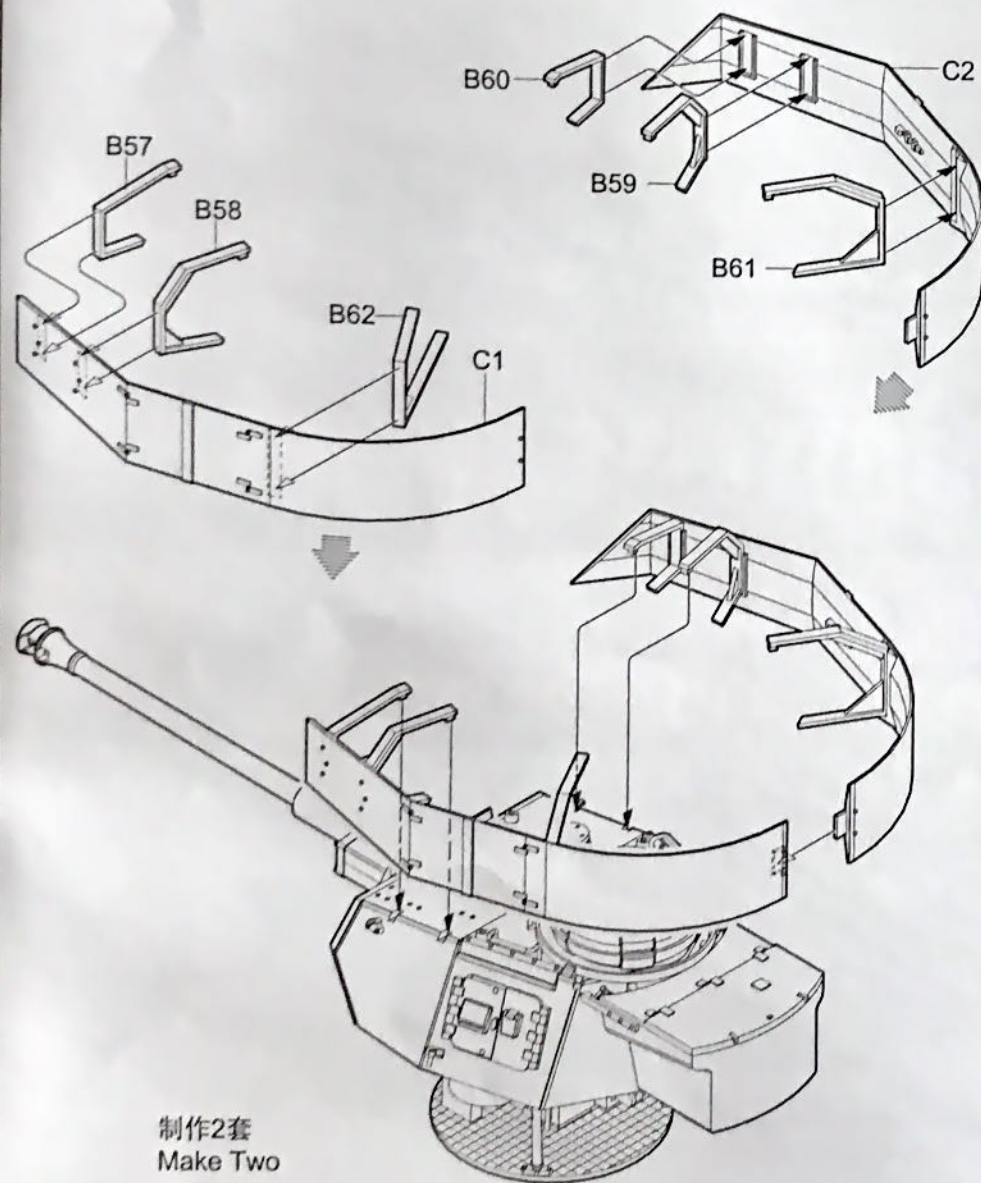

炮塔蚀刻片组装
Turret PE Assembly

PE-L1
Side PE-R1

PE-L2
Side PE-R2

PE-L20
Side PE-R20

弯曲
Bend

弯曲
Bend
PE-L13
Side PE-R13

弯曲
Bend
PE-L4
Side PE-R4

PE-L17
Side PE-R17

PE-L12
Side PE-R12

弯曲
Bend
PE-L6
Side PE-R6


PE-L18
Side PE-R18


PE-L16
Side PE-R16

PE-L11
Side PE-R11

弯曲
Bend




弯曲
Bend
PE-L5
Side PE-R5

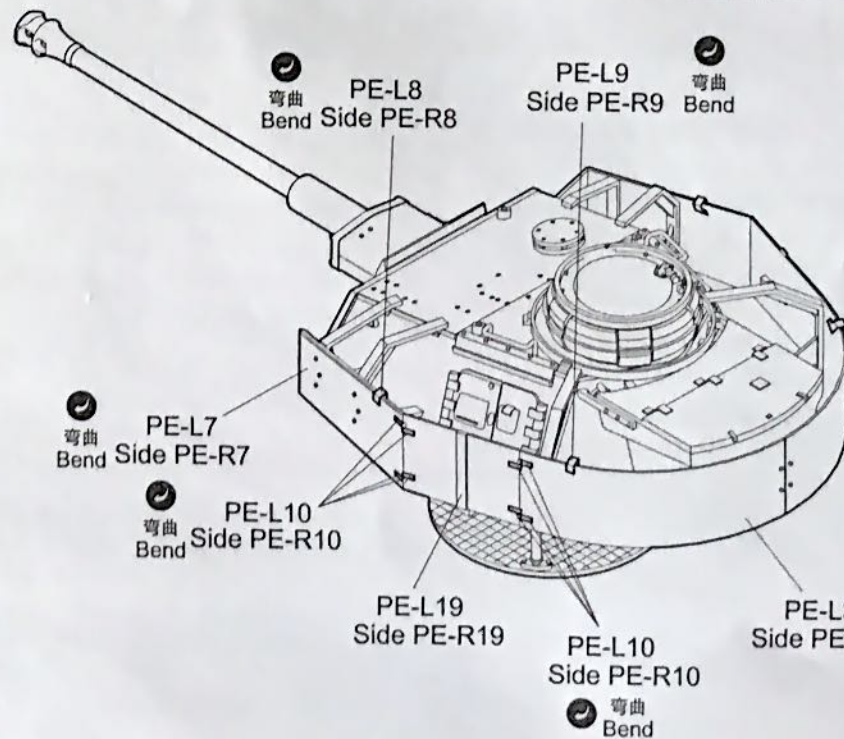

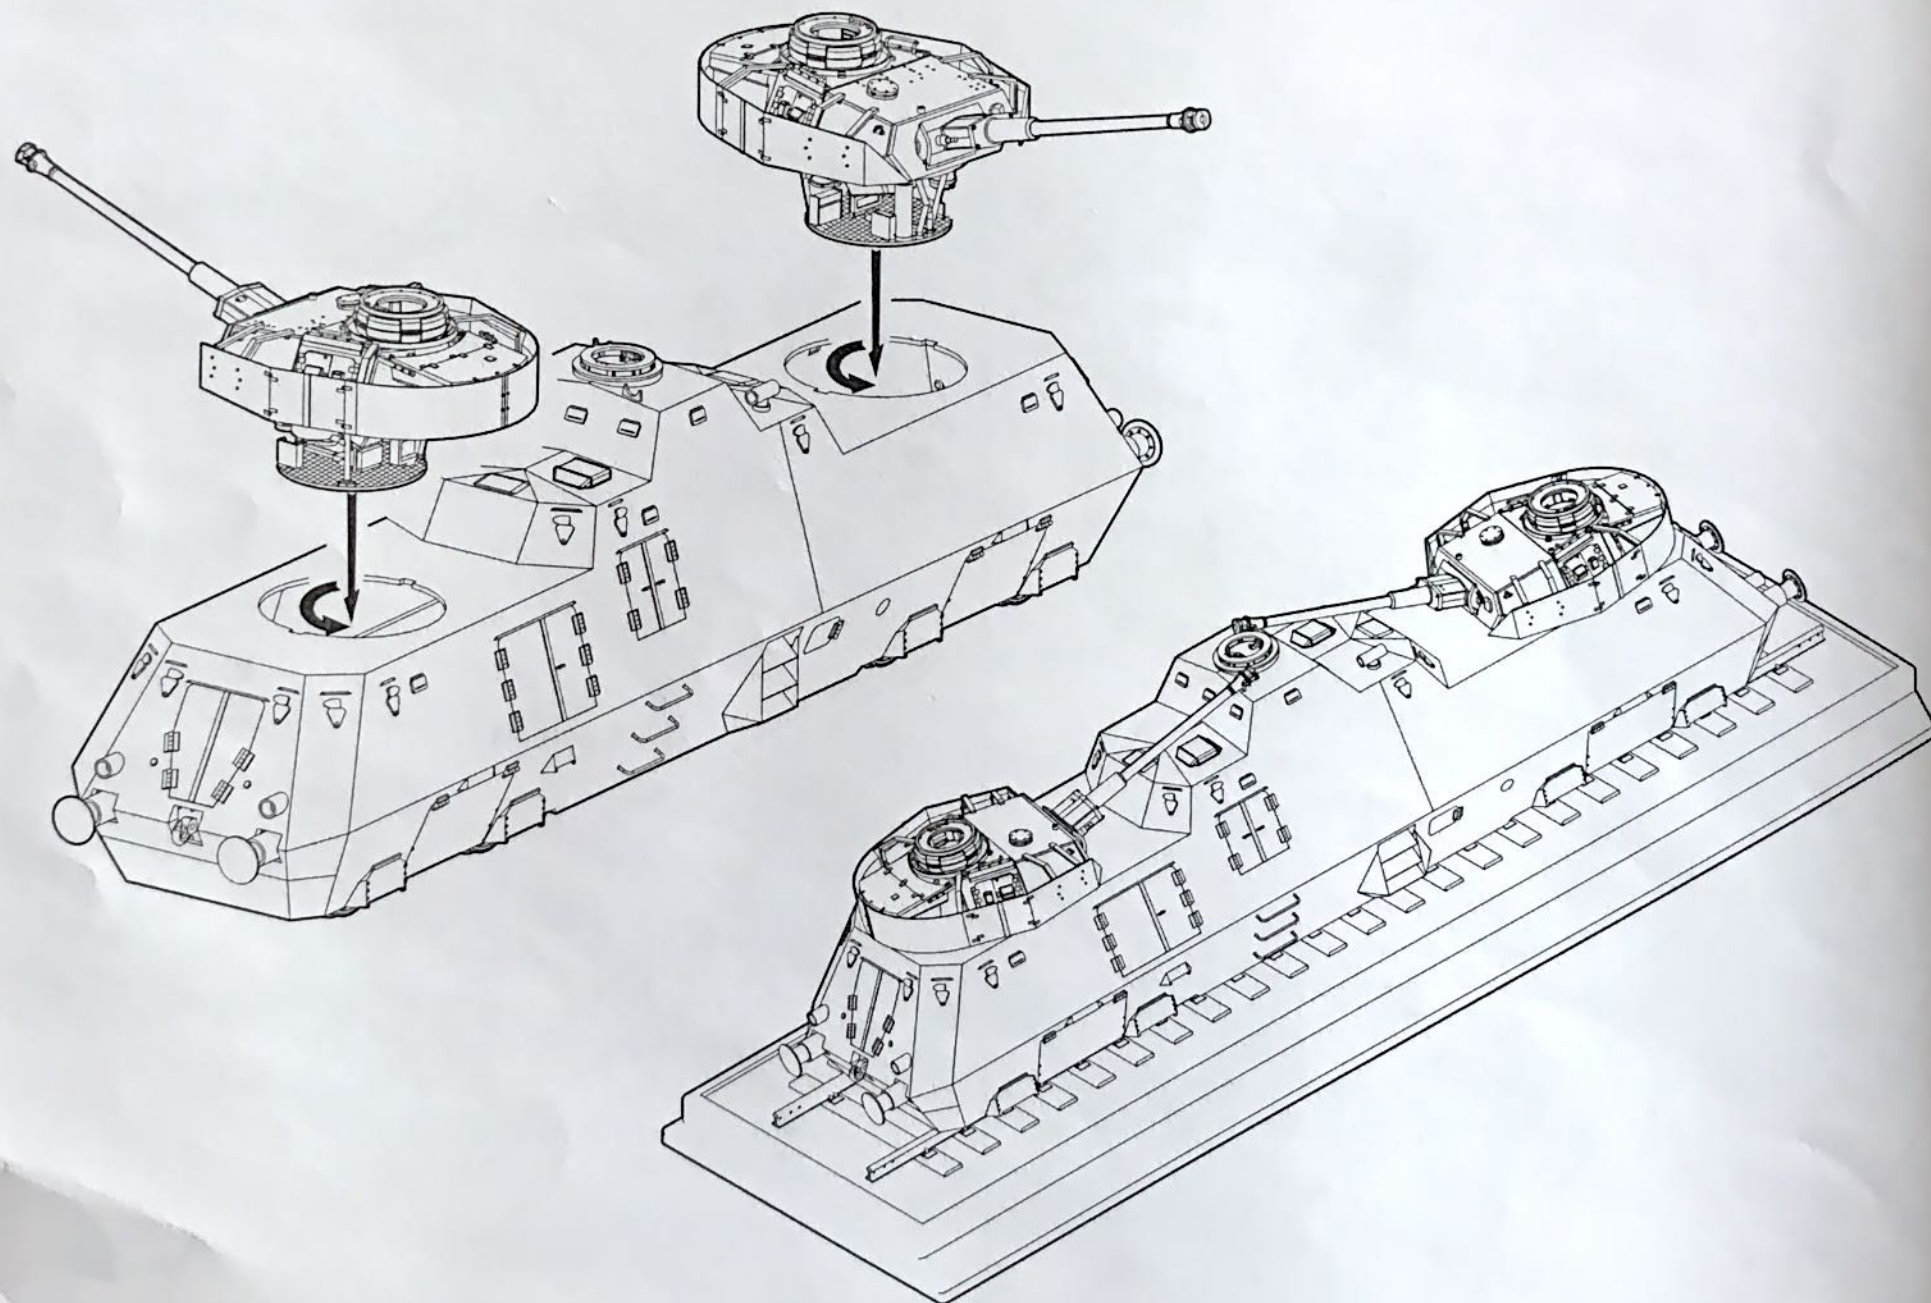

涂装同标贴指示 Painting & Marking guide

PAINT REFERENCE COLOUR					
Color	Mr Hobby	Vallejo	Model Master	Tamiya	Humbrol
Dark Yellow 暗黄色	H 39	824	—	XF59	93
Steeplejack Black 黑铁色	H 18 28	864	1402	—	—

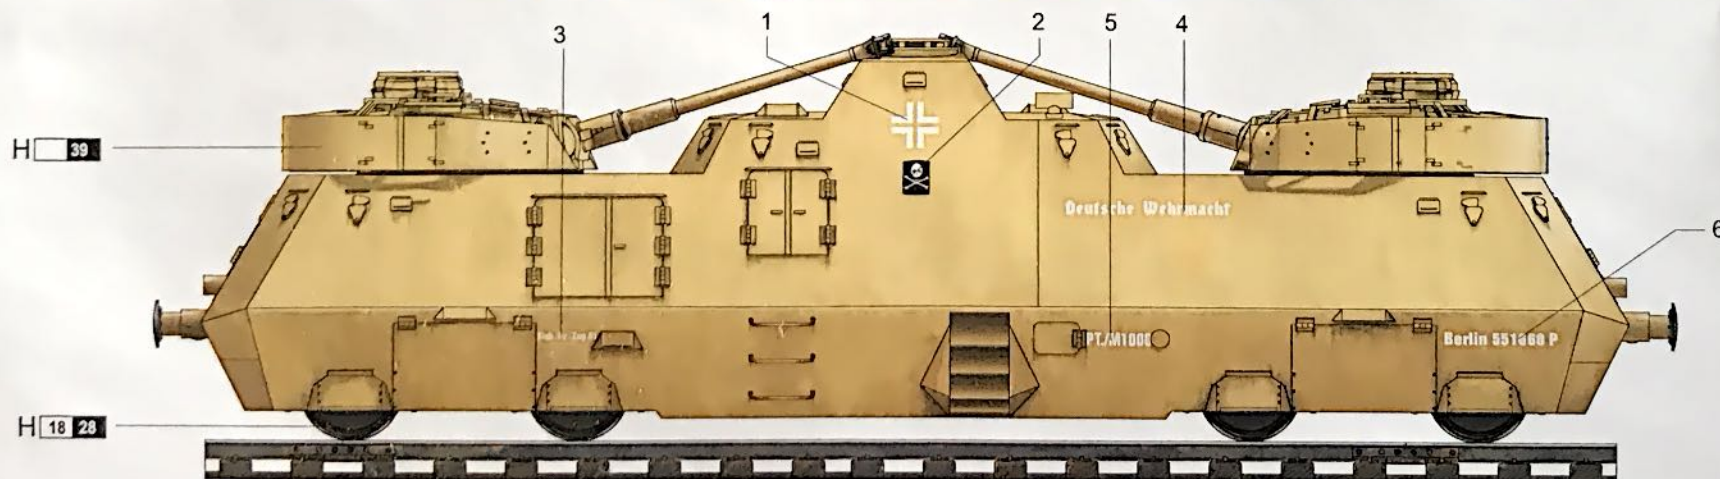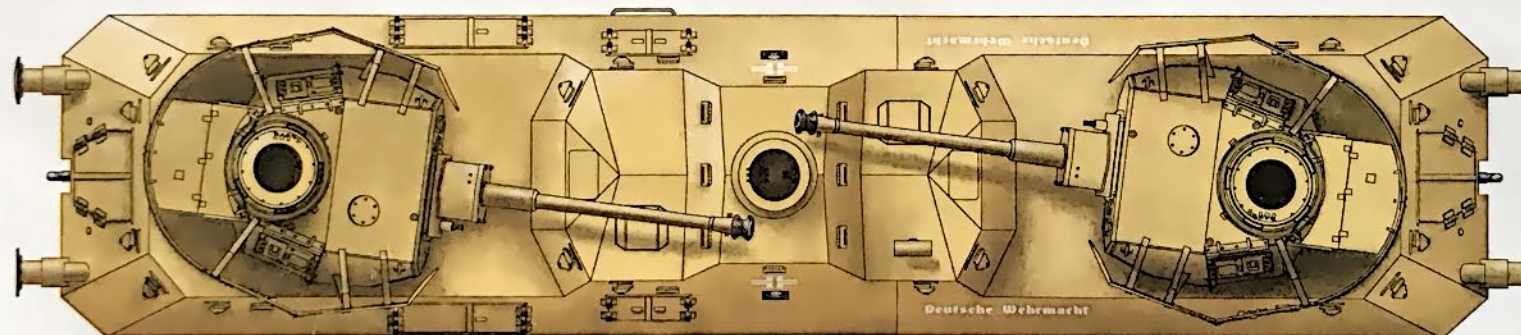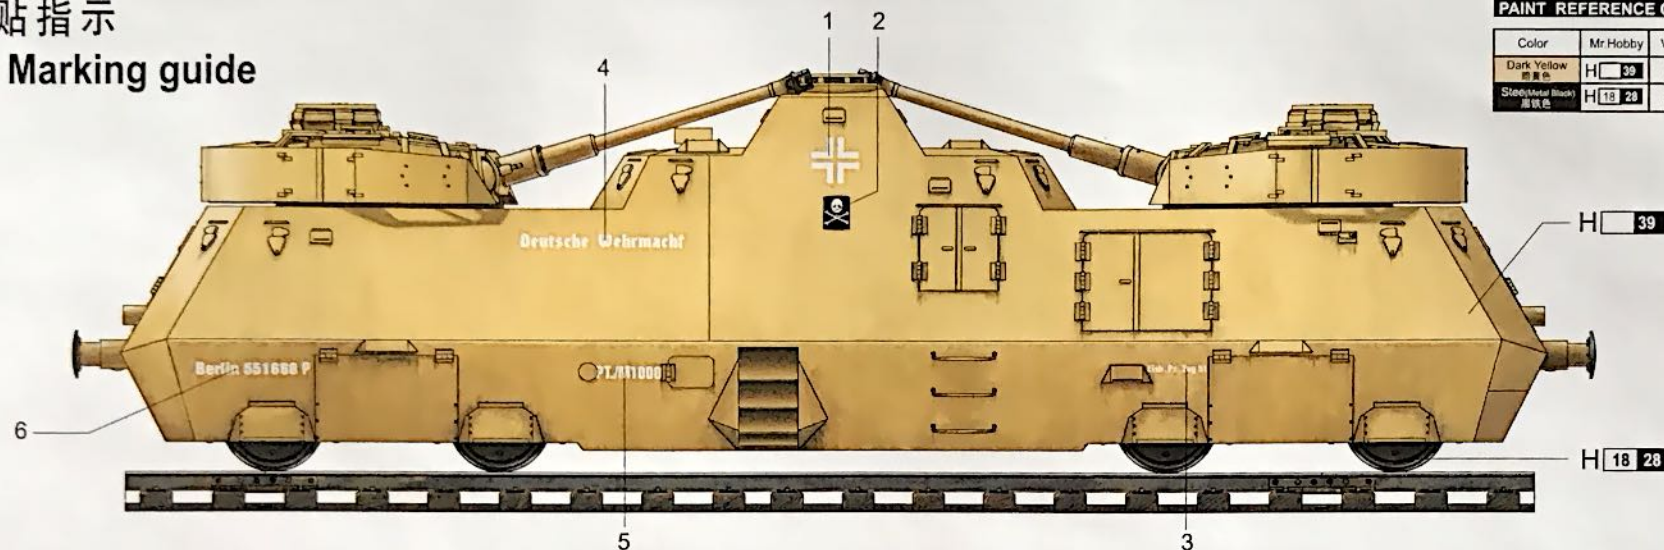

H AQUEOUS HOBBY COLOR ■ Mr. COLOR