


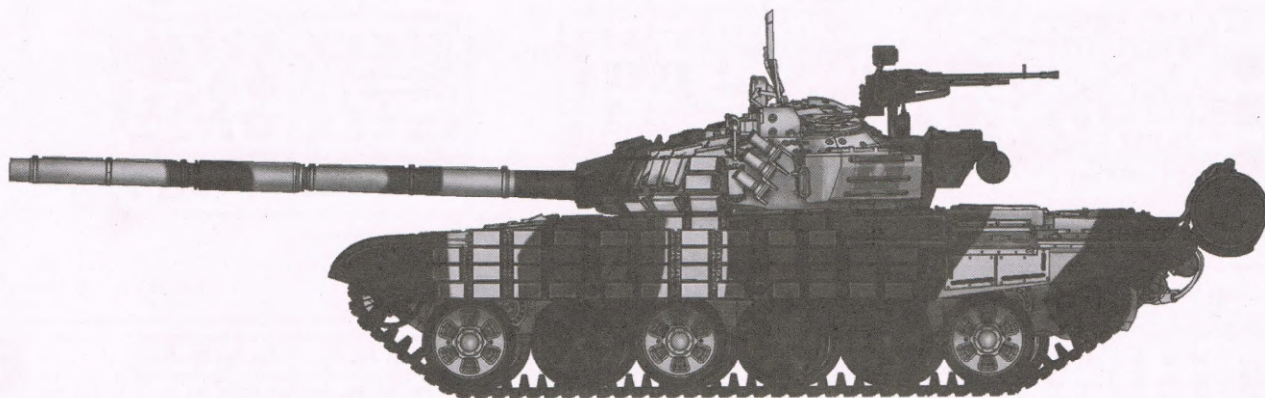

Russian T-72B1 MBT (w/kontakt-1 reactive armor)

俄罗斯T-72B1主战坦克(挂接触-1附加装甲)

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements, sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



配重
Weight



使用强力胶
Cyanoacrylate glue



钻孔
Make hole



切除
Cut / Remove



贴纸
Decal



锉平
File / Sand



选择
Option



不涂胶水
No cement



弯曲
Bend



先装
Install it first

水贴纸的使用:


- 1.从水贴上剪下印花;
- 2.将印花放入温水中浸10秒, 然后放在干净布上。
- 3.拿着印花纸板将印花移到模型上;
- 4.手指蘸水将印花移到适当的位置;
- 5.用软布轻压印花直至水干, 气泡消失

DECAL APPLICATION


- 1.Cut decals from sheet as needed
- 2.Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
- 3.Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.
- 4.While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
- 5.When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
- 6.Allow decal to dry completely before handling model

部品图Parts


A1x4

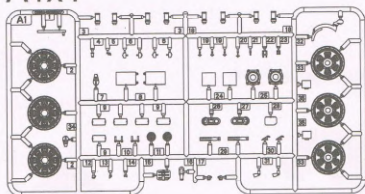


Bx2

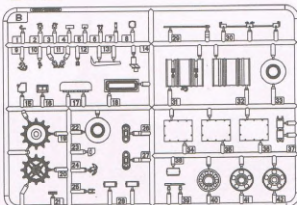


B1

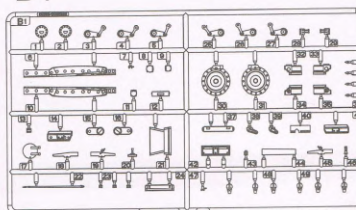


C

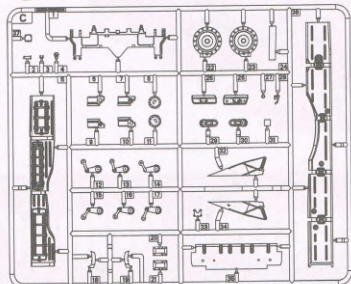


G

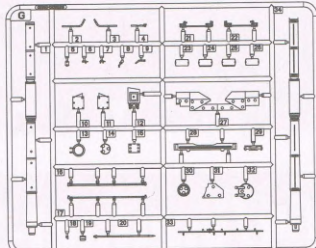


《履带》x7
Track x7

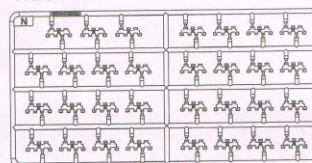


N

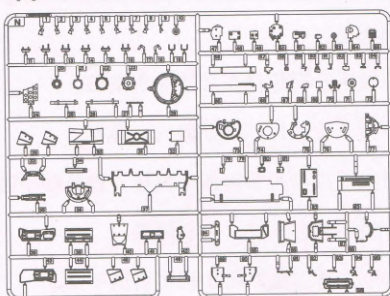


M

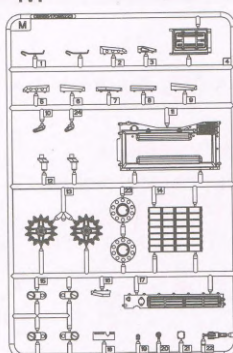


S

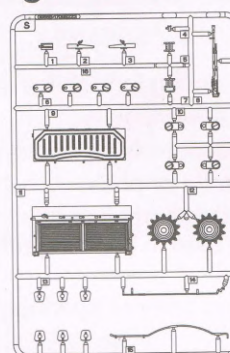


H

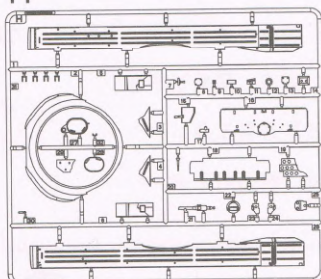


P




《炮塔》
Turret

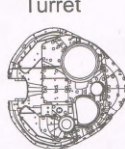


U




Q




《车底》
Lower hull




《轮塞》
Poly cap




K

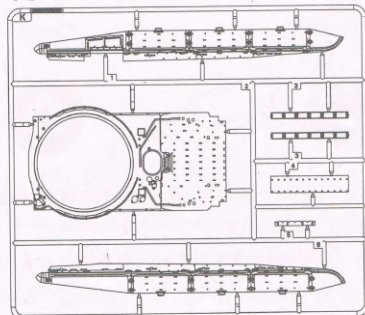


Lx5

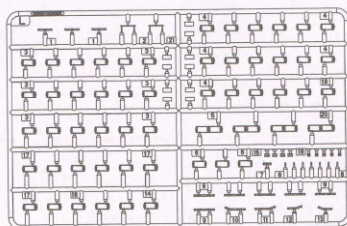


《蚀刻片-A》x2
PE-A




《蚀刻片-B》
PE-B



《水贴纸》
Decal

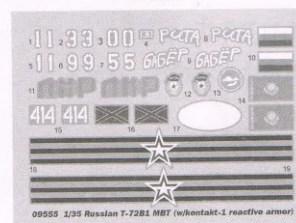

《铜丝》Ø0.6
Copper wire




《软管》Ø1.2
Vinyl tubing




《铜缆》Ø0.8
Brass wire




1

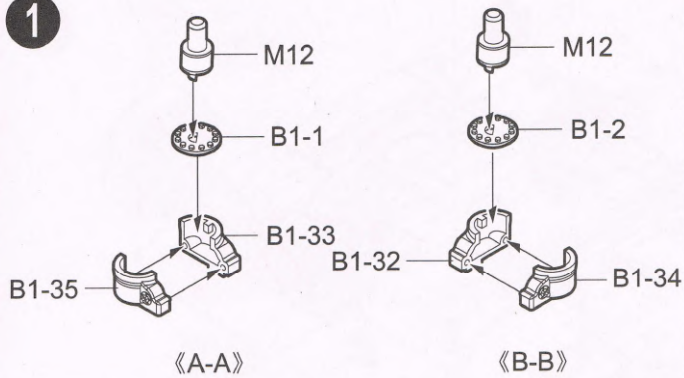


2

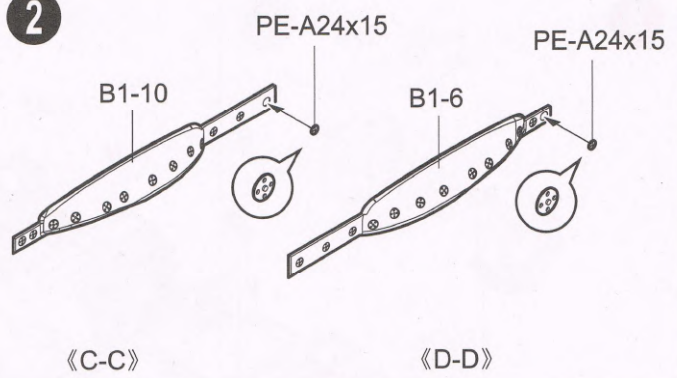


3


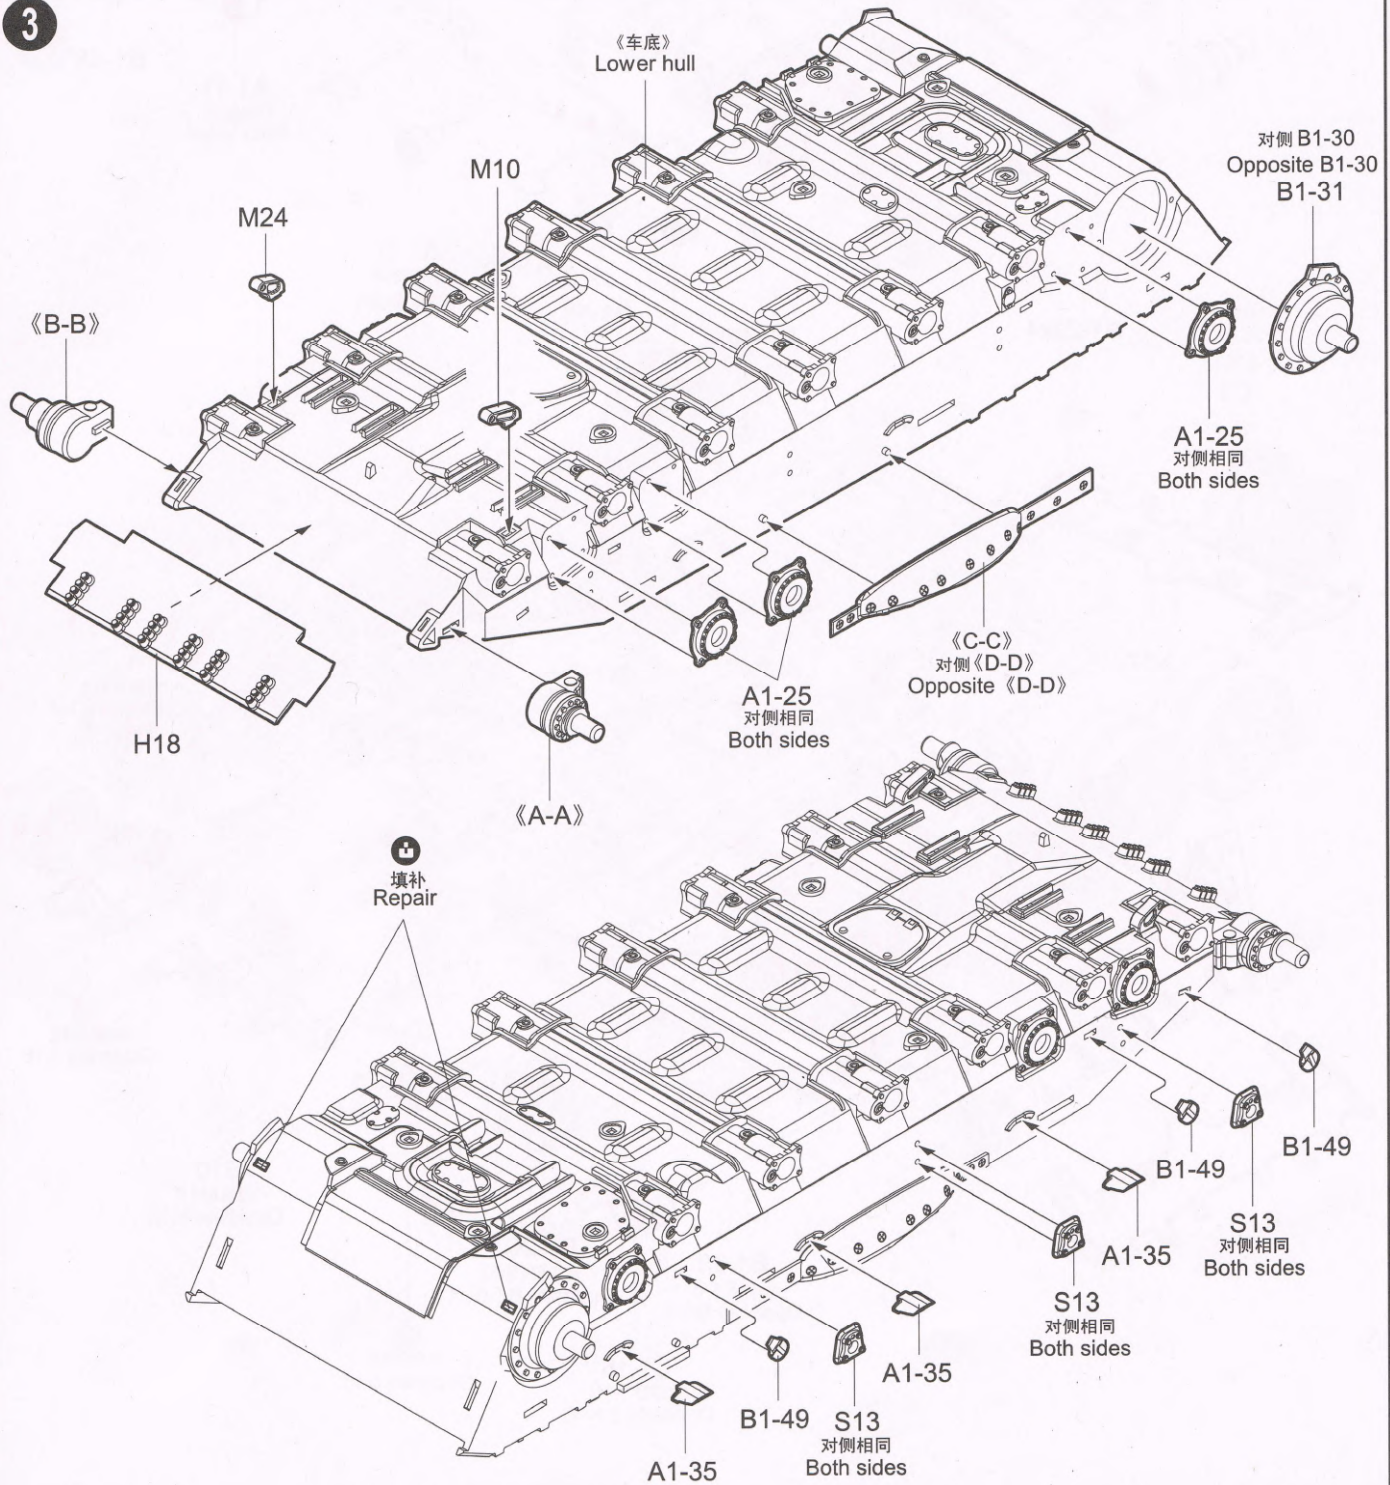


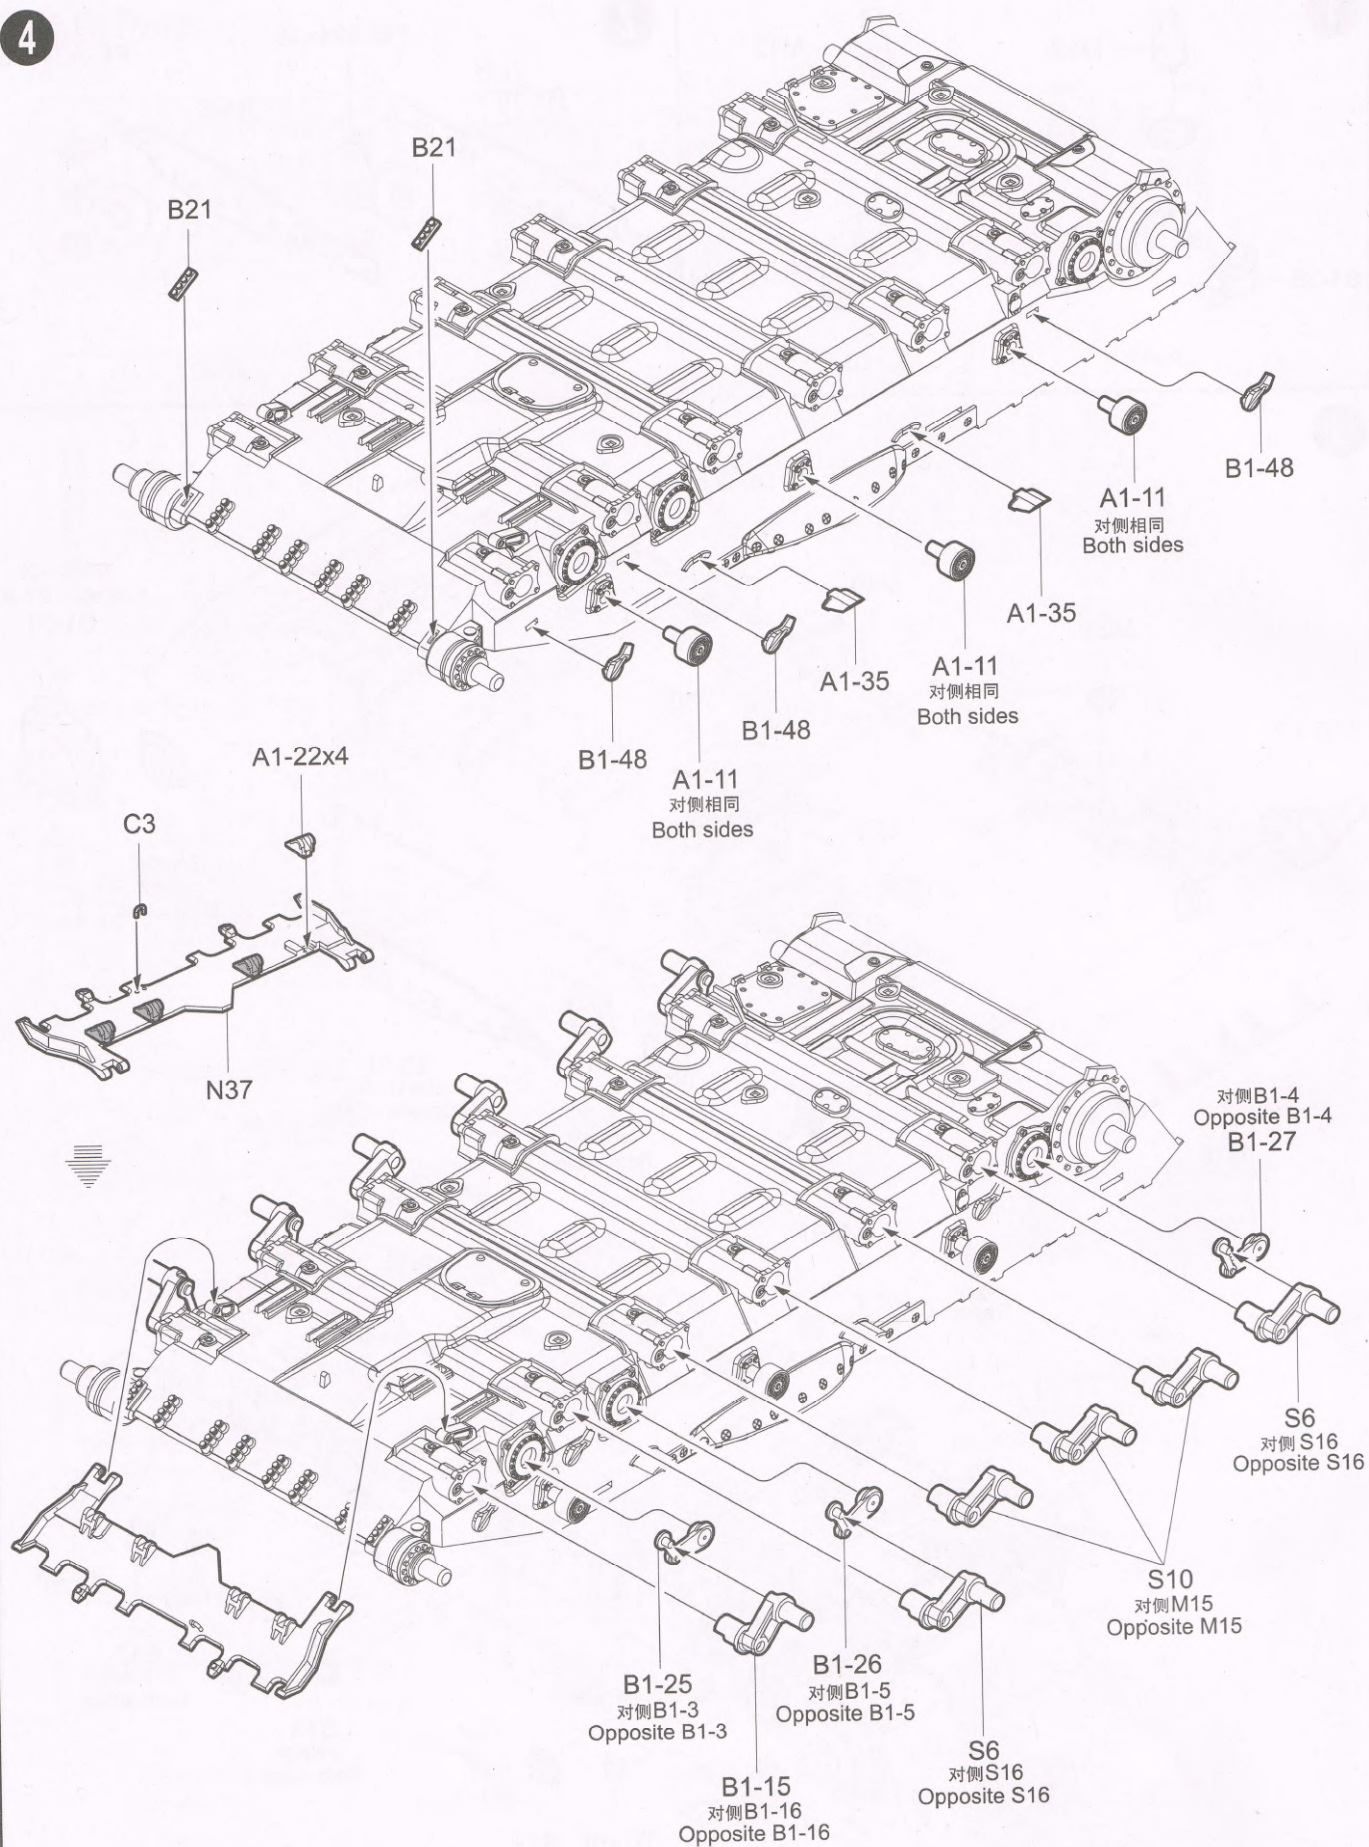


9

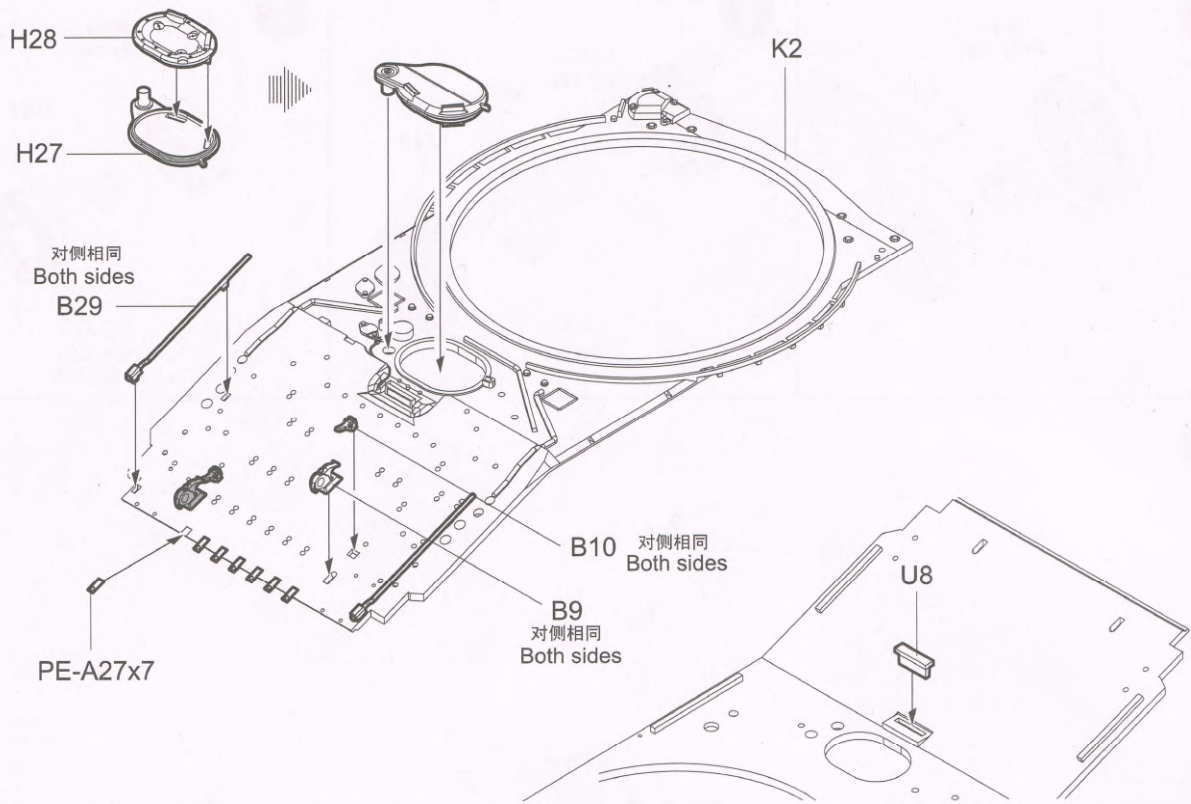


10

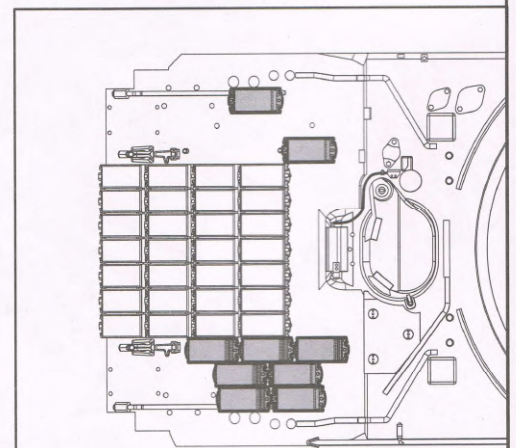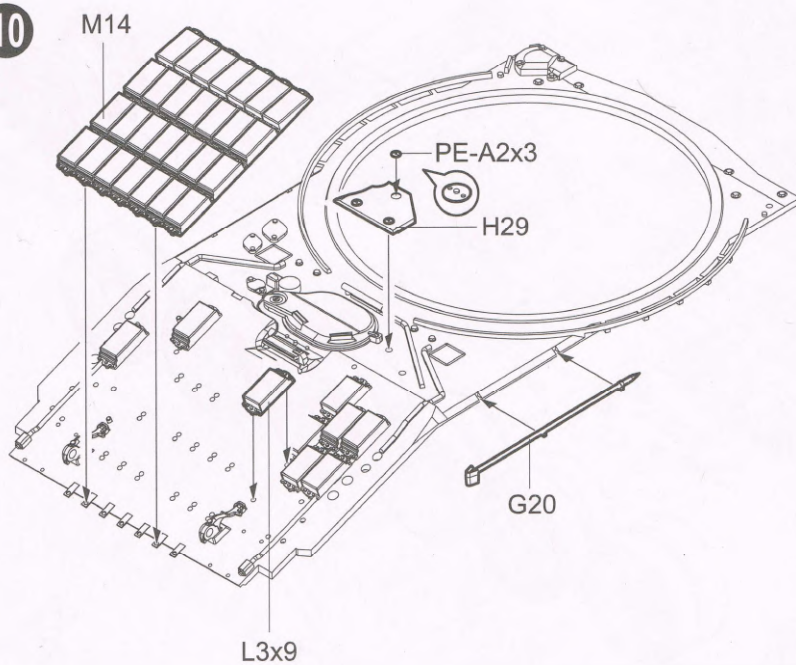


11

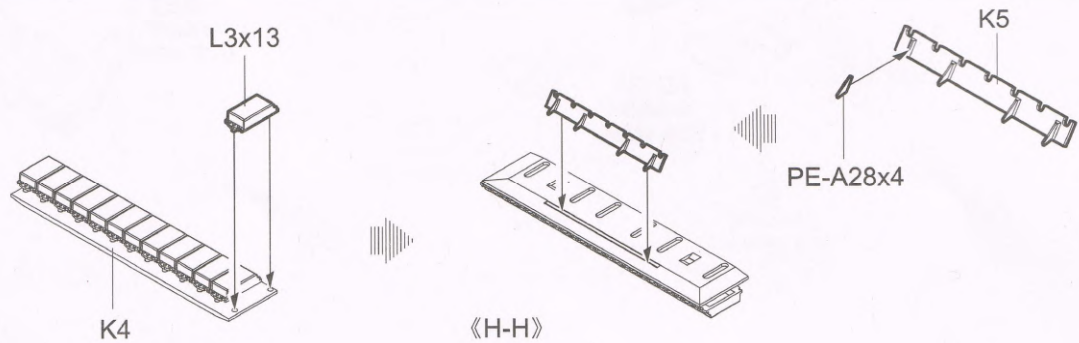


12

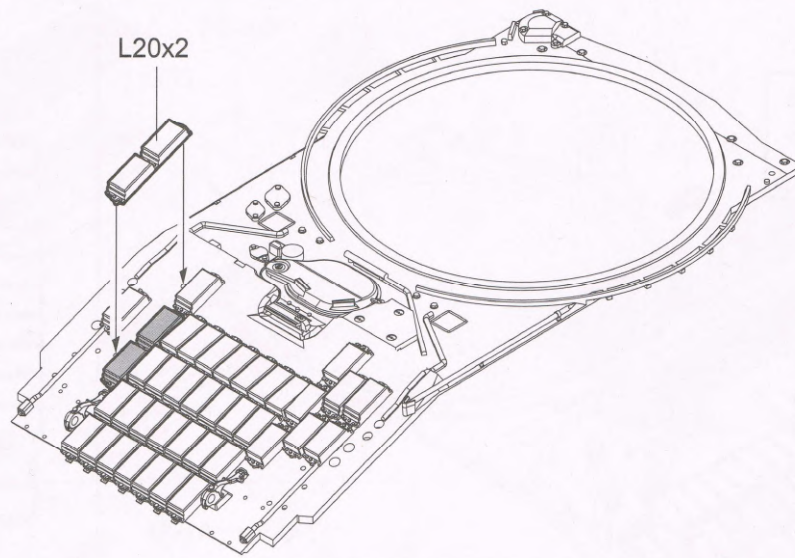


13

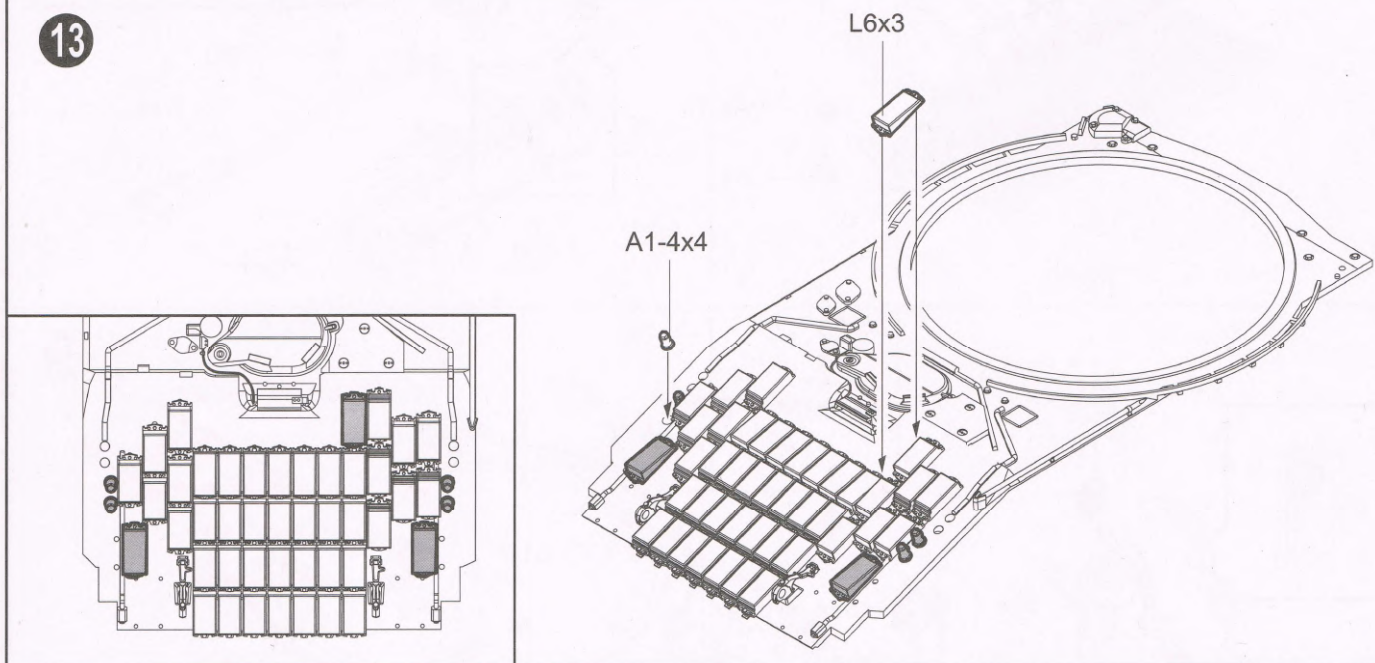



14

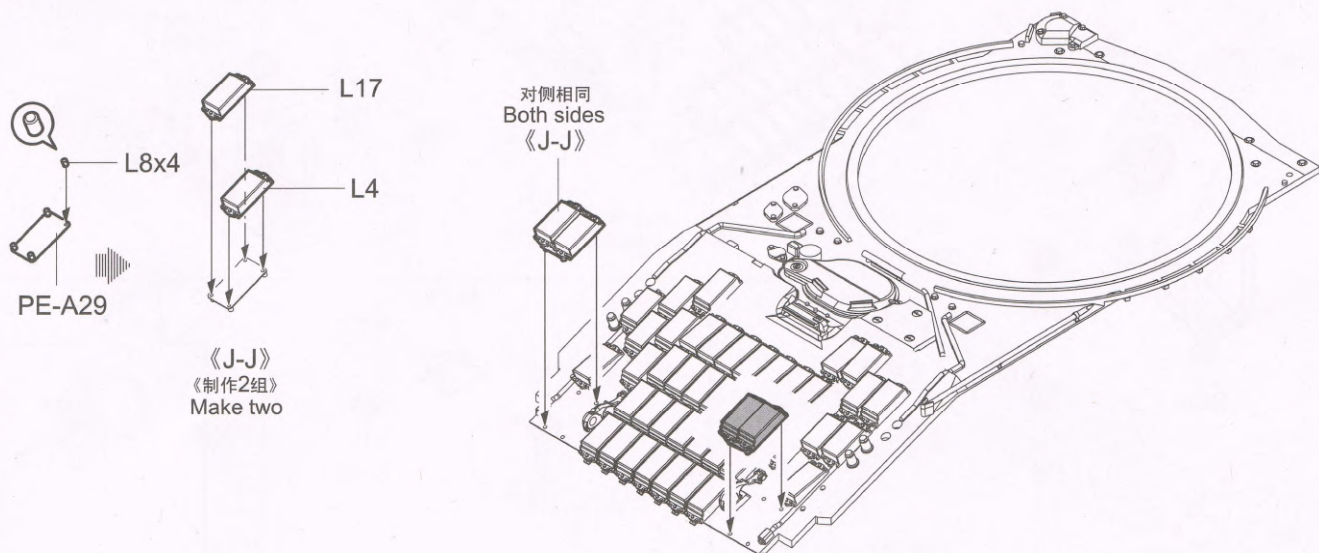



15

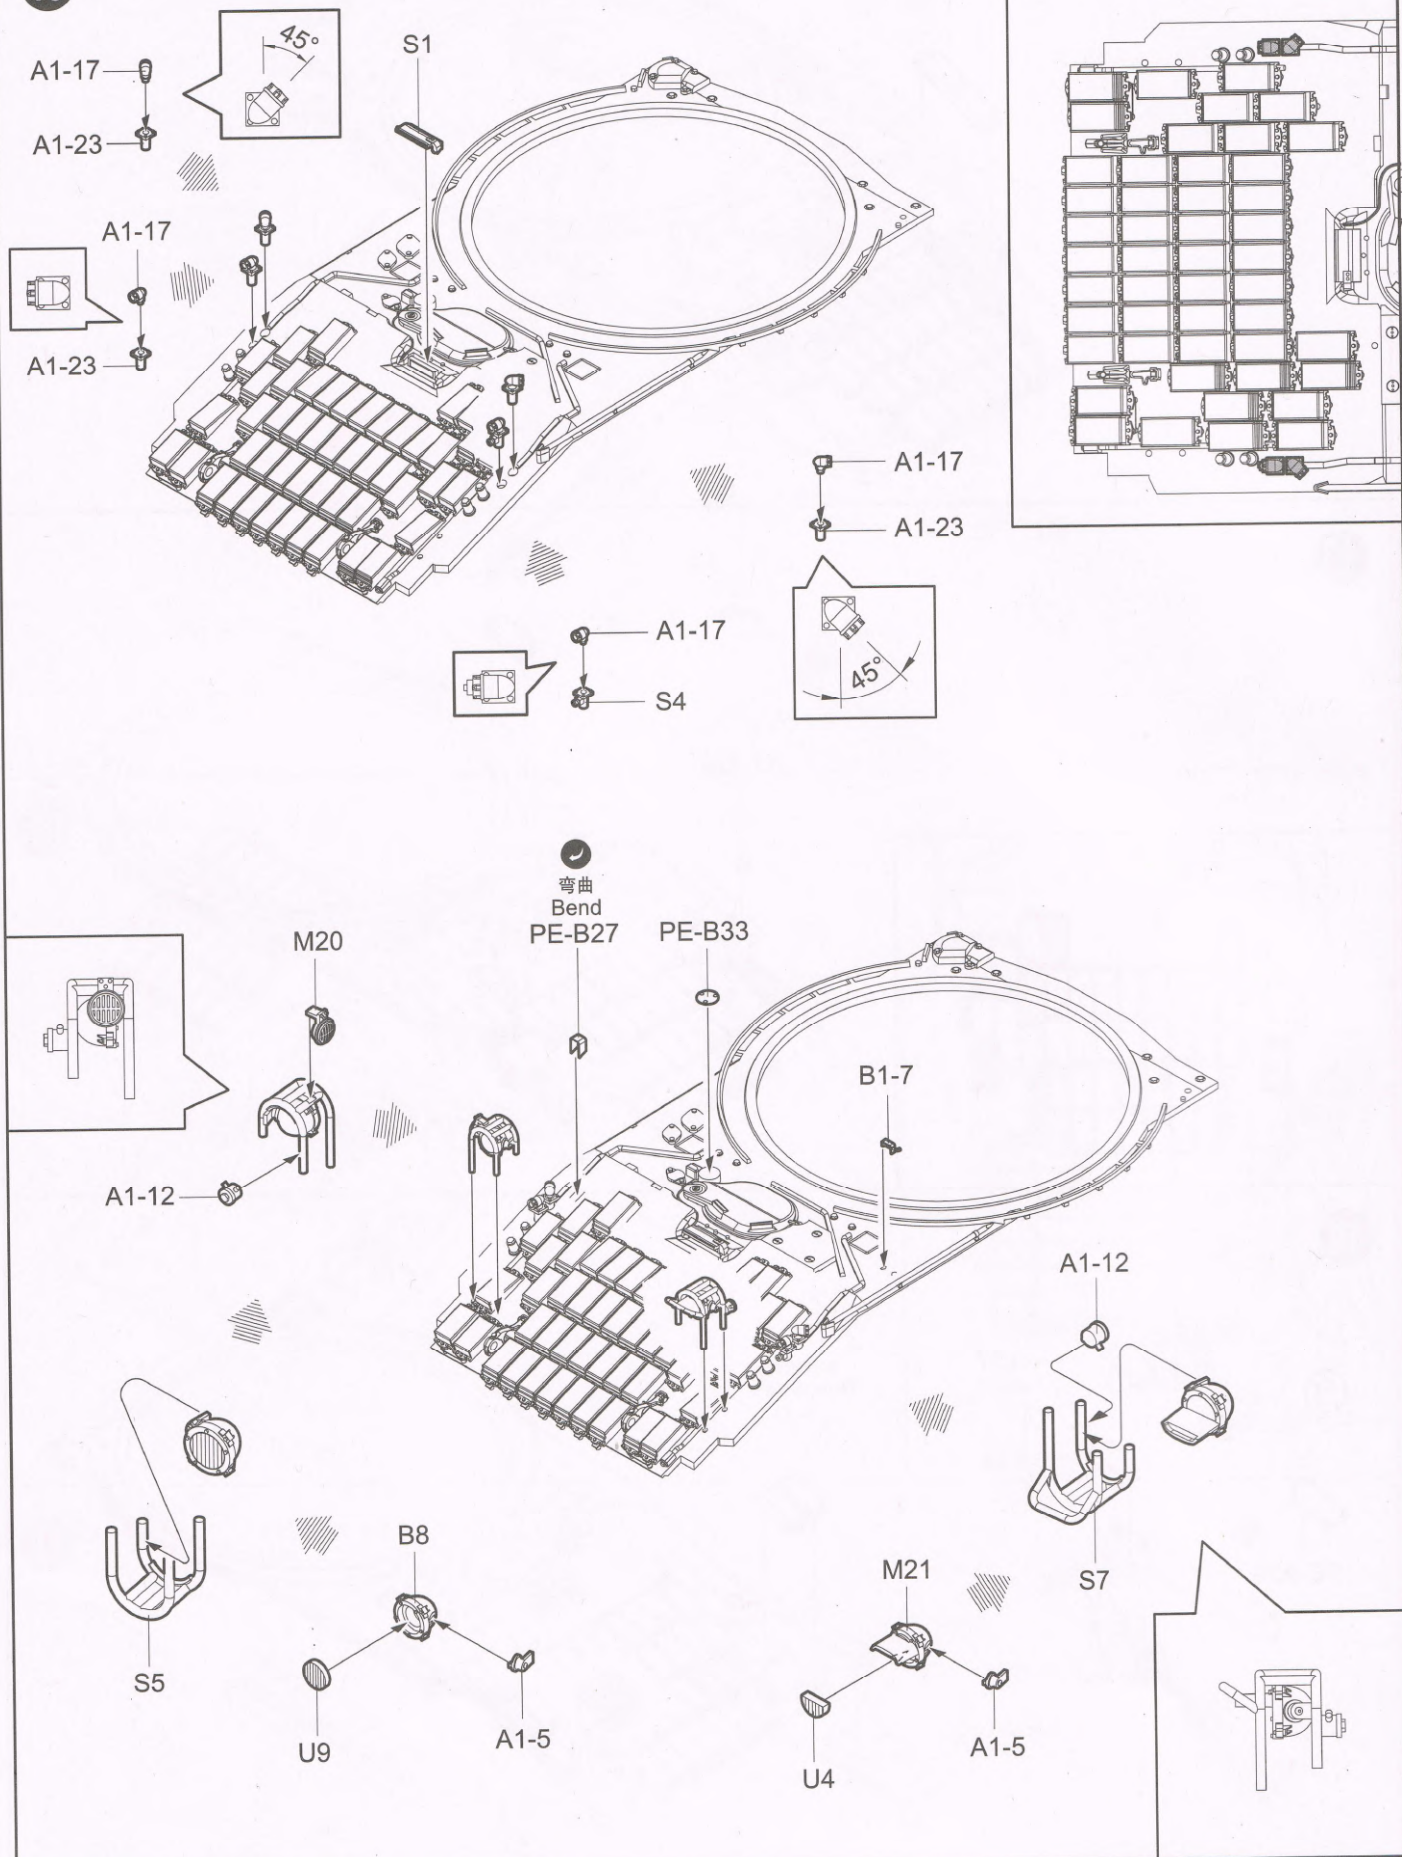



16

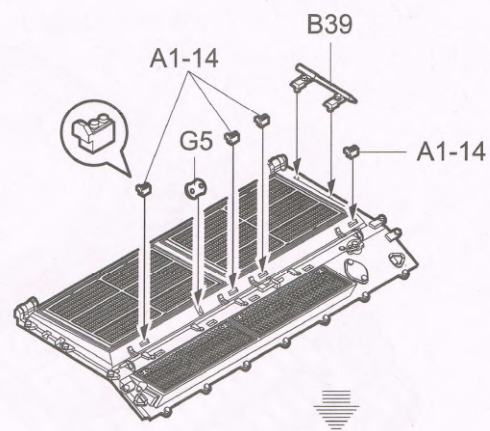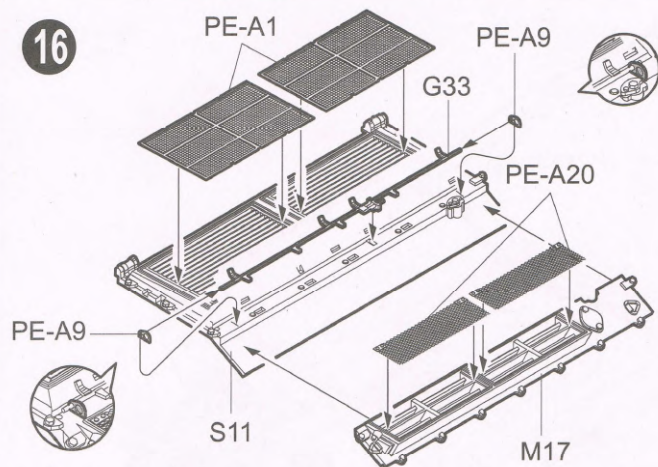

17

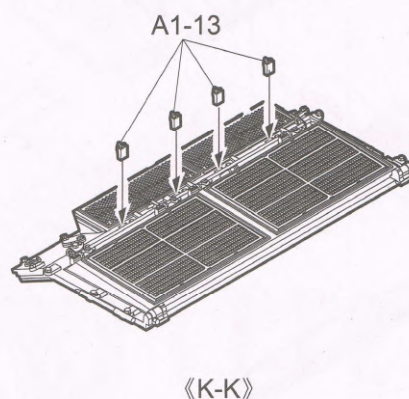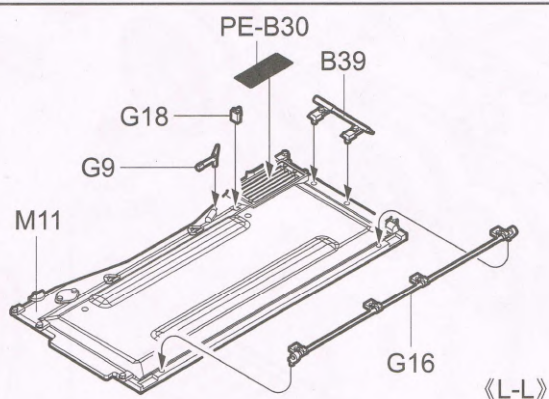

18


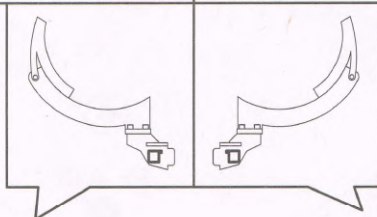
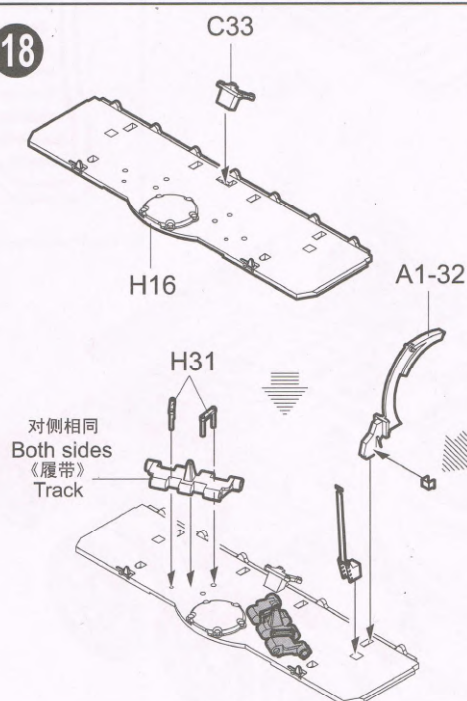



弯曲
Bend
PE-A18


弯曲
Bend
PE-A18





PE-A22
《制作2组》
Make two


弯曲
Bend
PE-A21

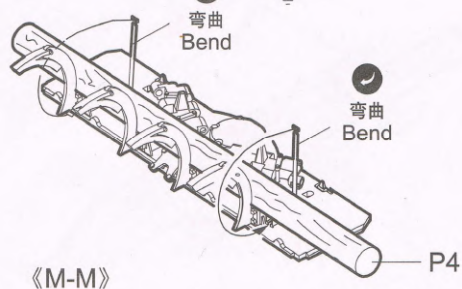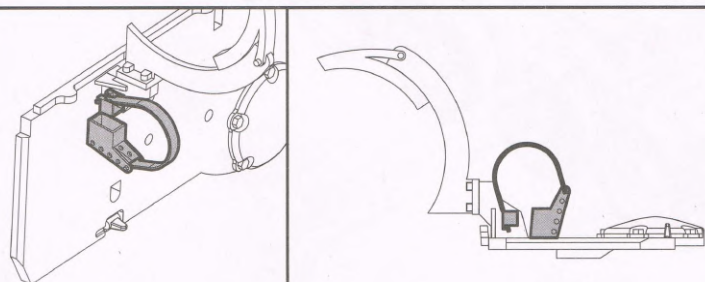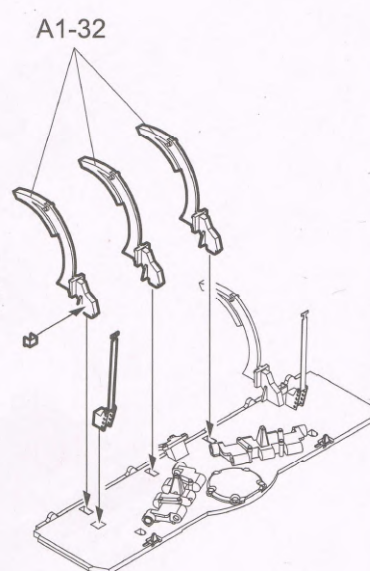






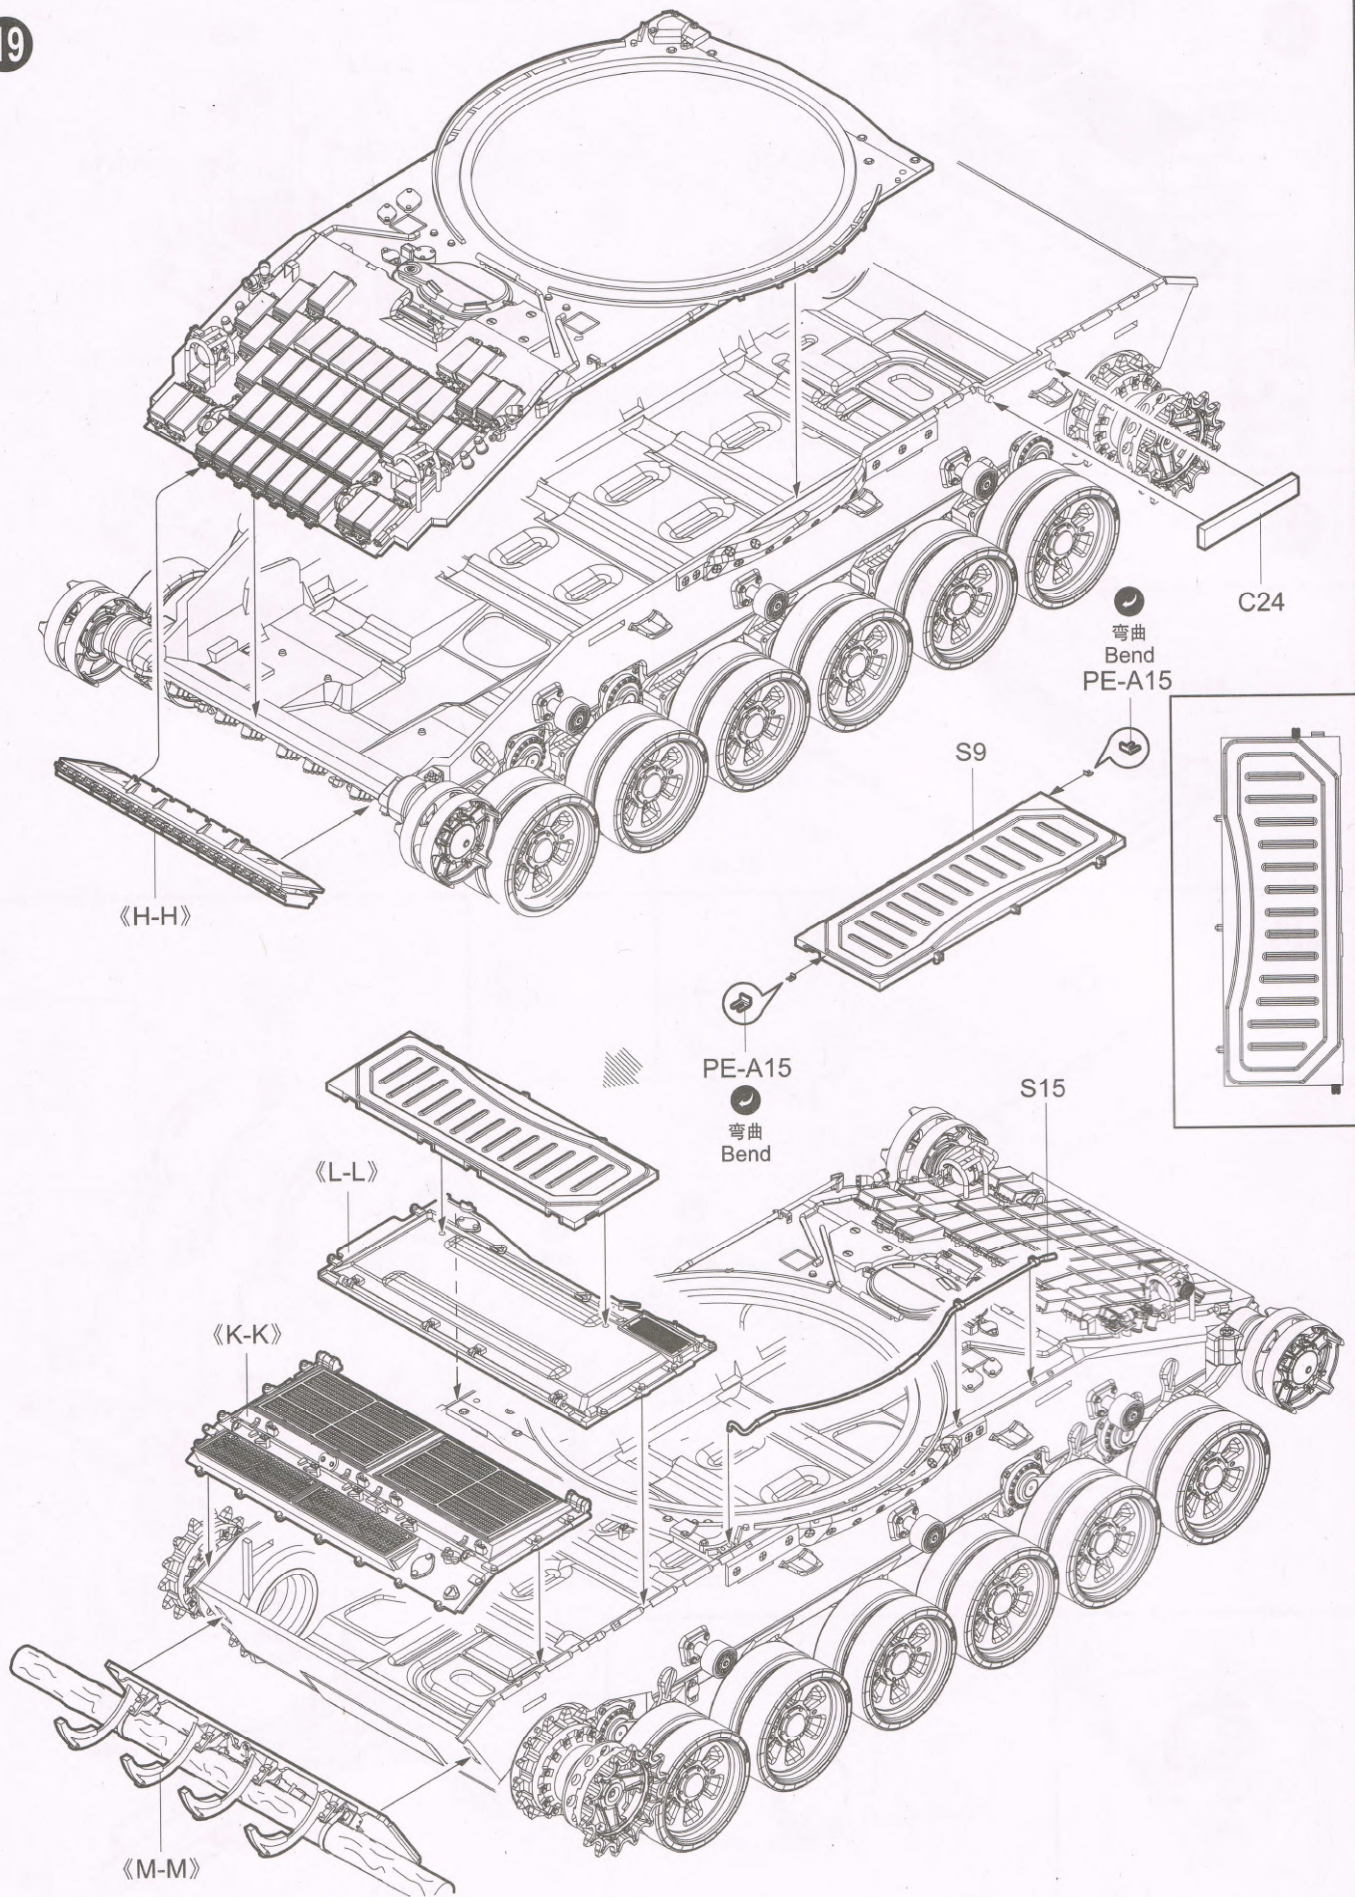


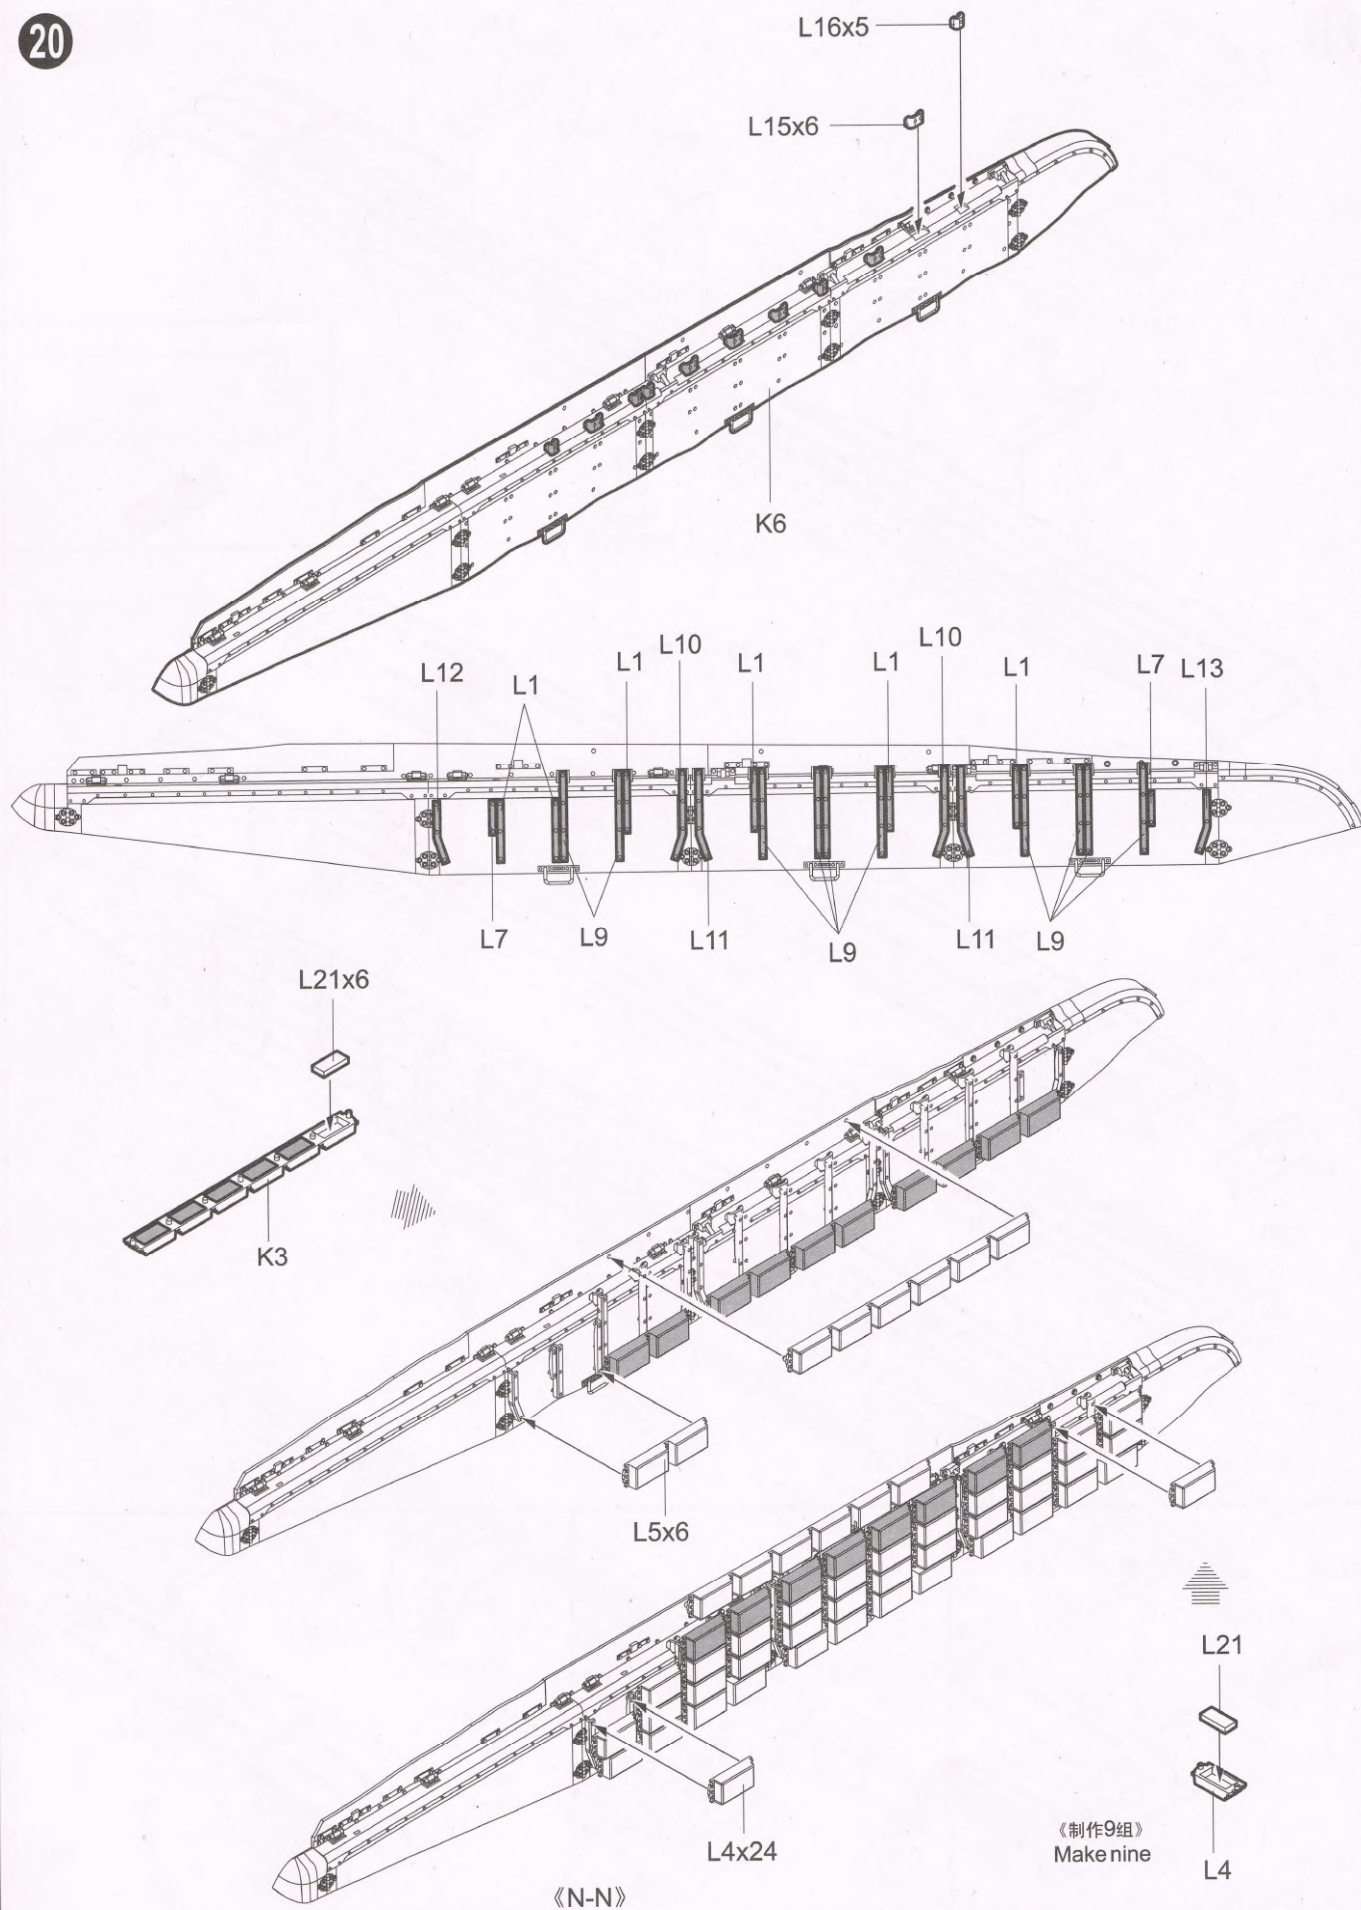

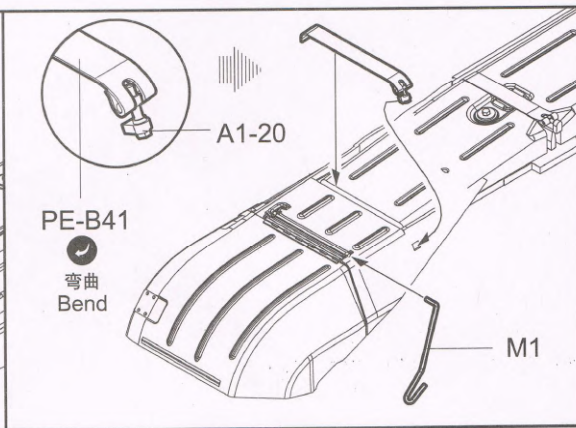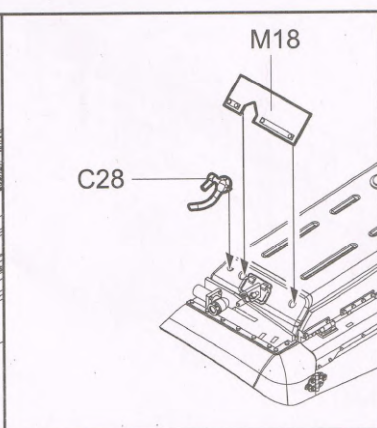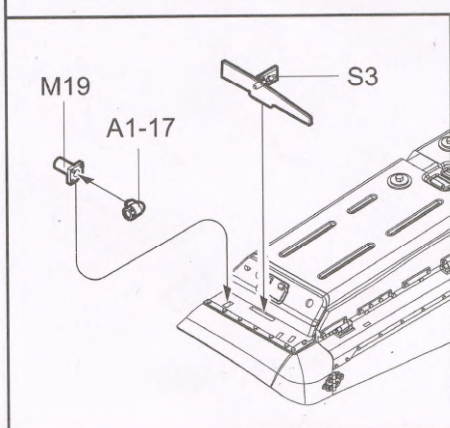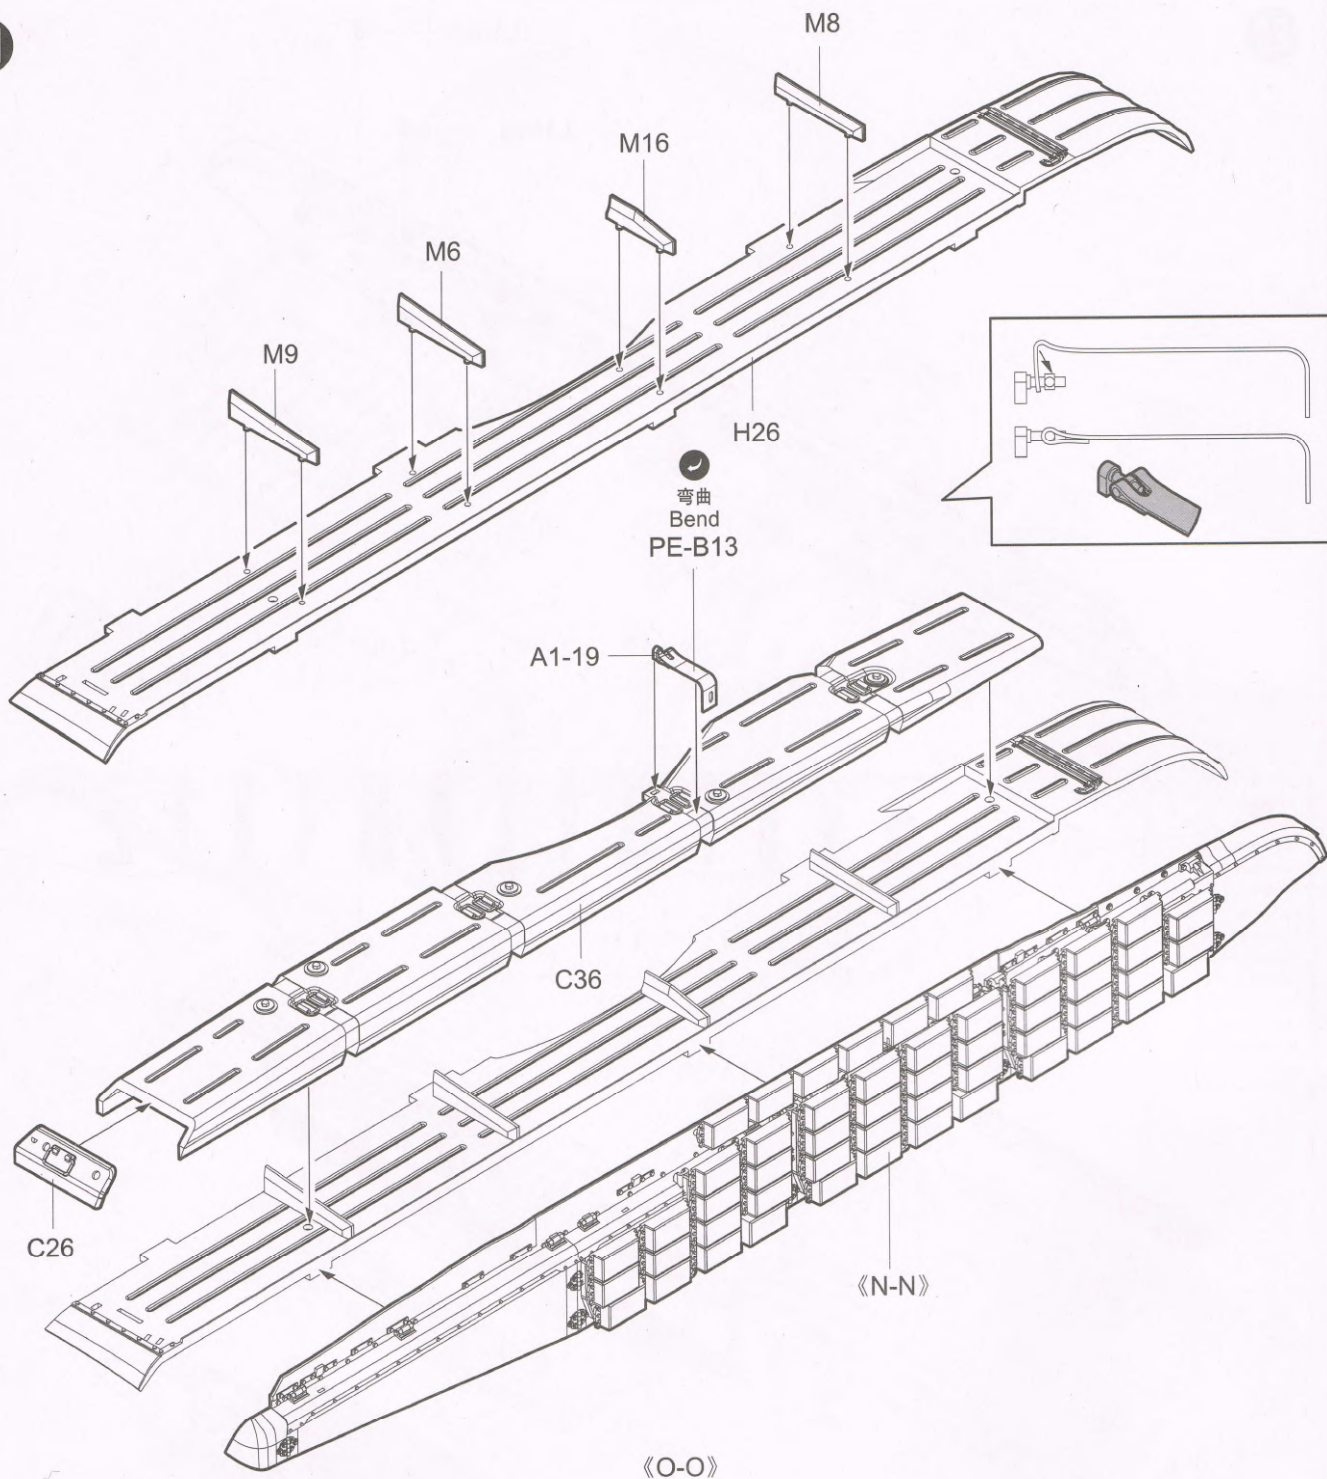

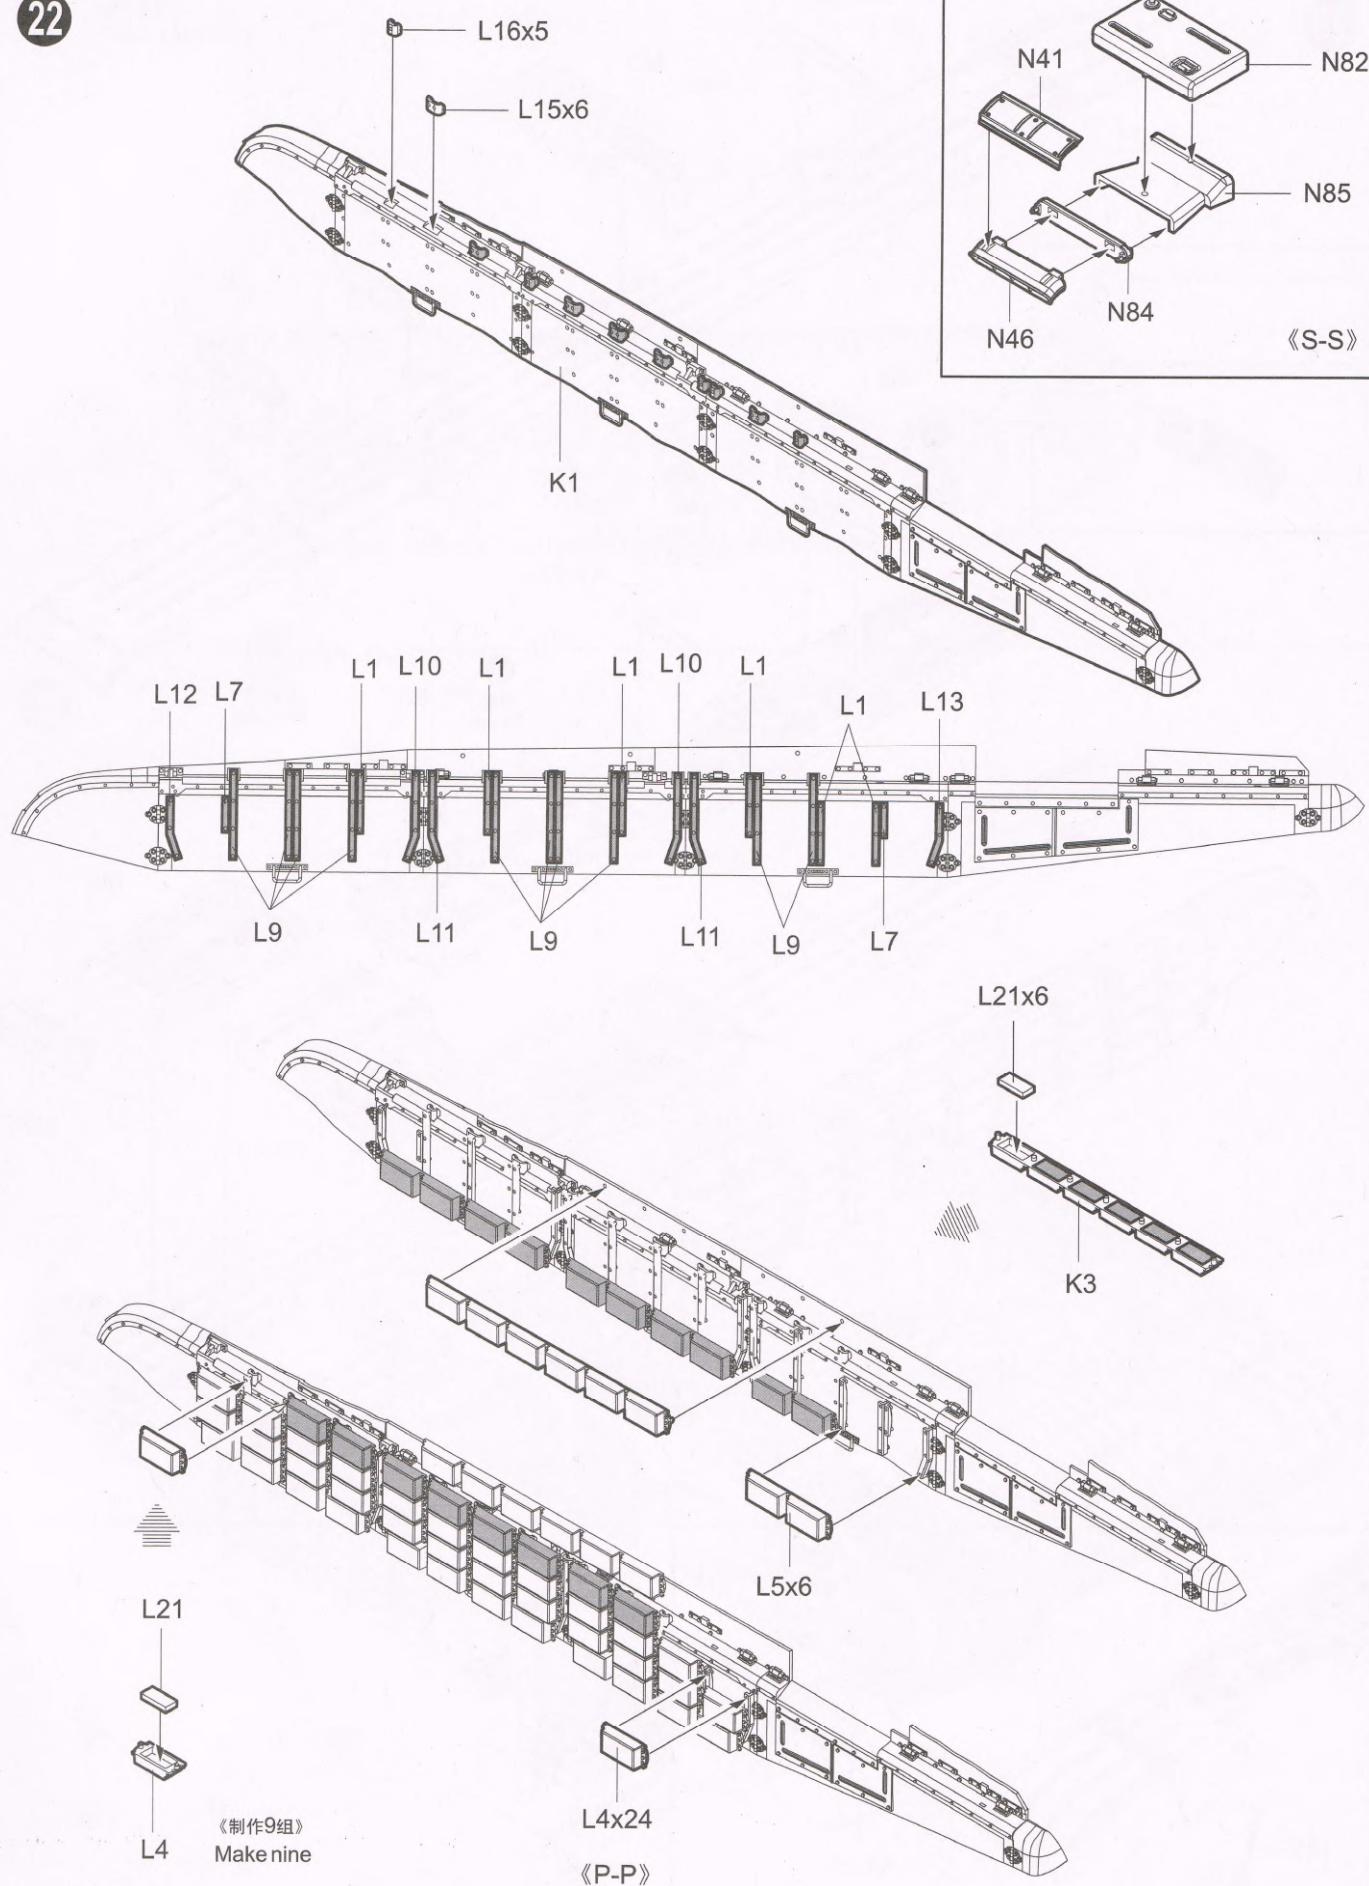


23

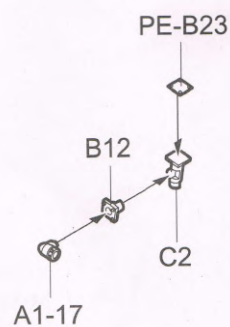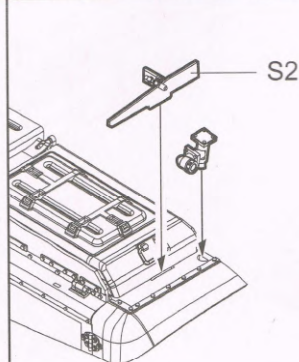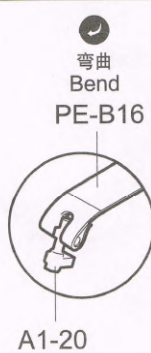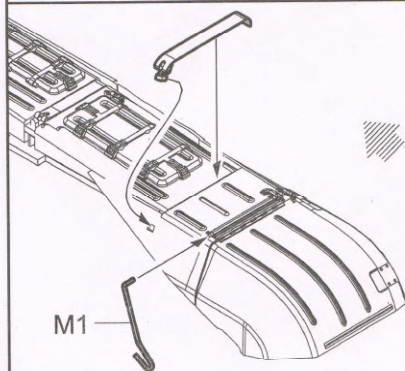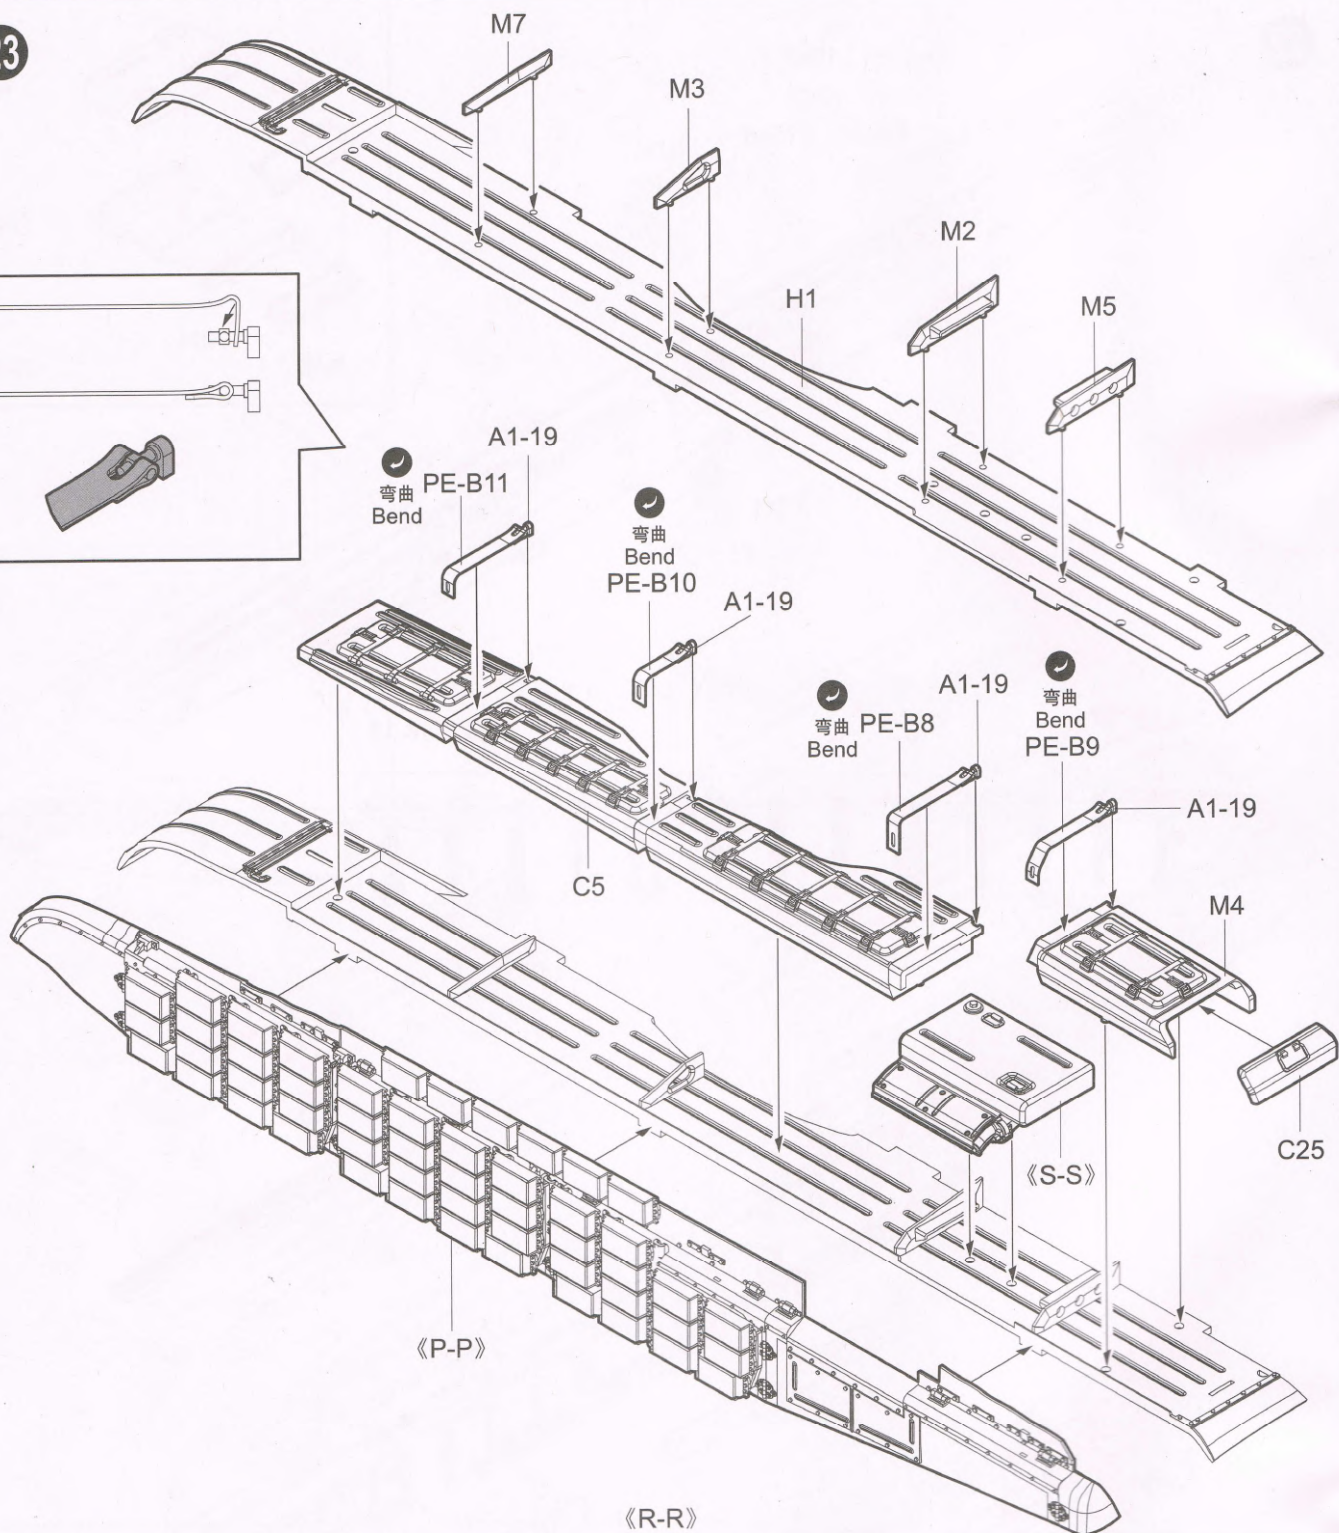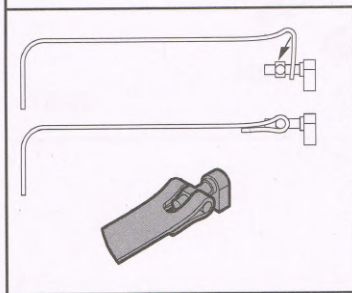


24

履带组装
Track assembly

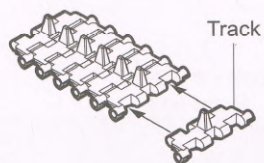


单侧履约需95节
Complete track for one
side require 95 links

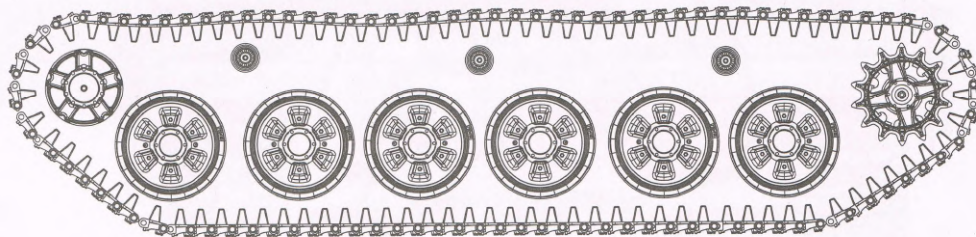




制作2组
Make two

25


S14

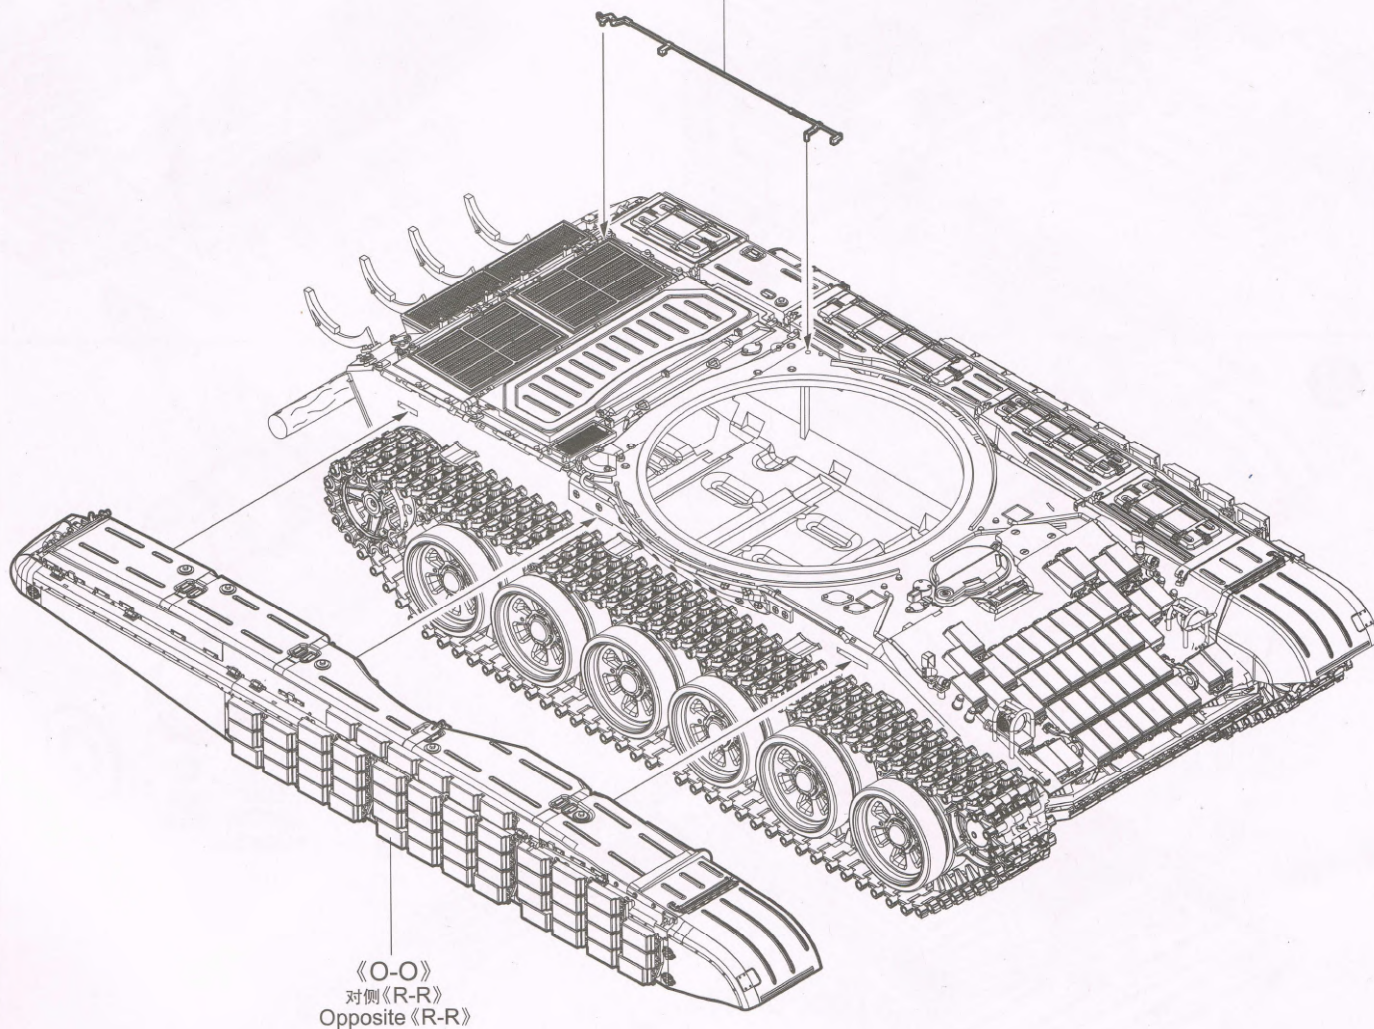

26

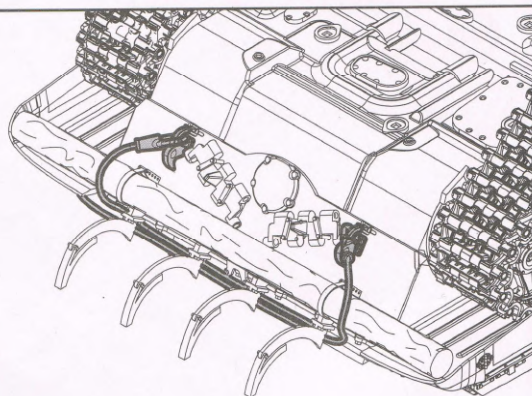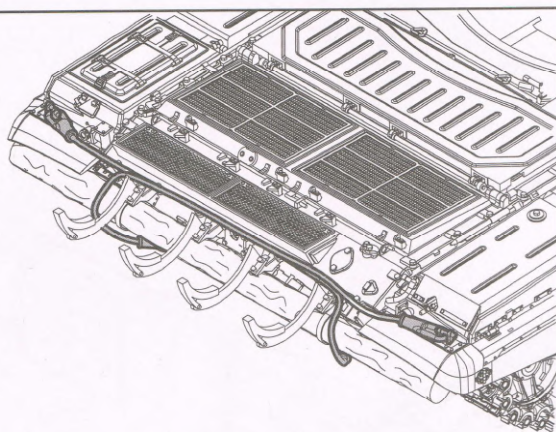
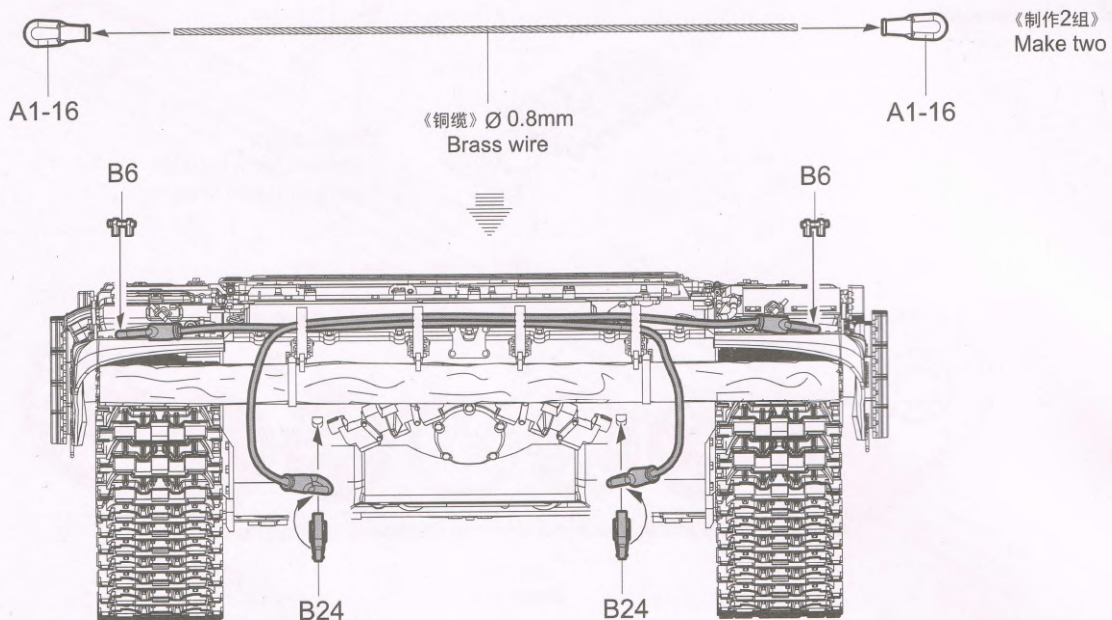


27

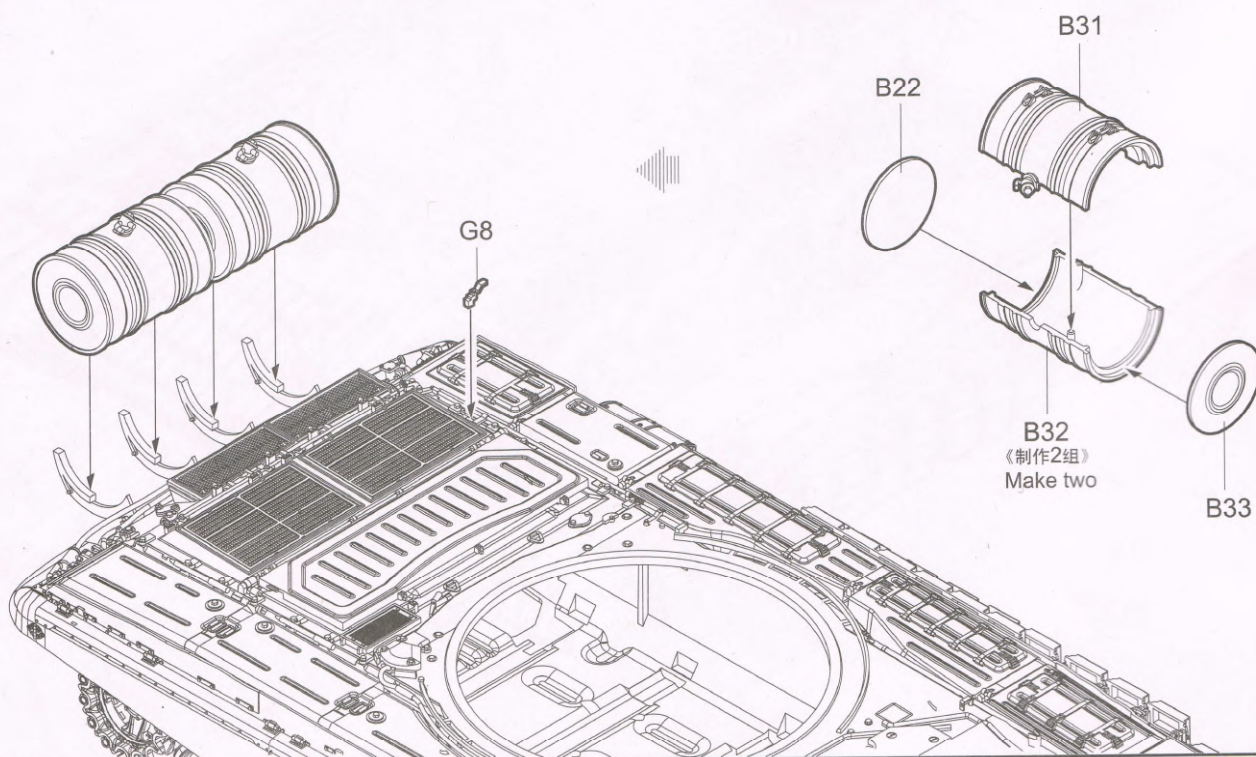


装配软管前请先穿入铜丝，使之保持弯曲状态。

Before you set up the vinyl tubing, please get through the copper-wire, so that it remains bend shape.

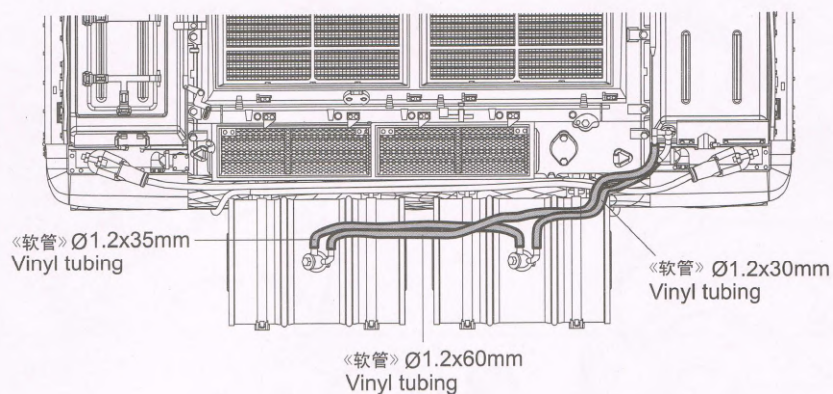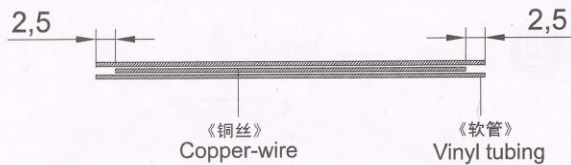


弯曲
Bend
PE-A8

A1-21

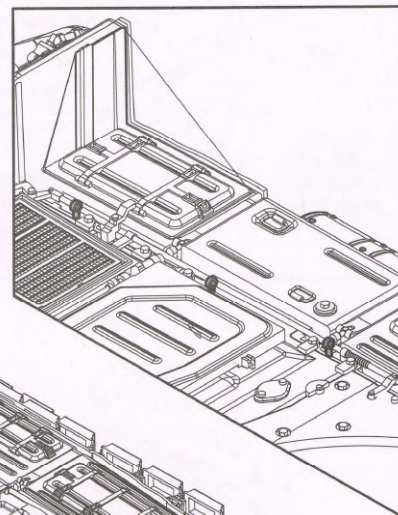


PE-B15

弯曲
Bend



PE-B12

弯曲
Bend




PE-B14


弯曲
Bend

H3
对侧H4
Opposite H4


29

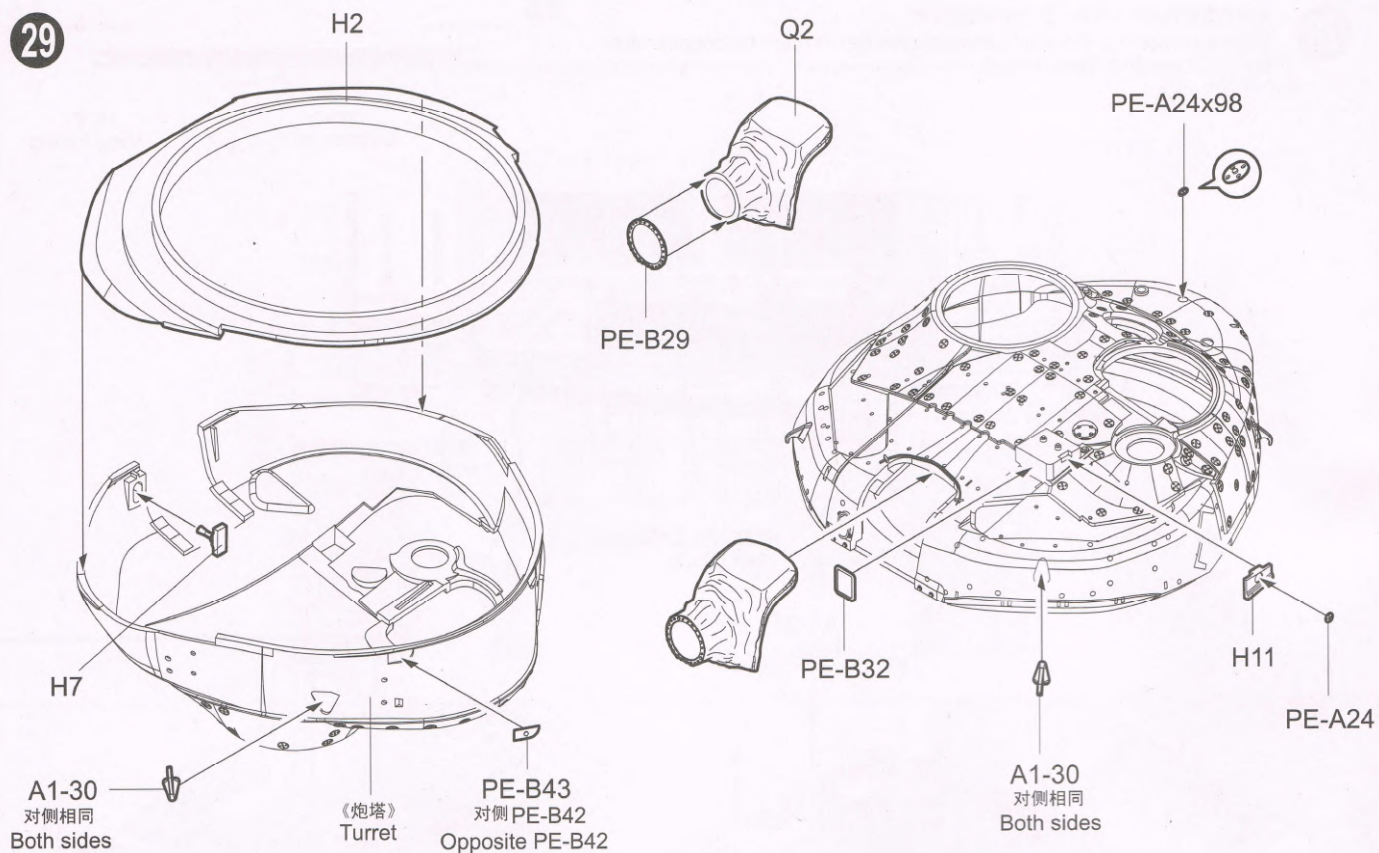



30

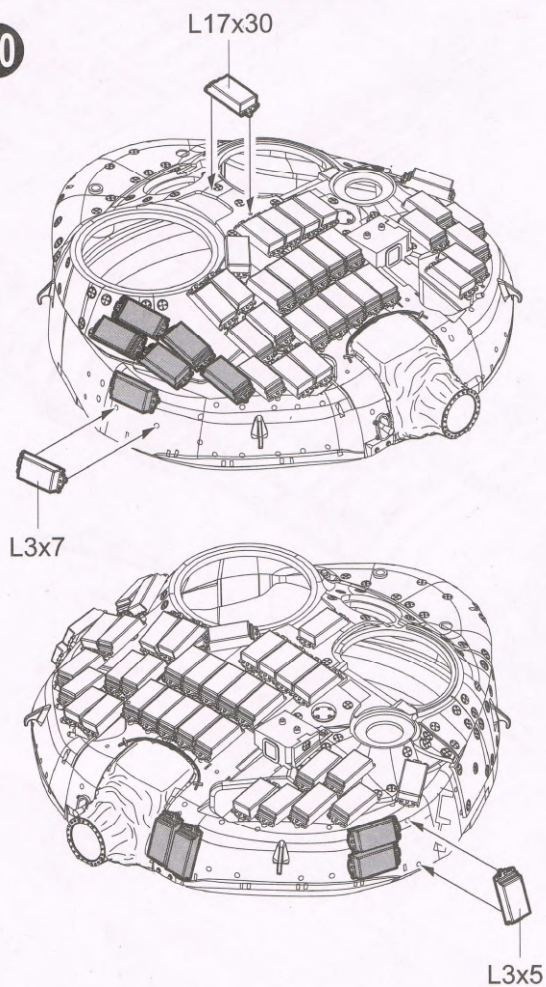

31

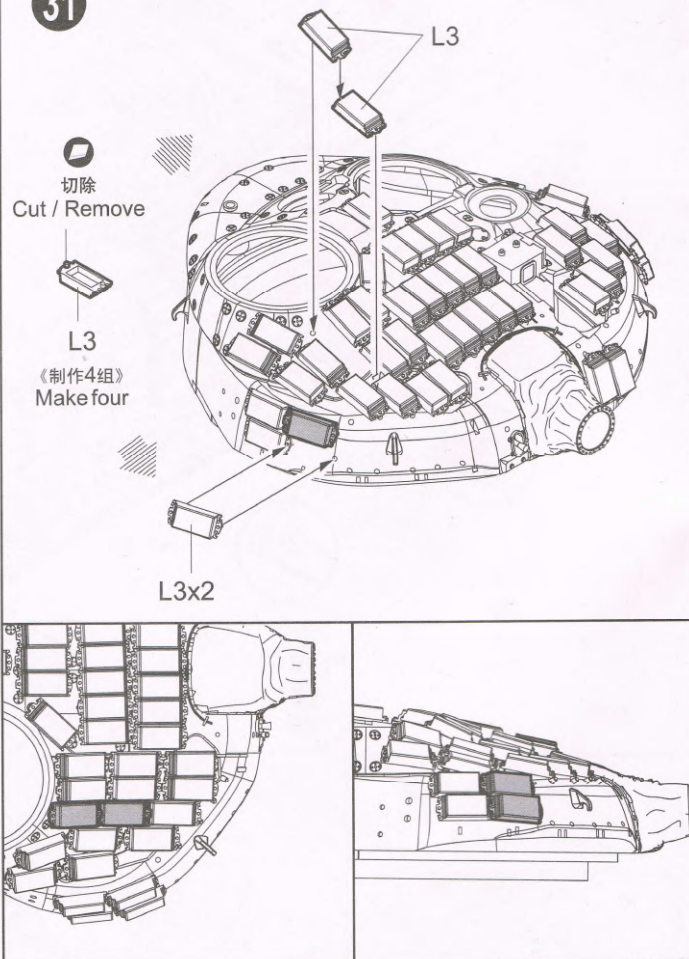


32

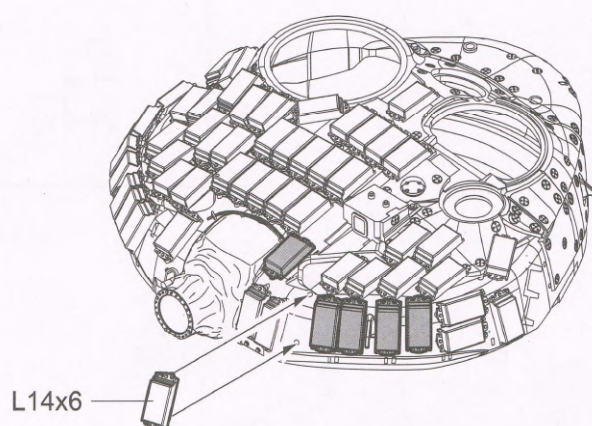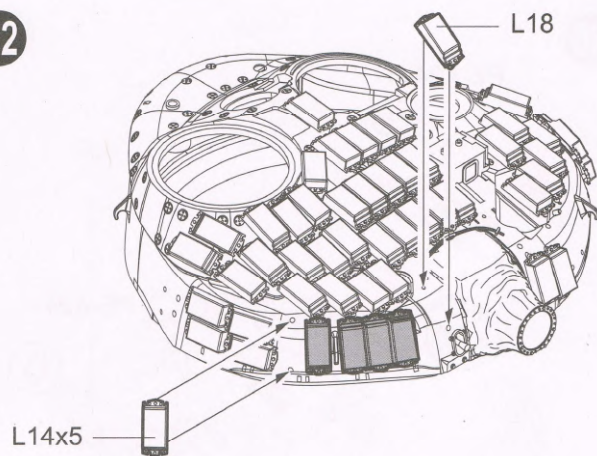


33


只限B、C涂装时
Only use for B.C

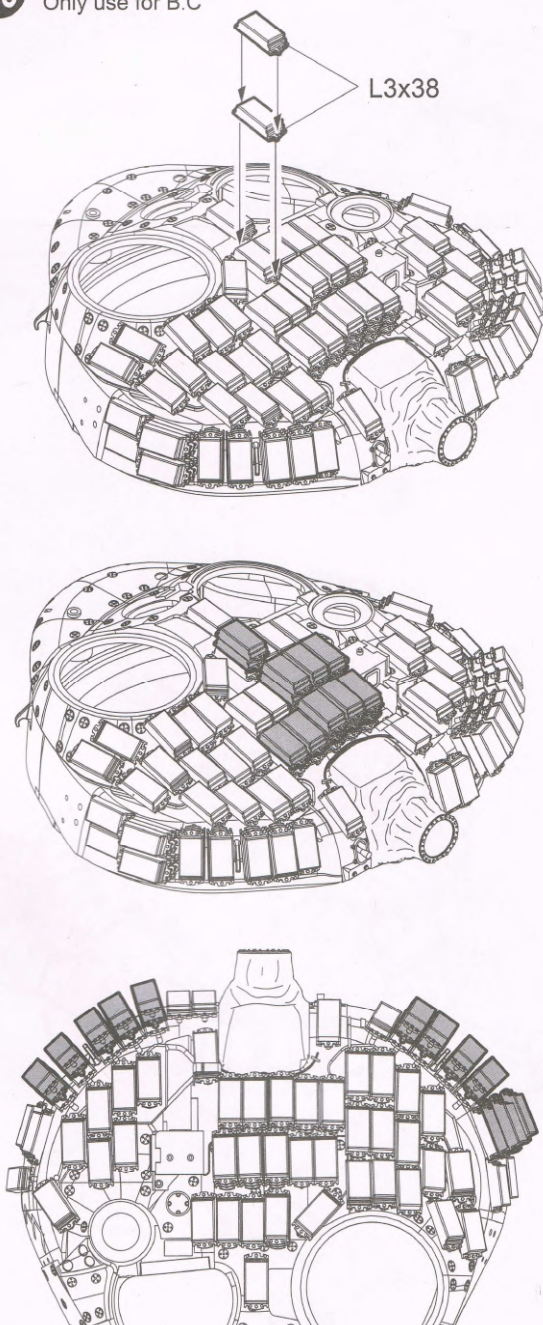

34

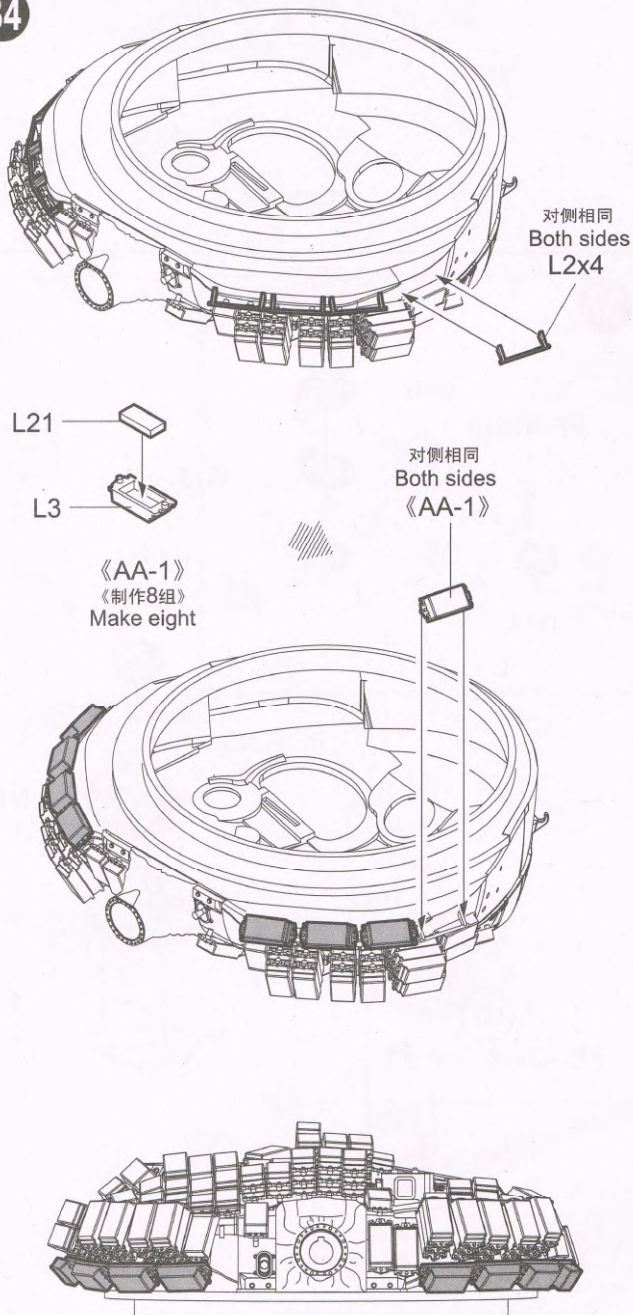


35

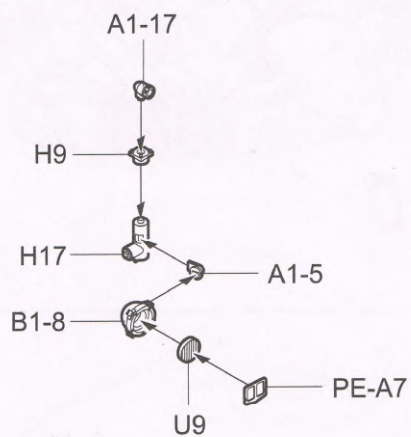


《S-S》

36

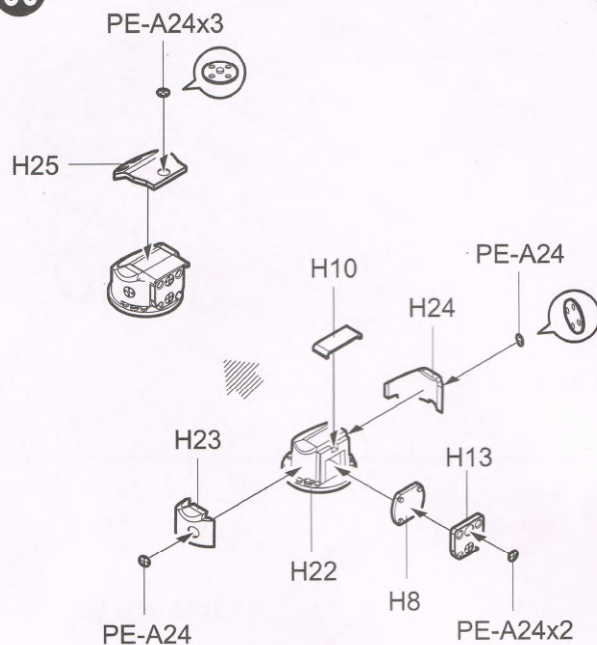


《T-T》

37

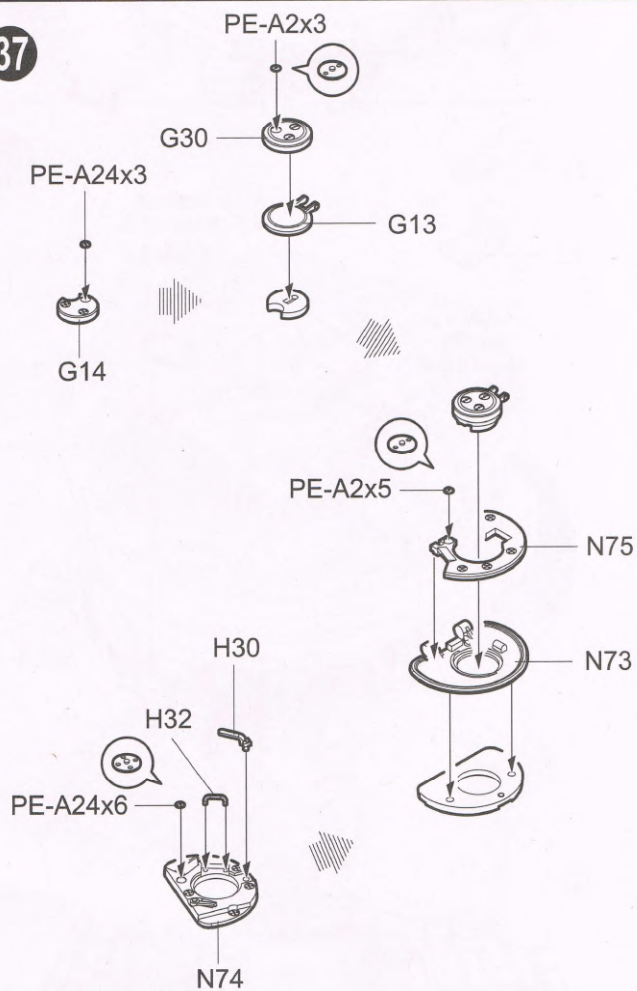


《U-U》


38

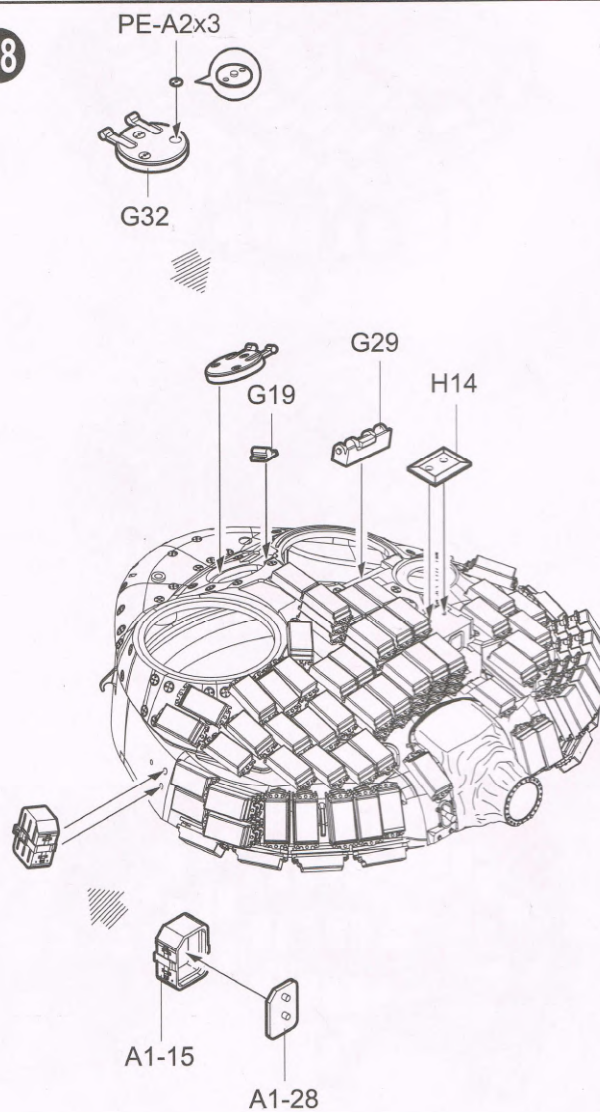




39

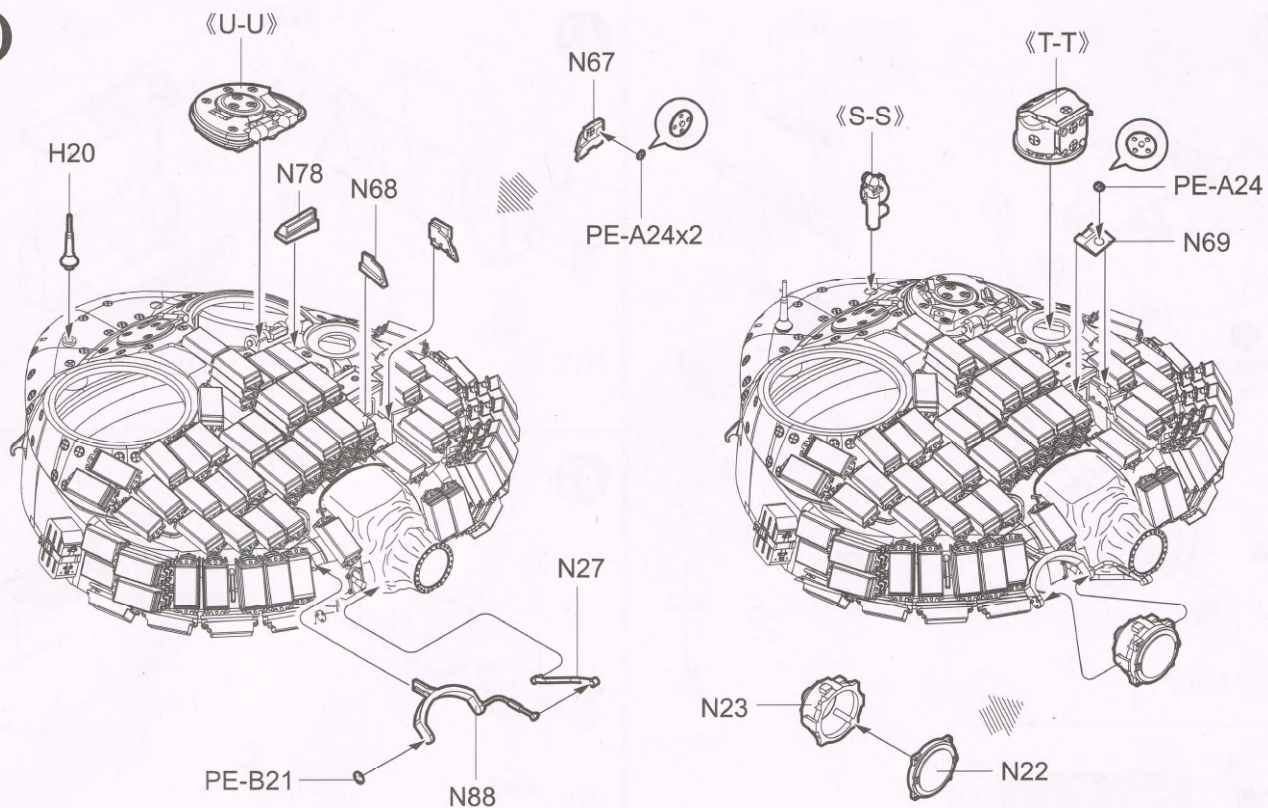

40

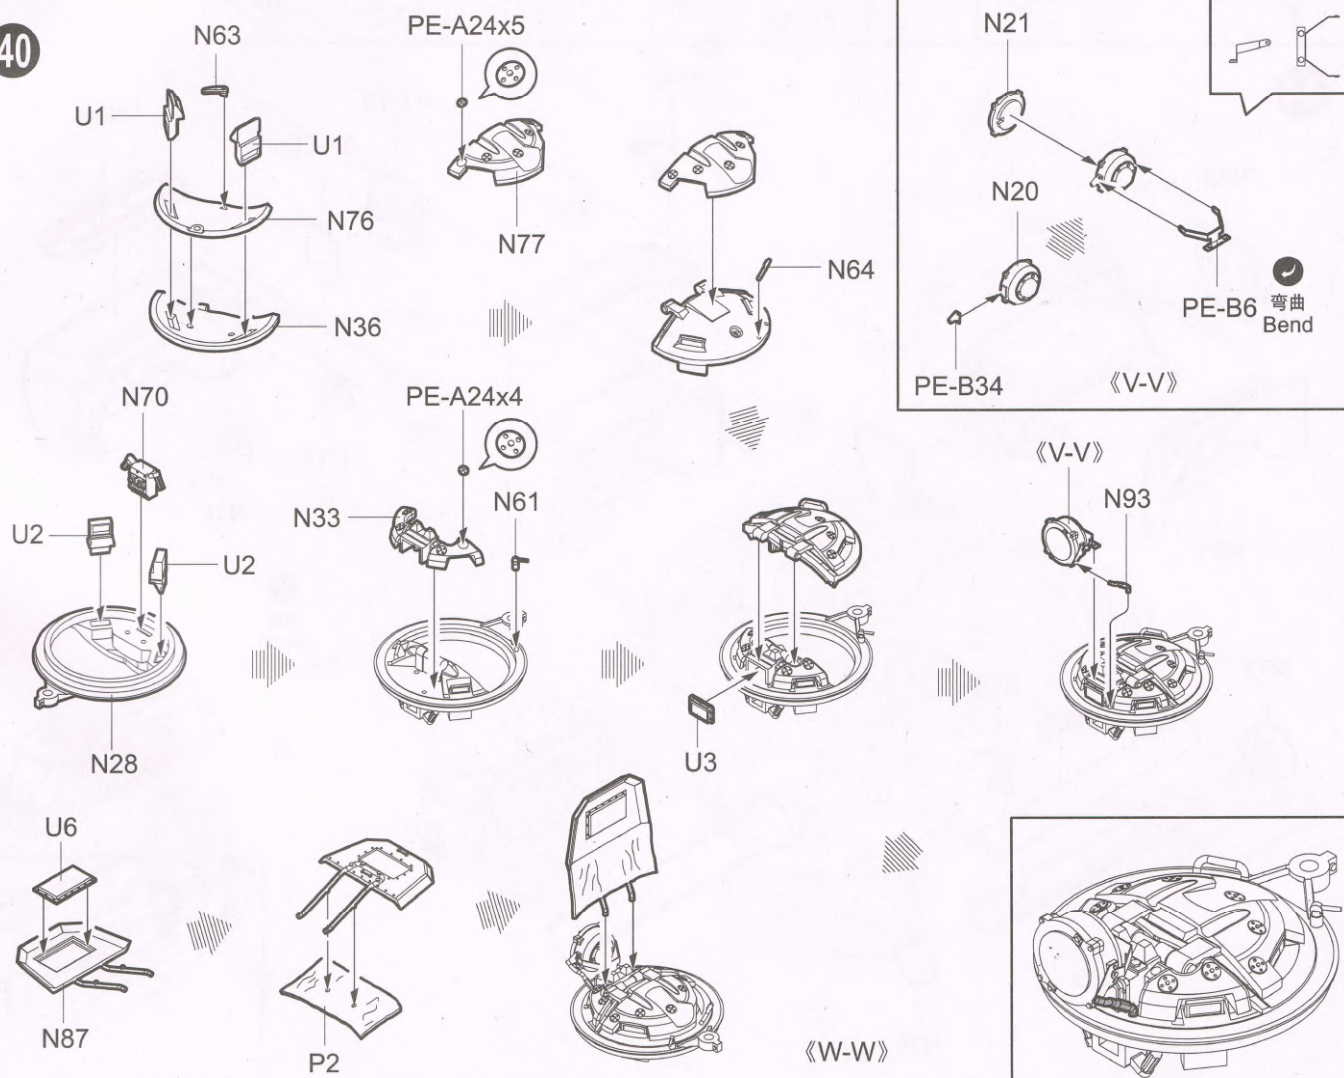


41

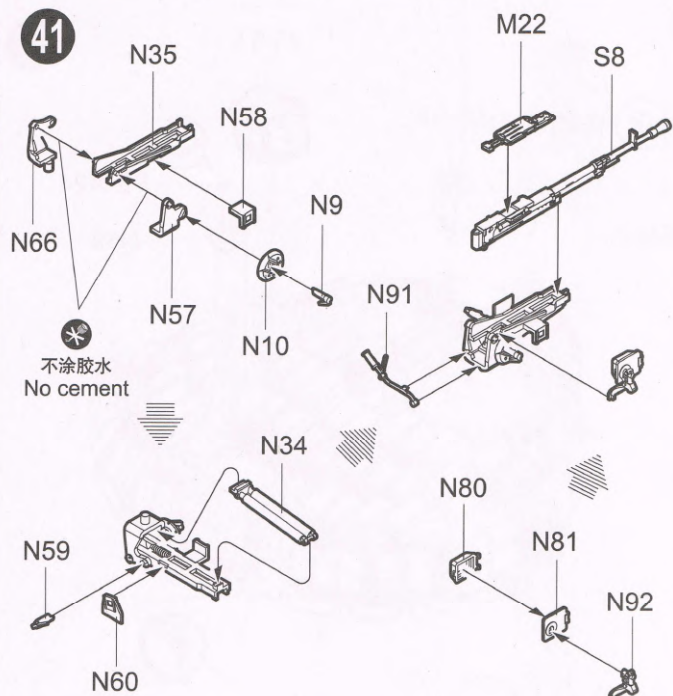


《X-X》



42

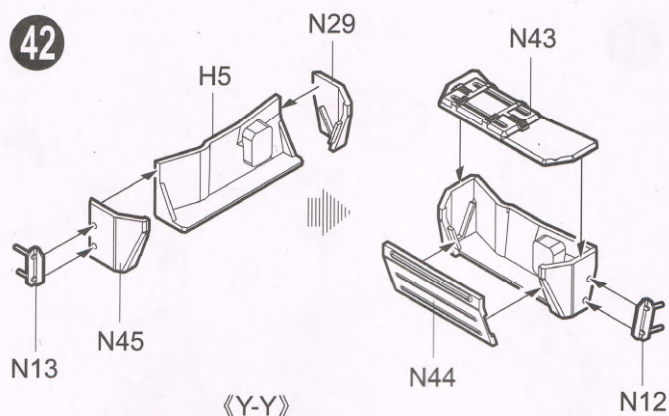



43

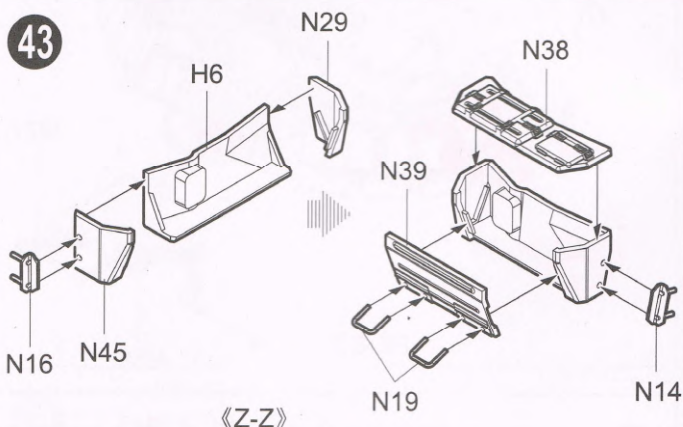

44

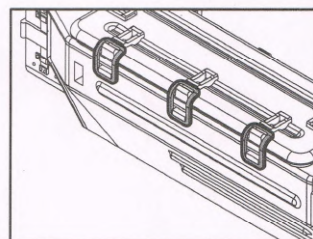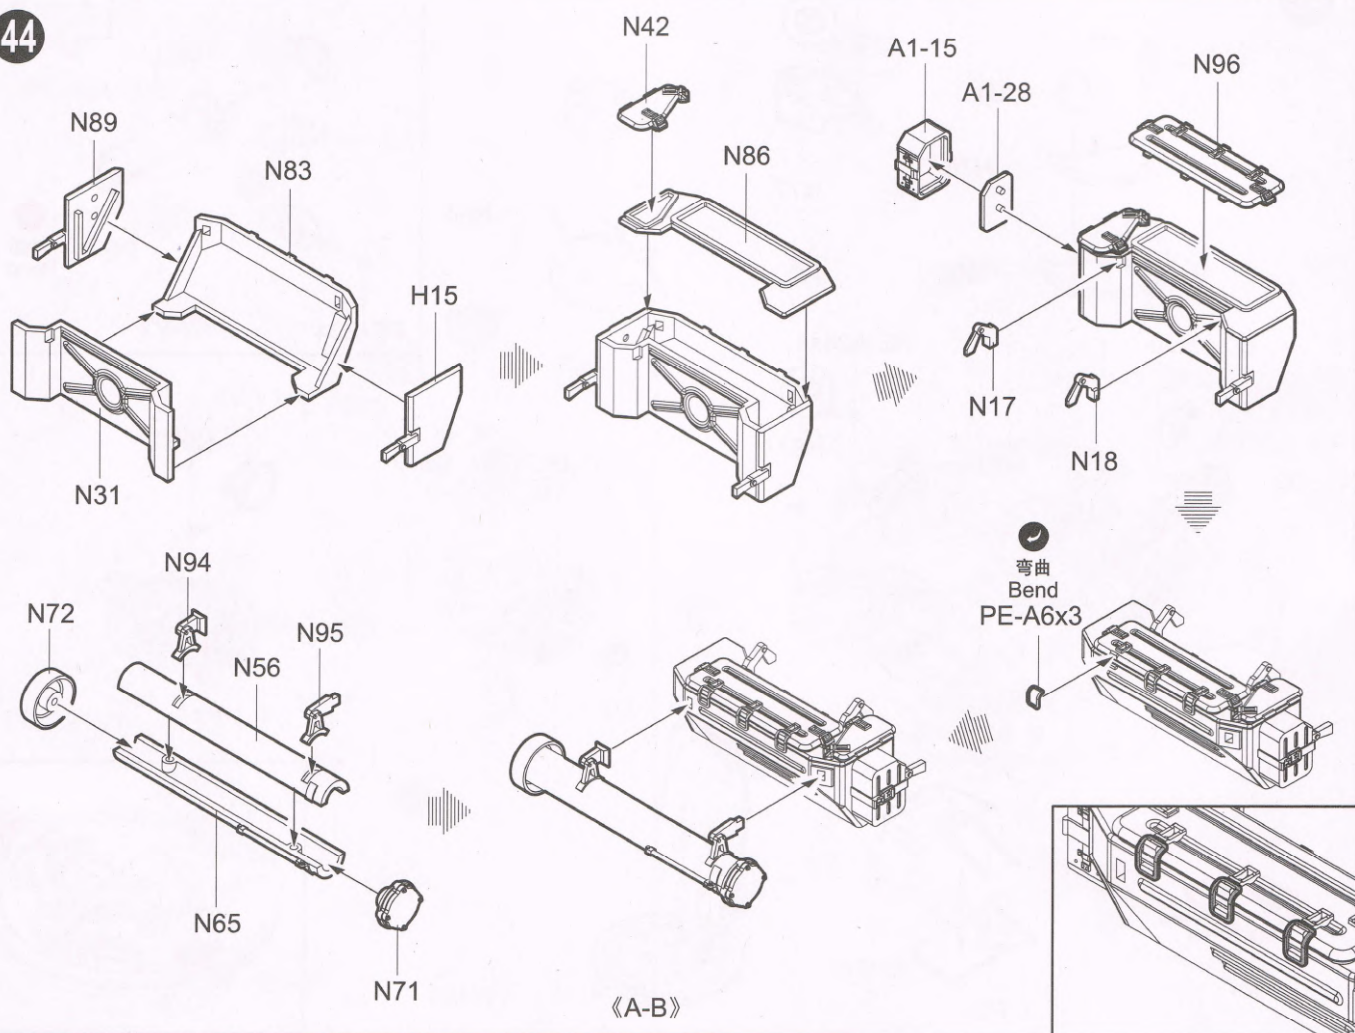


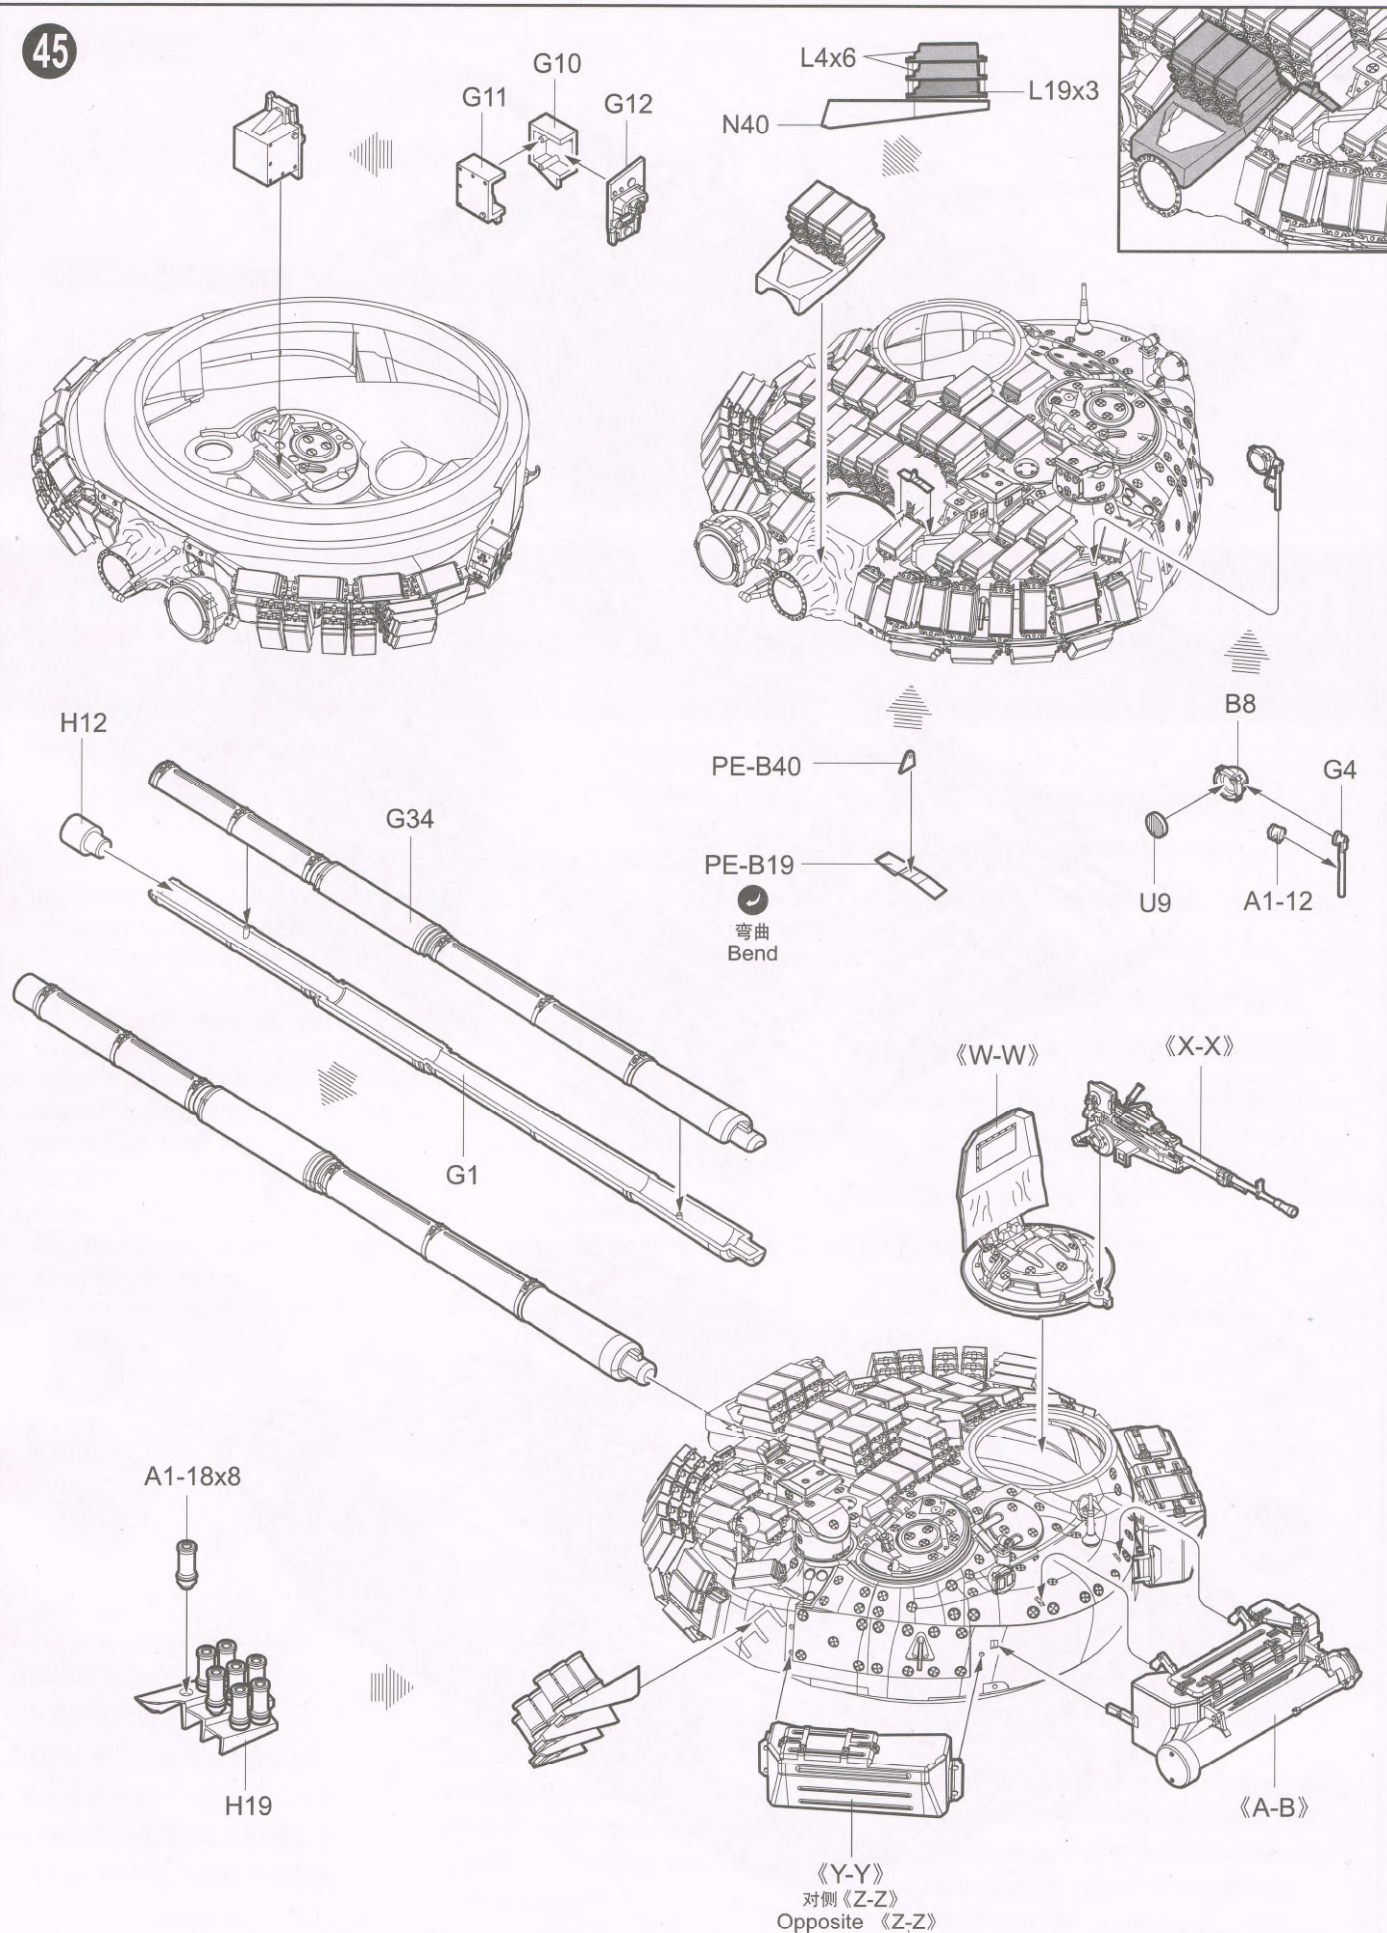

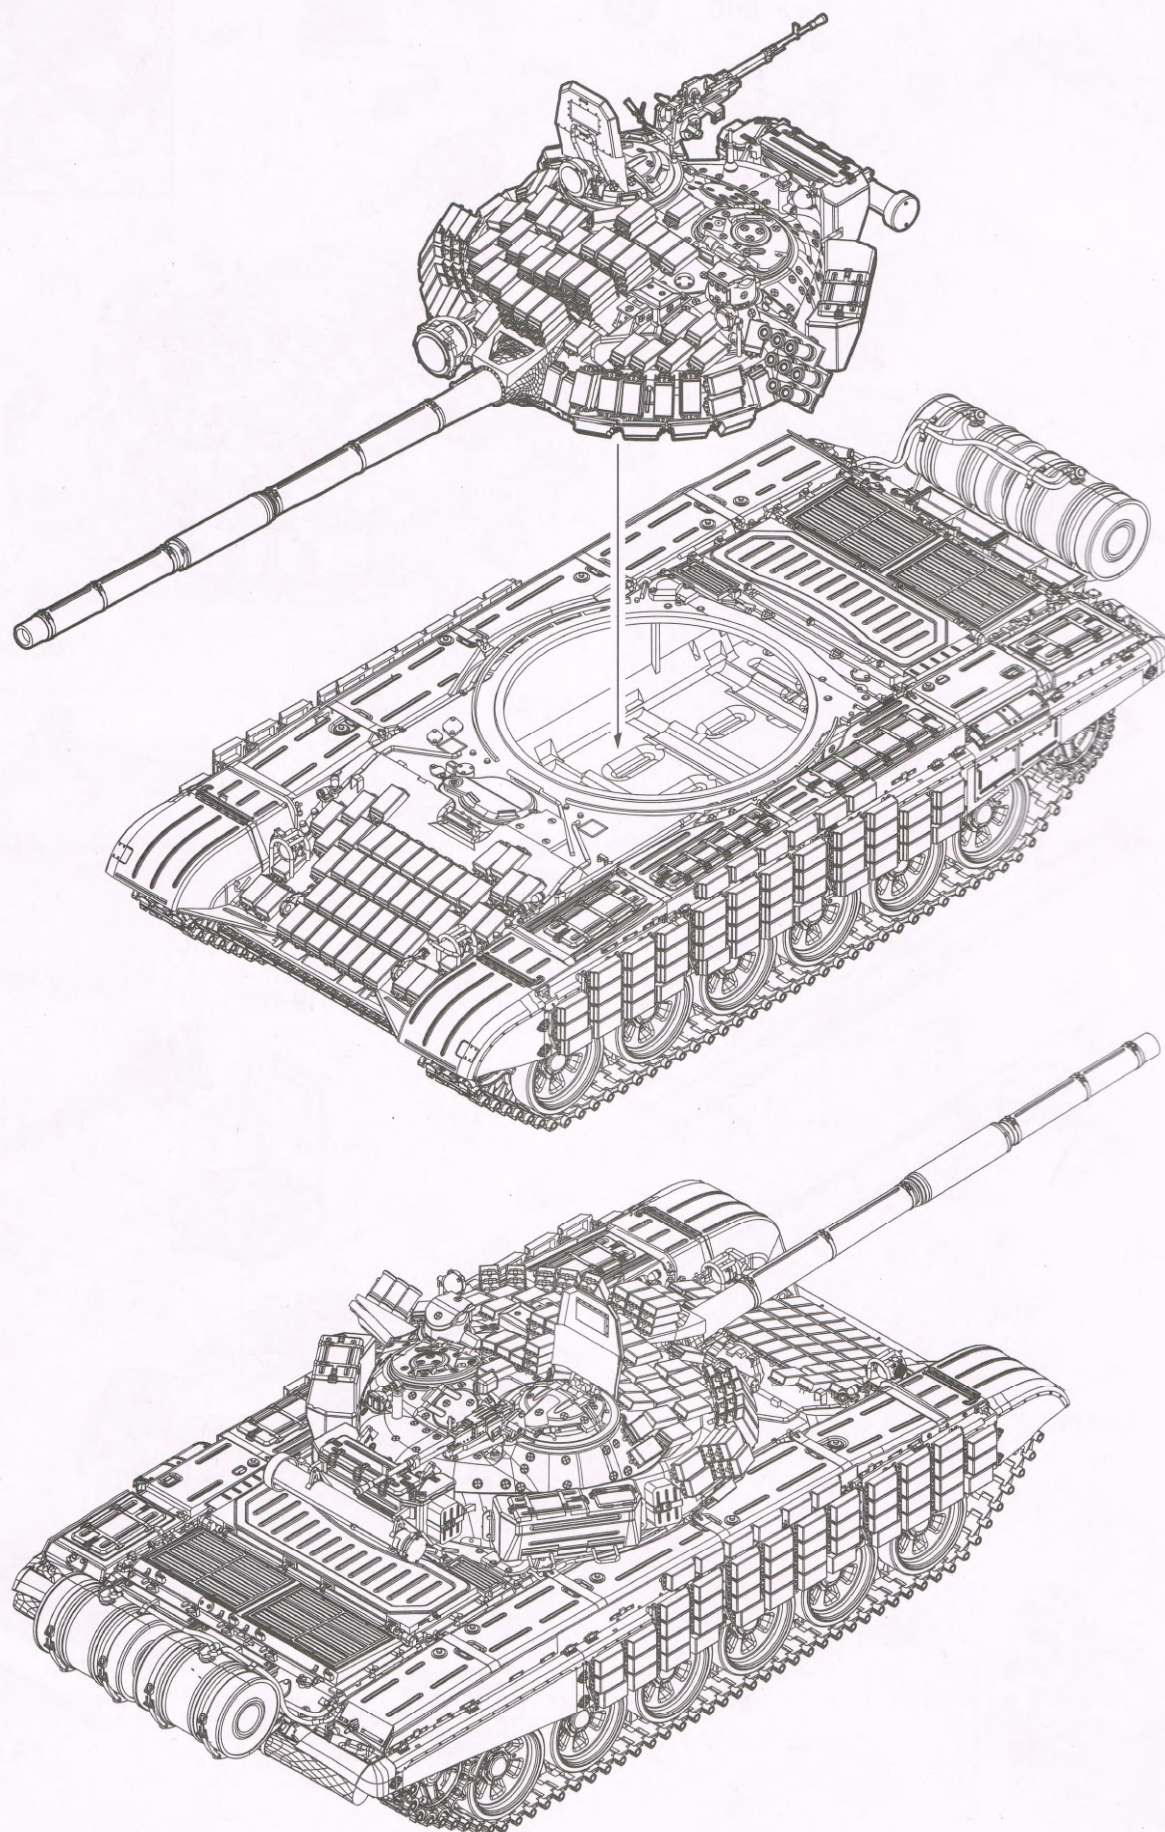

涂装同标贴指示 Painting & Marking guide




A

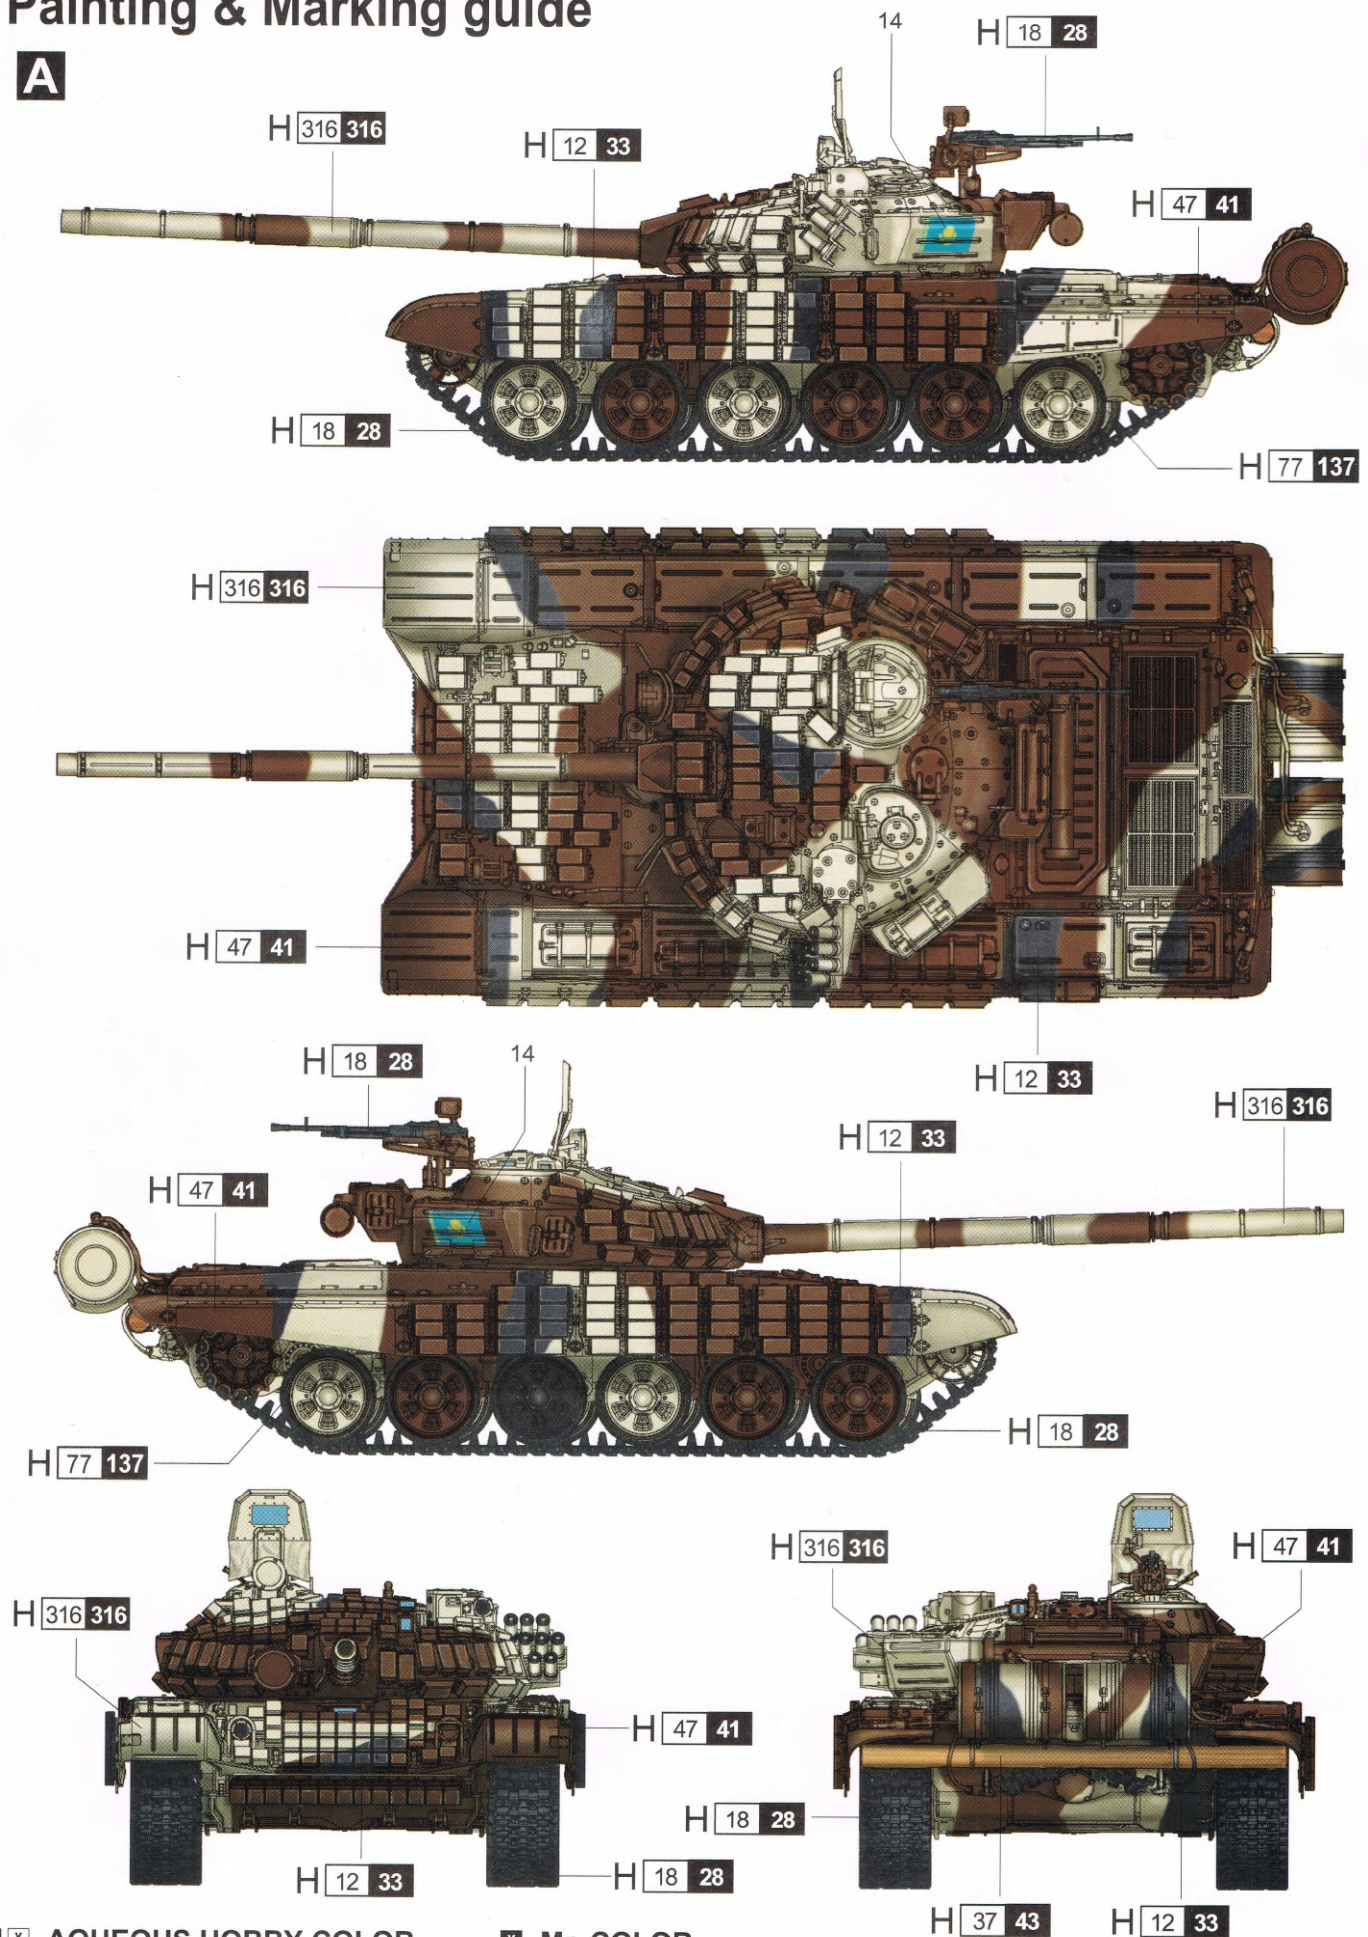

H X AQUEOUS HOBBY COLOR


X Mr. COLOR

09555 1/35 Russian T-72B1 MBT (w/kontakt-1 reactive armor) (A)

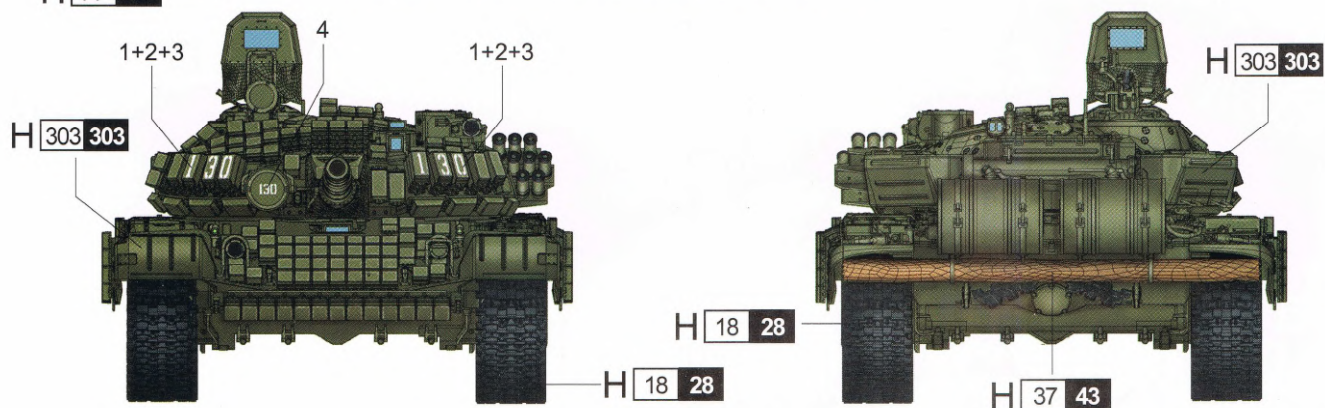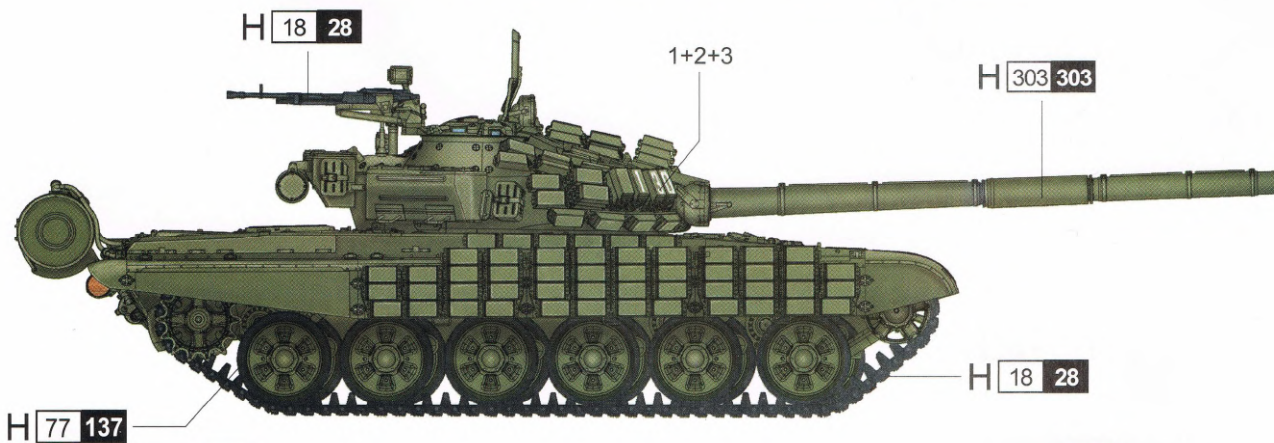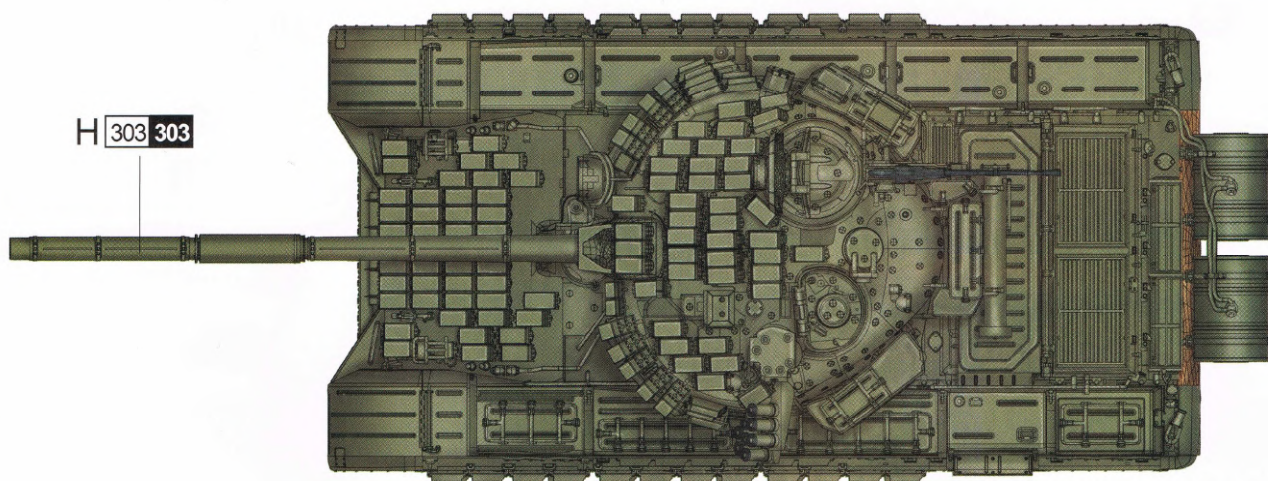
B

涂装同标贴指示 Painting & Marking guide


C

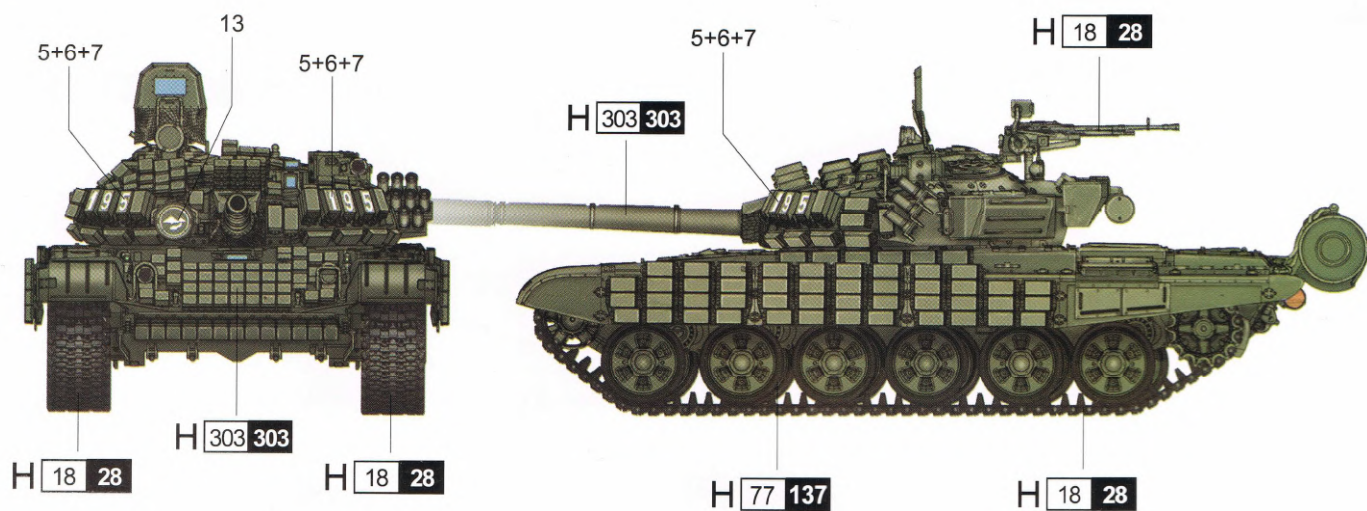

D

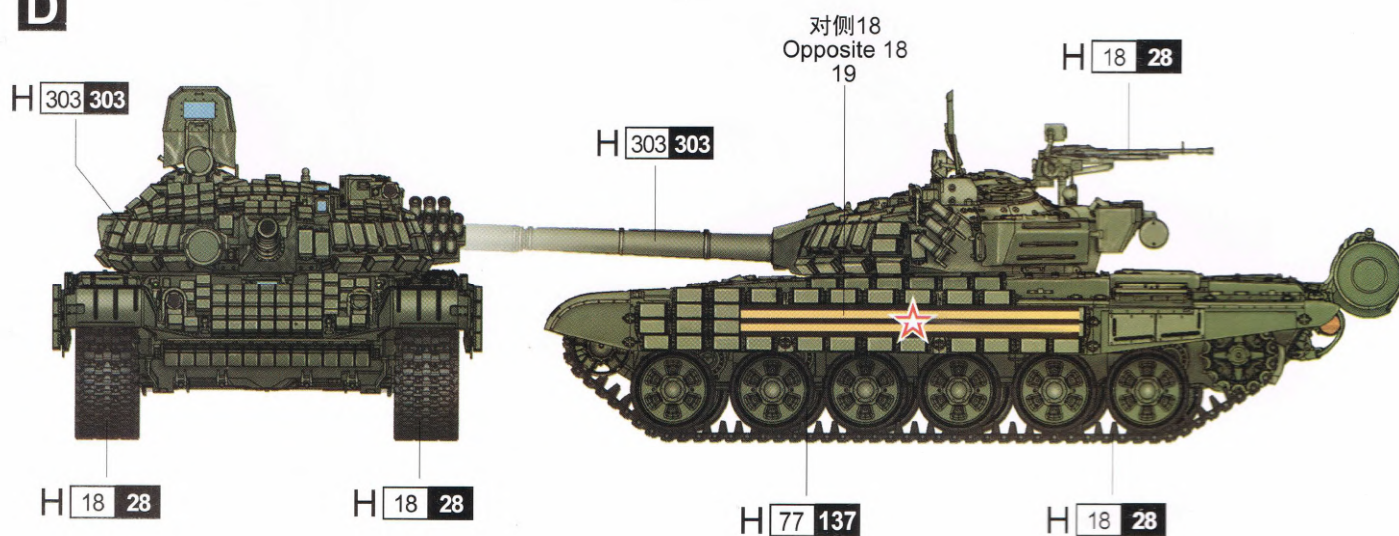

E *Ukraine conflict, 2014, Rebel T-72 B "RITA"*

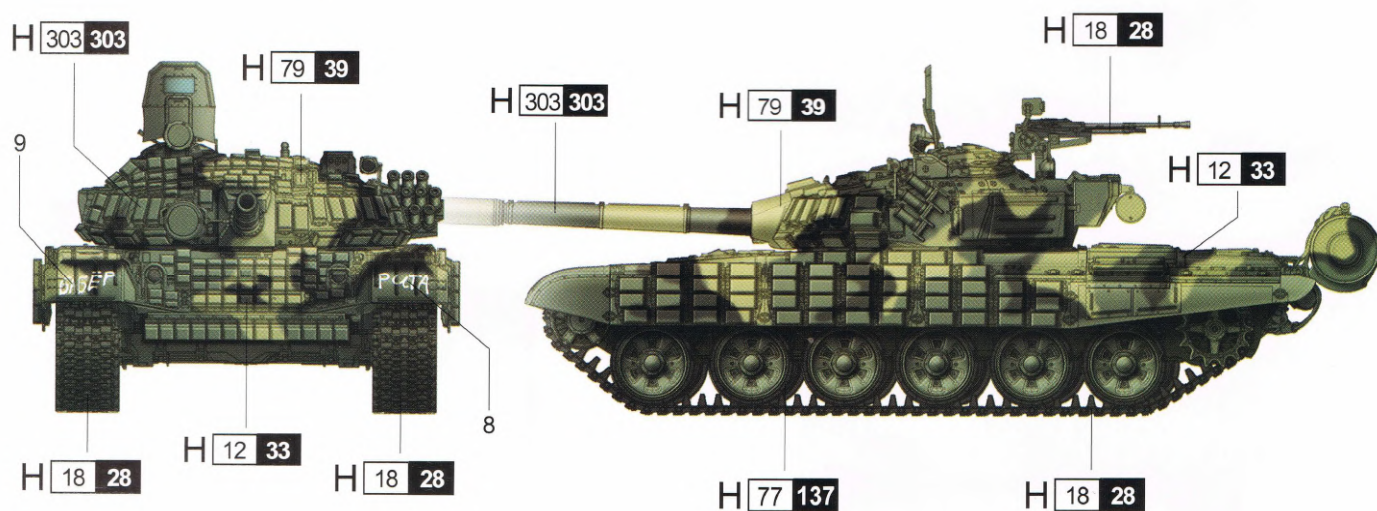

H X AQUEOUS HOBBY COLOR


X Mr. COLOR

09555 1/35 Russian T-72B1 MBT (w/kontakt-1 reactive armor) (B)


PAINT REFERENCE COLOUR

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Sandy Yellow 砂黄色	H 79 39	824	—	XF59	93	Green 绿色	H 303 303	—	1713	XF20	117
Red Brown 红棕色	H 47 41	984	—	XF64	160	Gray 灰色	H 301 301	866	—	XF24	—
Wood Brown 木棕色	H 37 43	983	1701	—	186	Flat Black 消光黑	H 12 33	950	1749	XF1	33
Sandy Brown 沙褐色	H 19	—	—	—	—	Tire Black 胎黑色	H 77 137	—	—	—	—
						Steel 黑铁色	H 18 28	864	1402	—	—

F Ukraine conflict, 2014, Rebel T-72 B "DNR"

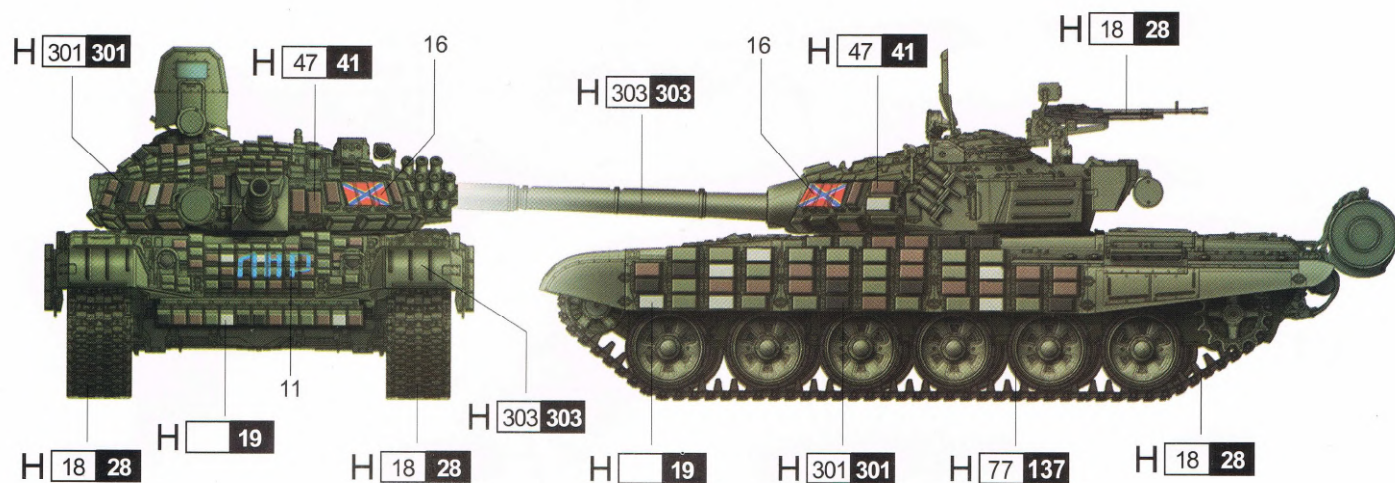

G Ukraine conflict, 2014, Rebel T-72 B1

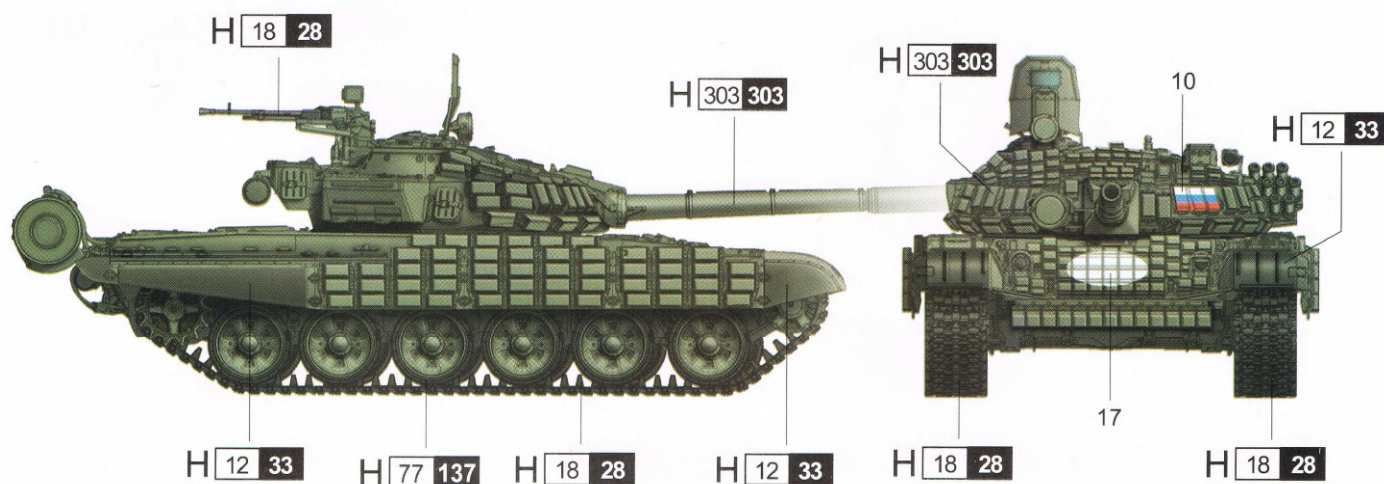

H Russian T-72 B1

