



Russian KrAZ-260B Tractor with MAZ/ChMZAP-5247G semitrailer

ロシア KrAZ-260B トラクター w.MAZ/ChMZAP-5247G セミトレーラー

俄罗斯KrAZ-260B军用卡车(带MAZ/ChMZAP-5247G 型半挂车)

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
专用模型胶水, 专用模型油漆, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 软布, 砂纸, 瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- * 用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴水上贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍而引起意外。



using ca super glue
使用强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲



repair
填补



install it first
先装

The method to apply the decals


1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.

水贴纸的使用方法:


- 一. 把相关的印花从水贴上剪下, 放入40°C左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 戴上印花纸板, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。

部品图 Parts


Ax2

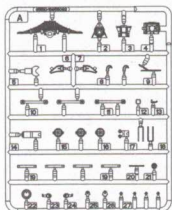


F

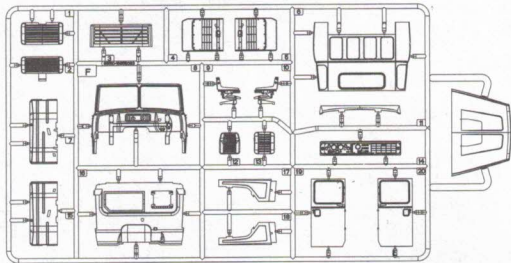


GA

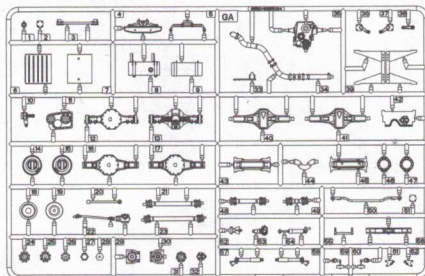


Bx2

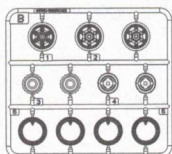


H

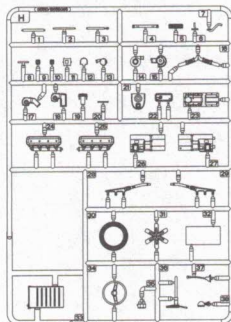


JA

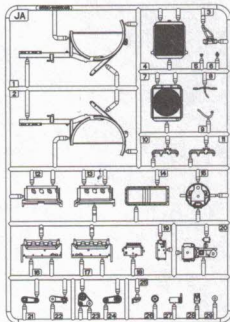


KA

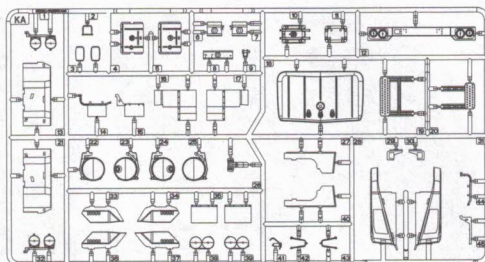


Q

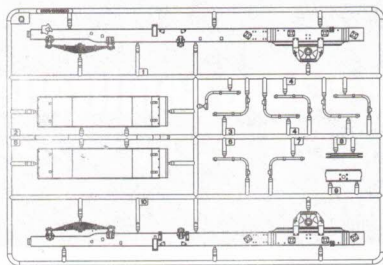


R

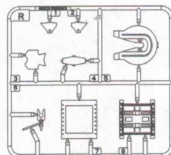

GP

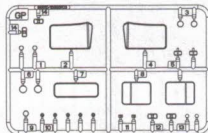

G

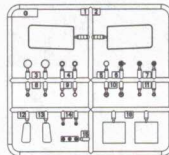


《轮胎(大)》x7
Tyre (big) x7



《轮胎(小)》x9
Tyre (small) x9




Yx2



《铜丝》
Brass wires $\varnothing 0.5 \times 100(\text{mm})$



J

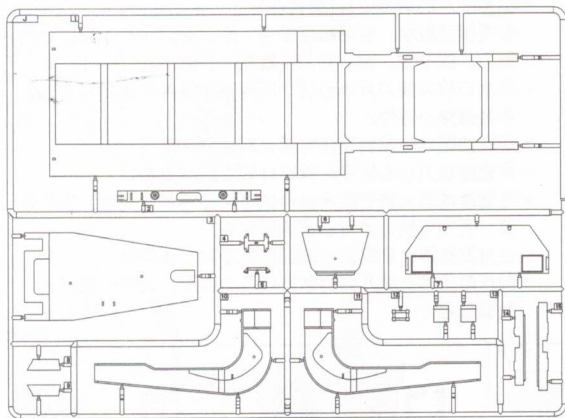

Kx2

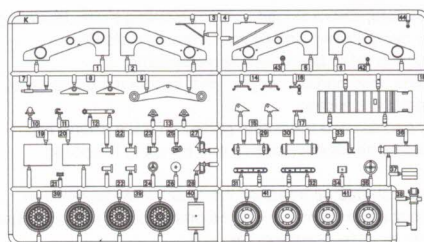


Photo Etched (A)




Photo Etched (B)






Photo Etched (C)



《拖架甲板》
Semi-trailer board

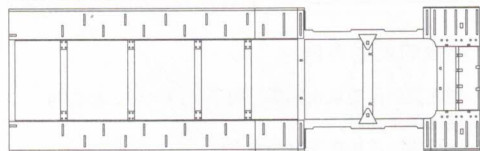

《水贴纸》
Decal












《遮盖纸》
Die-cut mask




牵引车的组装 Assembly of tractor

1
STEP

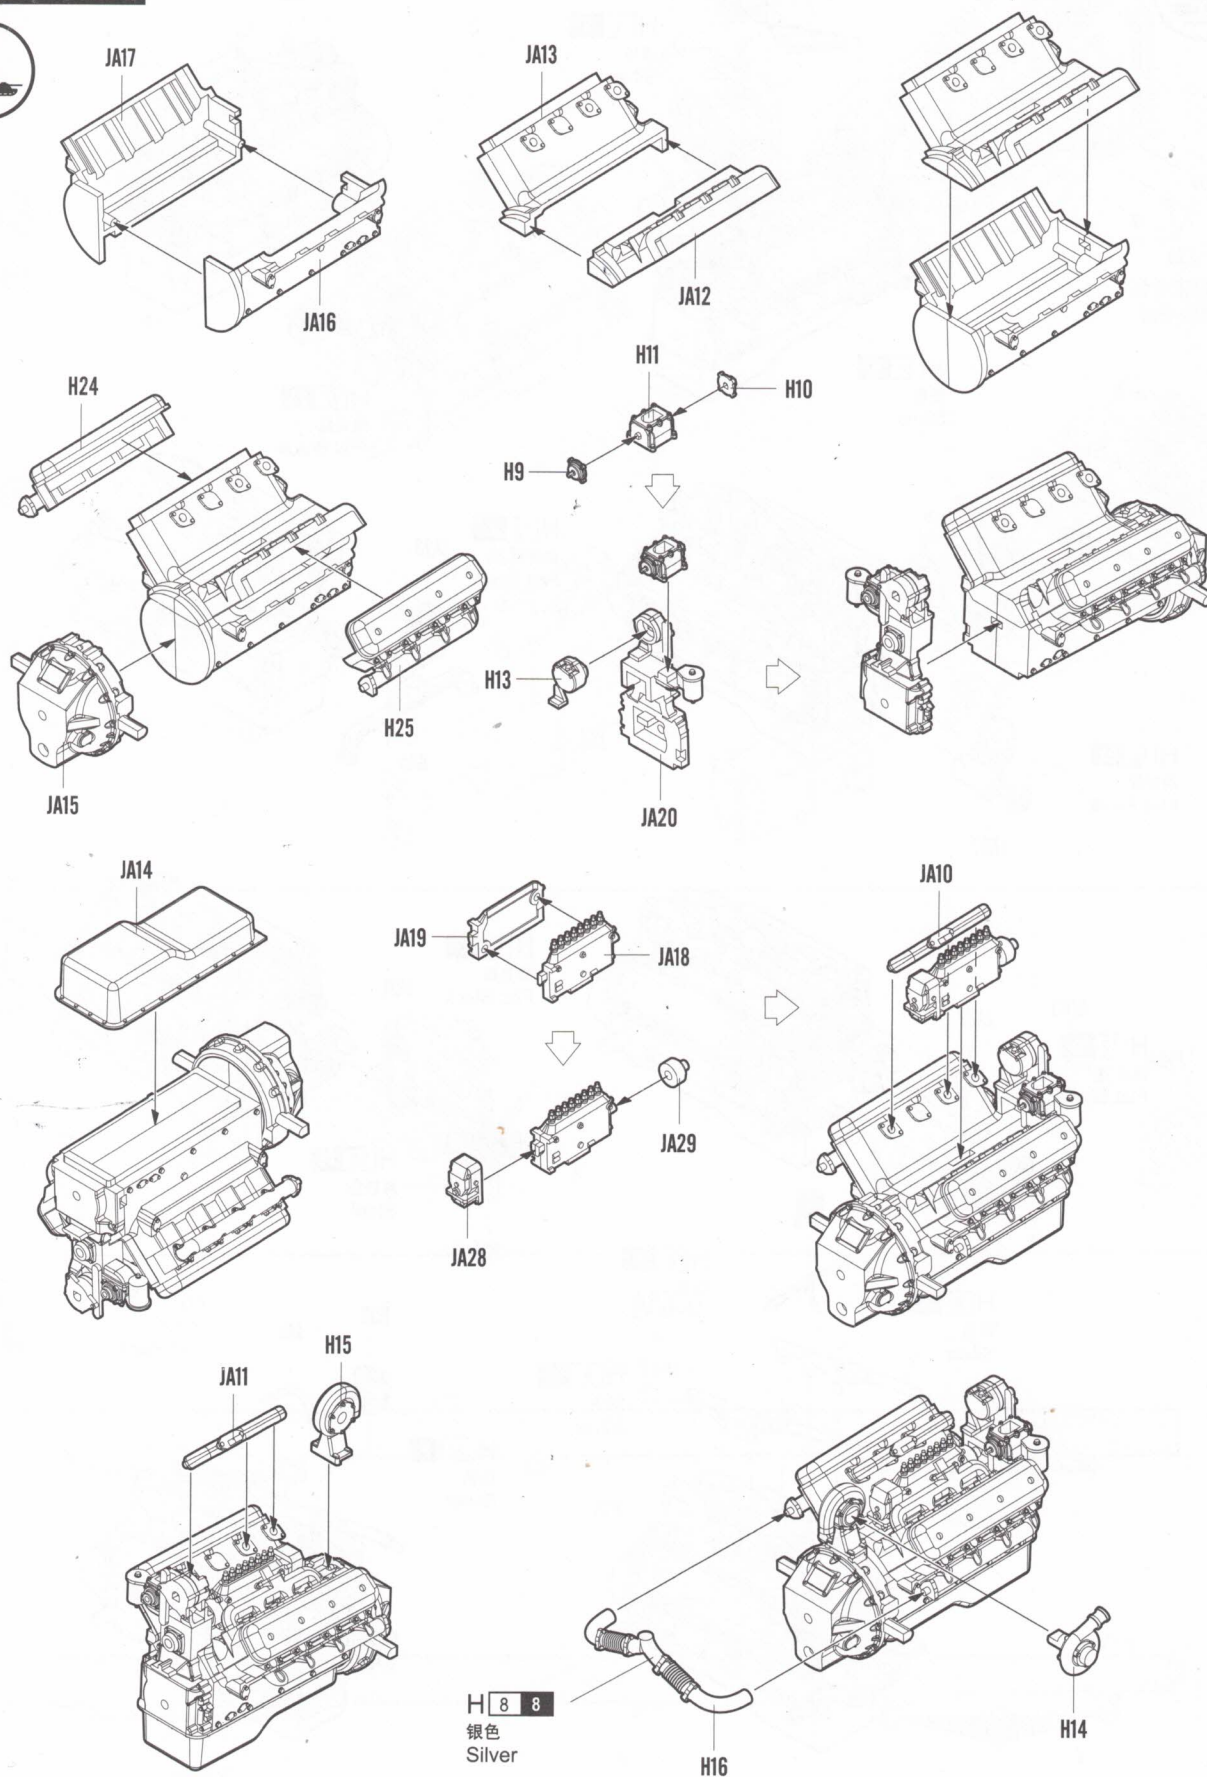


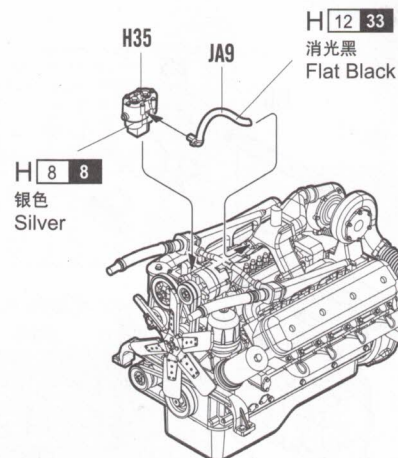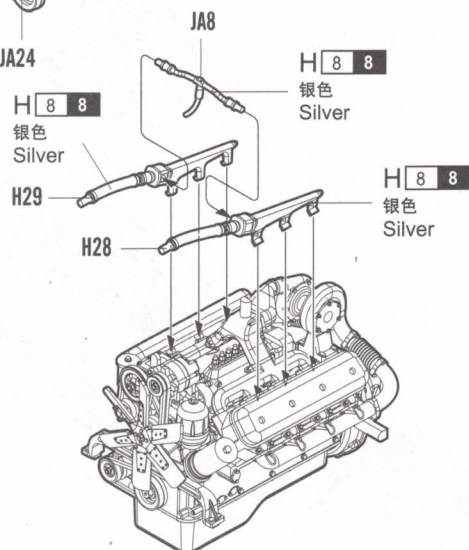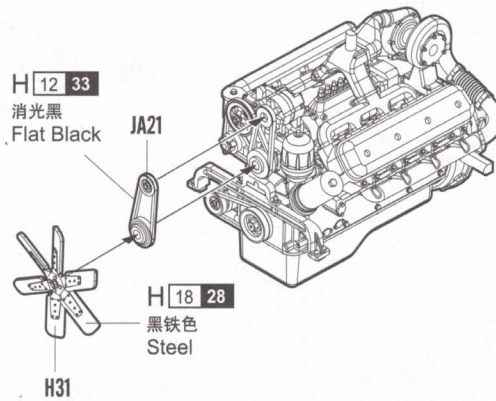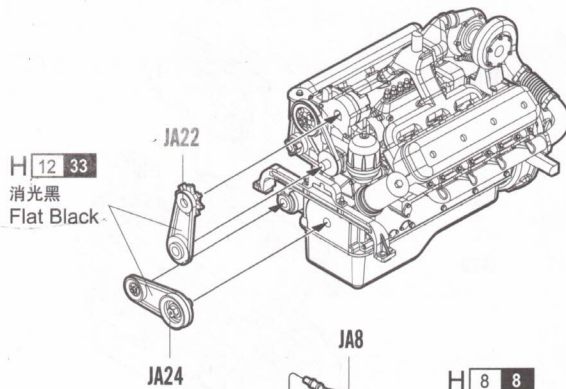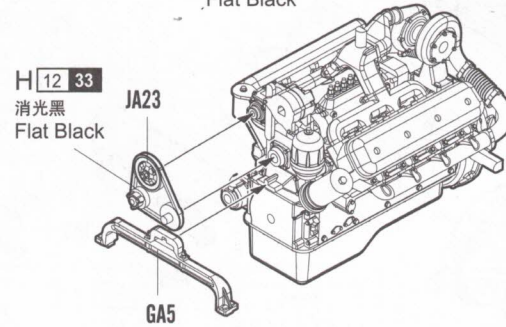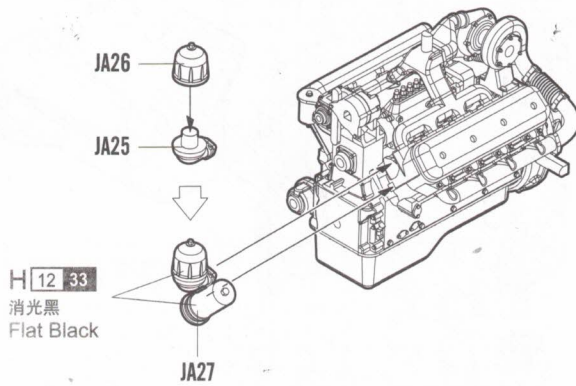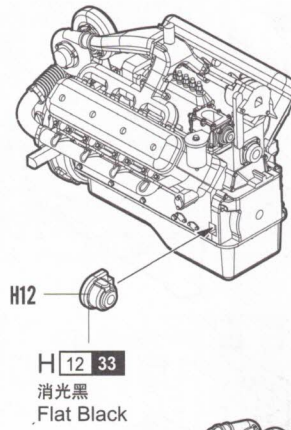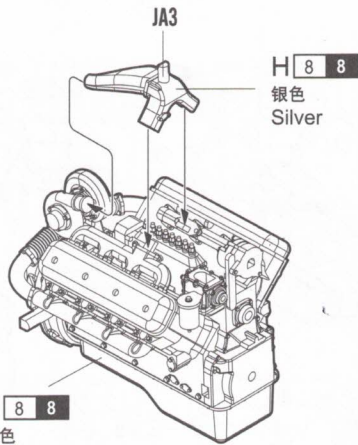


3
STEP


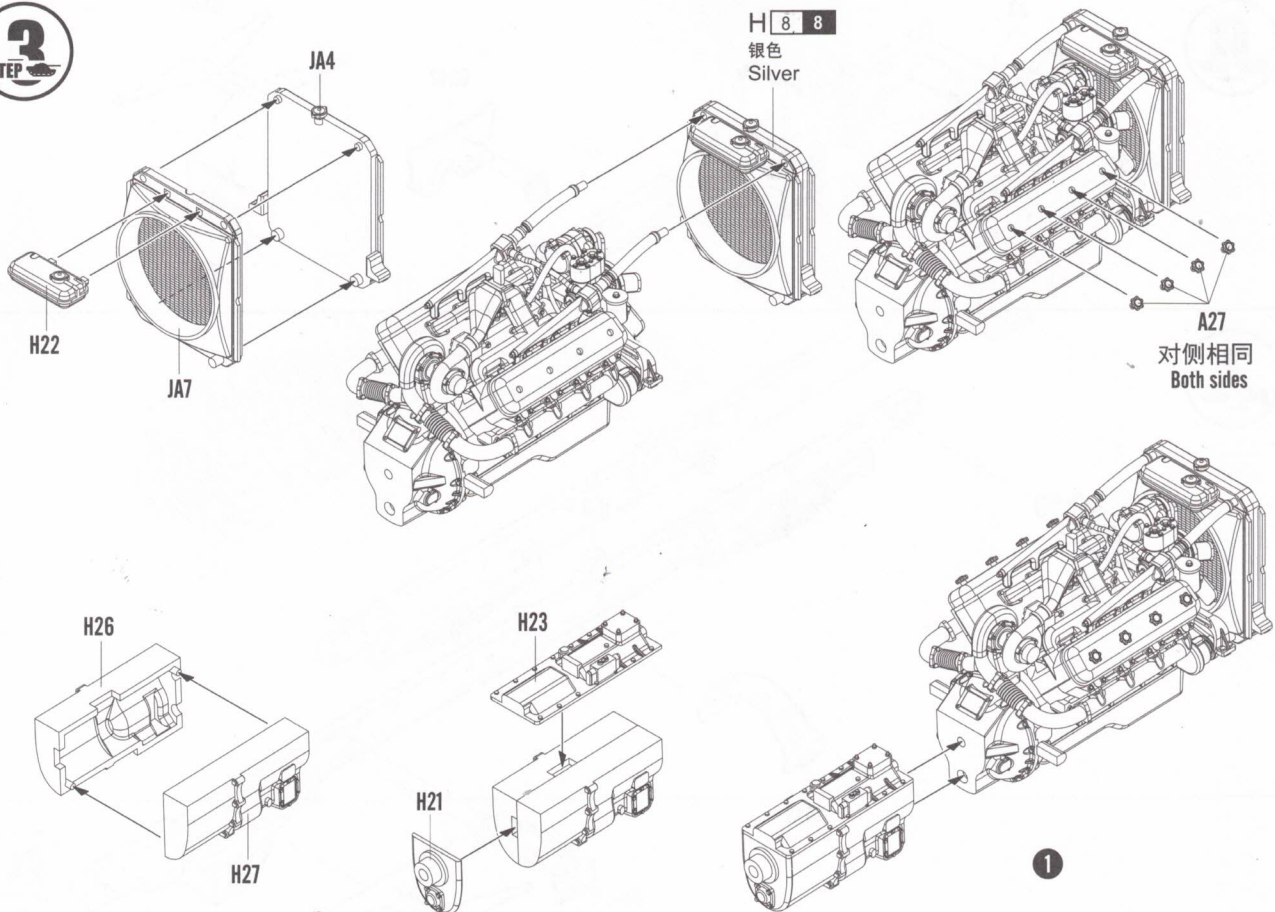


4
STEP


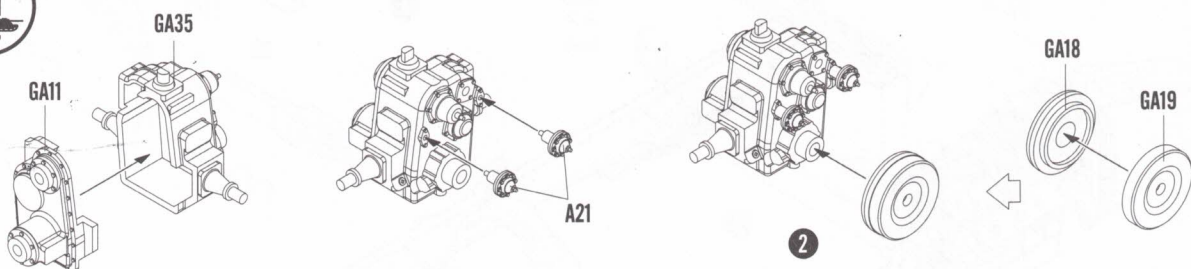


5
STEP

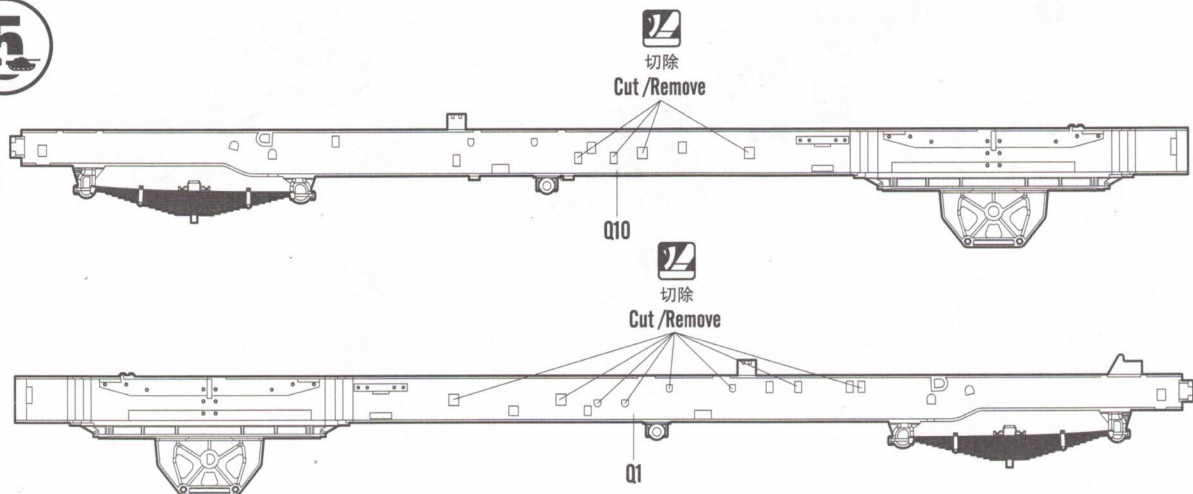



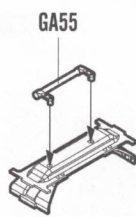
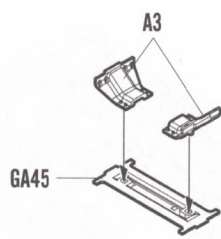


3

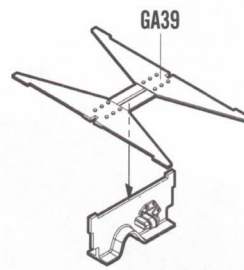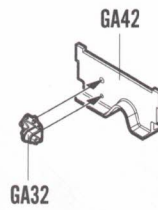


4

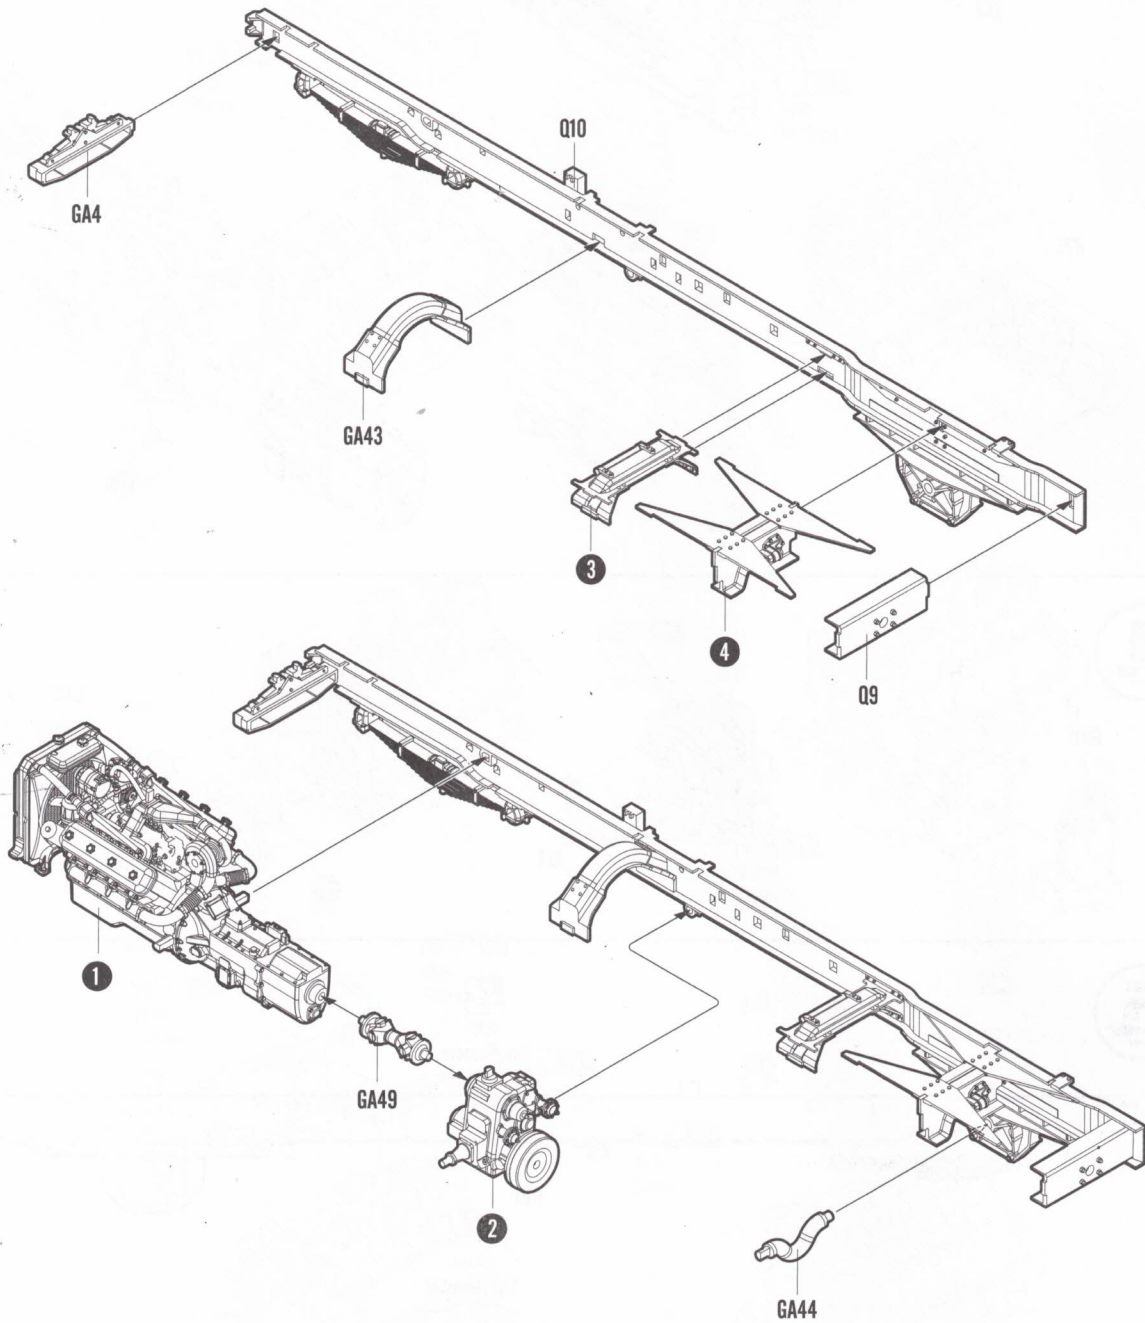


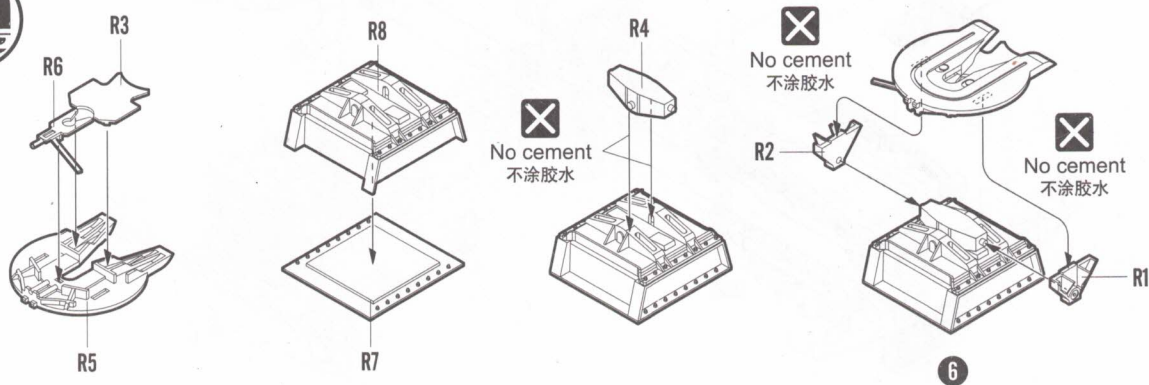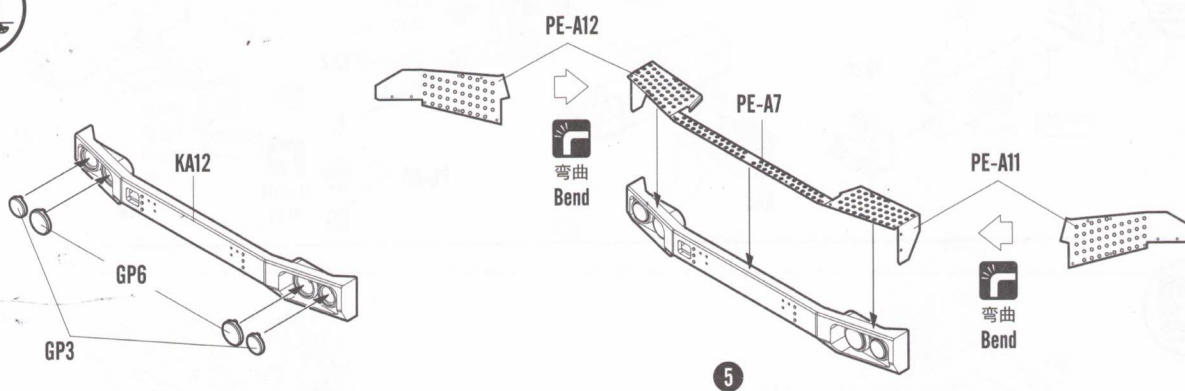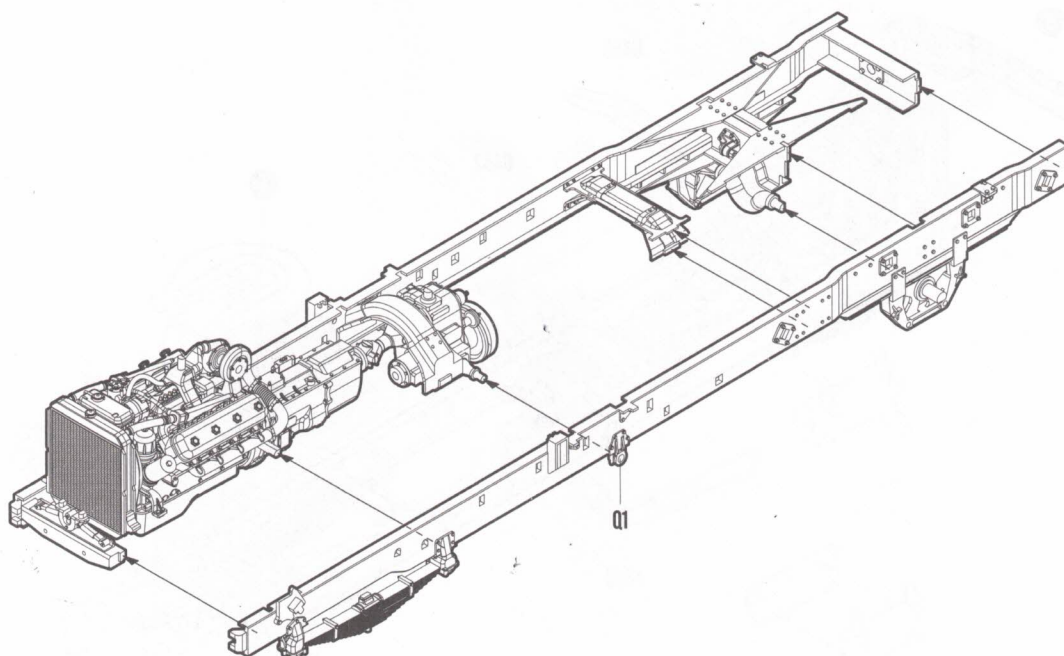


11
STEP



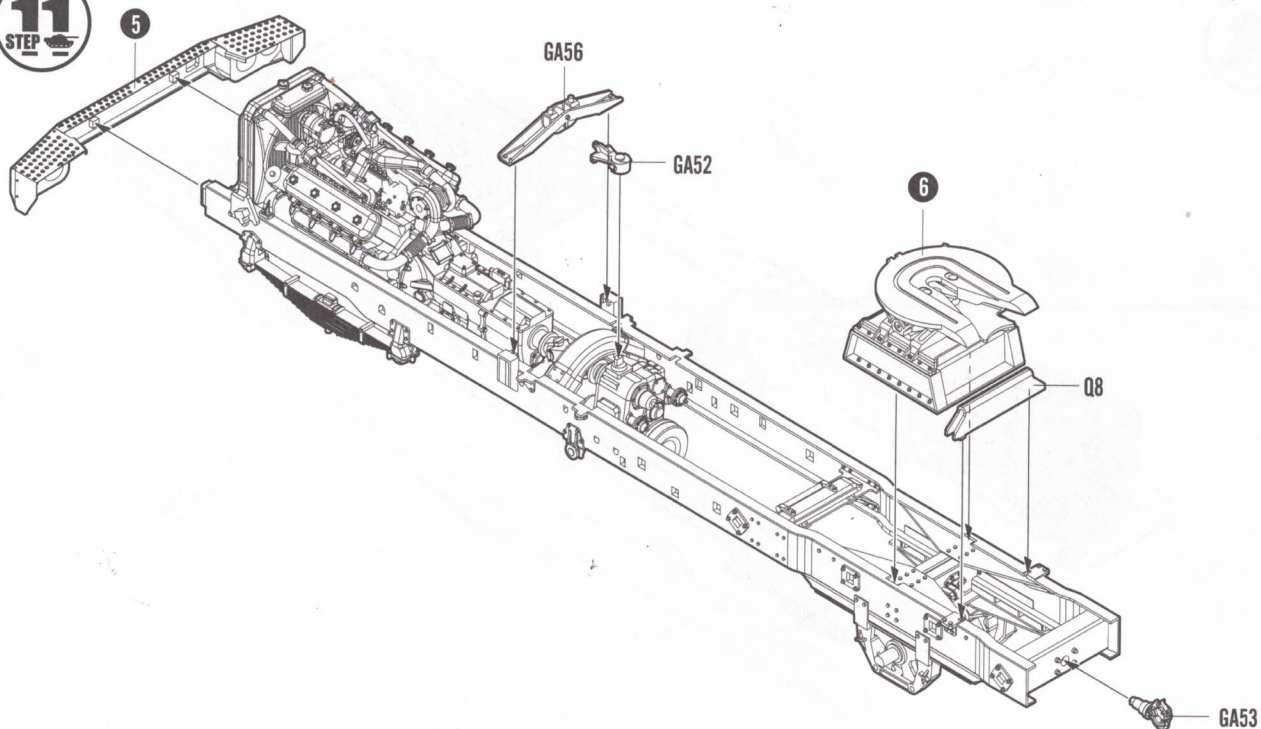


12
STEP

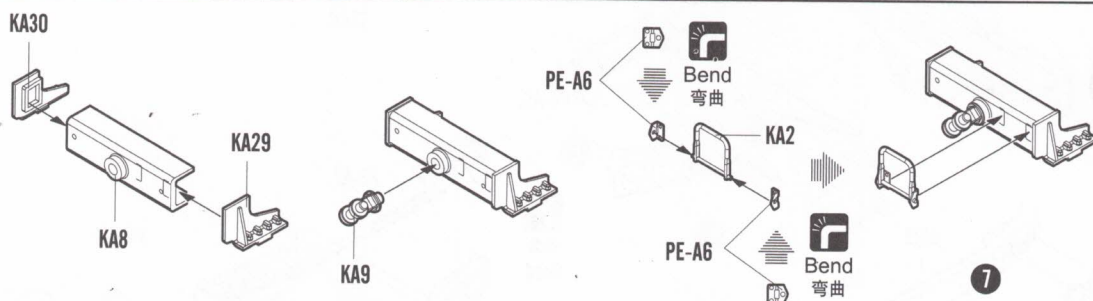


13
STEP

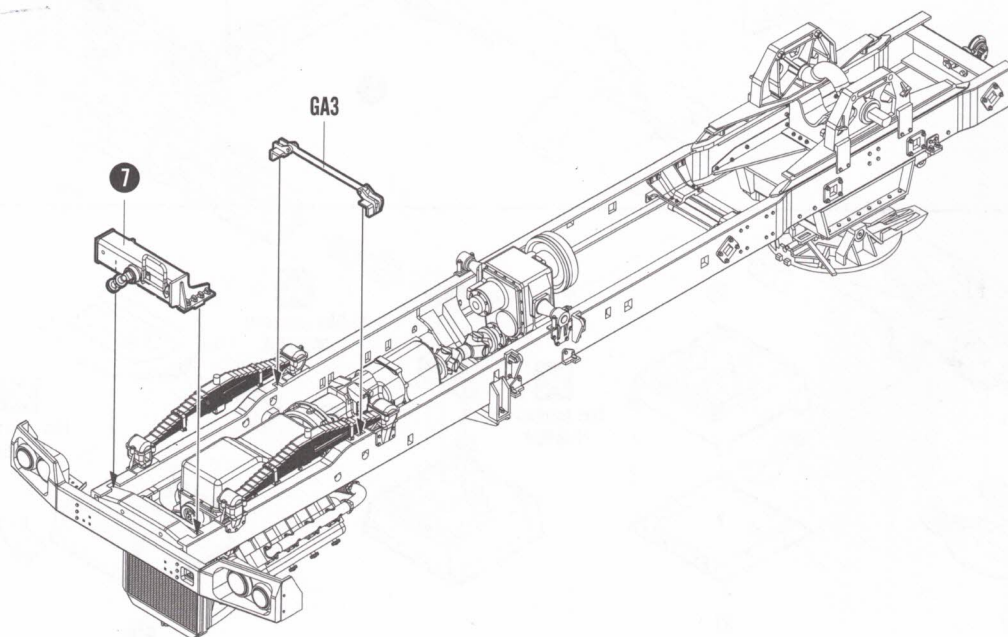


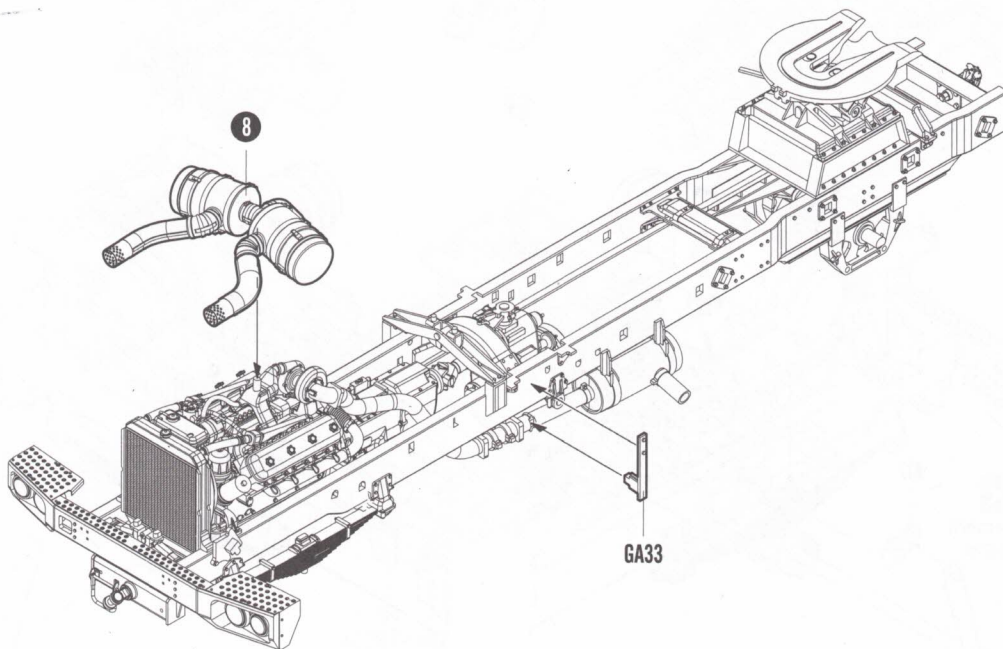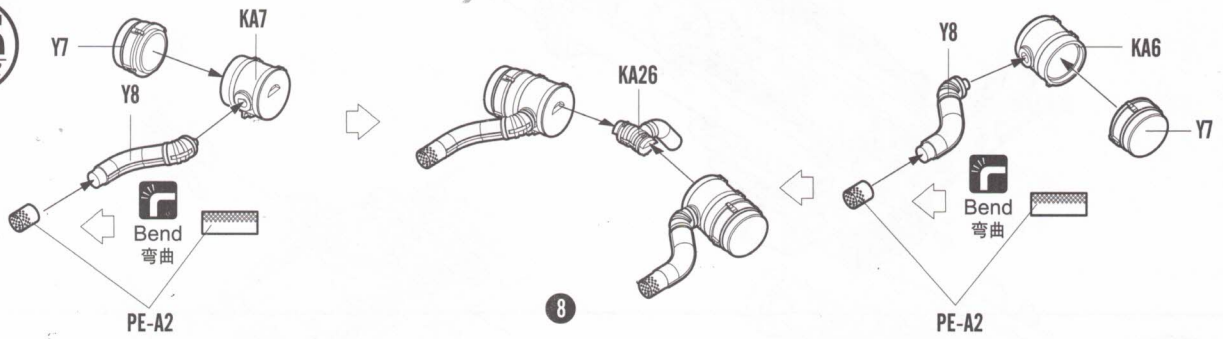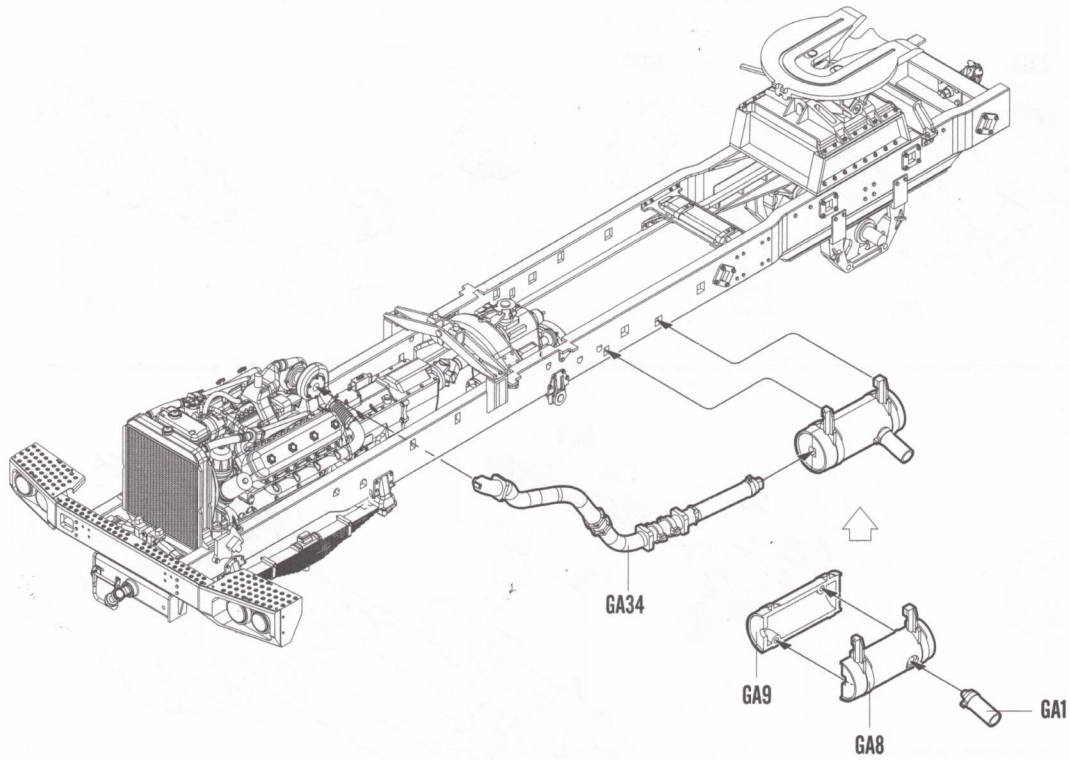



17
STEP

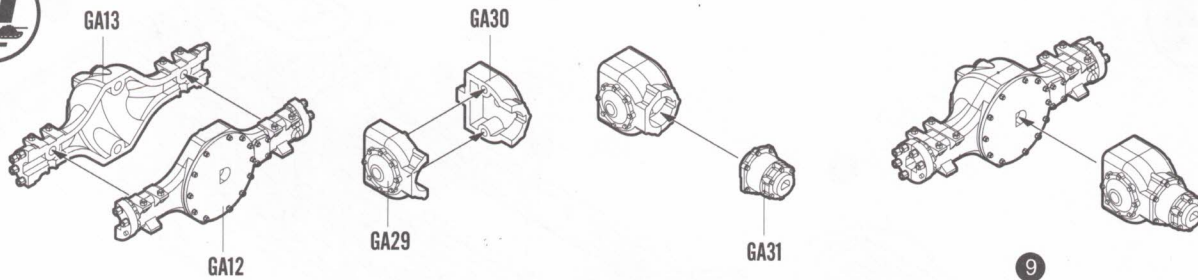





18
STEP

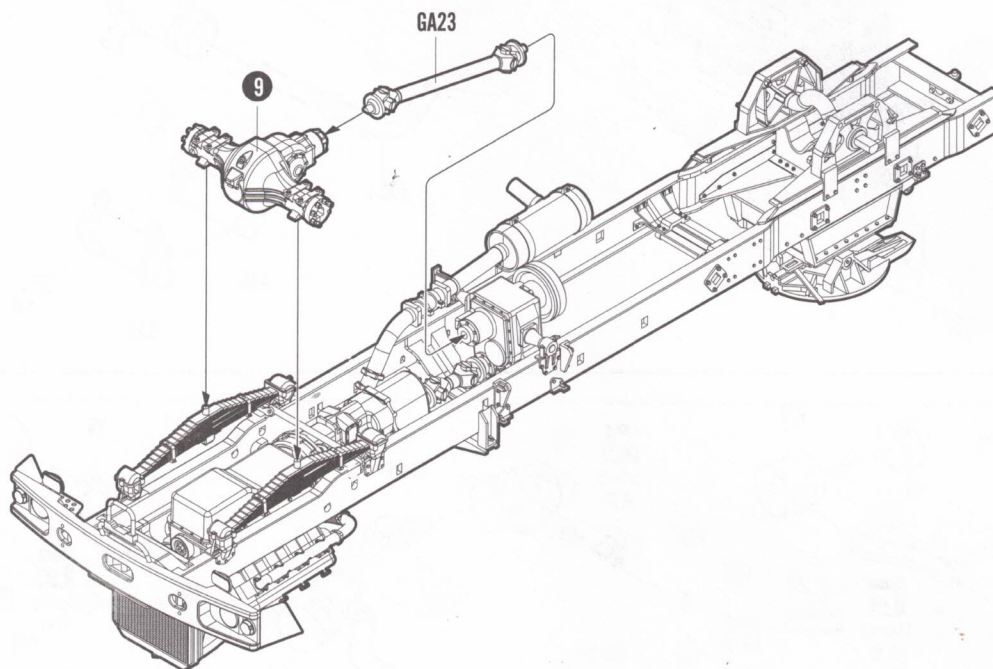





19
STEP

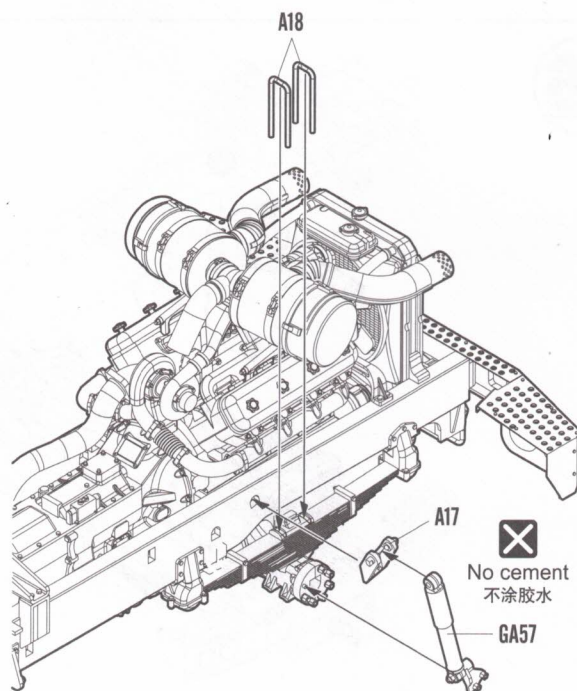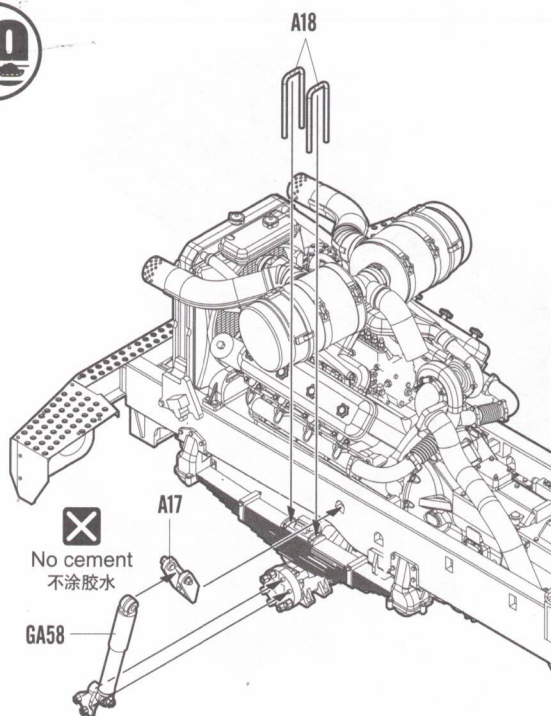





20
STEP

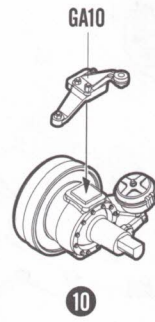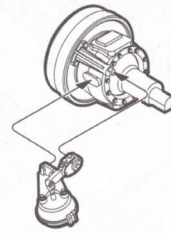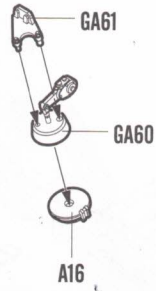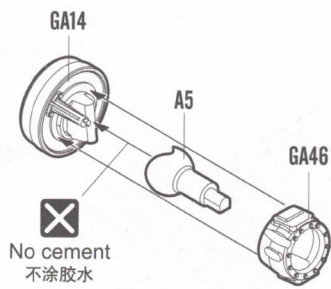


21
STEP

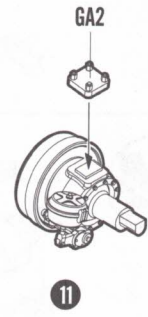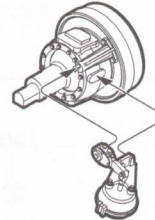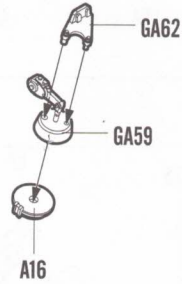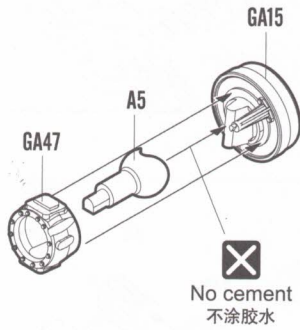


22
STEP

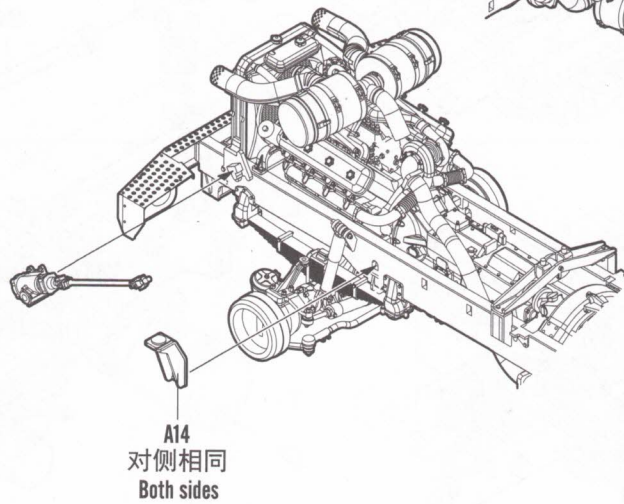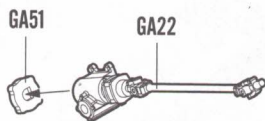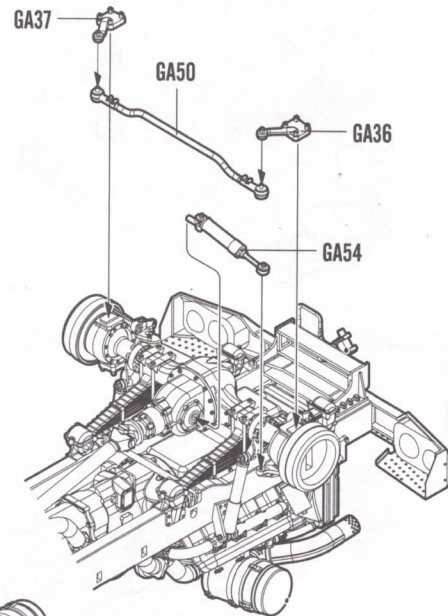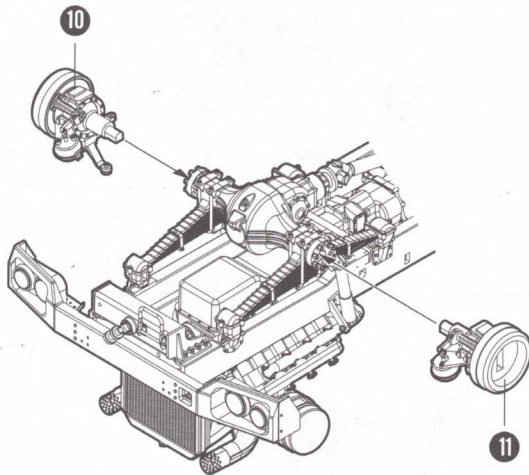


23
STEP

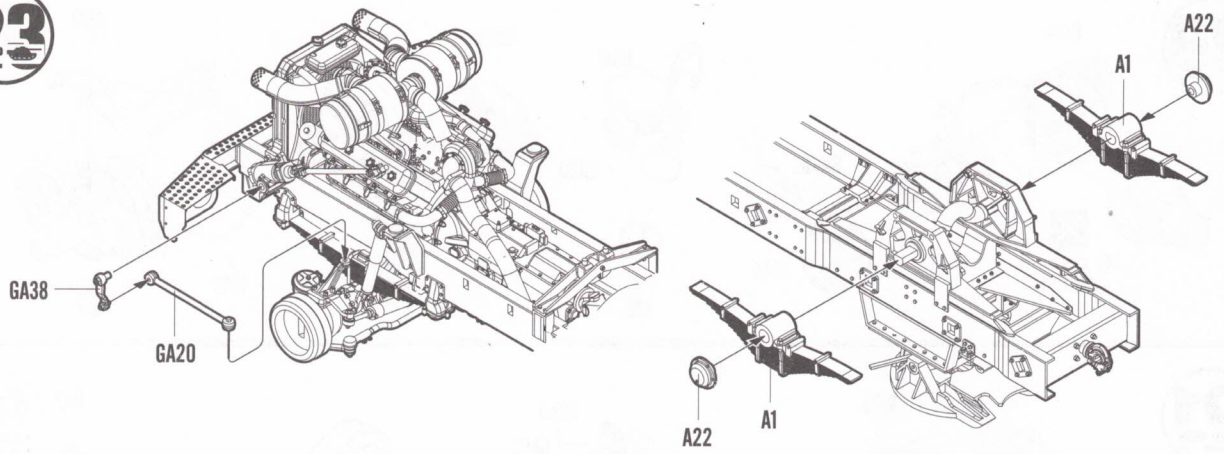


24
STEP

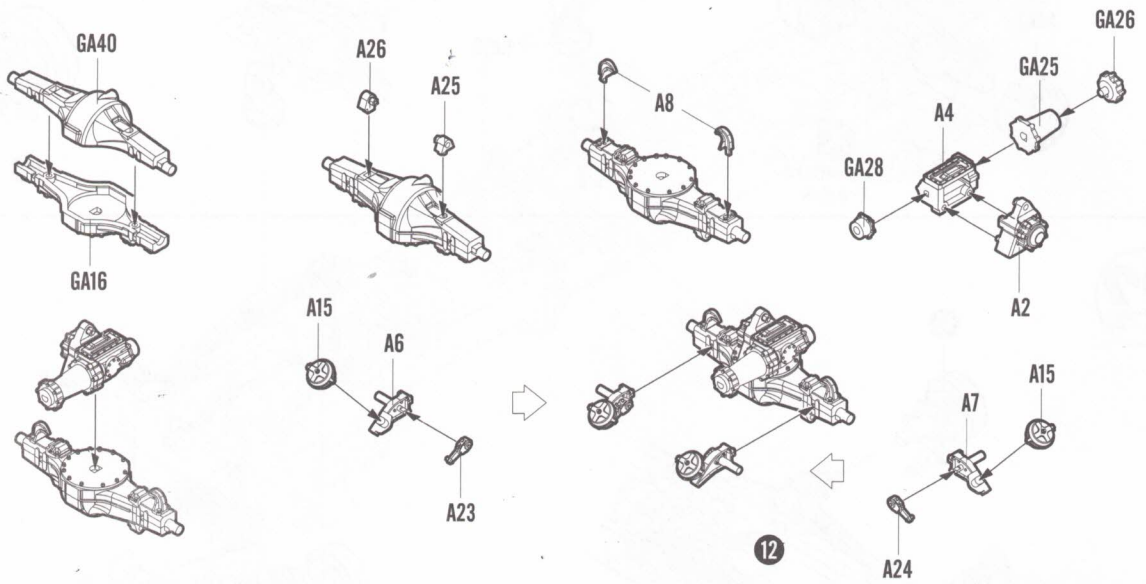


25
STEP

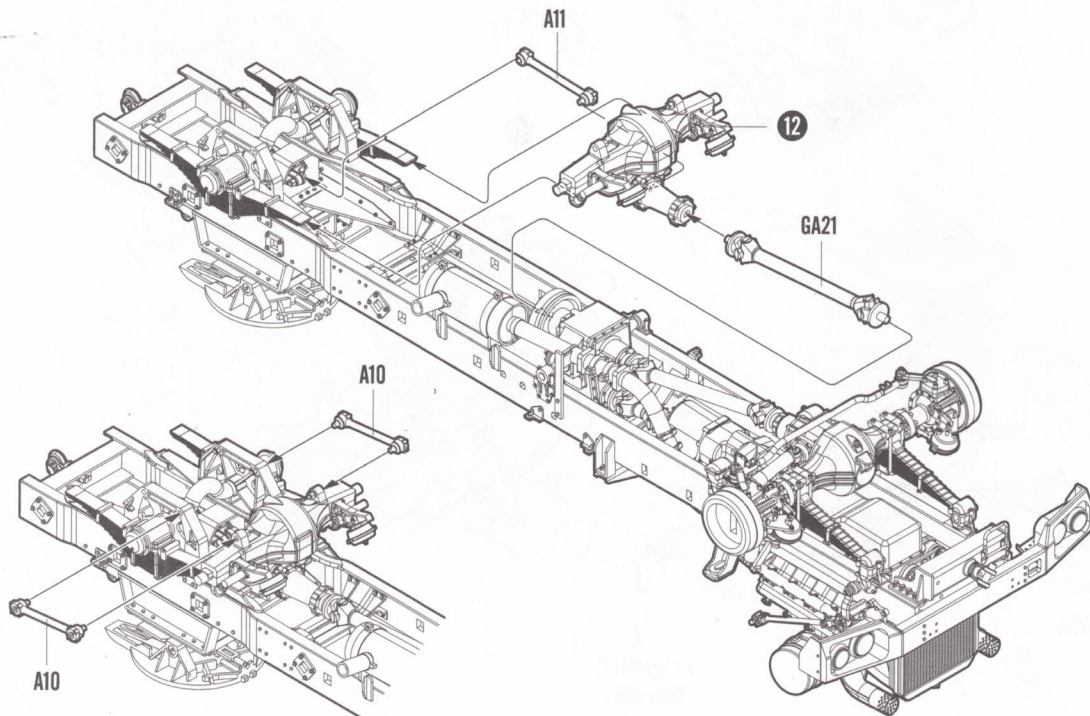


26
STEP

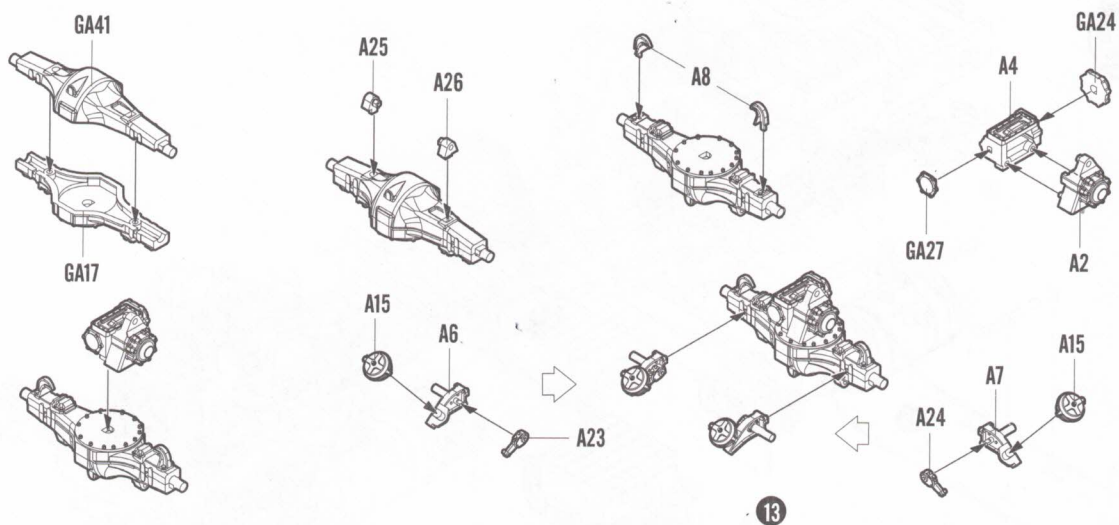


27
STEP

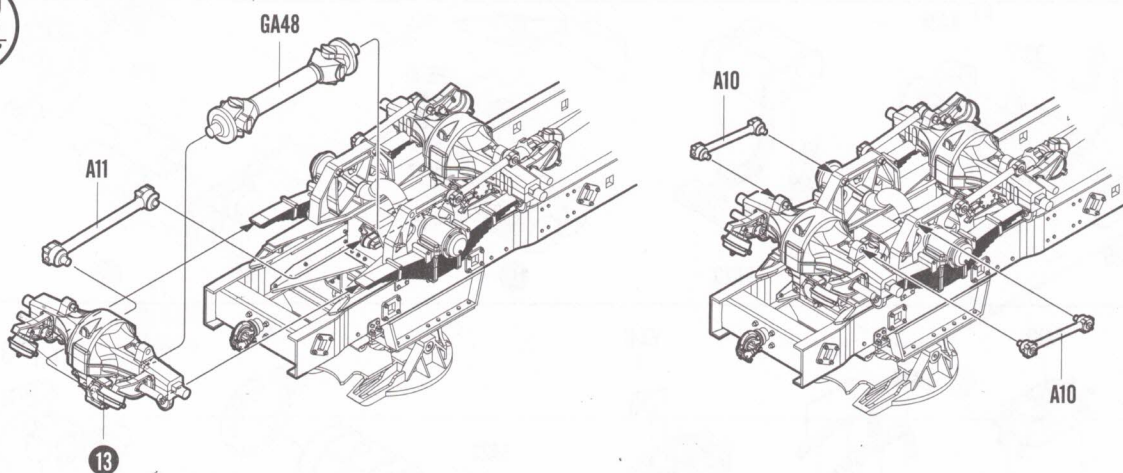


28
STEP

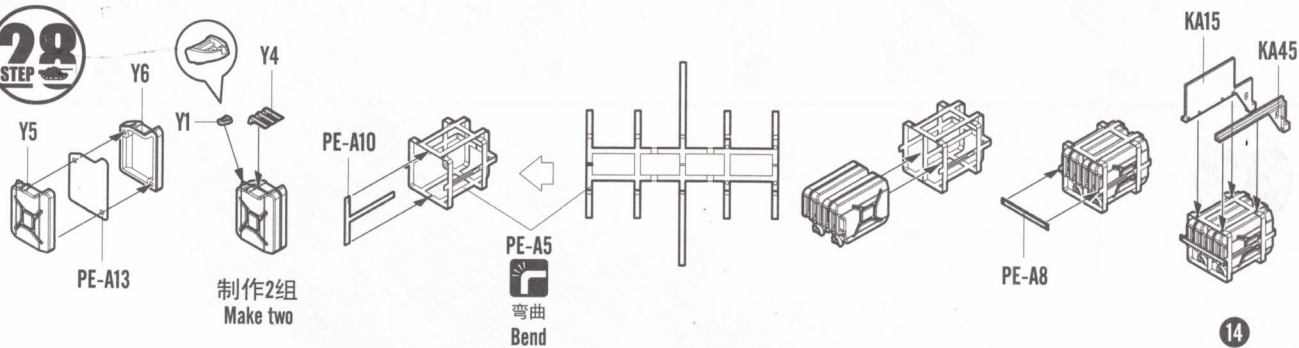


29
STEP

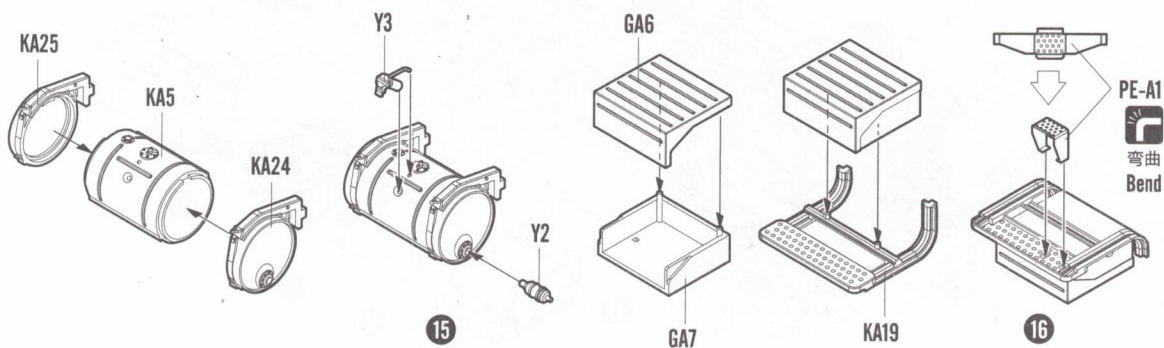


30
STEP

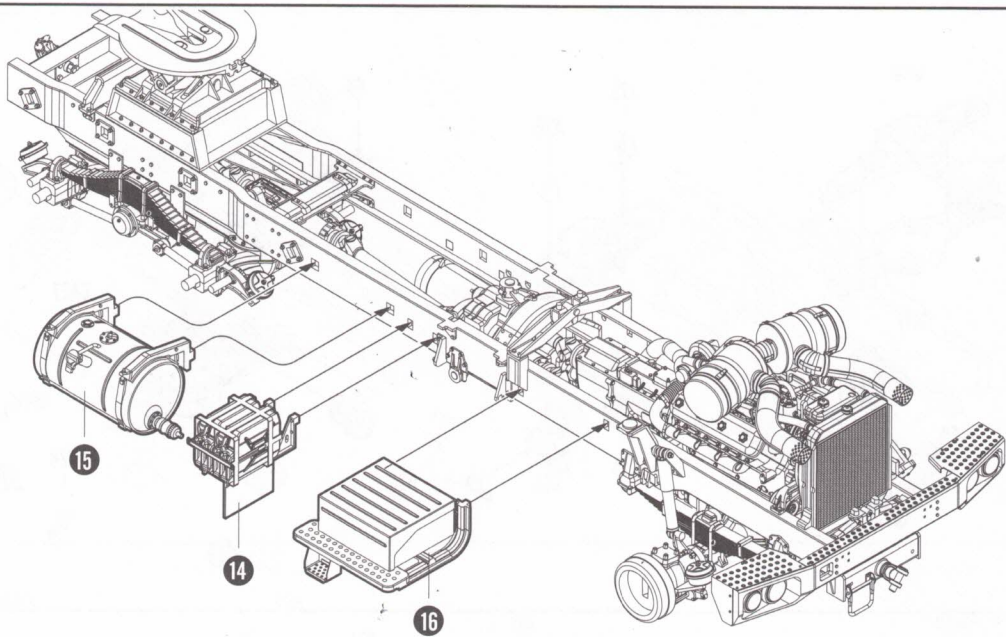


31
STEP


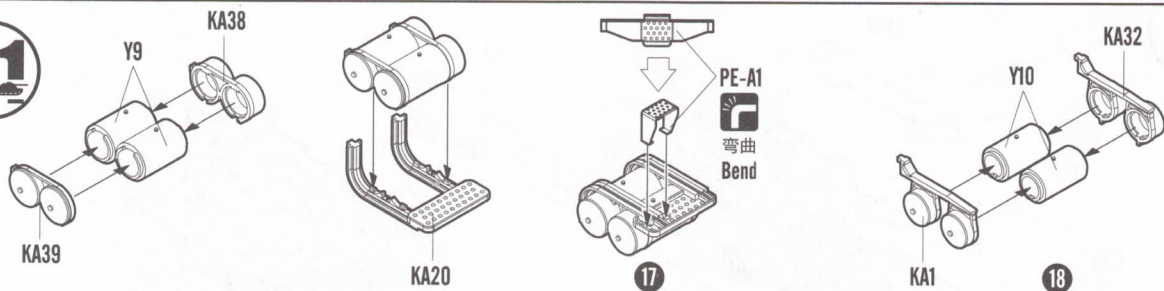


32
STEP

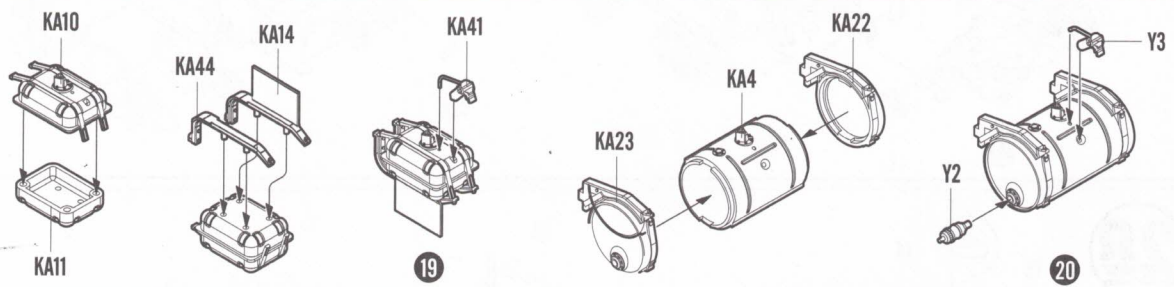


33
STEP

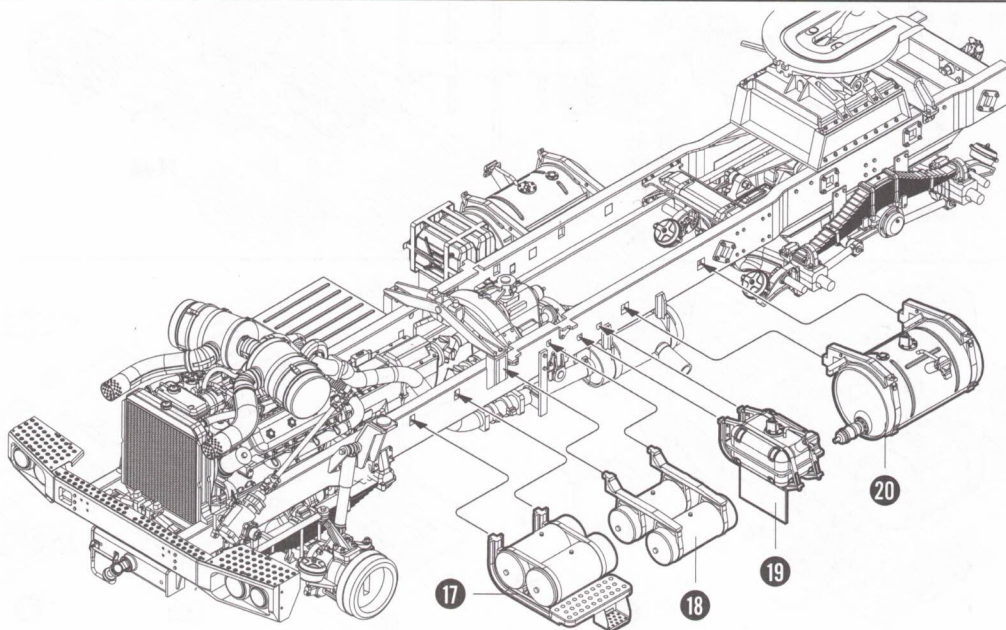





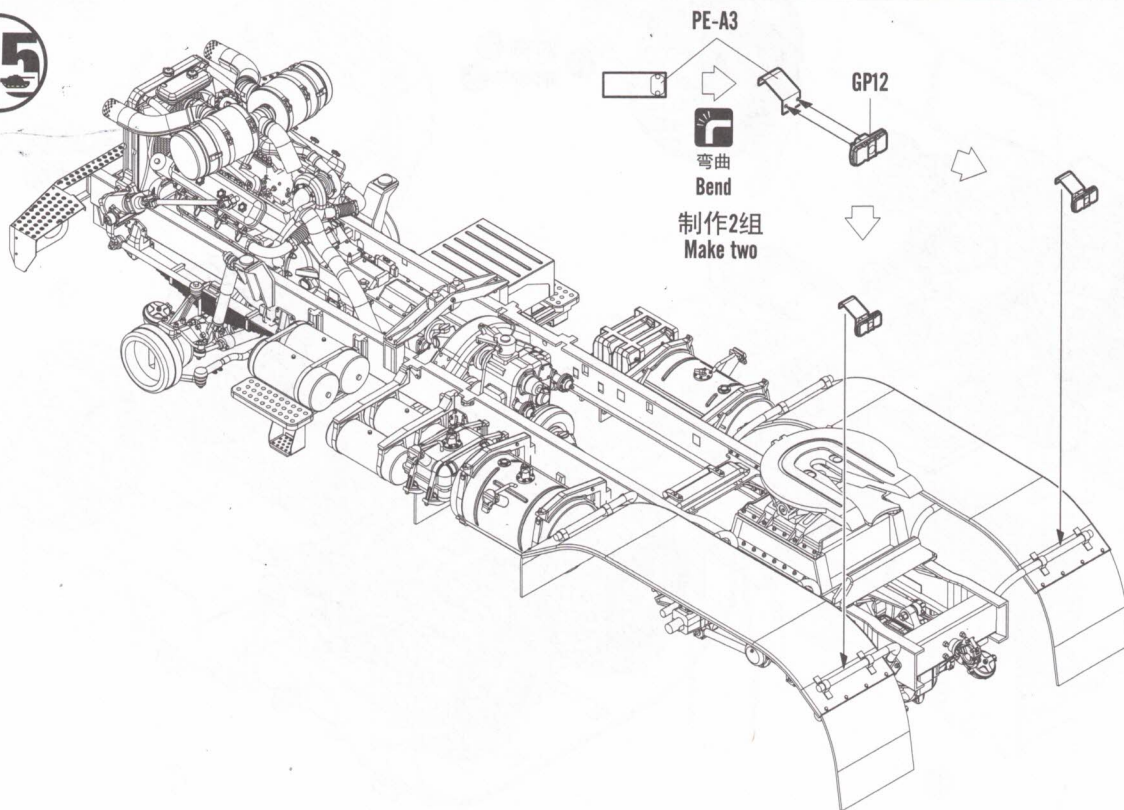
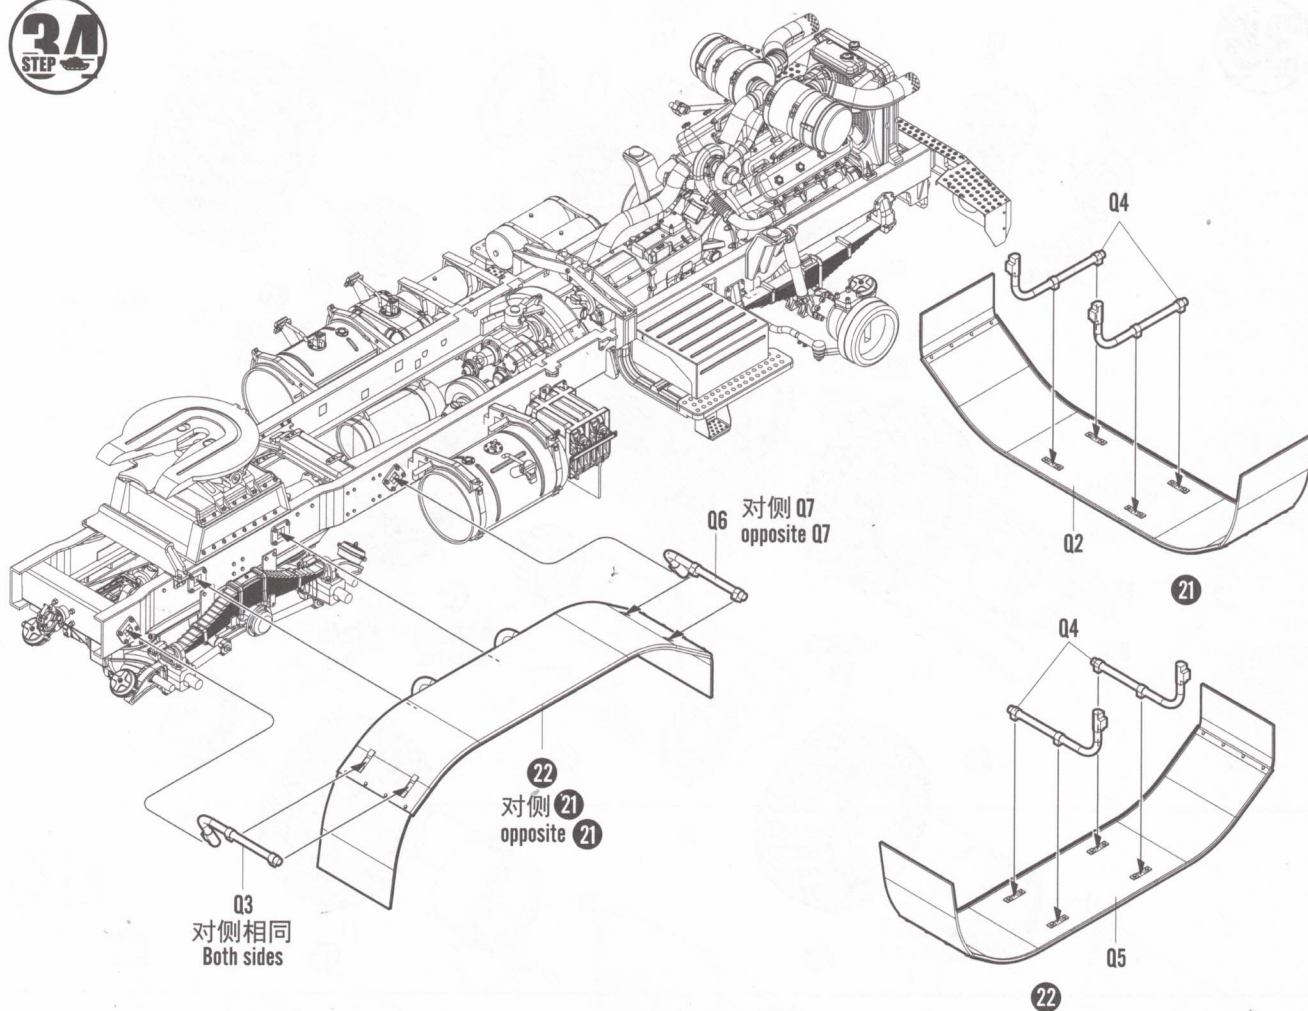


36
STEP


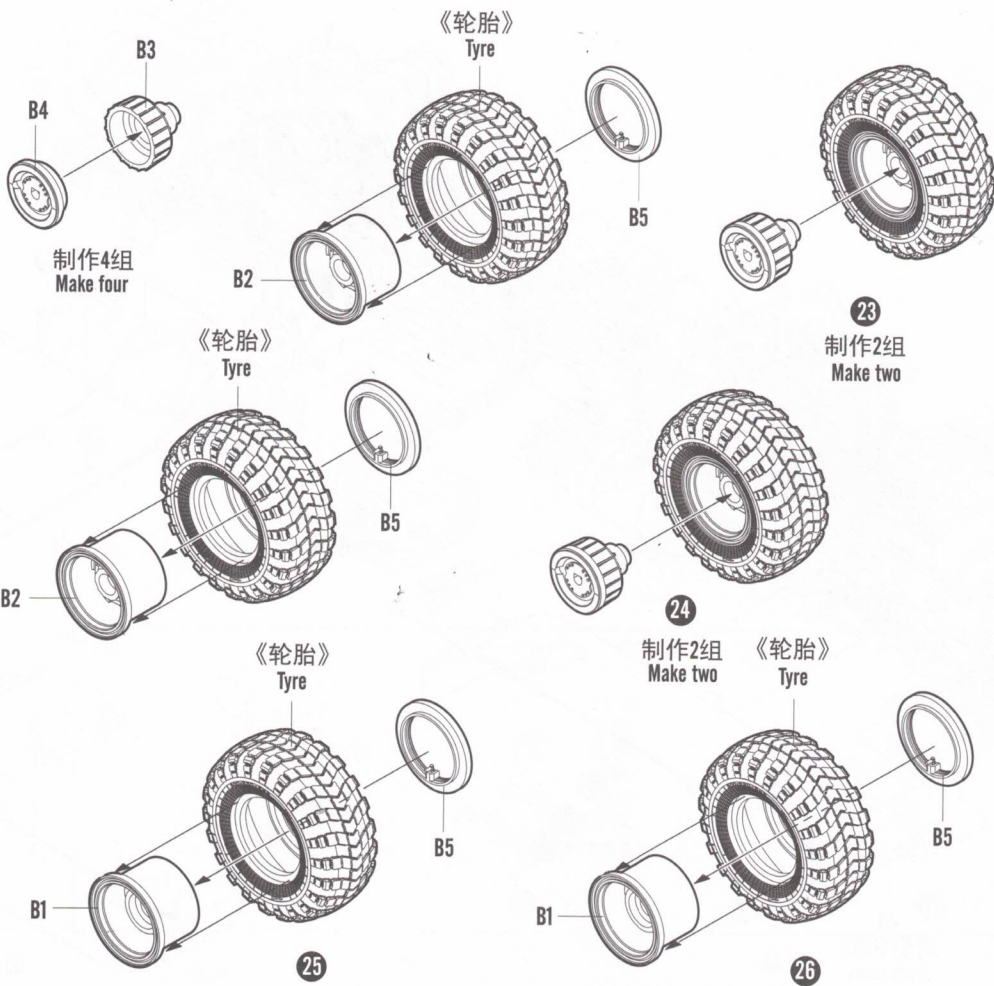


37
STEP








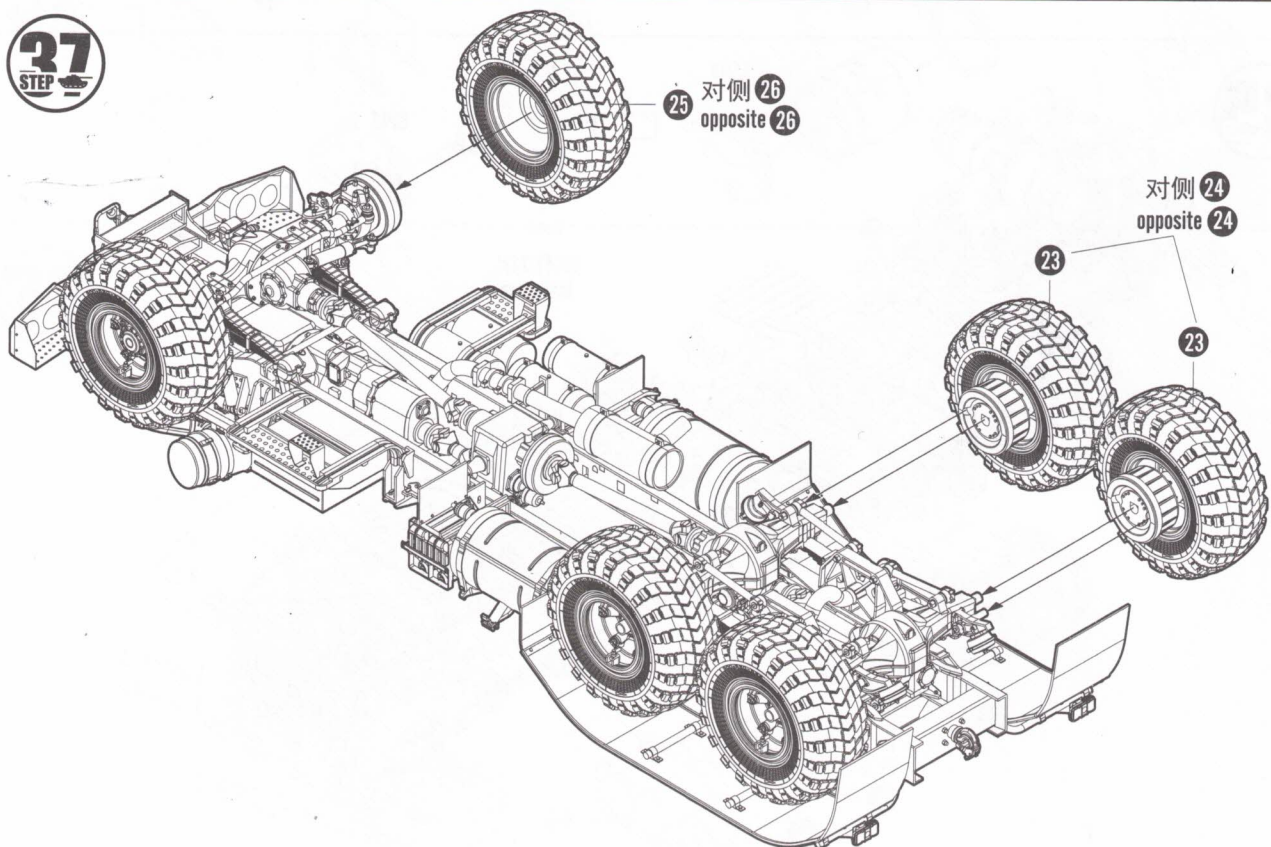


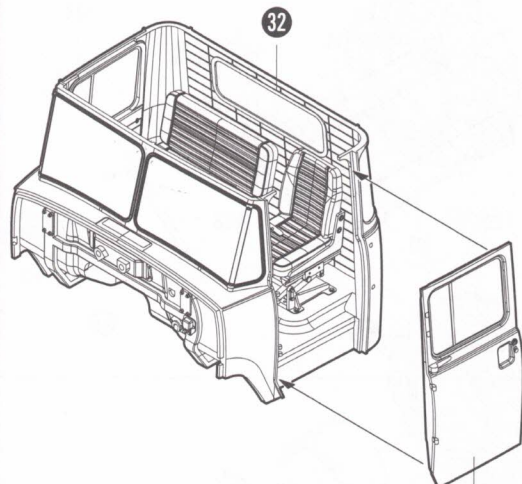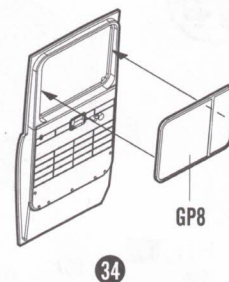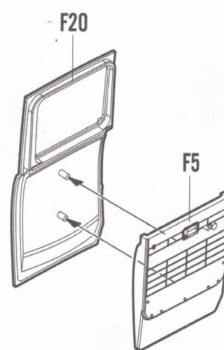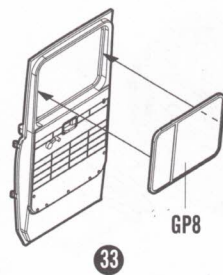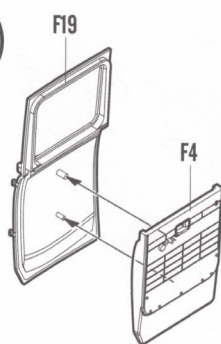


34 对侧 33
opposite 33

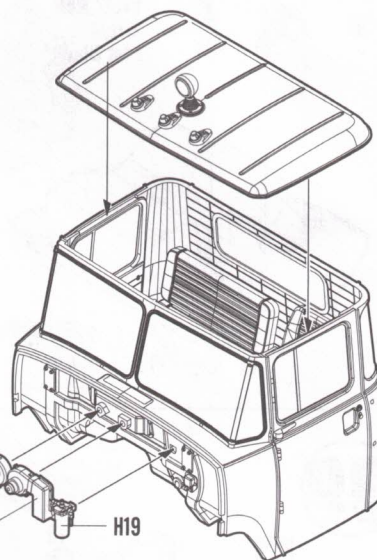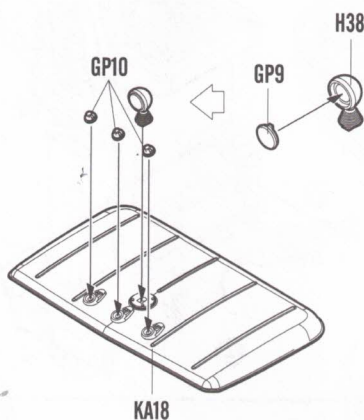


35

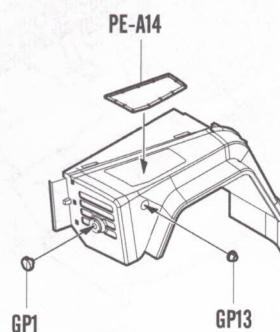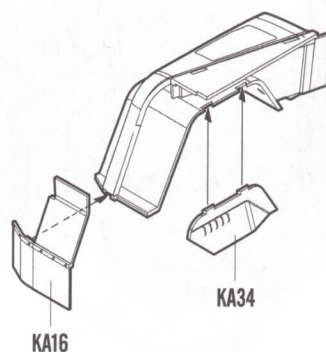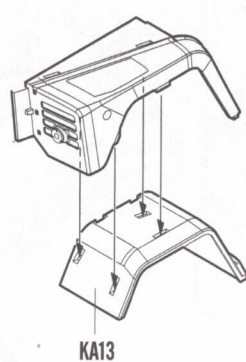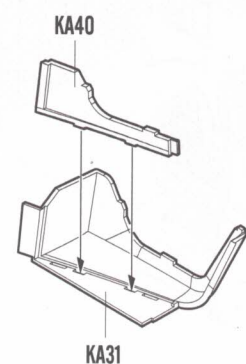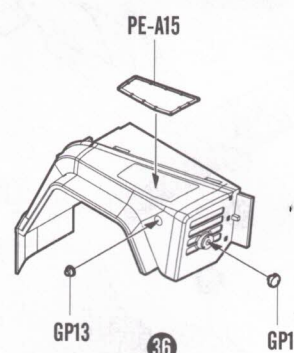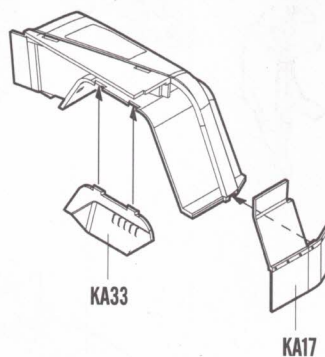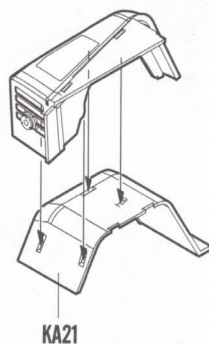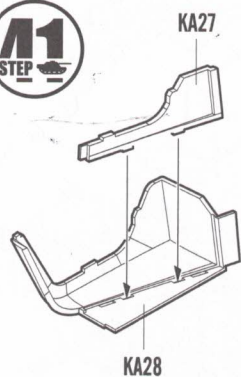




12
STEP


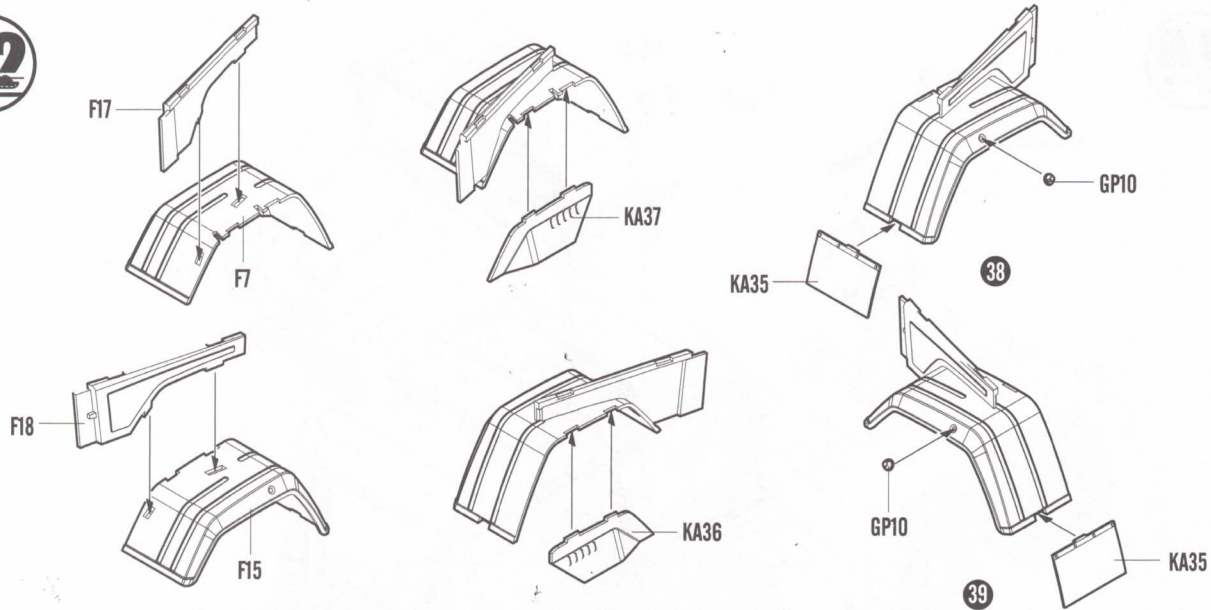


13
STEP

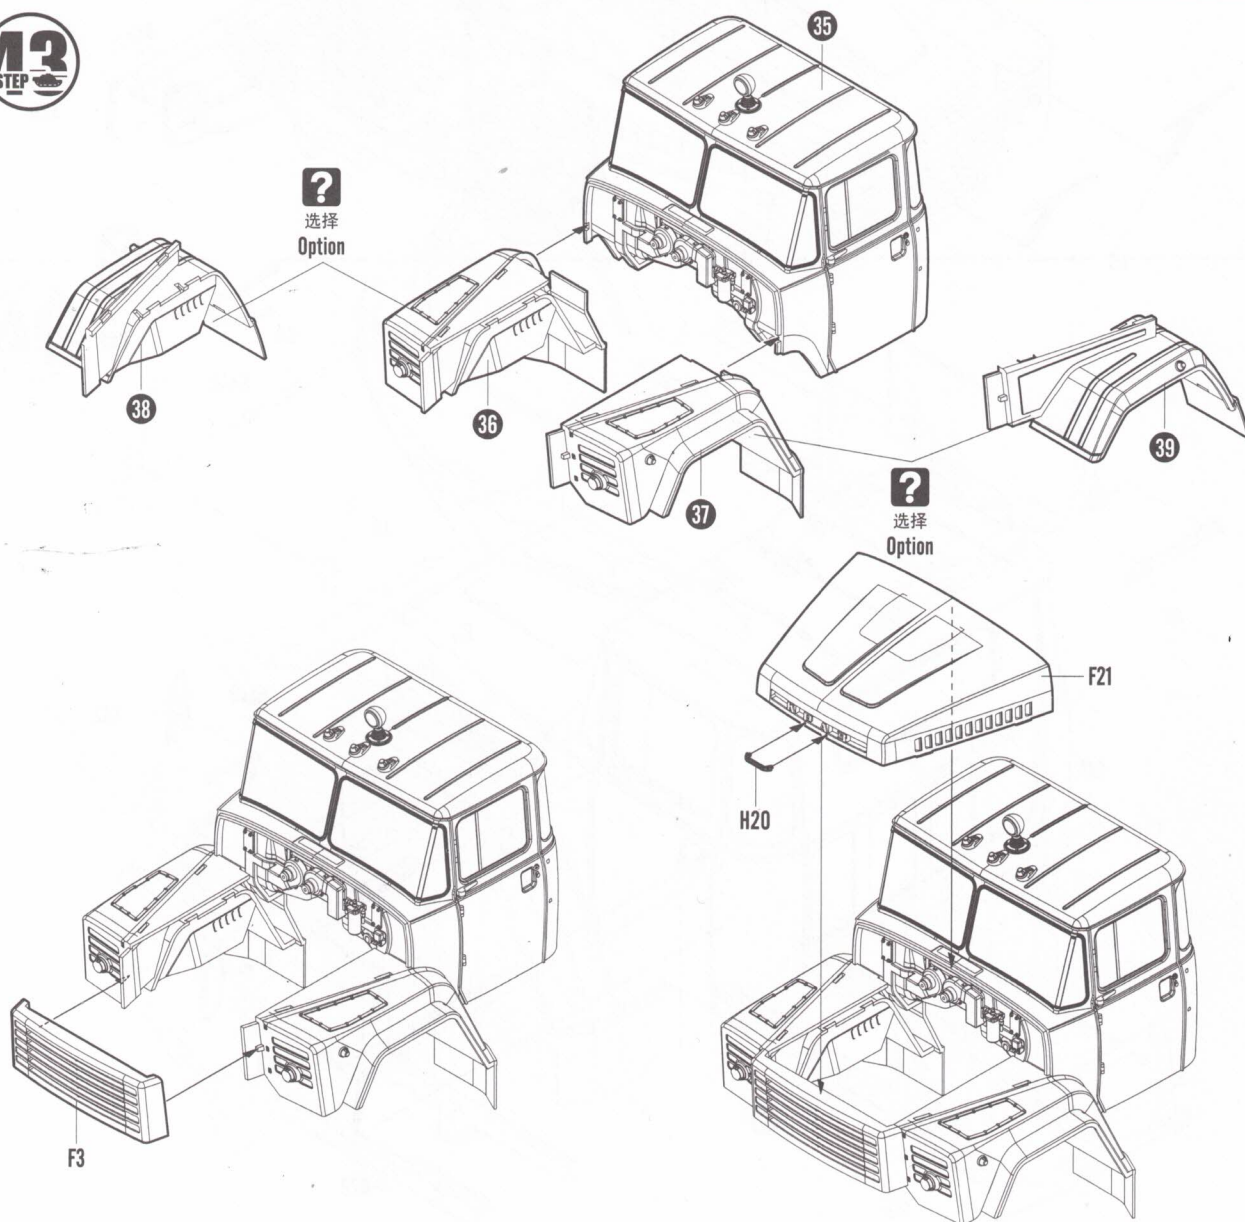


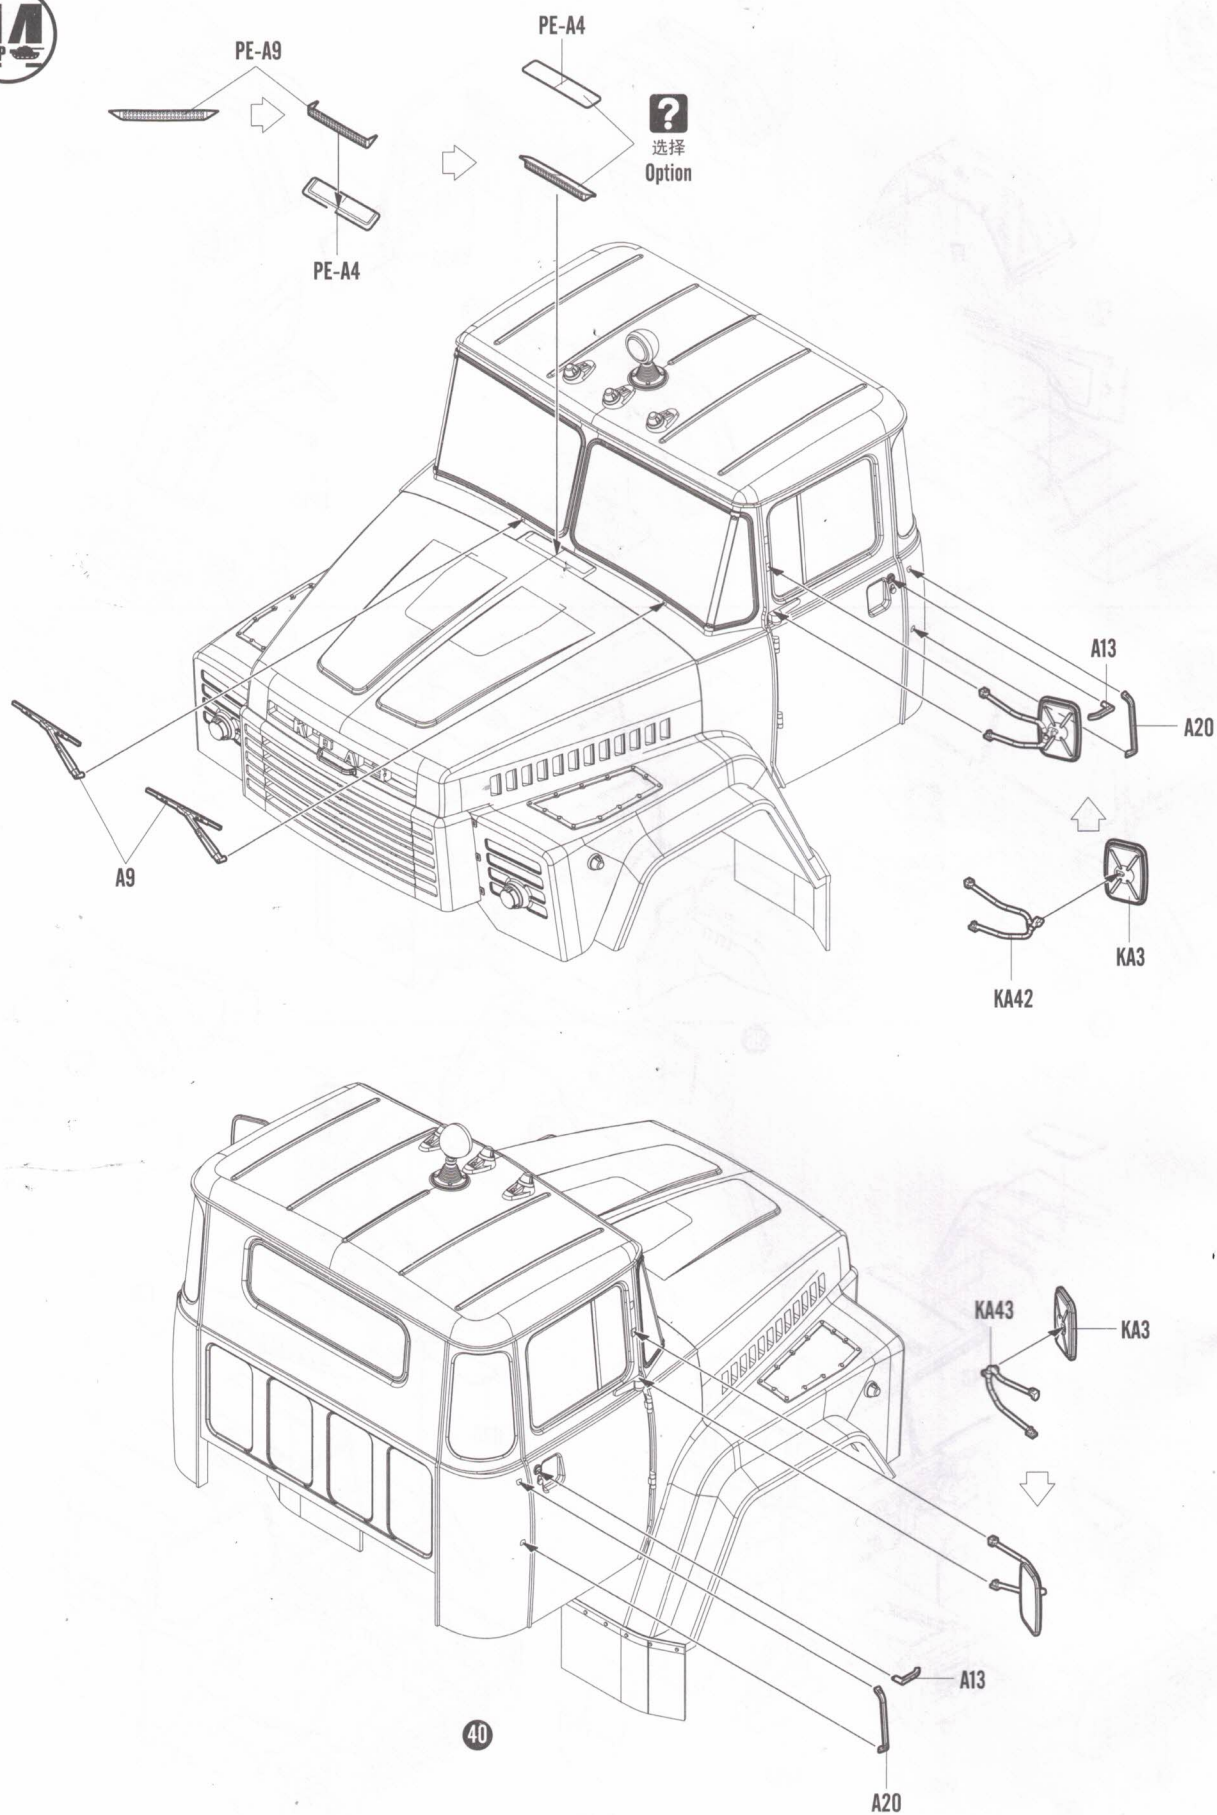





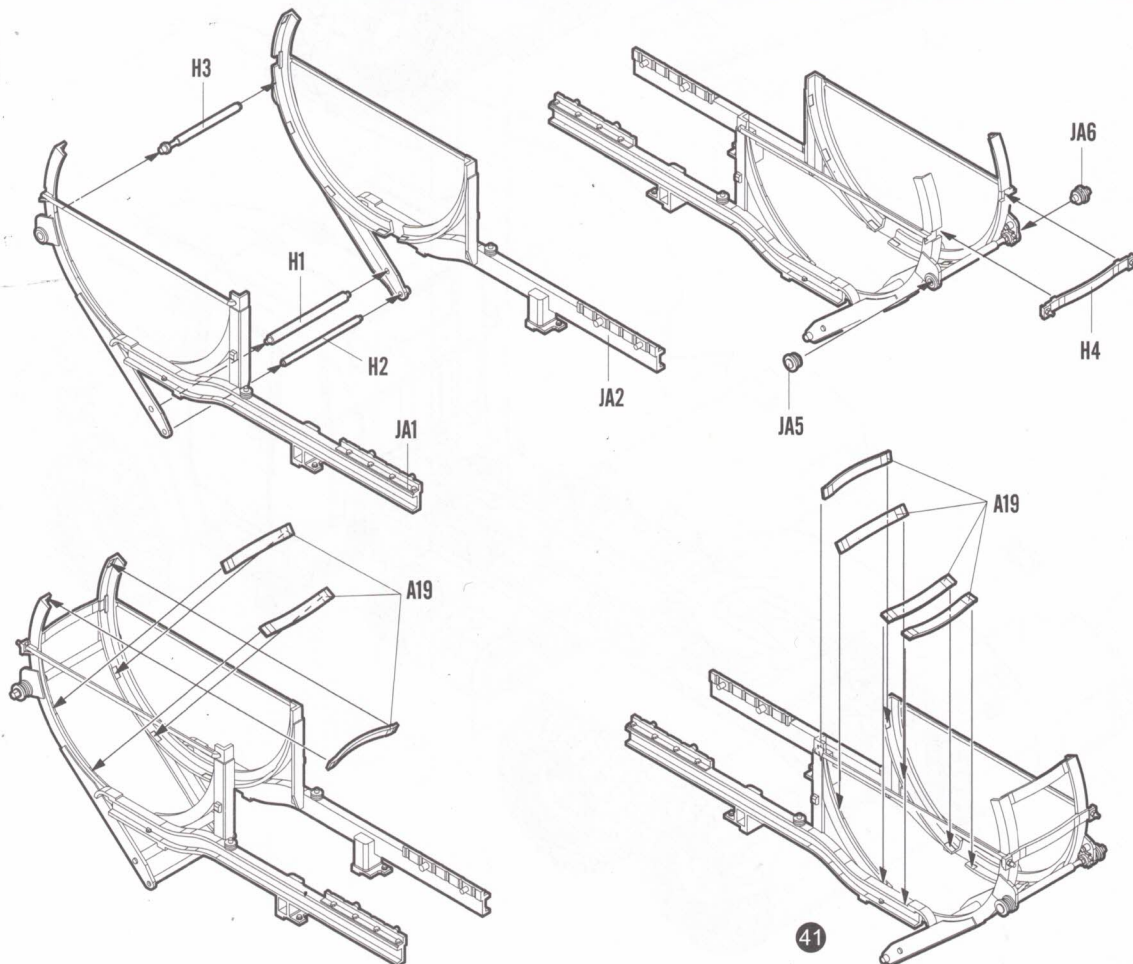
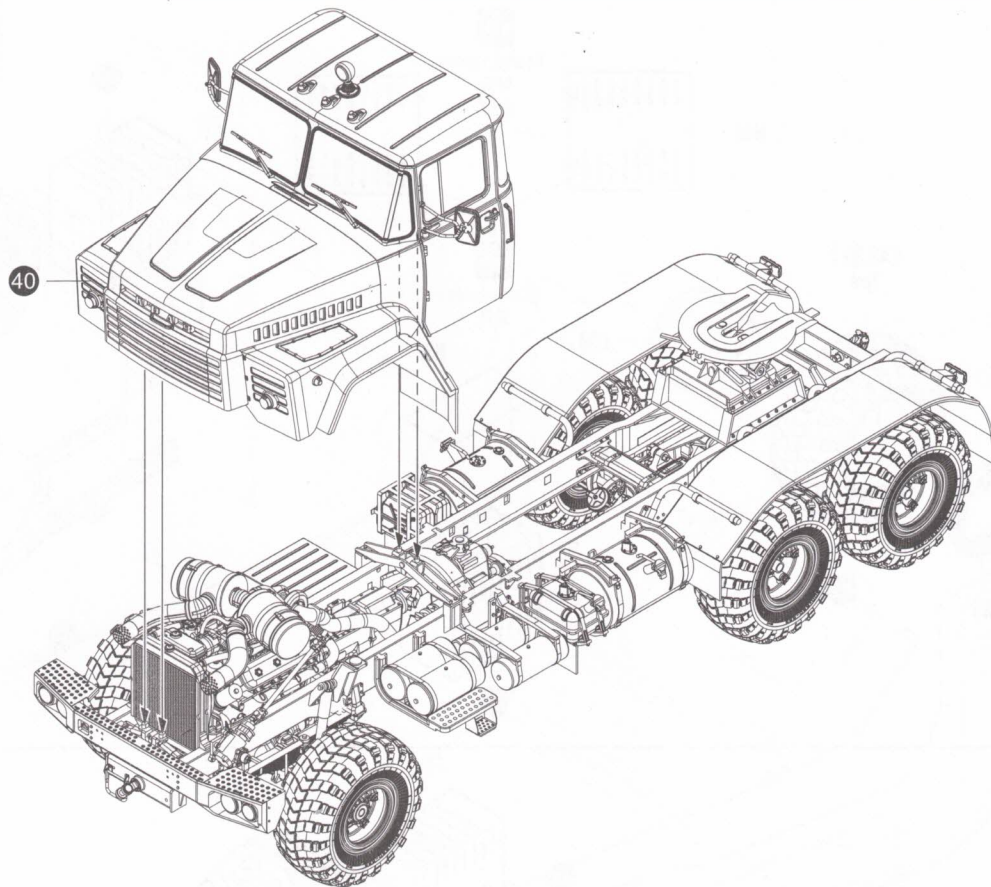


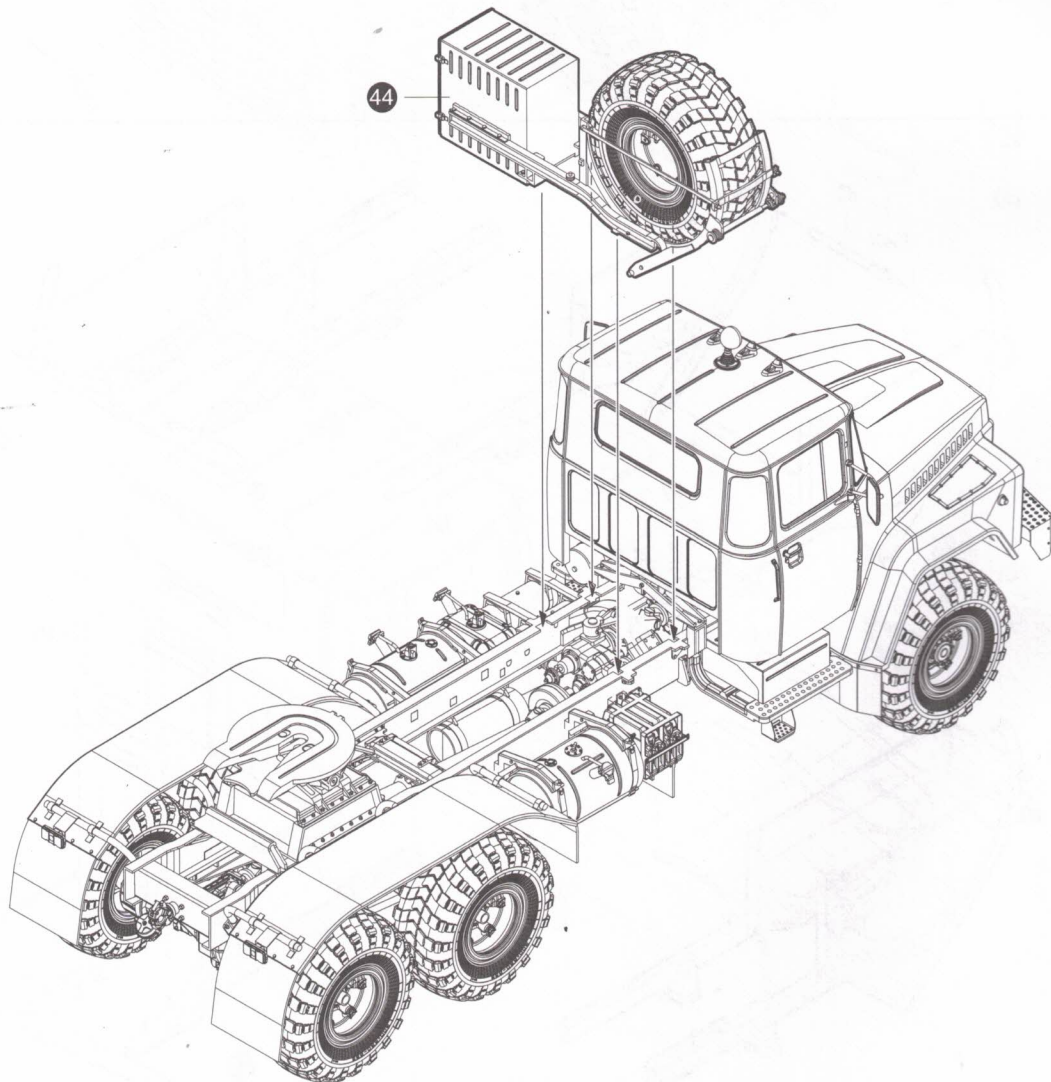
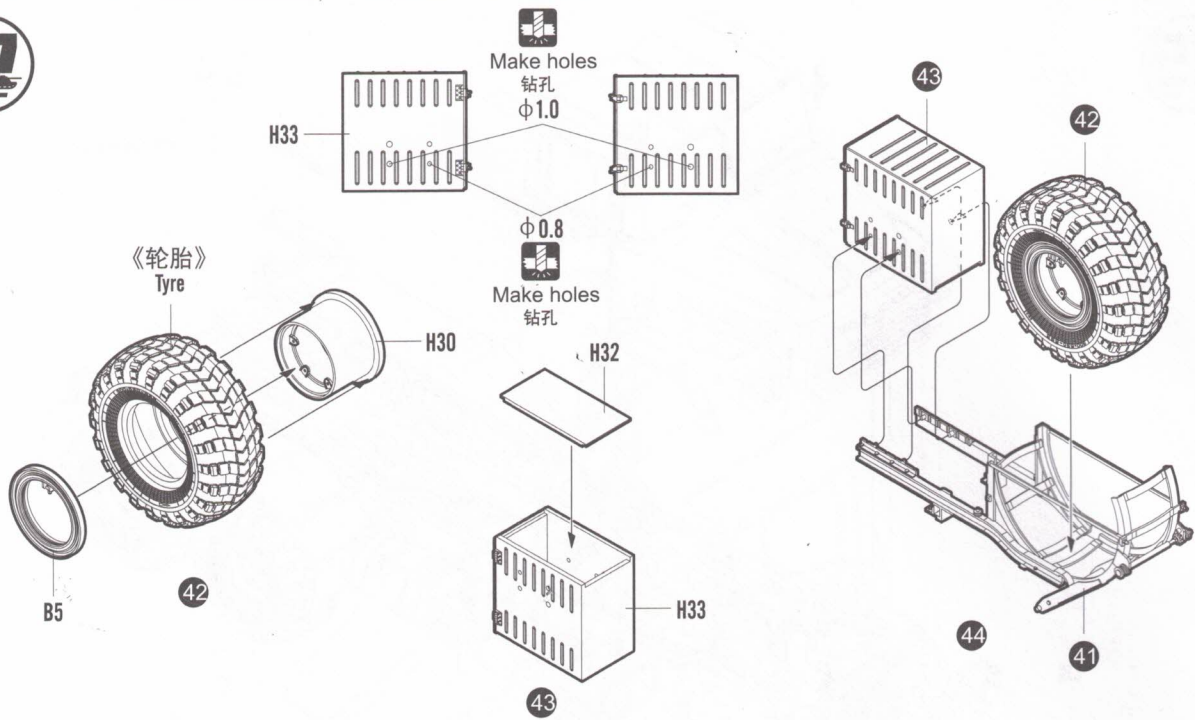


拖板的组装 Assembly of trailer

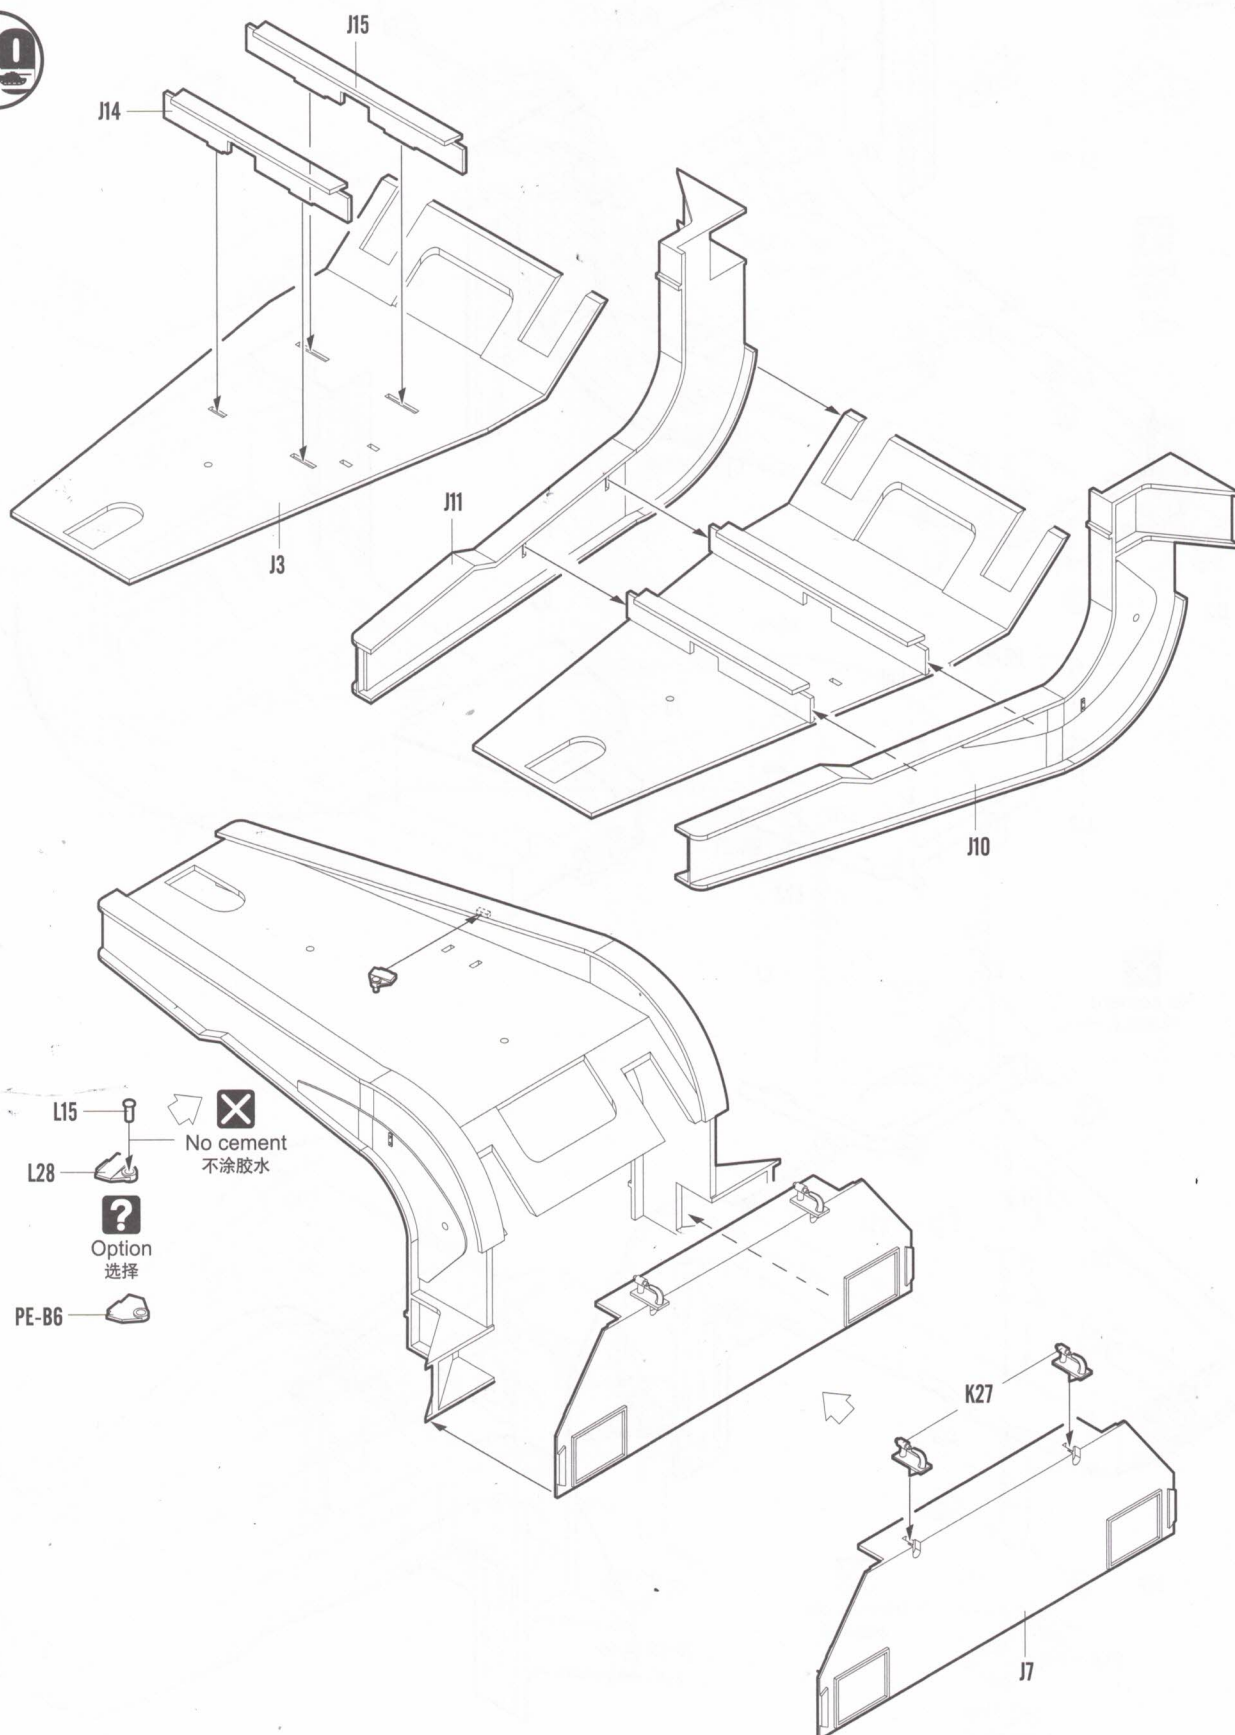


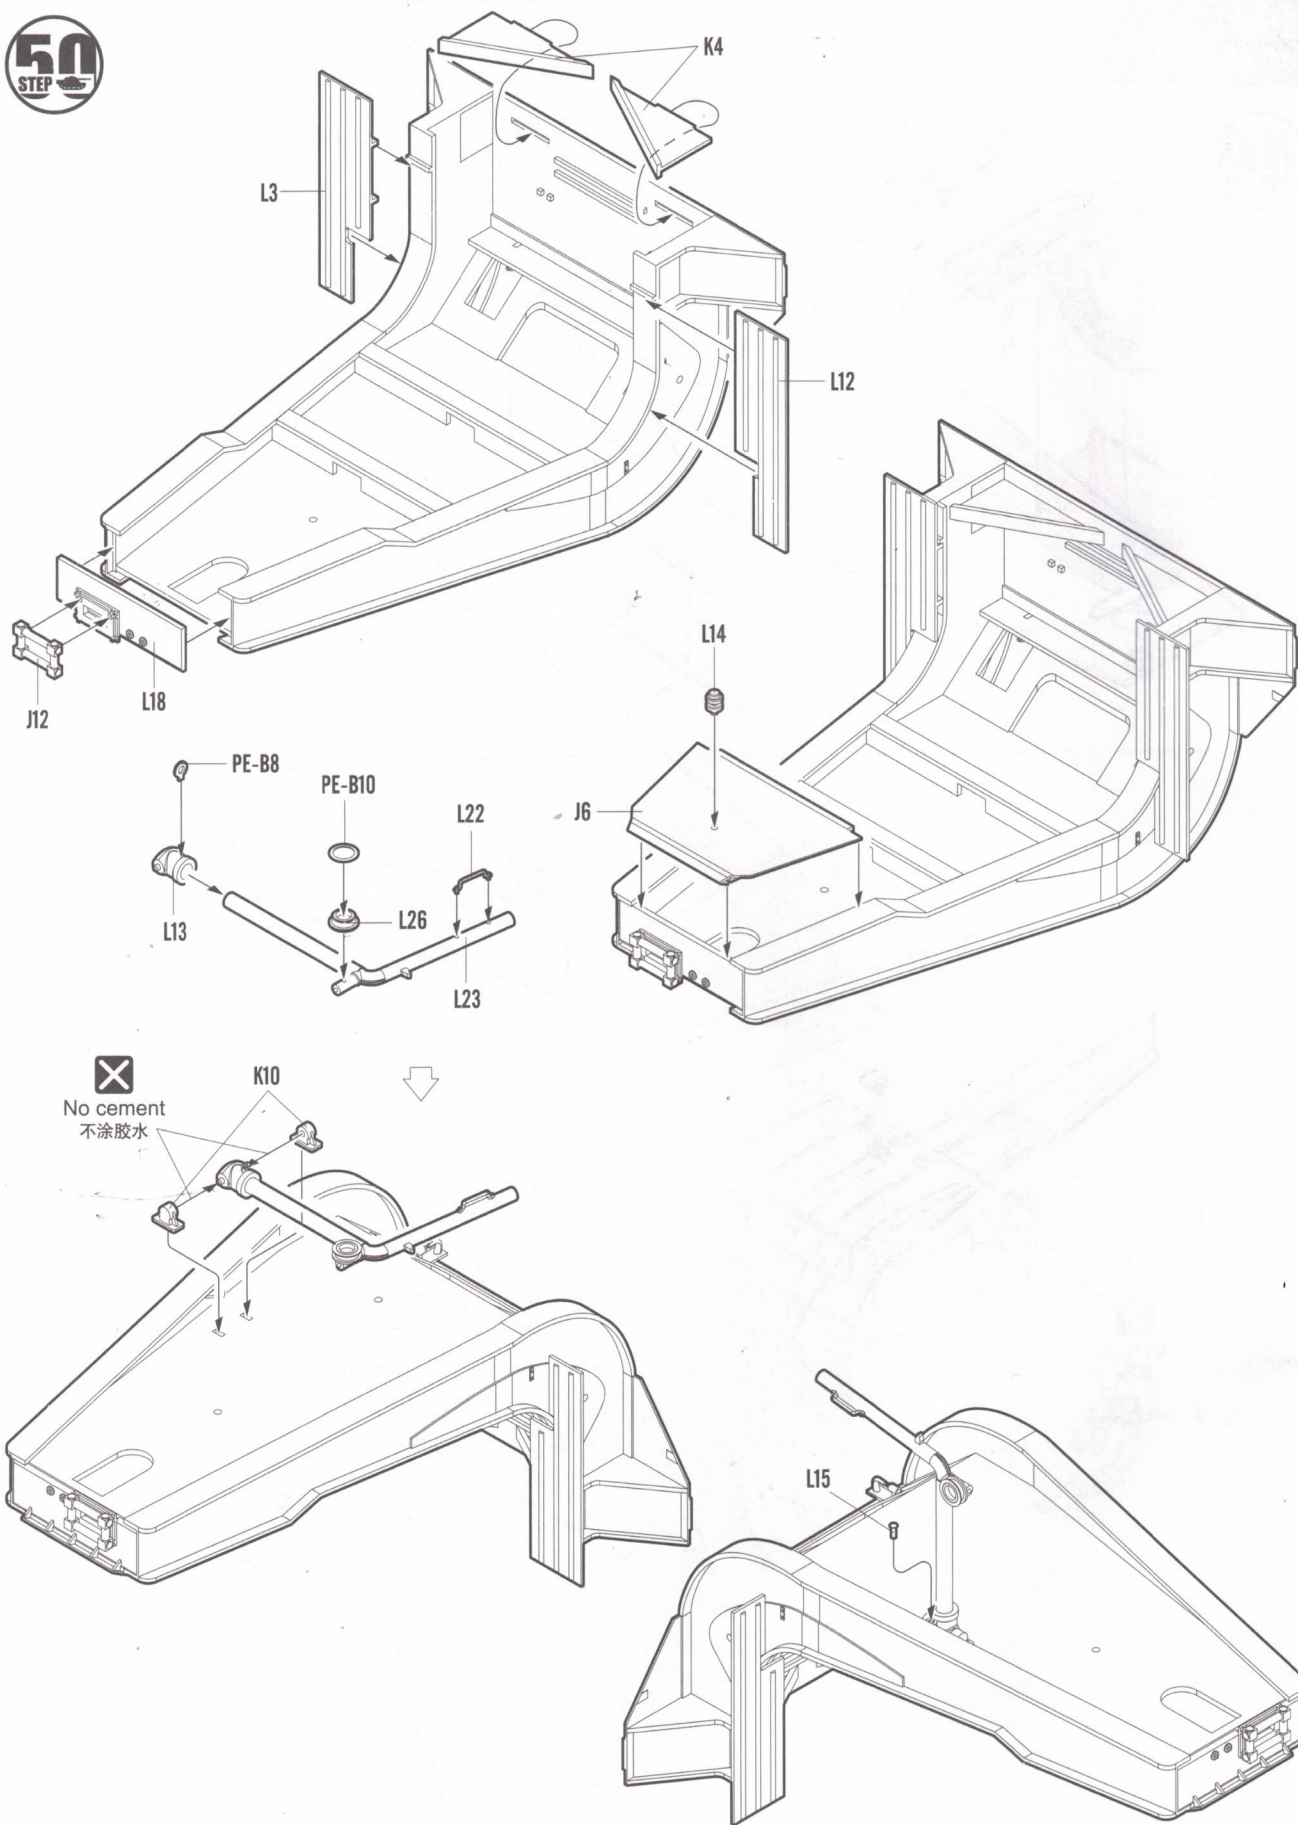

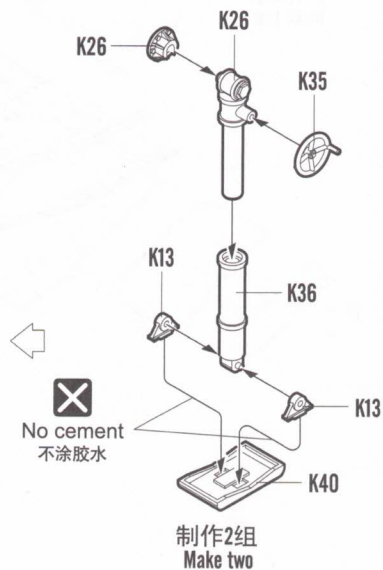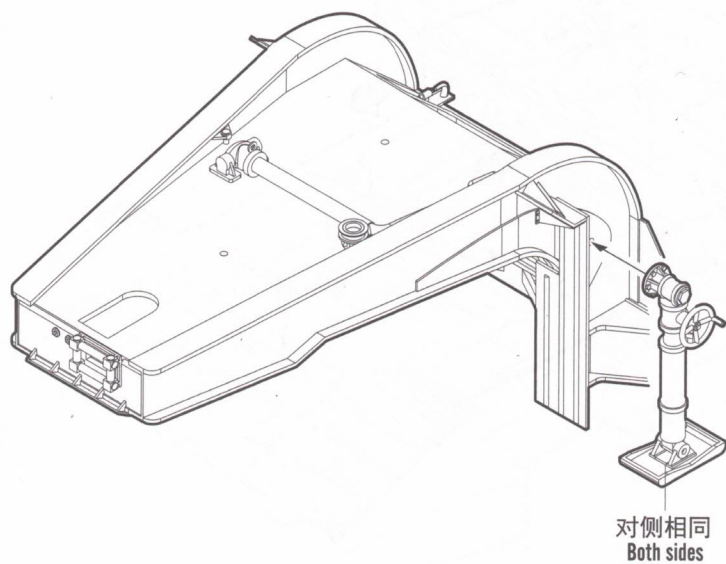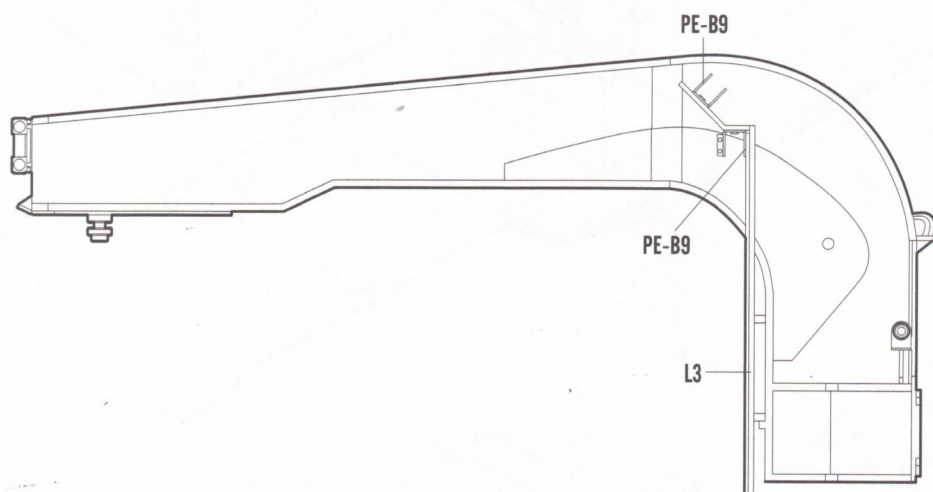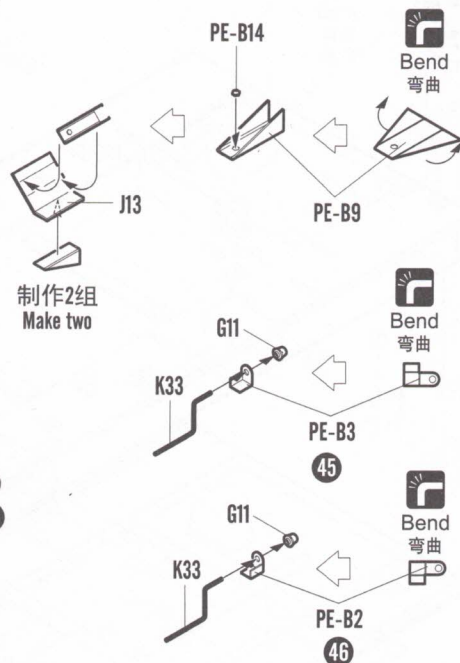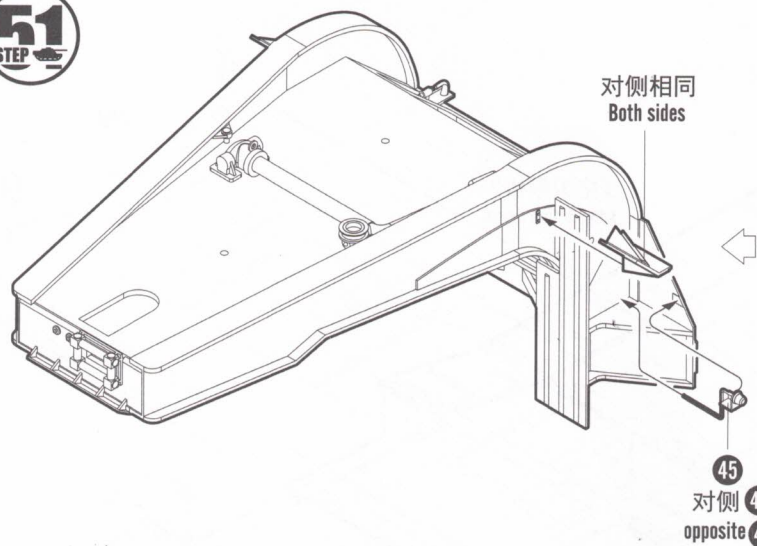

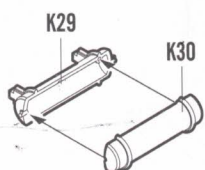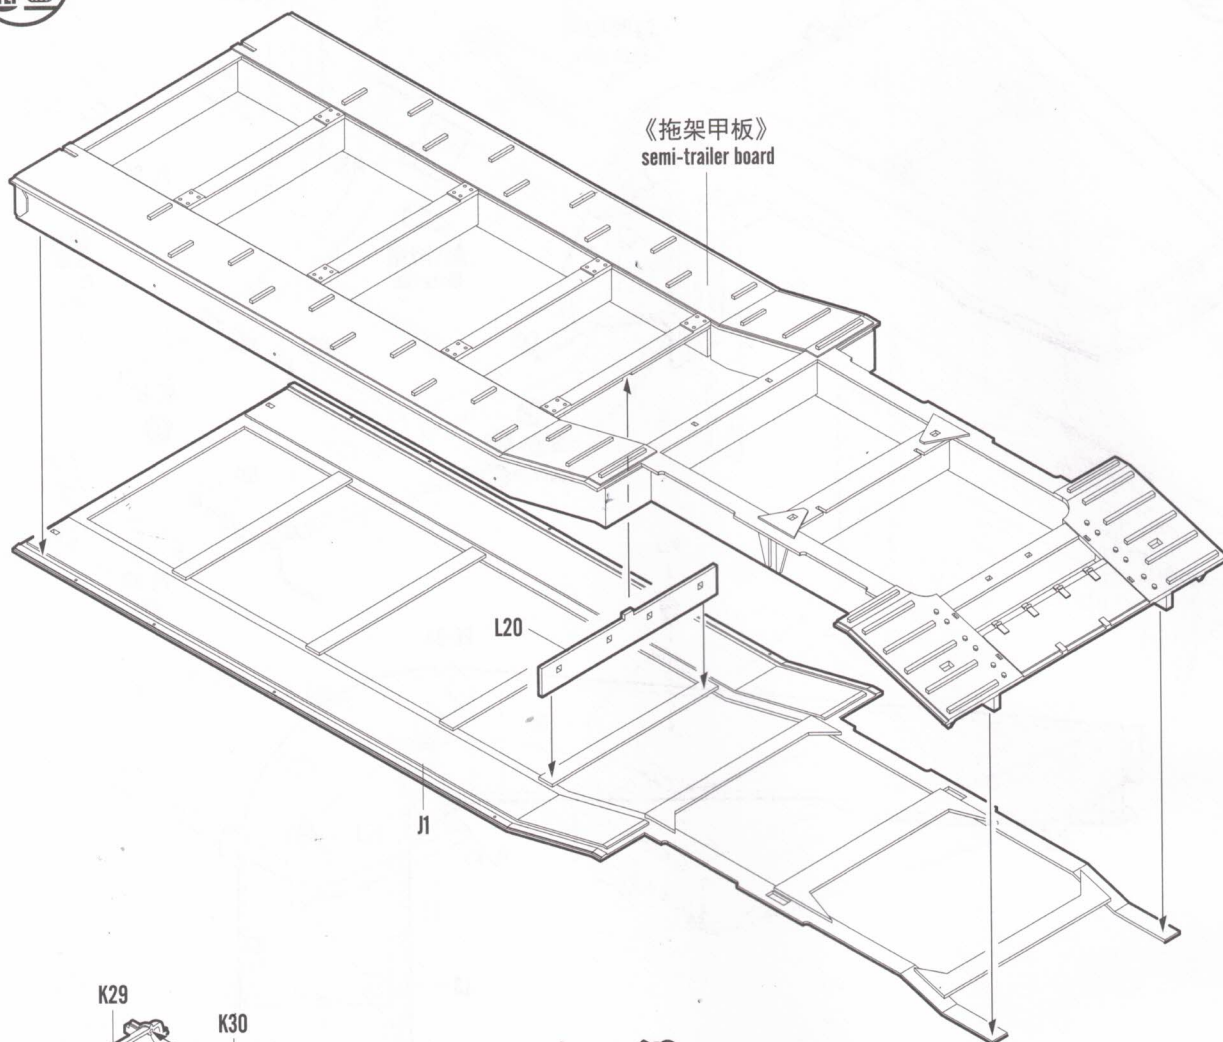



制作2组
Make two

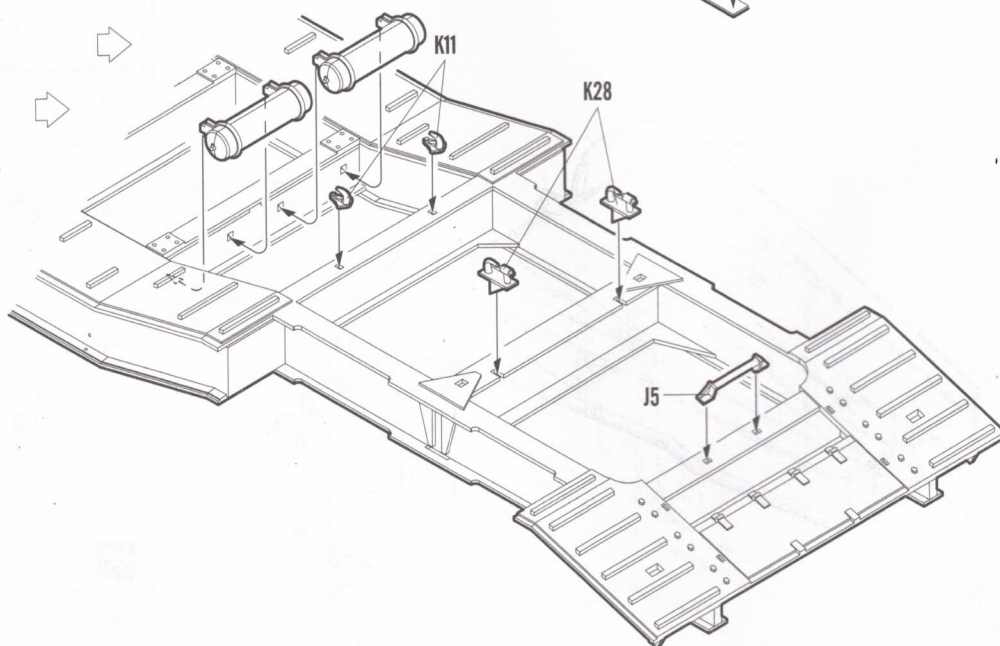


53
STEP

Bend
弯曲
PE-B4

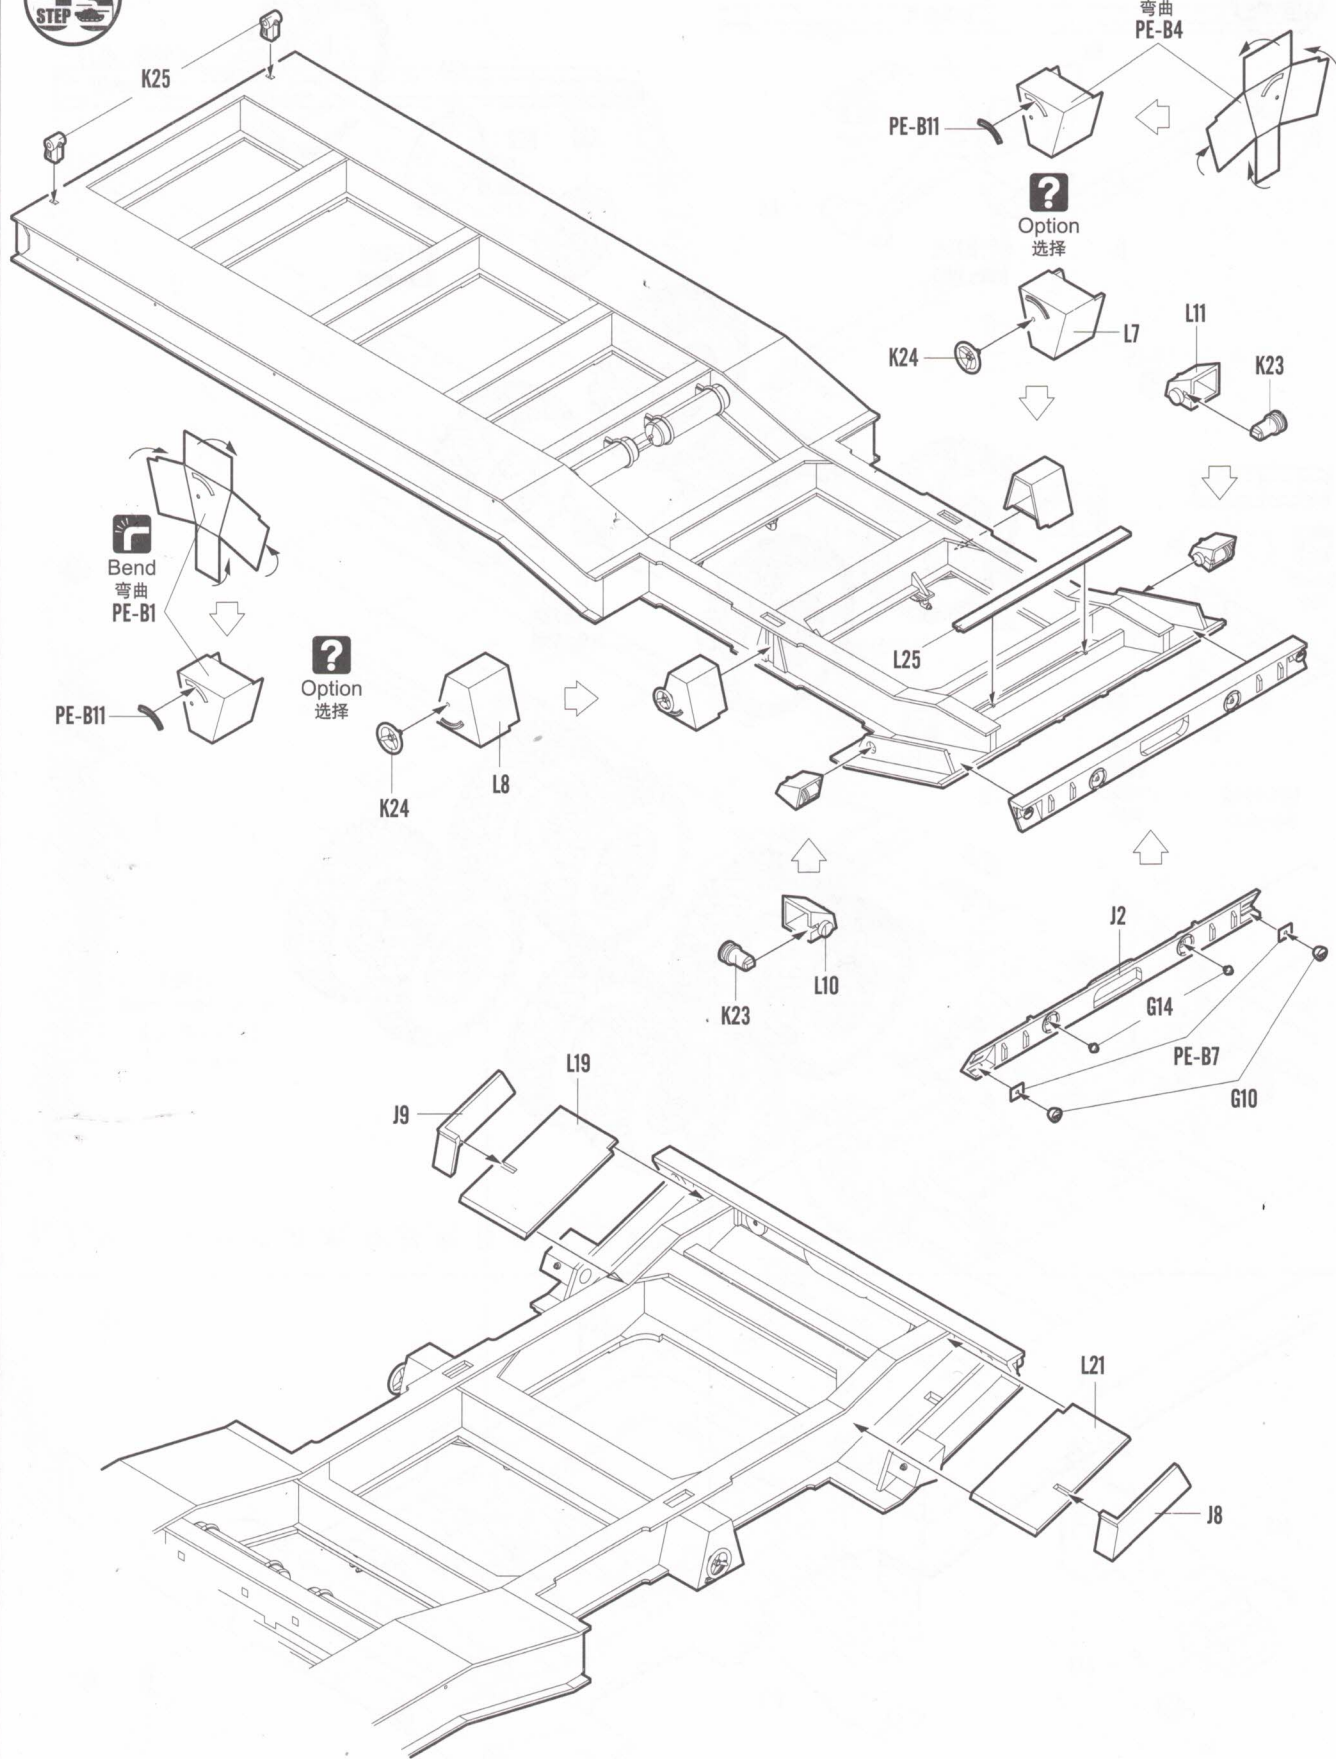


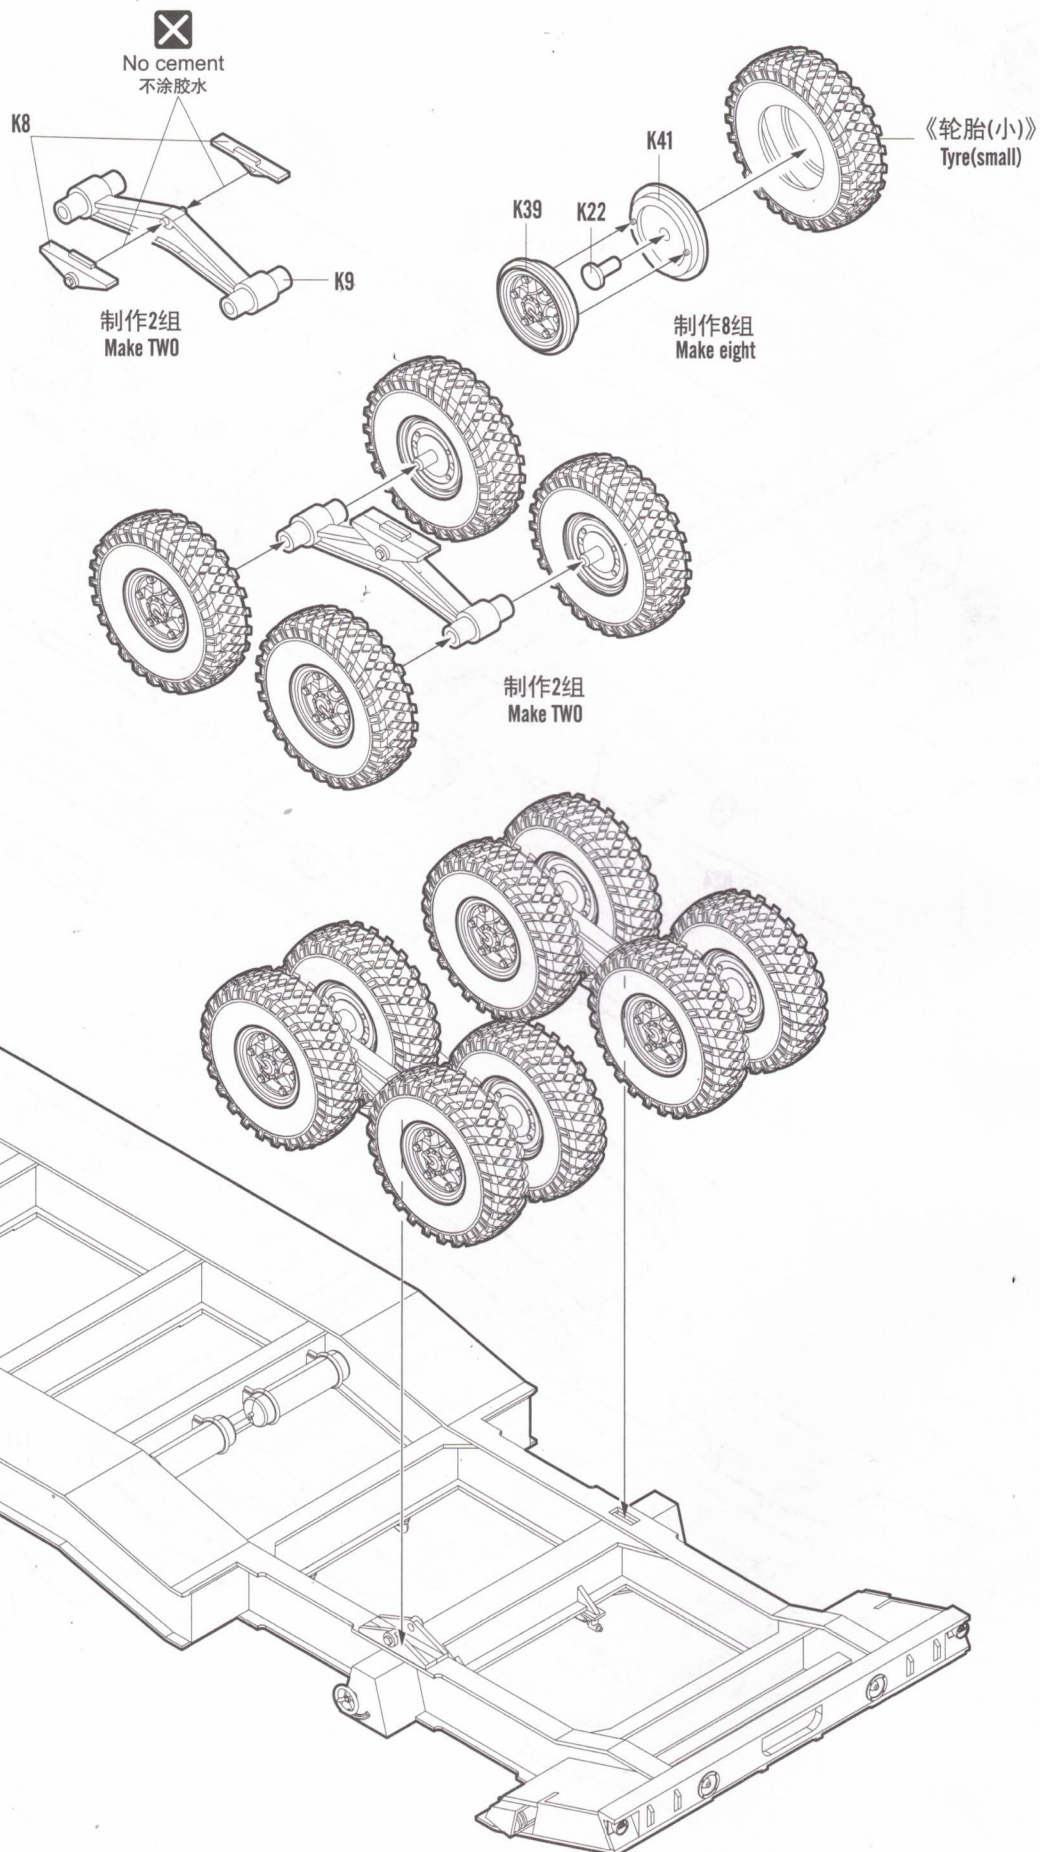



55
STEP




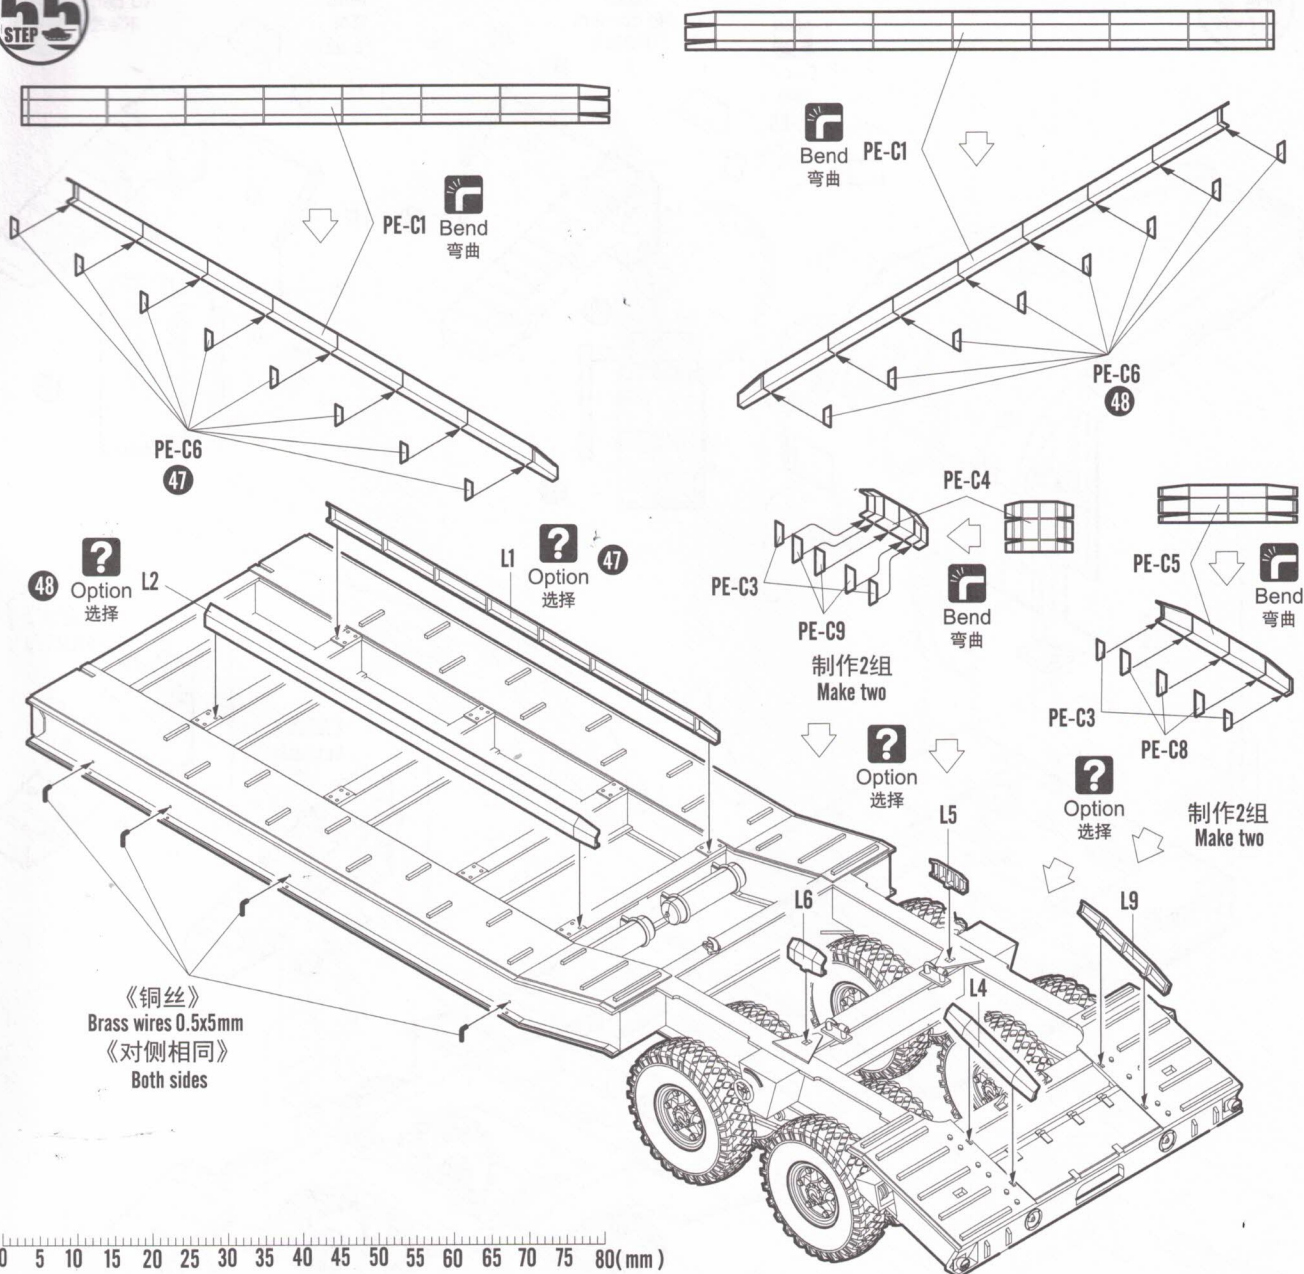


56
STEP

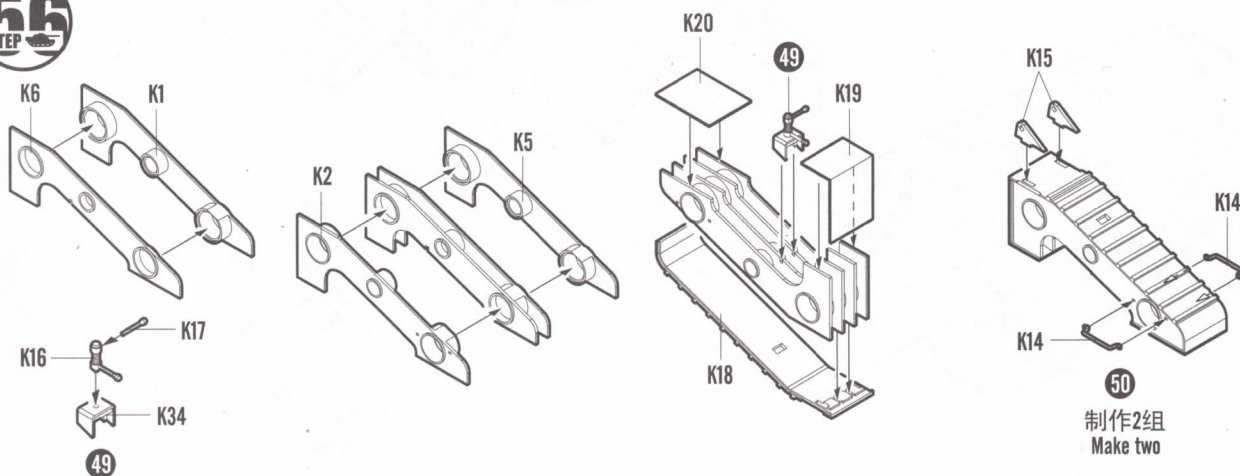

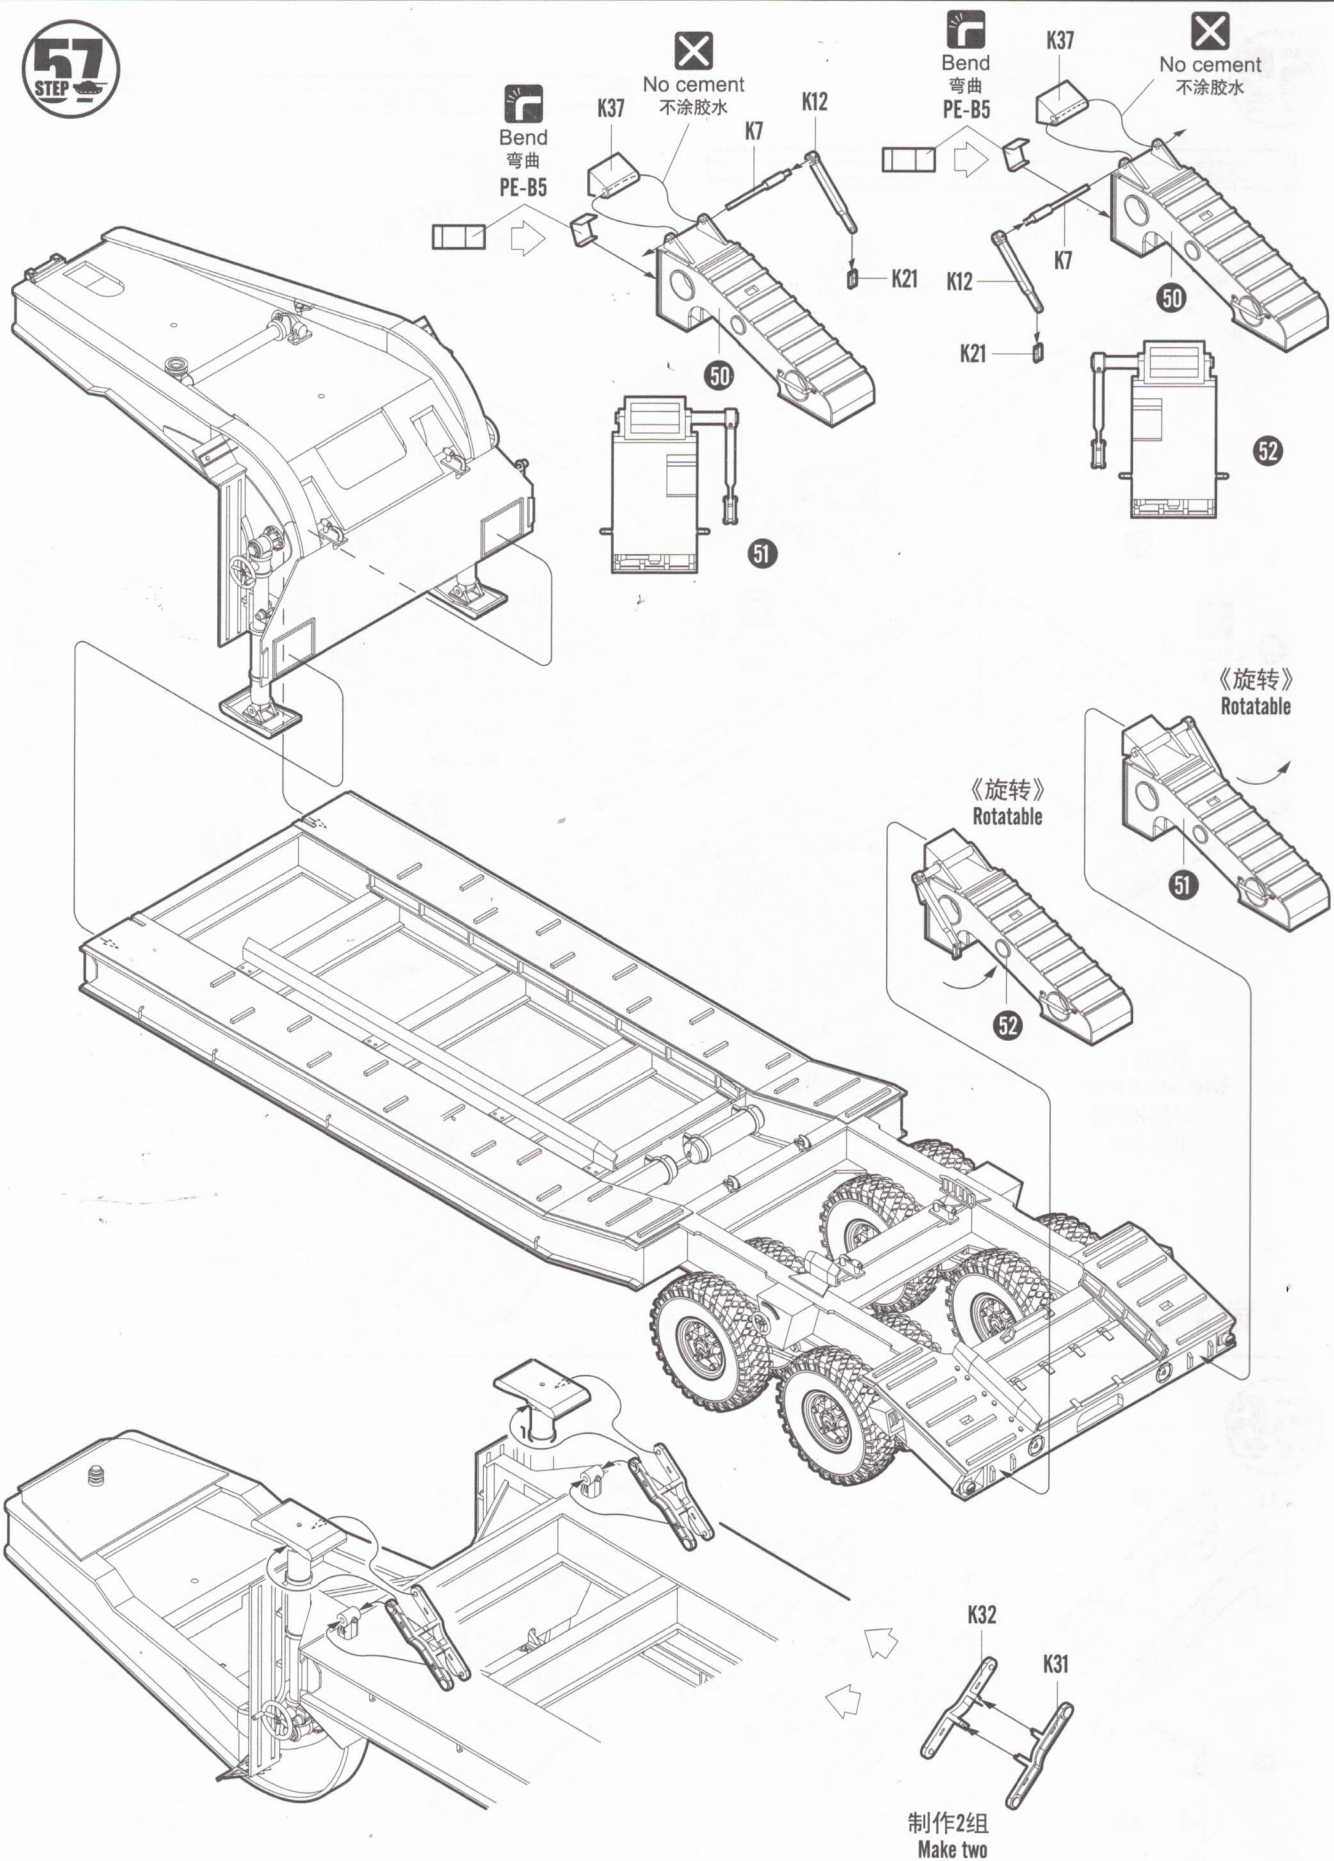

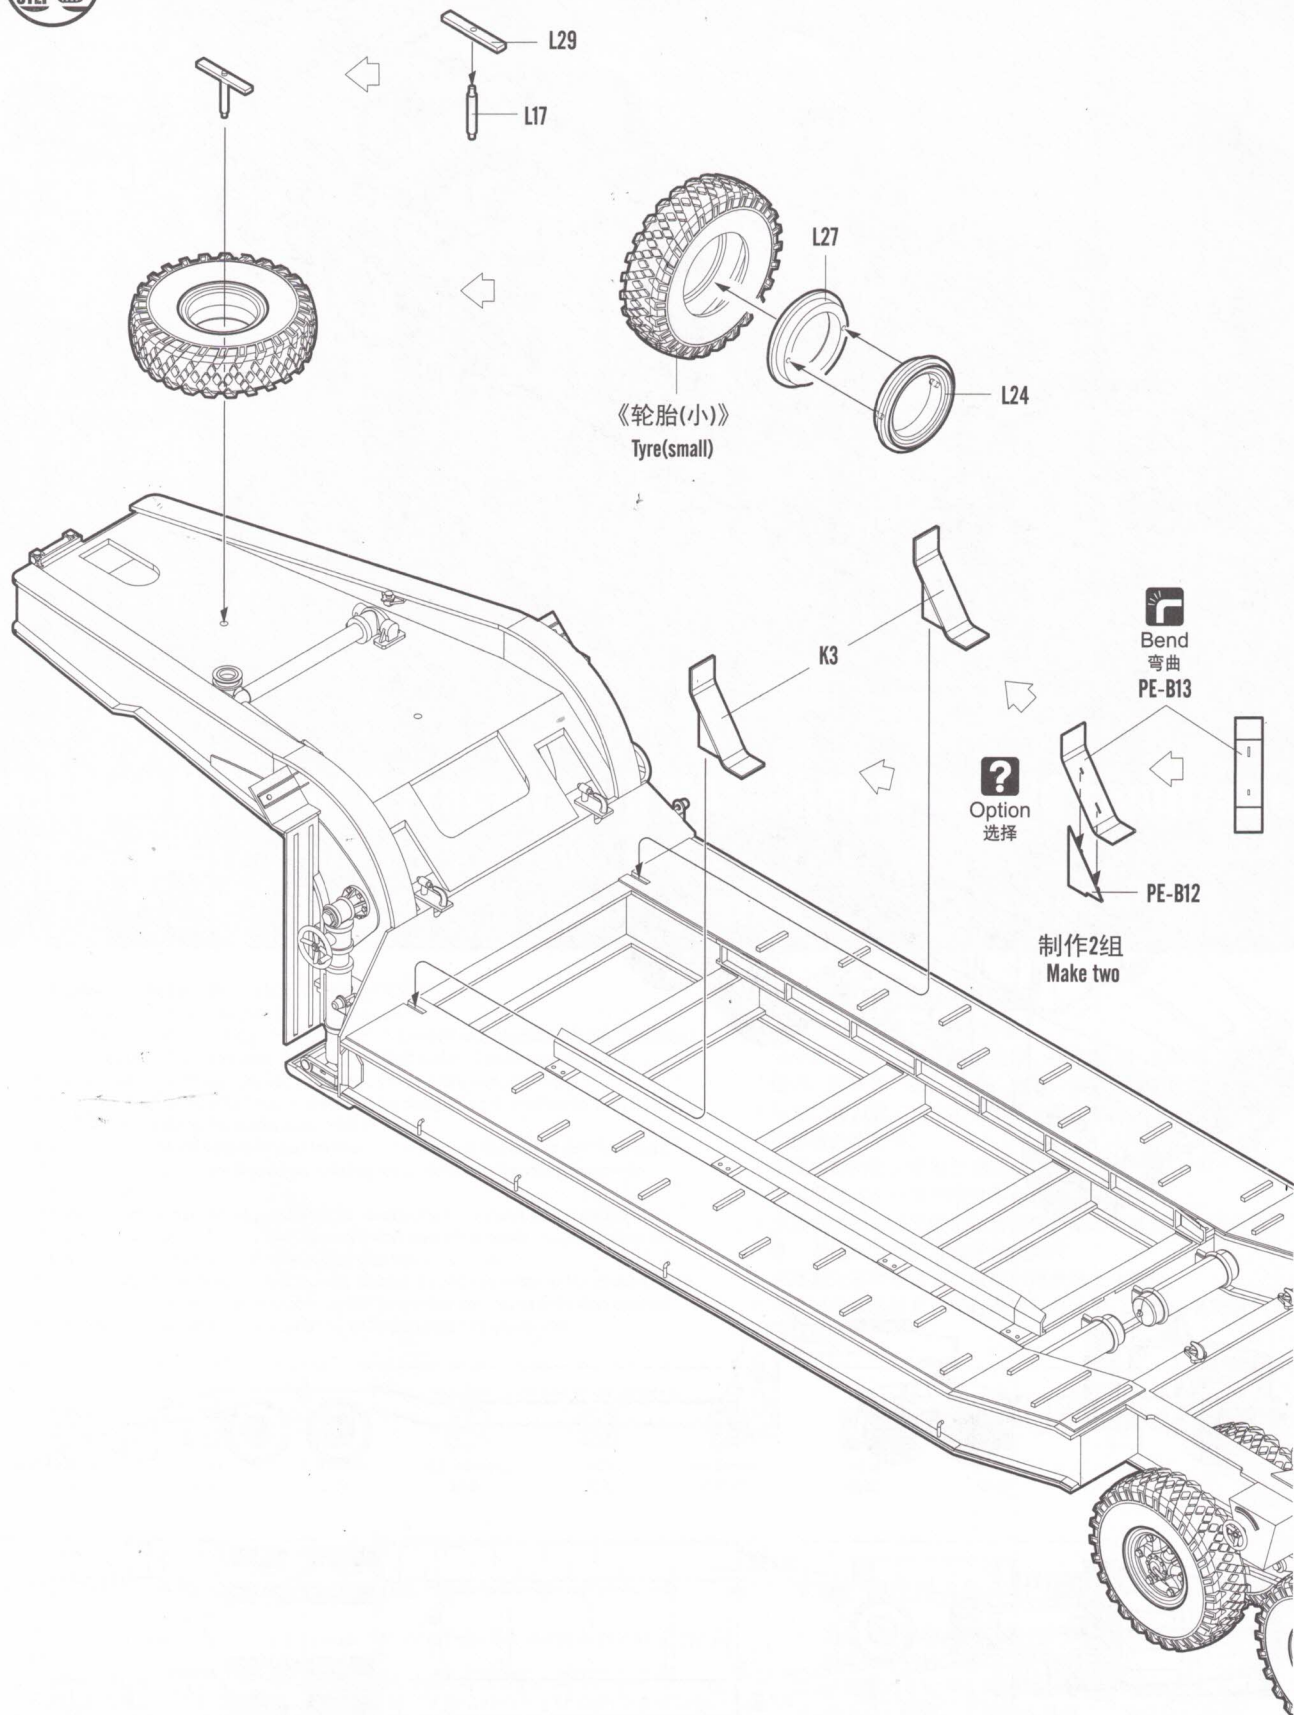

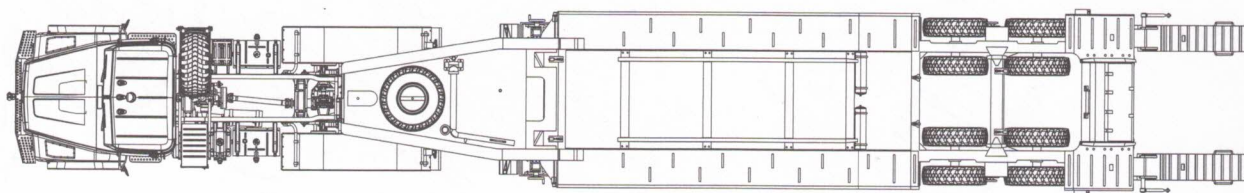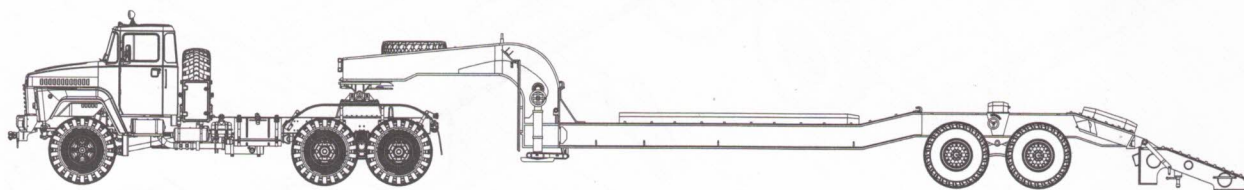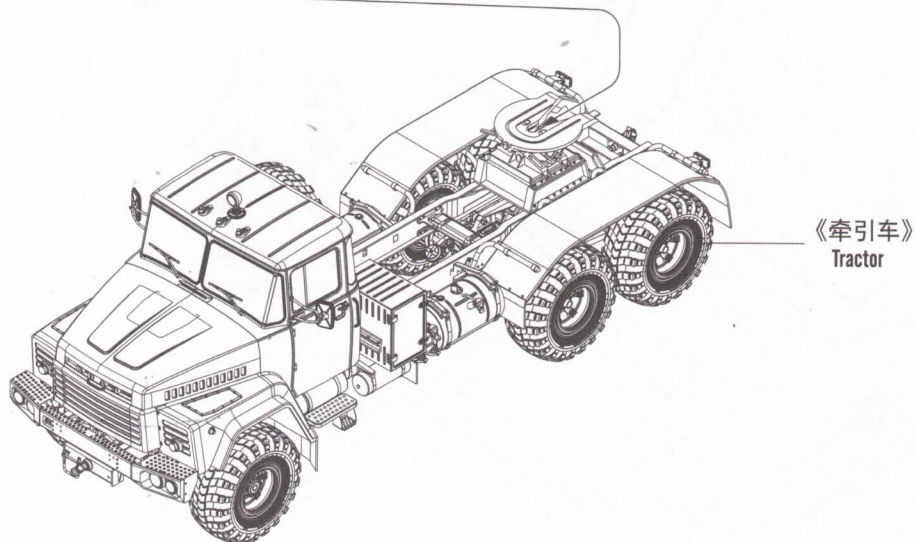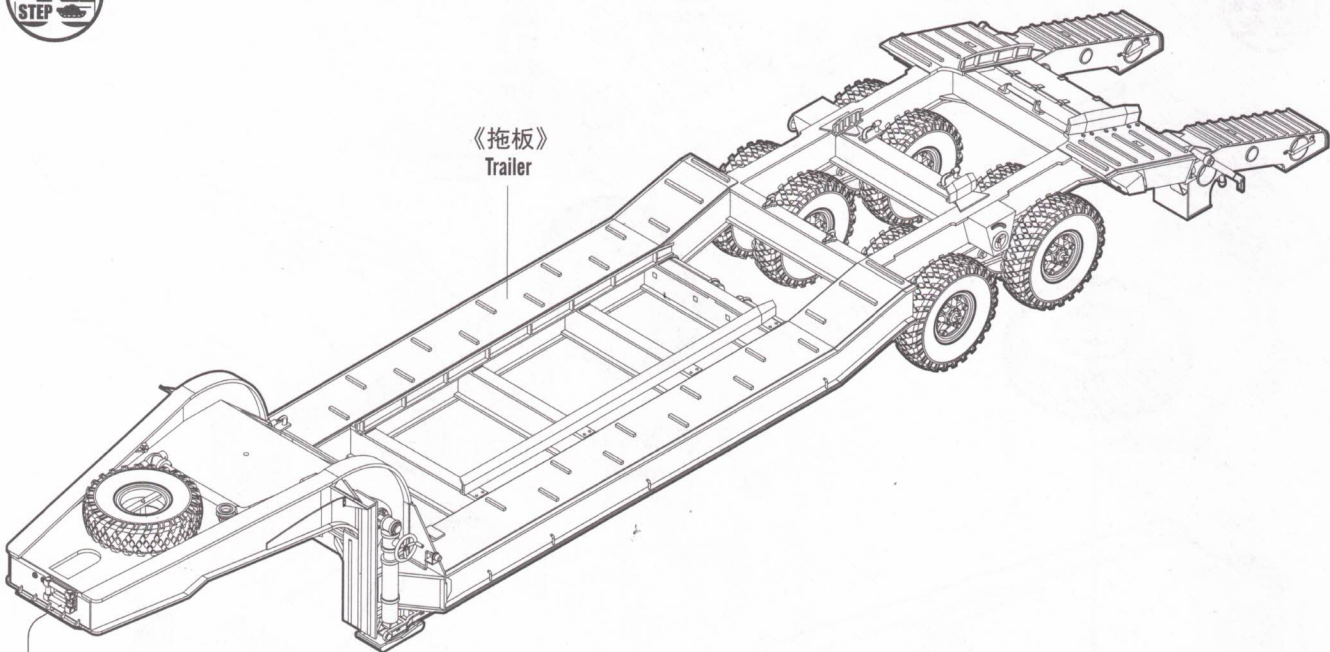


标贴与涂装 MARKING & PAINTING

Russian KrAZ-260B Tractor with M

ロシア KrAZ-260B トラクター w.MAZ

俄罗斯KrAZ-260B军用卡车(带MA

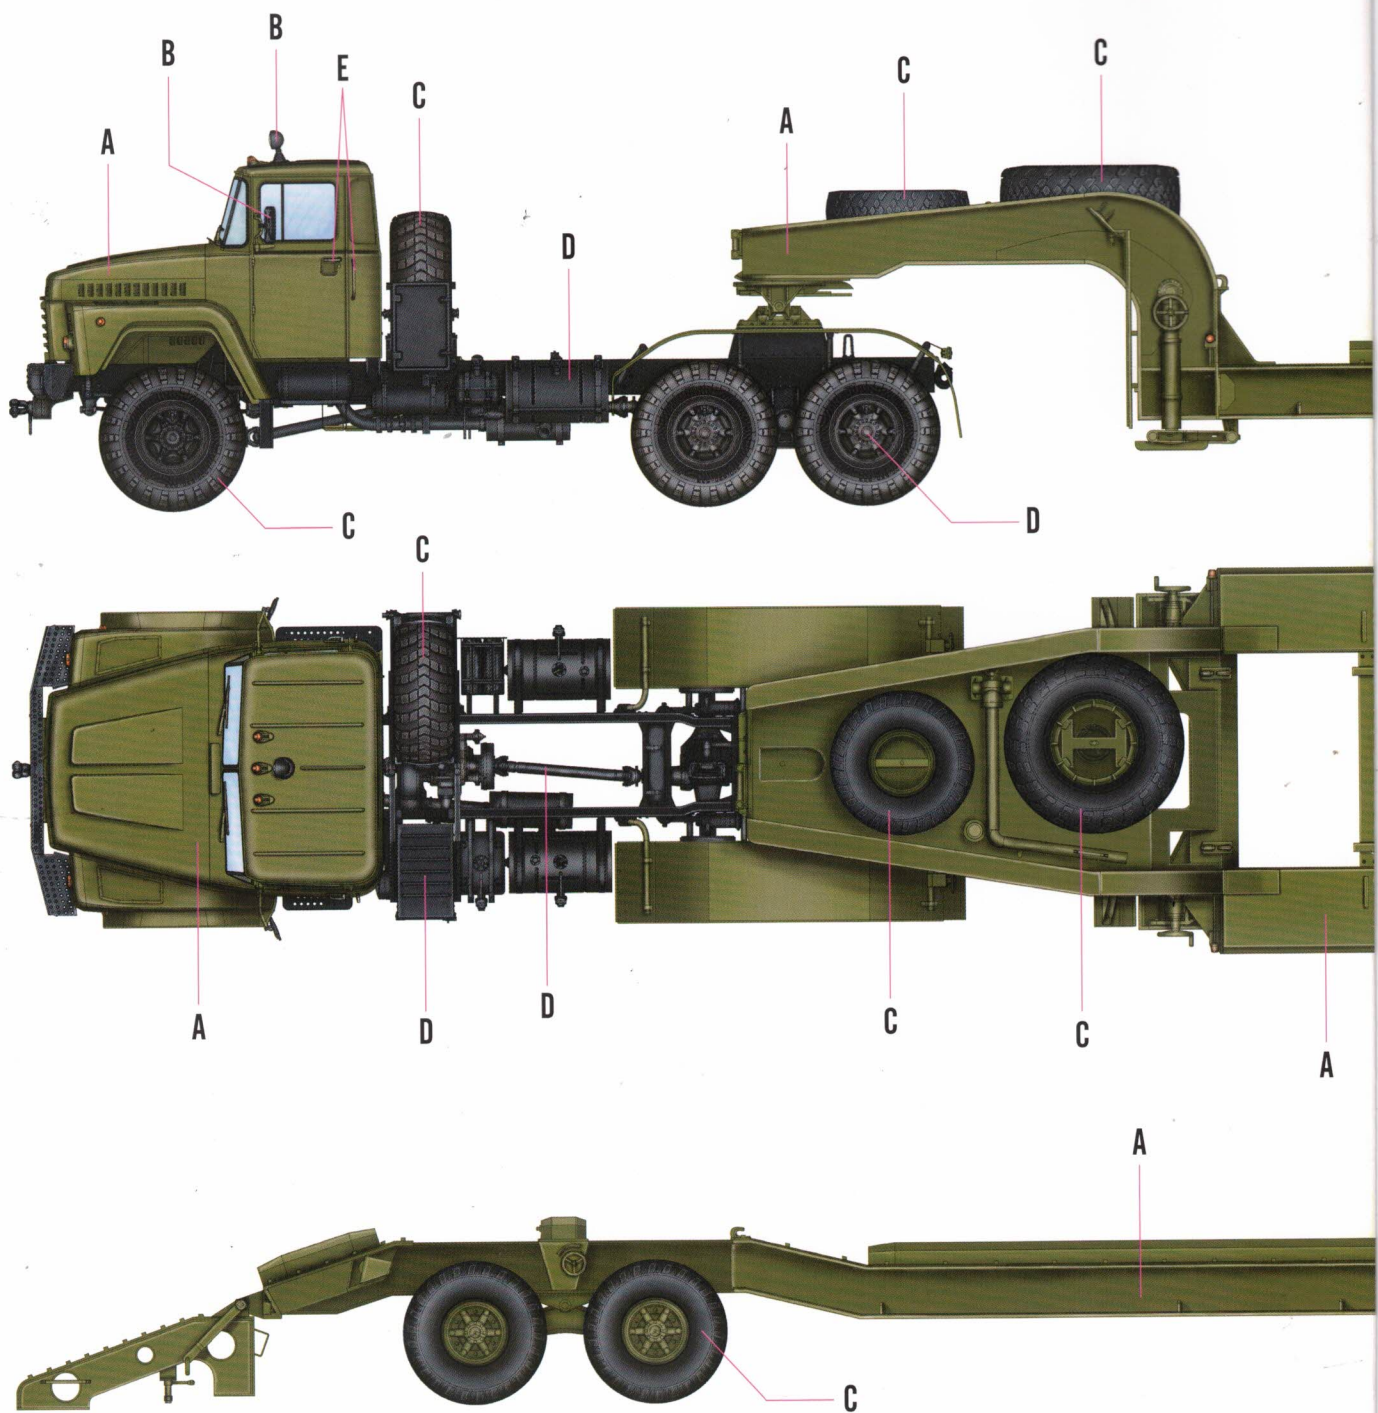



Color	Mr.Hobby	Acrycion	Vallejo	Model Master	Tamiya	Humbrol	Color
A 绿色 Green	H 303 303	N 303	--	1713	XF20	117	C 胎 Tire
B 消光黑 Flat Black	H 12 33	N 12	950	1749	XF1	33	D 黑 St

NO.:85523

TAZ/ChMZAP-5247G semitrailer

/ChMZAP-5247G セミトレーラー

/ChMZAP-5247G 型半挂车)

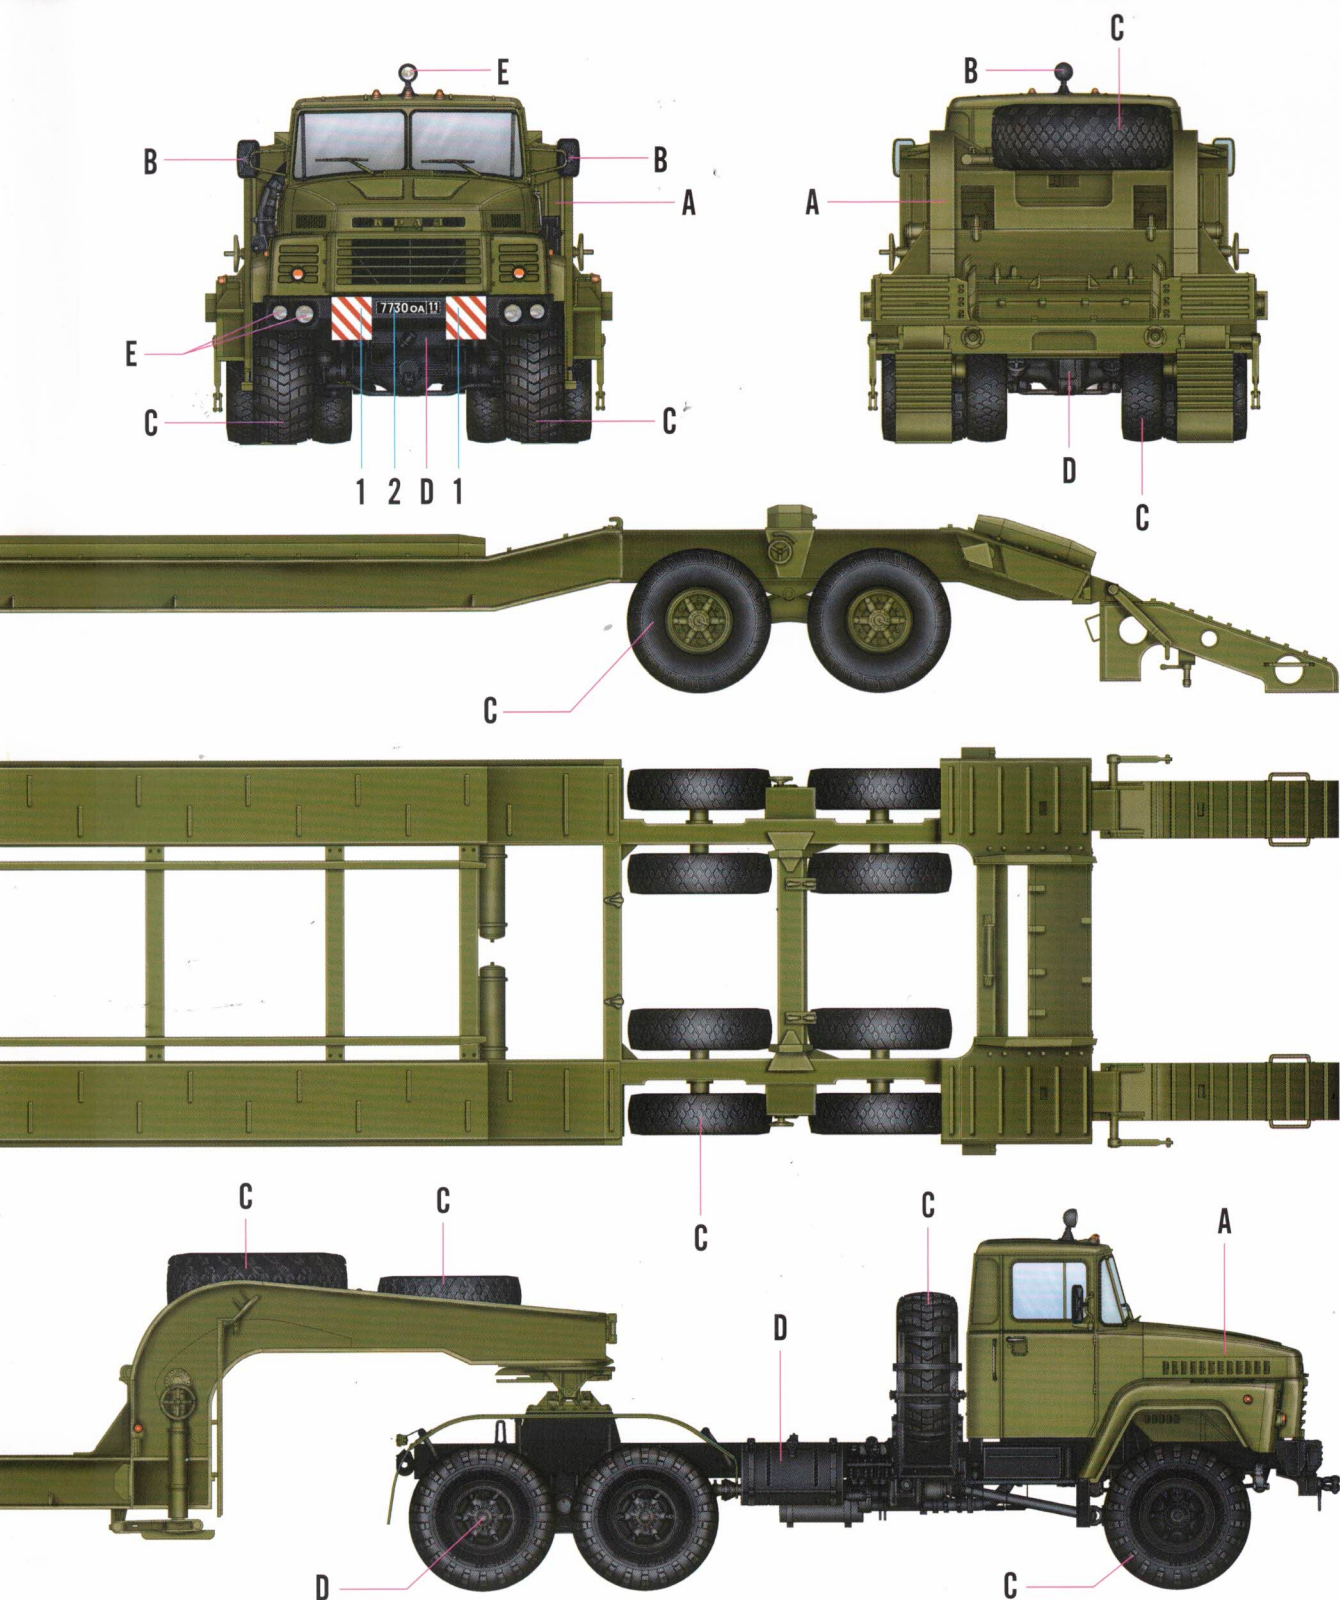

	Mr.Hobby	Acrycion	Vallejo	Model Master	Tamiya	Humbrol	Color	Mr.Hobby	Acrycion	Vallejo	Model Master	Tamiya	Humbrol
色	H 77 137	N 77	--	--	--	--	E 银色 Silver	H 8 8	N 8	997	1546	X11	11
色	H 18 28	N 18	864	1402	--	--	H☐ AQUEOUS HOBBY COLOR ☐ Mr. COLOR N☐ ACRYSION COLOR						

※ Some paints may not be available in your country. Please check your local hobby shop for substitute