


1/35 SCALE

ITEM NO.:01078

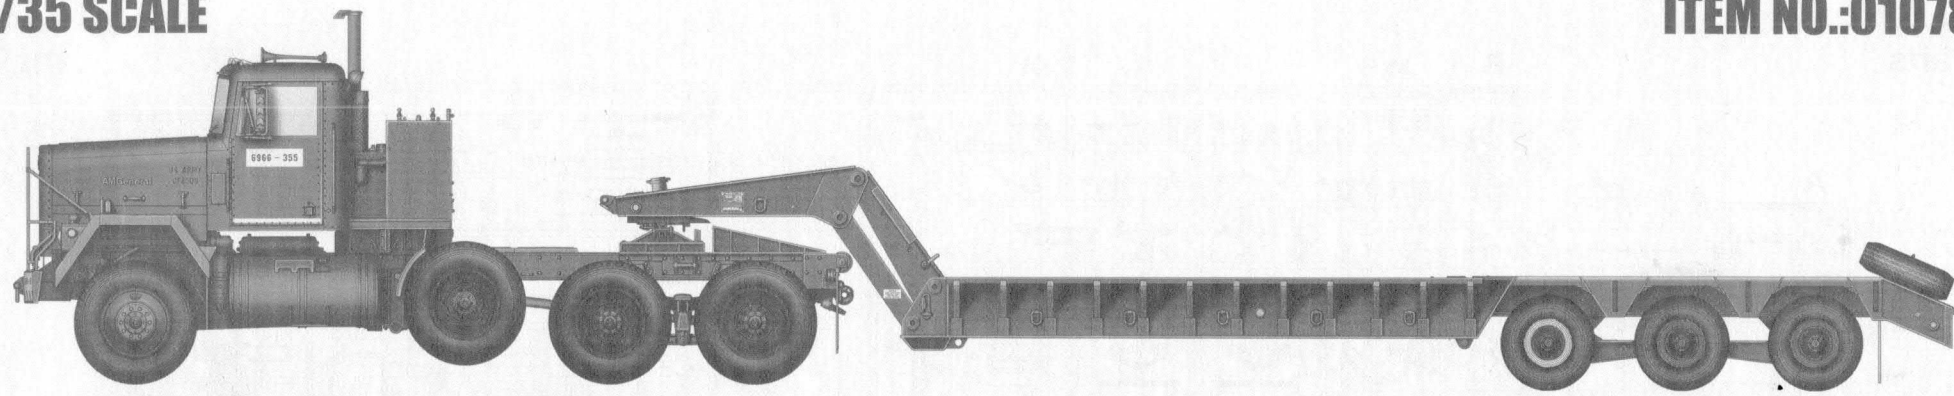

M920 Tractor tow M870A1 Semi Trailer

M920拖车牵引M870A1半挂车

READ BEFORE ASSEMBLY:

- This kit is not recommended for inexperienced modelers or for children under 14 years of age
- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed

- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.
- Keep out of reach of children. They must not be allowed to ingest small parts or handle plastic bags in any way.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也是所需工具。
- 请使用塑料胶水和油漆，模型内不含。
- 谨防小孩吸吮塑料零件，或者将塑料袋套在头上，制作时应将套材远离小孩接触。
- 本产品不适合14岁以下没有经验的模型爱好者。

*说明书中含有重要信息，应保留。 Please Keep instruction since it contains important information.

水贴纸的使用:

1. 从水贴上剪下印花;
2. 将印花放入温水中浸10秒, 然后放在干净布上.
3. 拿着印花纸板将印花移到模型上;
4. 手指蘸水将印花移到适当的位置;
5. 用软布轻压印花直至水干, 汽泡消失.










DECAL APPLICATION:

- 1.Cut decals from sheet as needed
2. Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
3. Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.

4. While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
5. When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
6. Allow decal to dry completely before handling model

 使用强力胶 Cyanoacrylate glue	 配重 Weight	 钻孔 Make hole	 切除 Cut / Remove	 先装 Install it first
 贴纸 Decal	 锉平 File / Sand	 选择 Option	 不涂胶水 No cement	 弯曲 Bend
				 填补 Repair


部品图
Parts

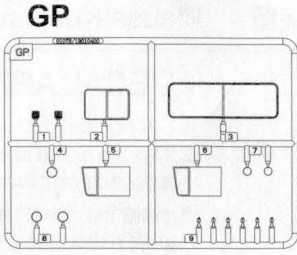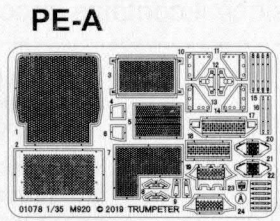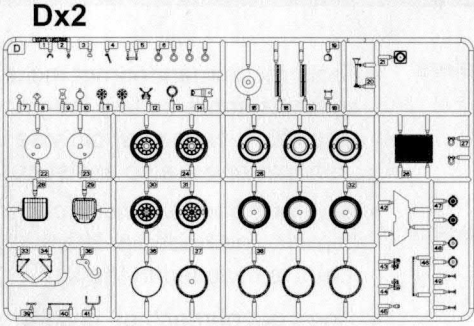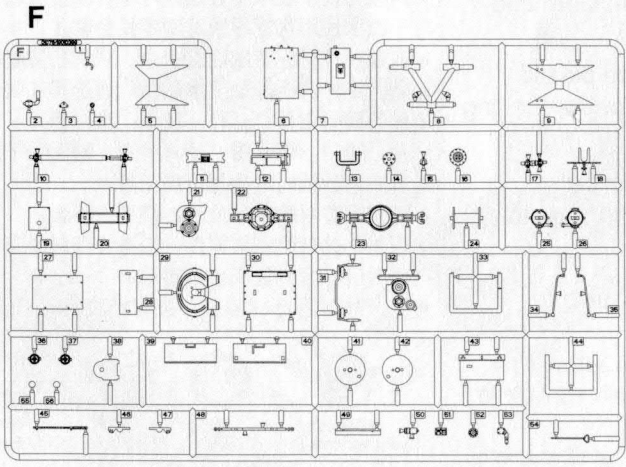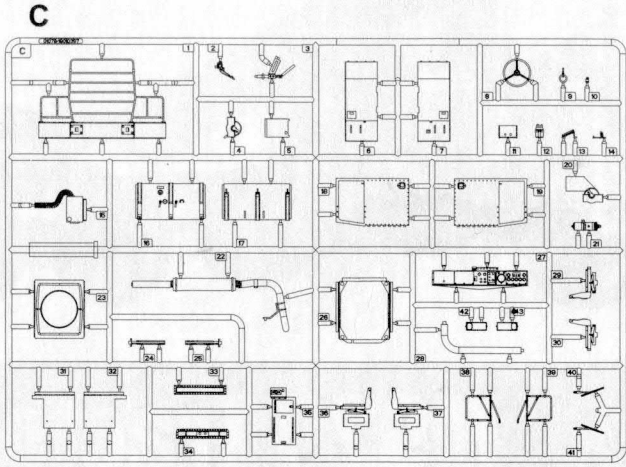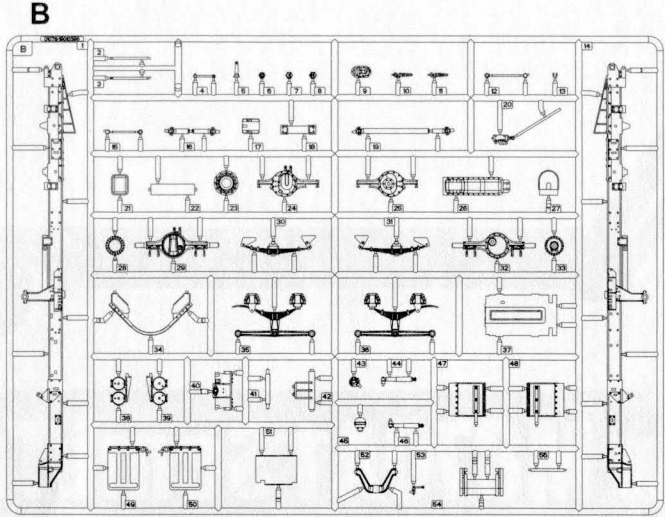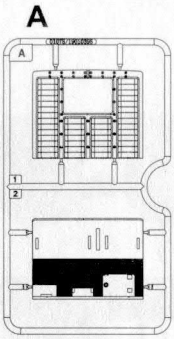

《轮胎》(大)
Tyre (big) x14




部品图
Parts

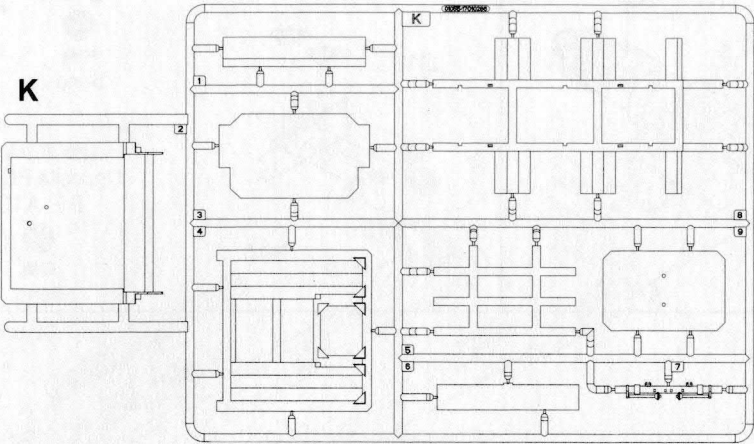


Nx2


Px4

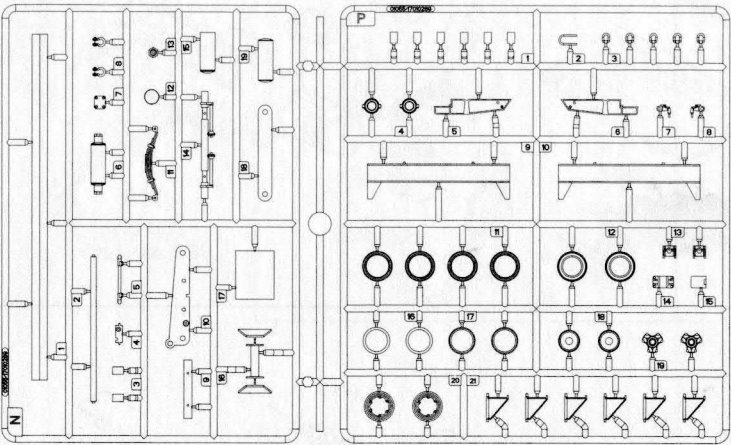


Q

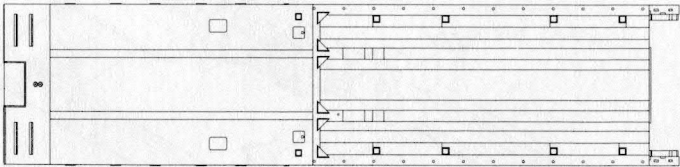


L

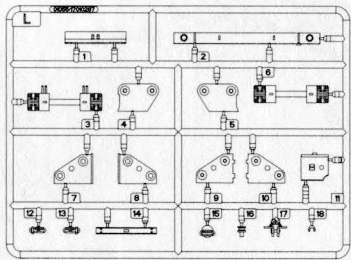


《聚乙烯套》
Poly cap



《棉绳》
Cotton Ø1.0X1500mm




E

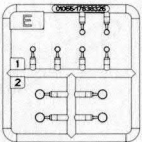


轮胎(小)
Tyre(small) x13




《水贴》
Decal

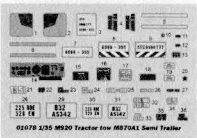


《遮盖纸》
Die-Cut Mask

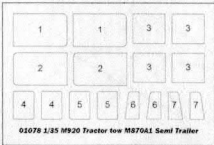


1

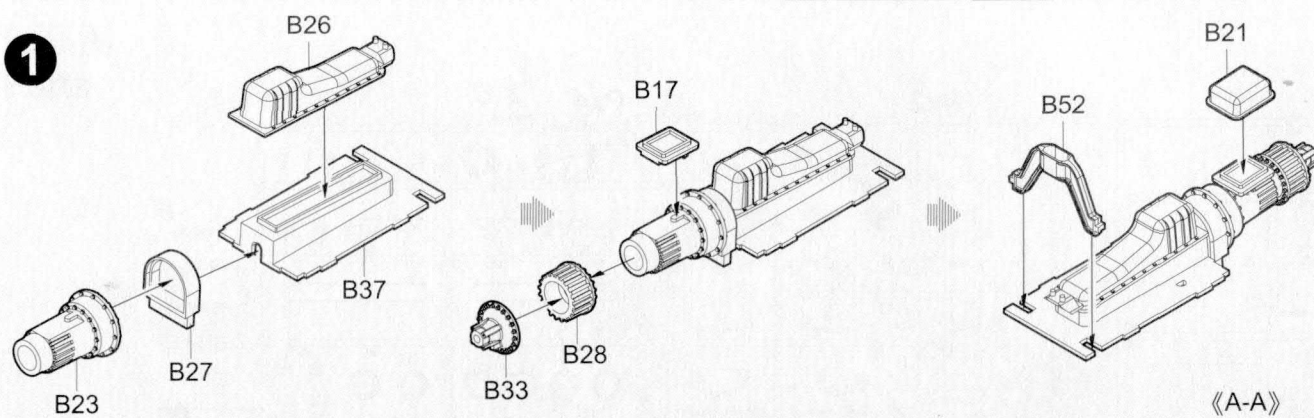


2

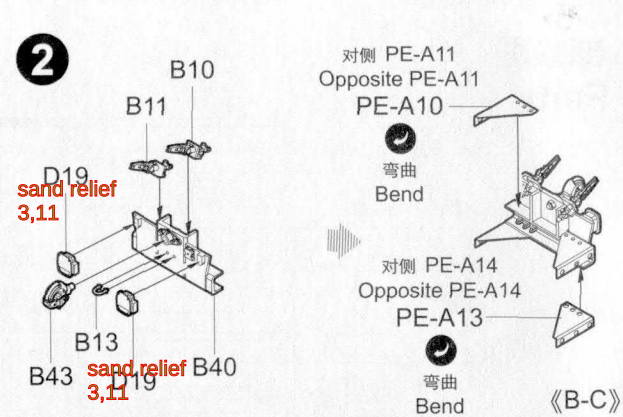


3

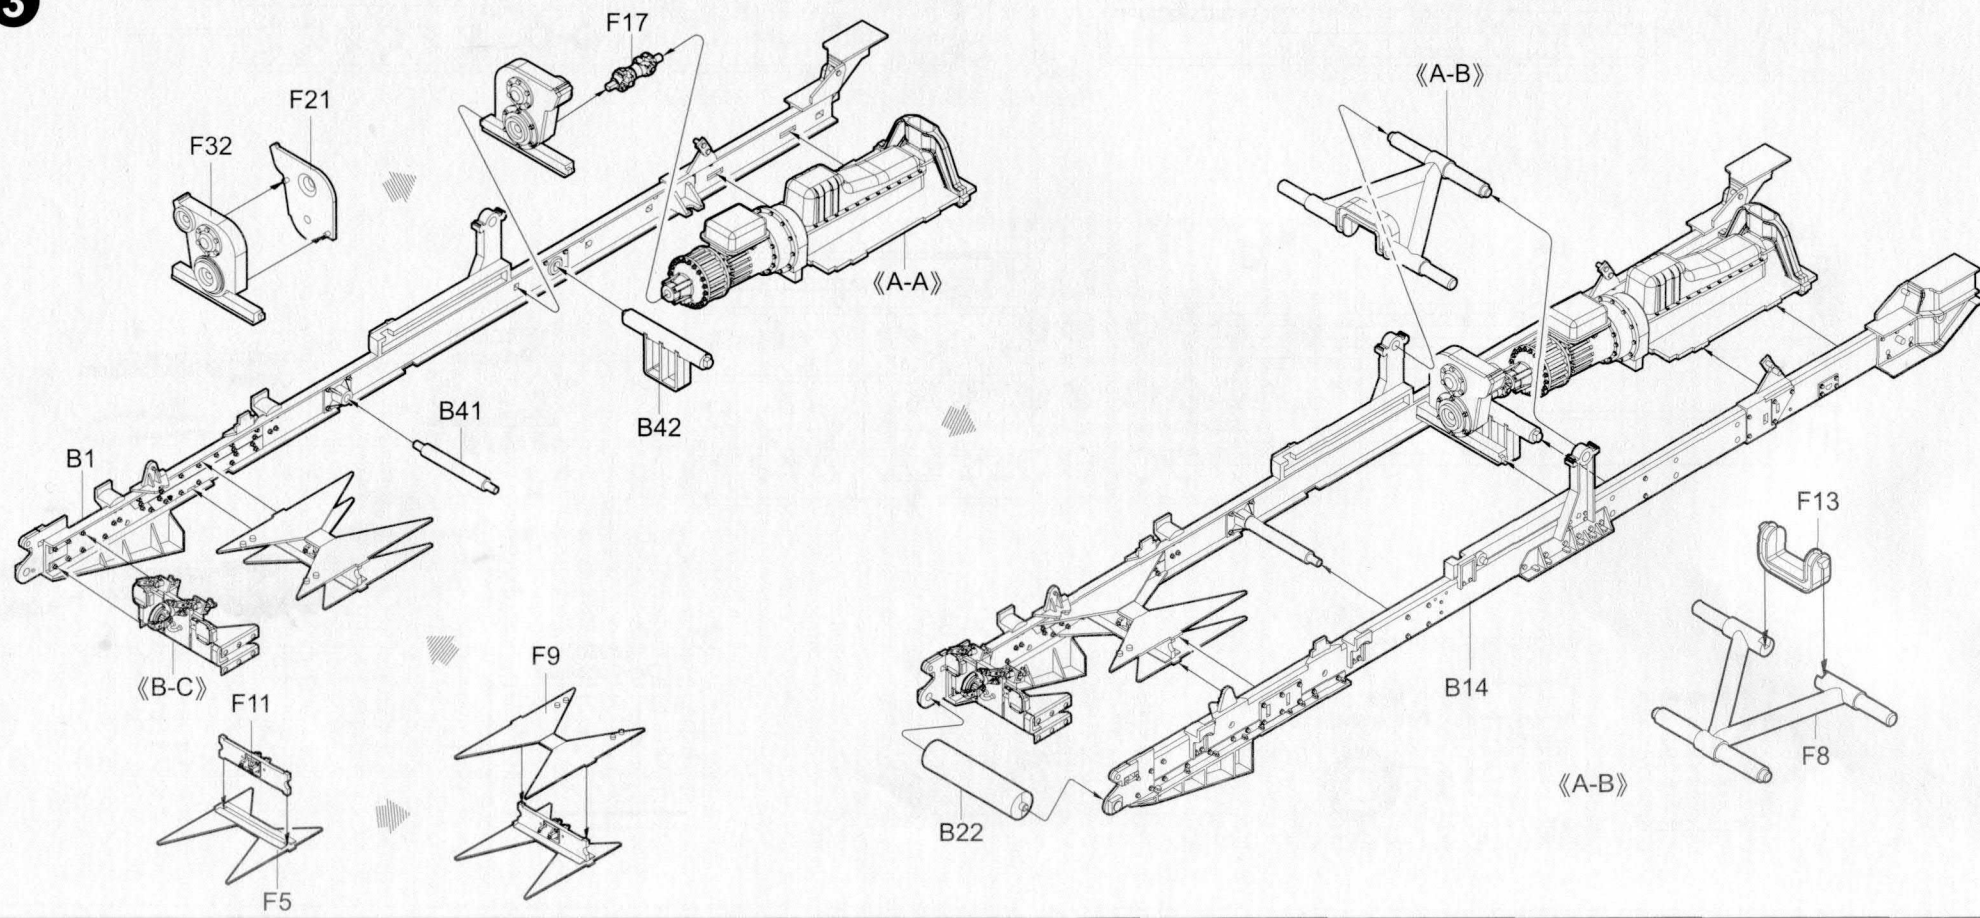







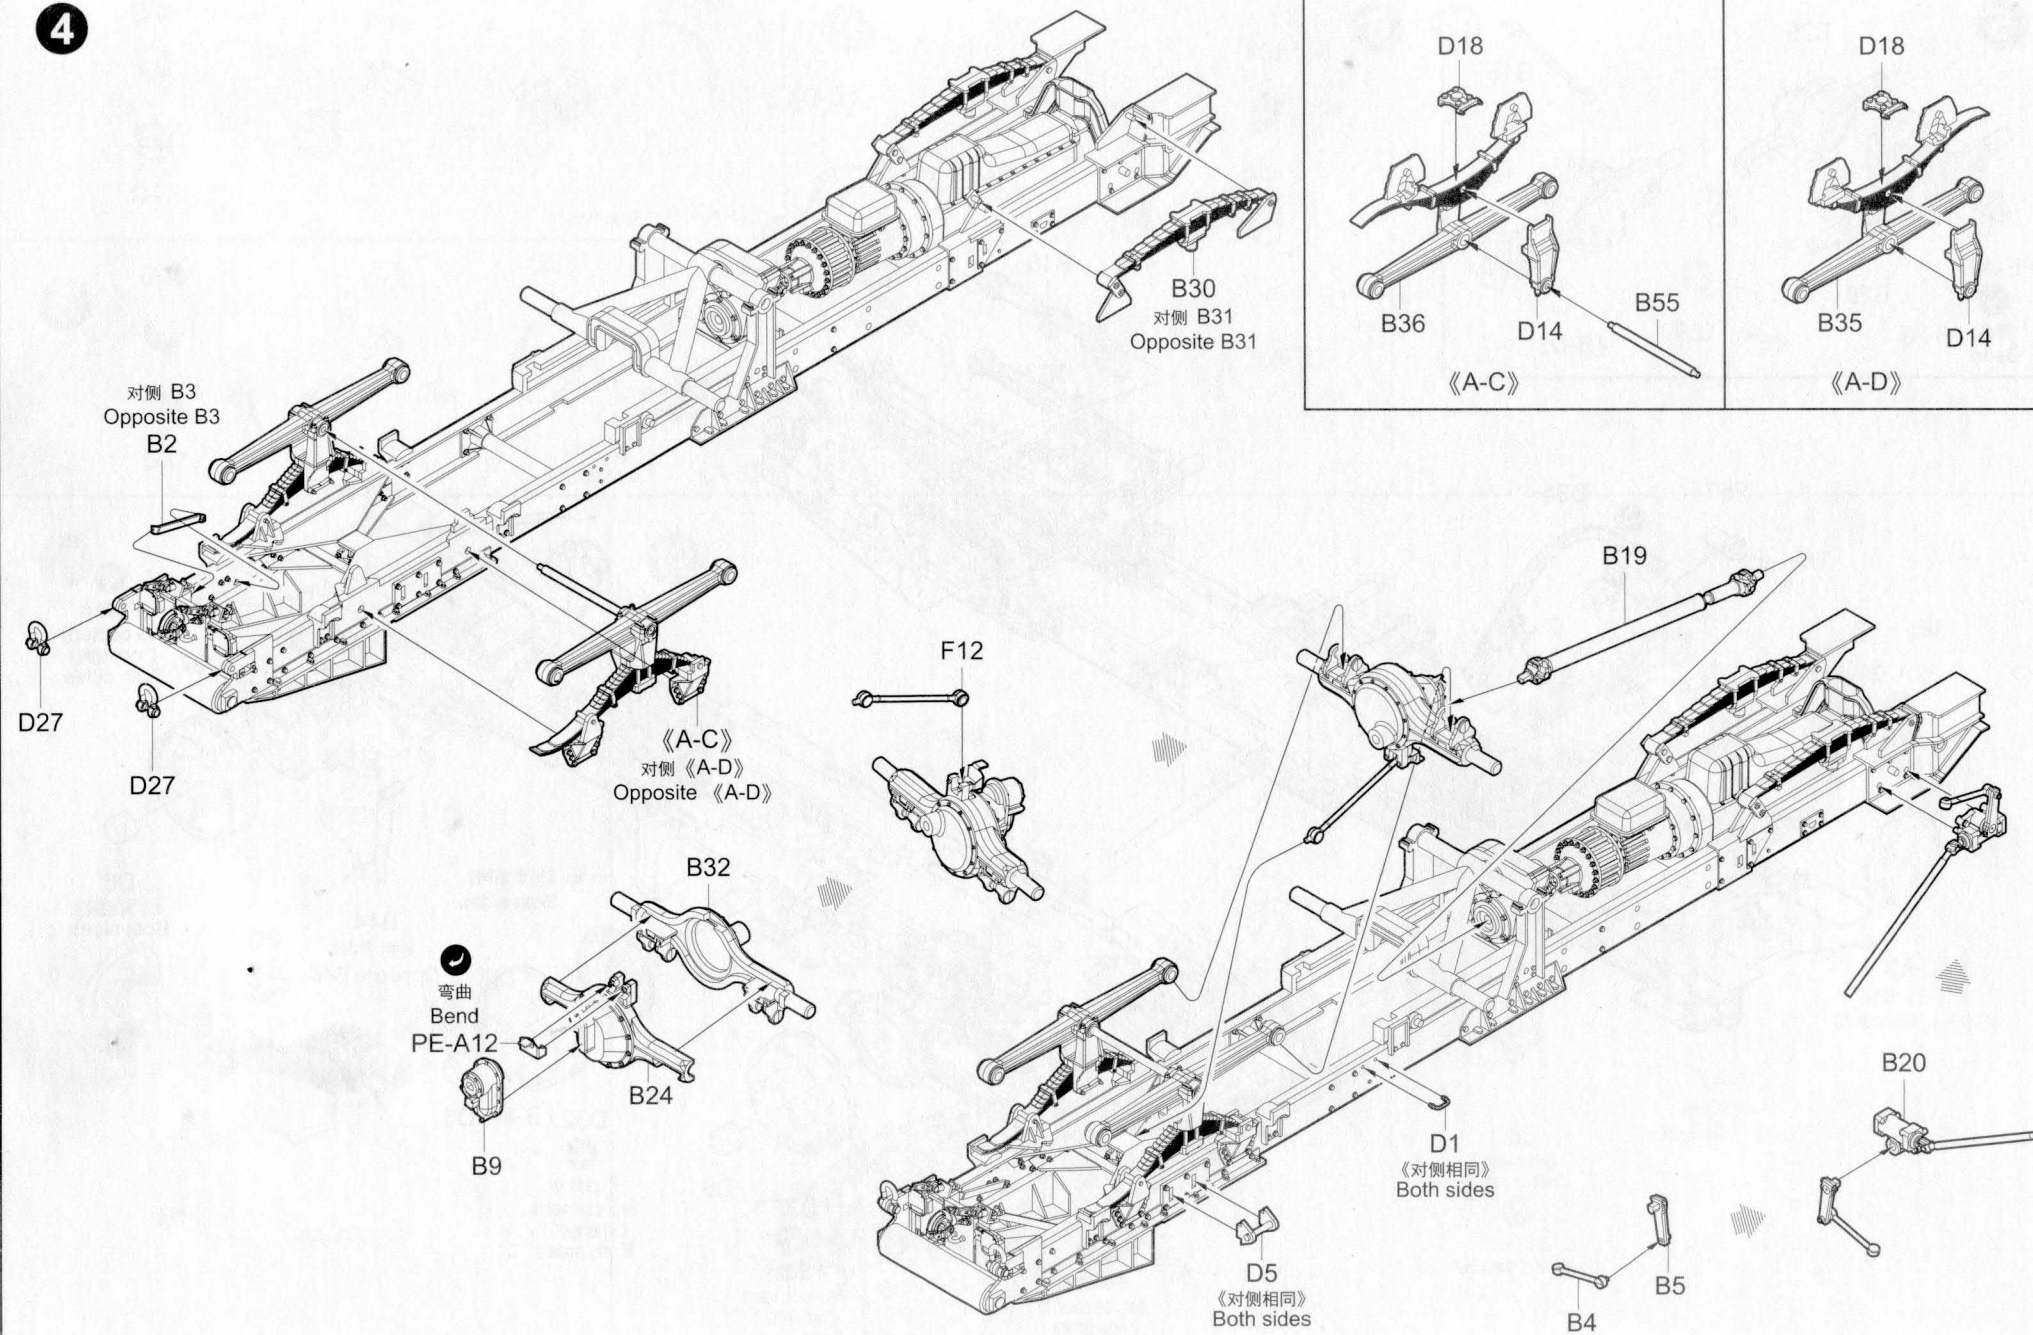



5

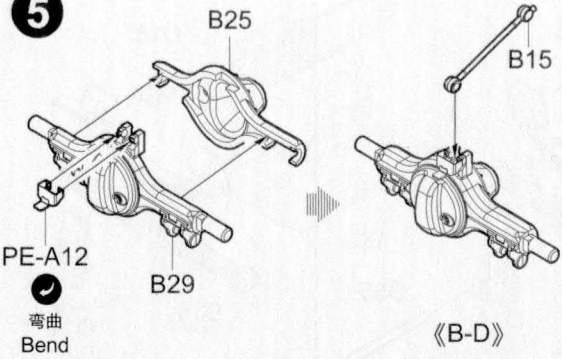


6

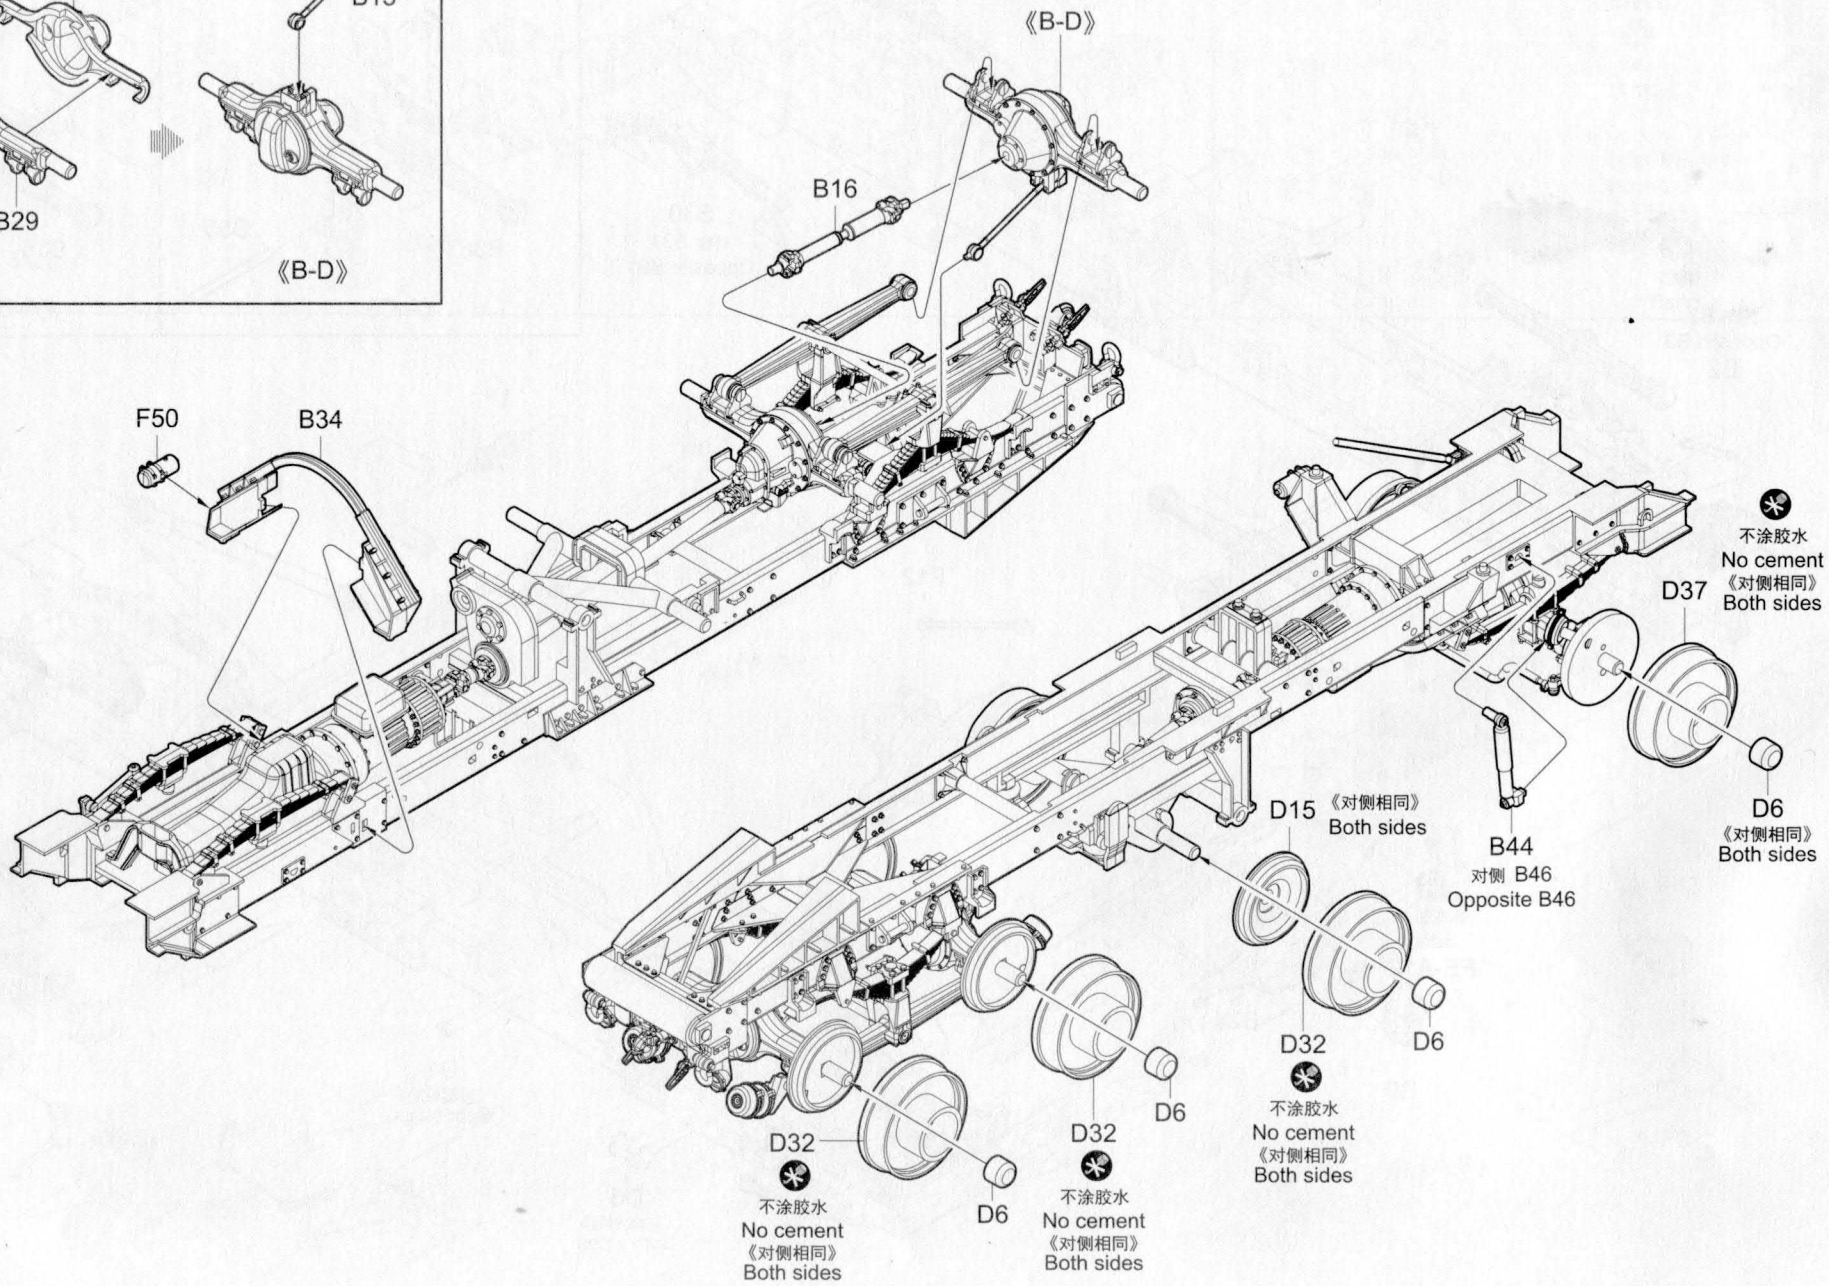

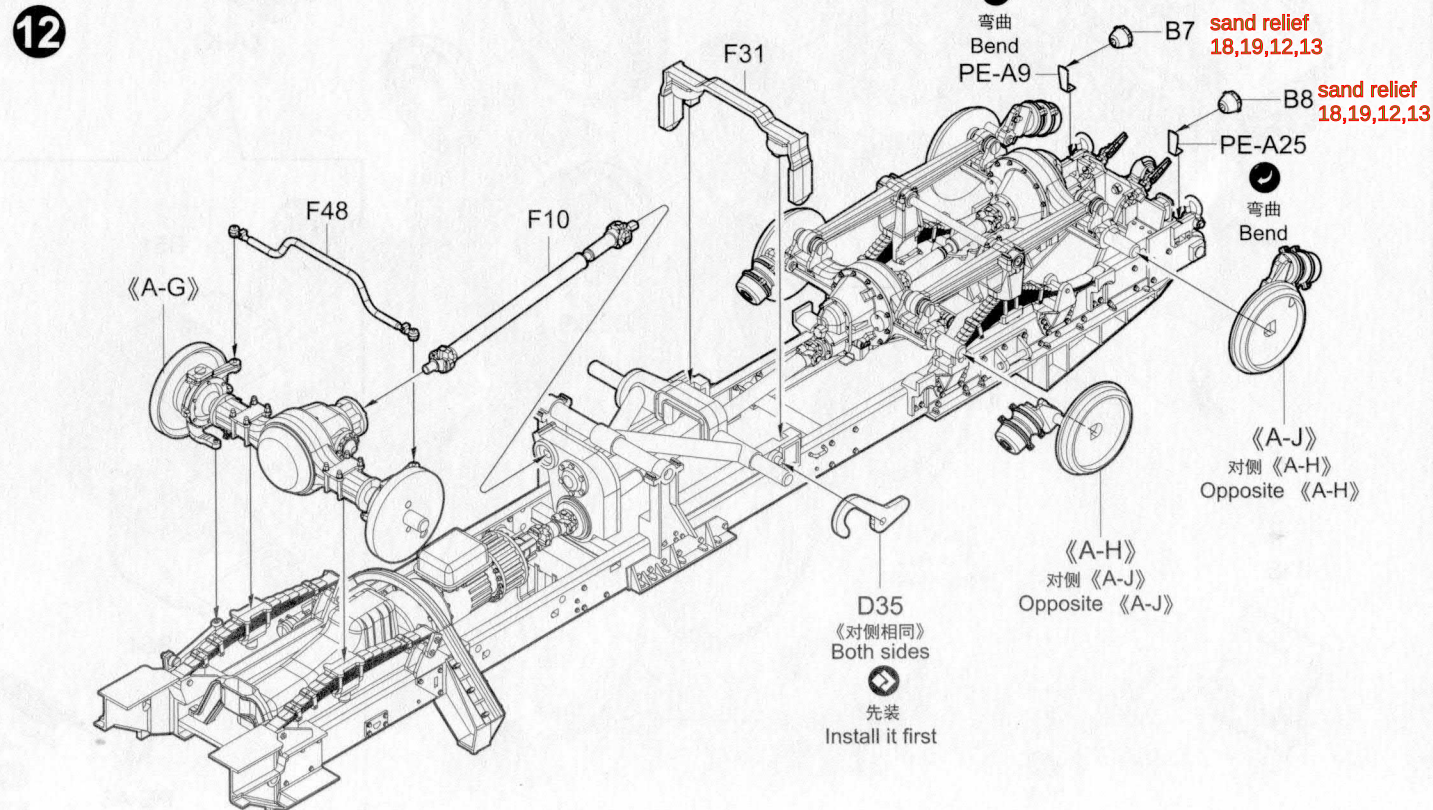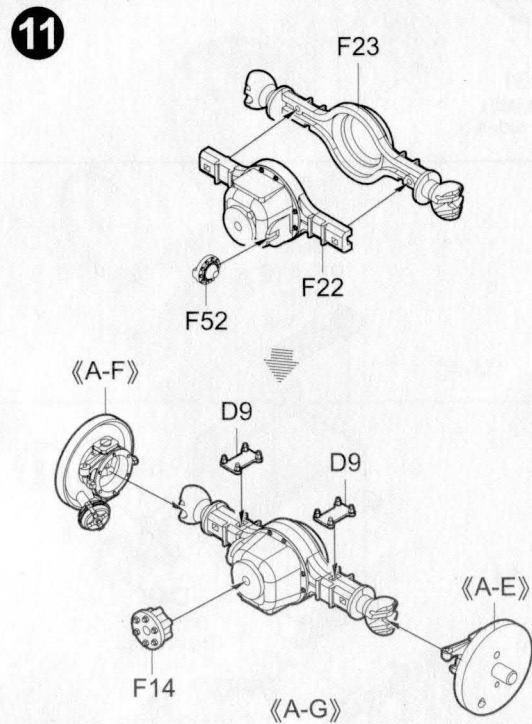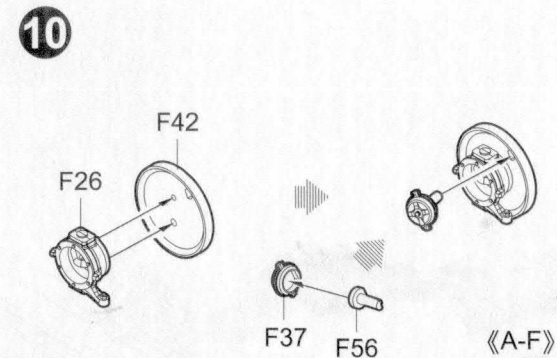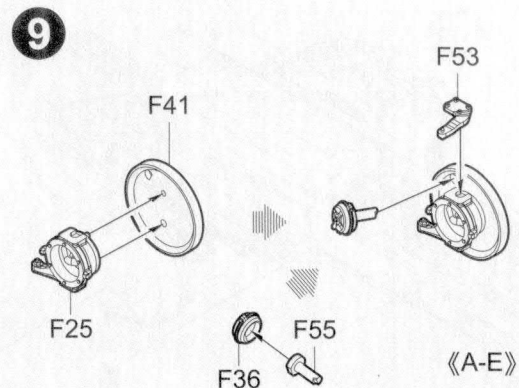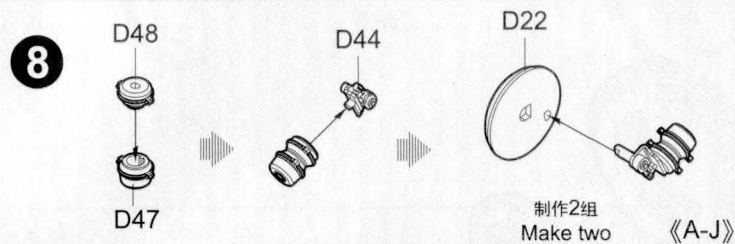
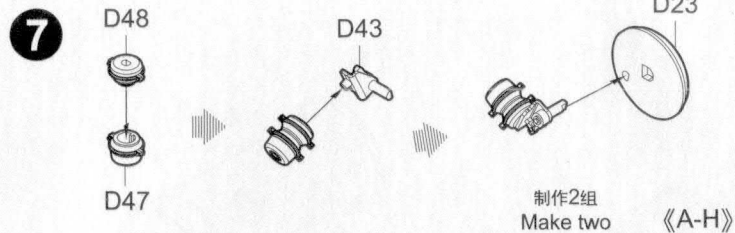


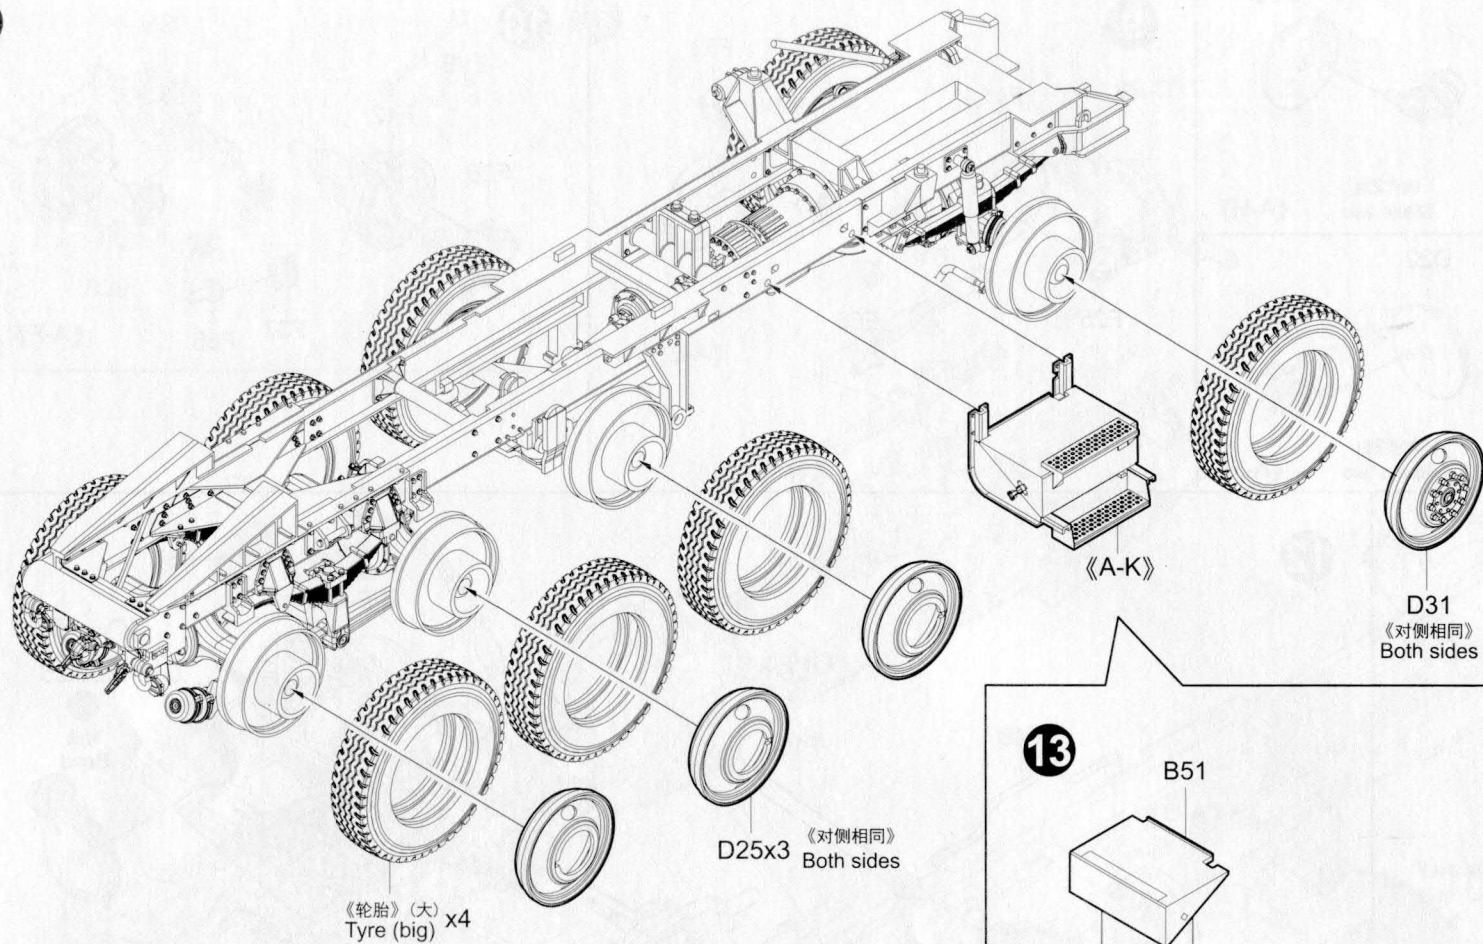

13

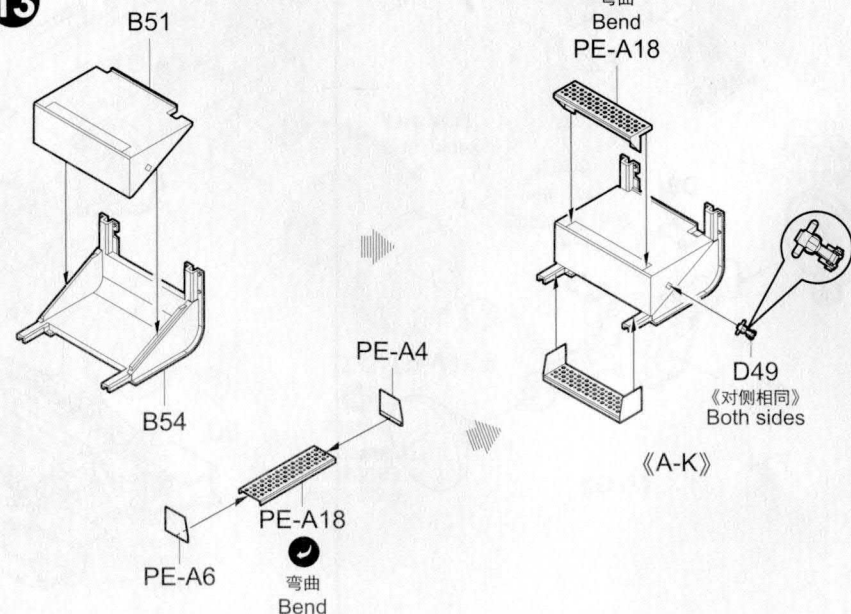


15

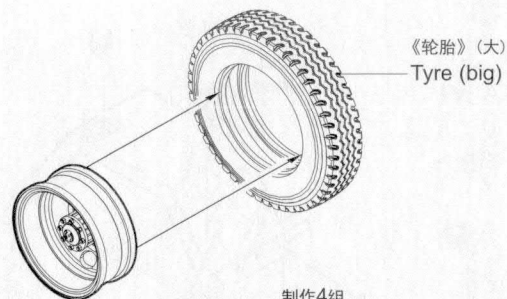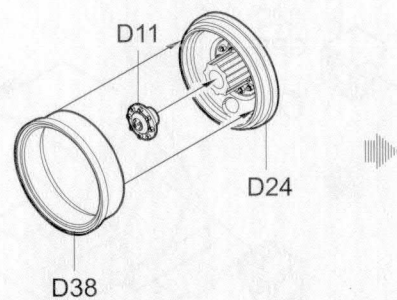


制作4组
Make four

《A-L》

18

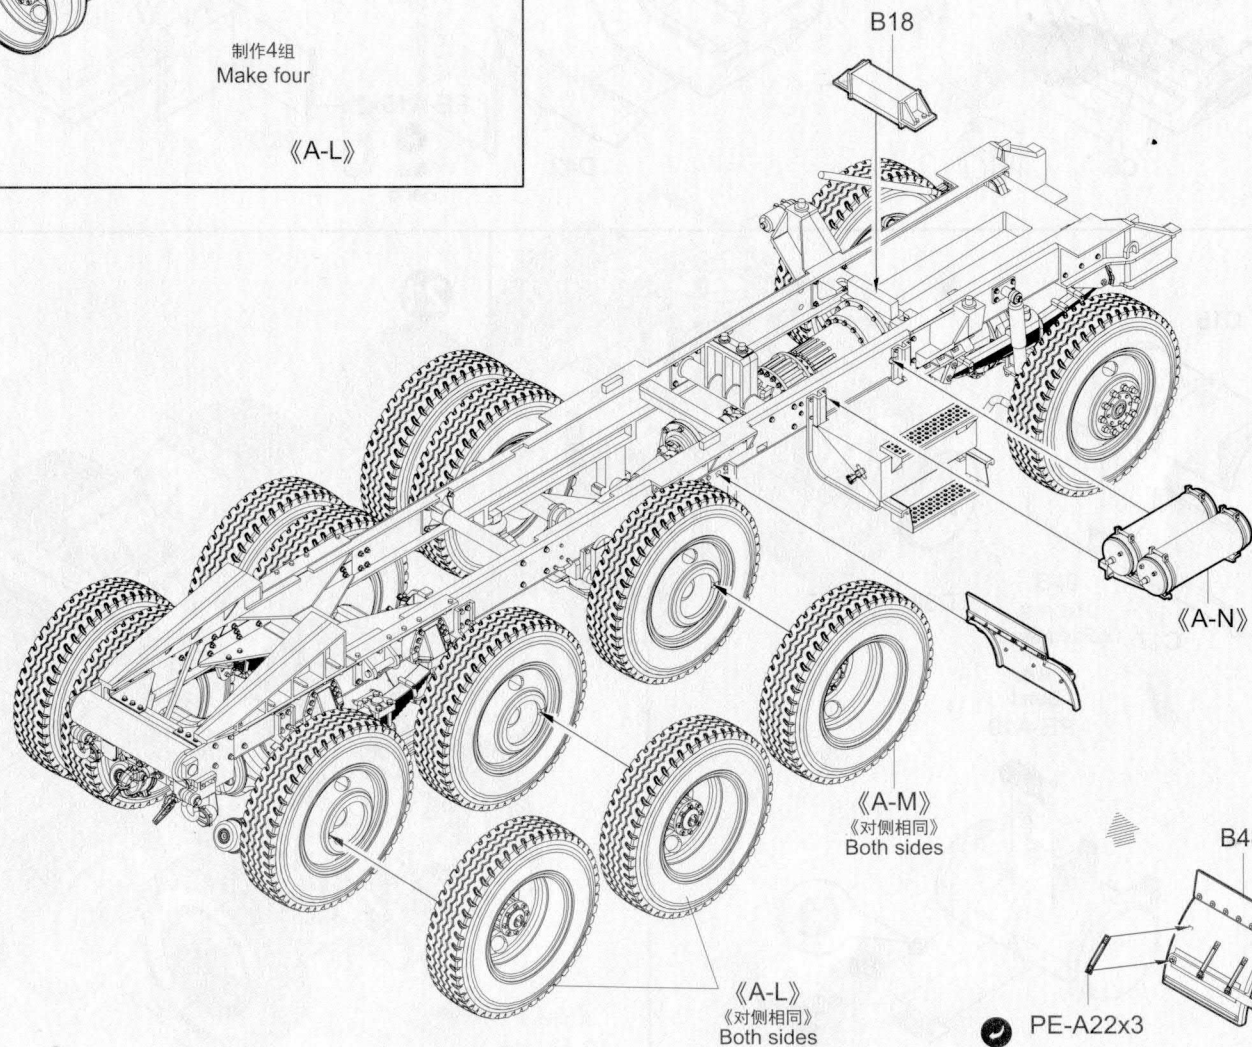


16

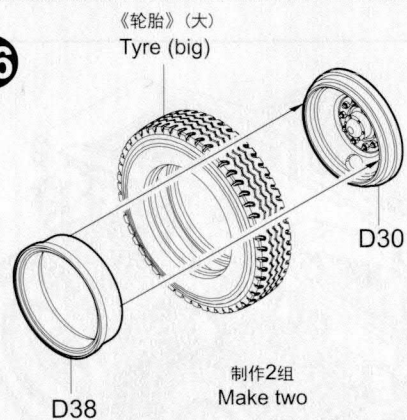

制作2组
Make two

《A-M》

17

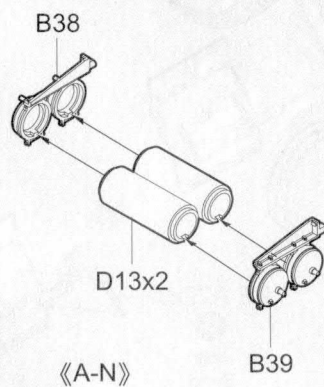

The diagram illustrates the assembly of the rear panel. On the left, the rear panel (C31) is shown being attached to the main unit (C6). On the right, the rear panel (C25) is shown being installed into the main unit (C6), and the rear panel (D42) is shown being attached to the main unit (C6).

Diagram illustrating the assembly components and their quantities for the A-P assembly:

- PE-A20 (Bend)
- GP1 (sand relief front 10, rear 4, side 15)
- D2 (sand relief 14)
- D21
- D7 (replace 17,8)
- GP8 (replace 1)
- PE-A16 (Bend)

《A-P》

Diagram illustrating the connection of the B6 connector to the PE-A24 cable. The diagram shows the cable jacket being inserted into the B6 connector. A callout shows the B6 connector detail. The label PE-A24 points to the cable jacket. A note at the bottom indicates a bend in the cable.


《A-Q》

弯曲
Bend


21

Diagram 21 illustrates the assembly of the rear axle and suspension system. The main view shows the rear axle assembly, including the axle housing, suspension components, and wheels. A callout shows a component labeled 'B47' being bent into a specific shape, labeled 'PE-A22x3' and '弯曲 Bend'.


19

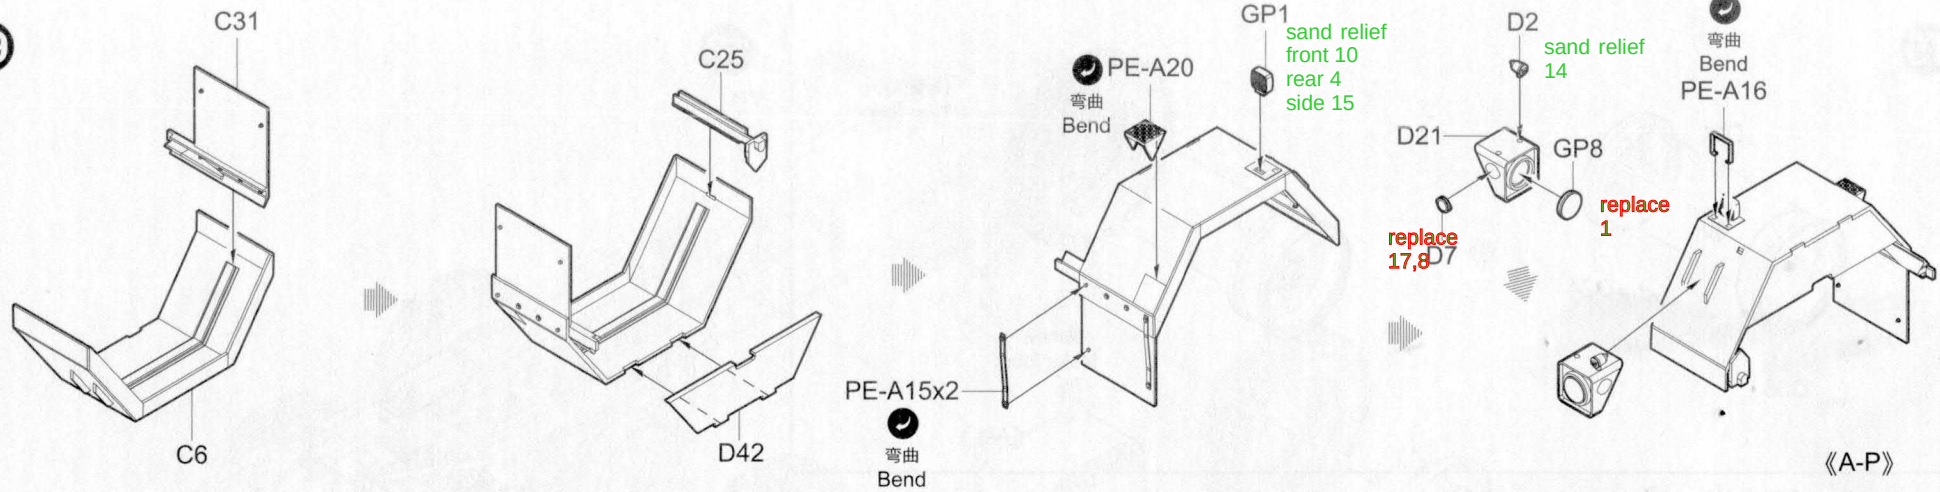



20





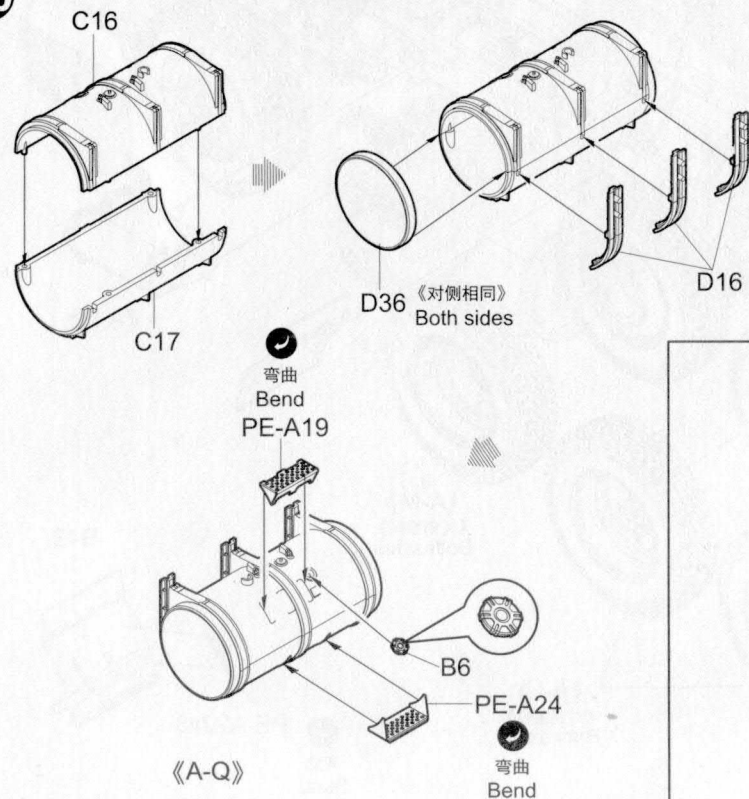


21

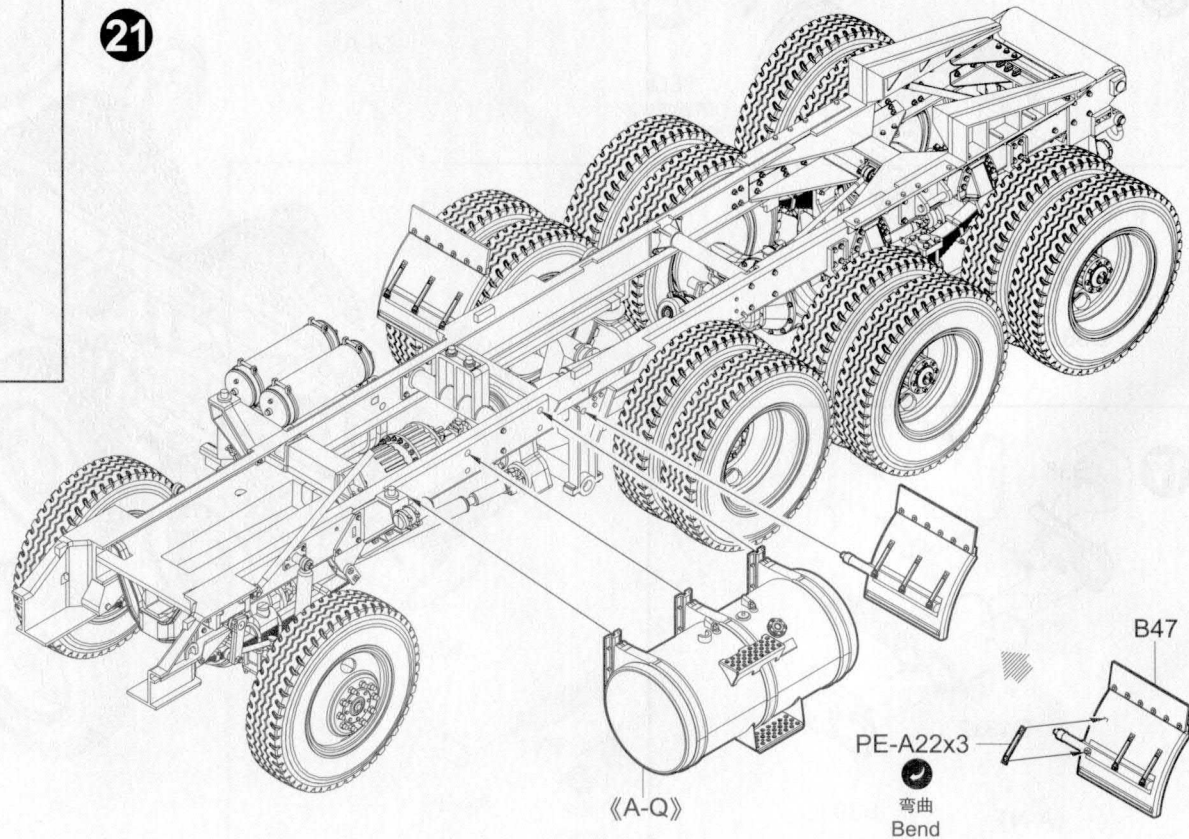


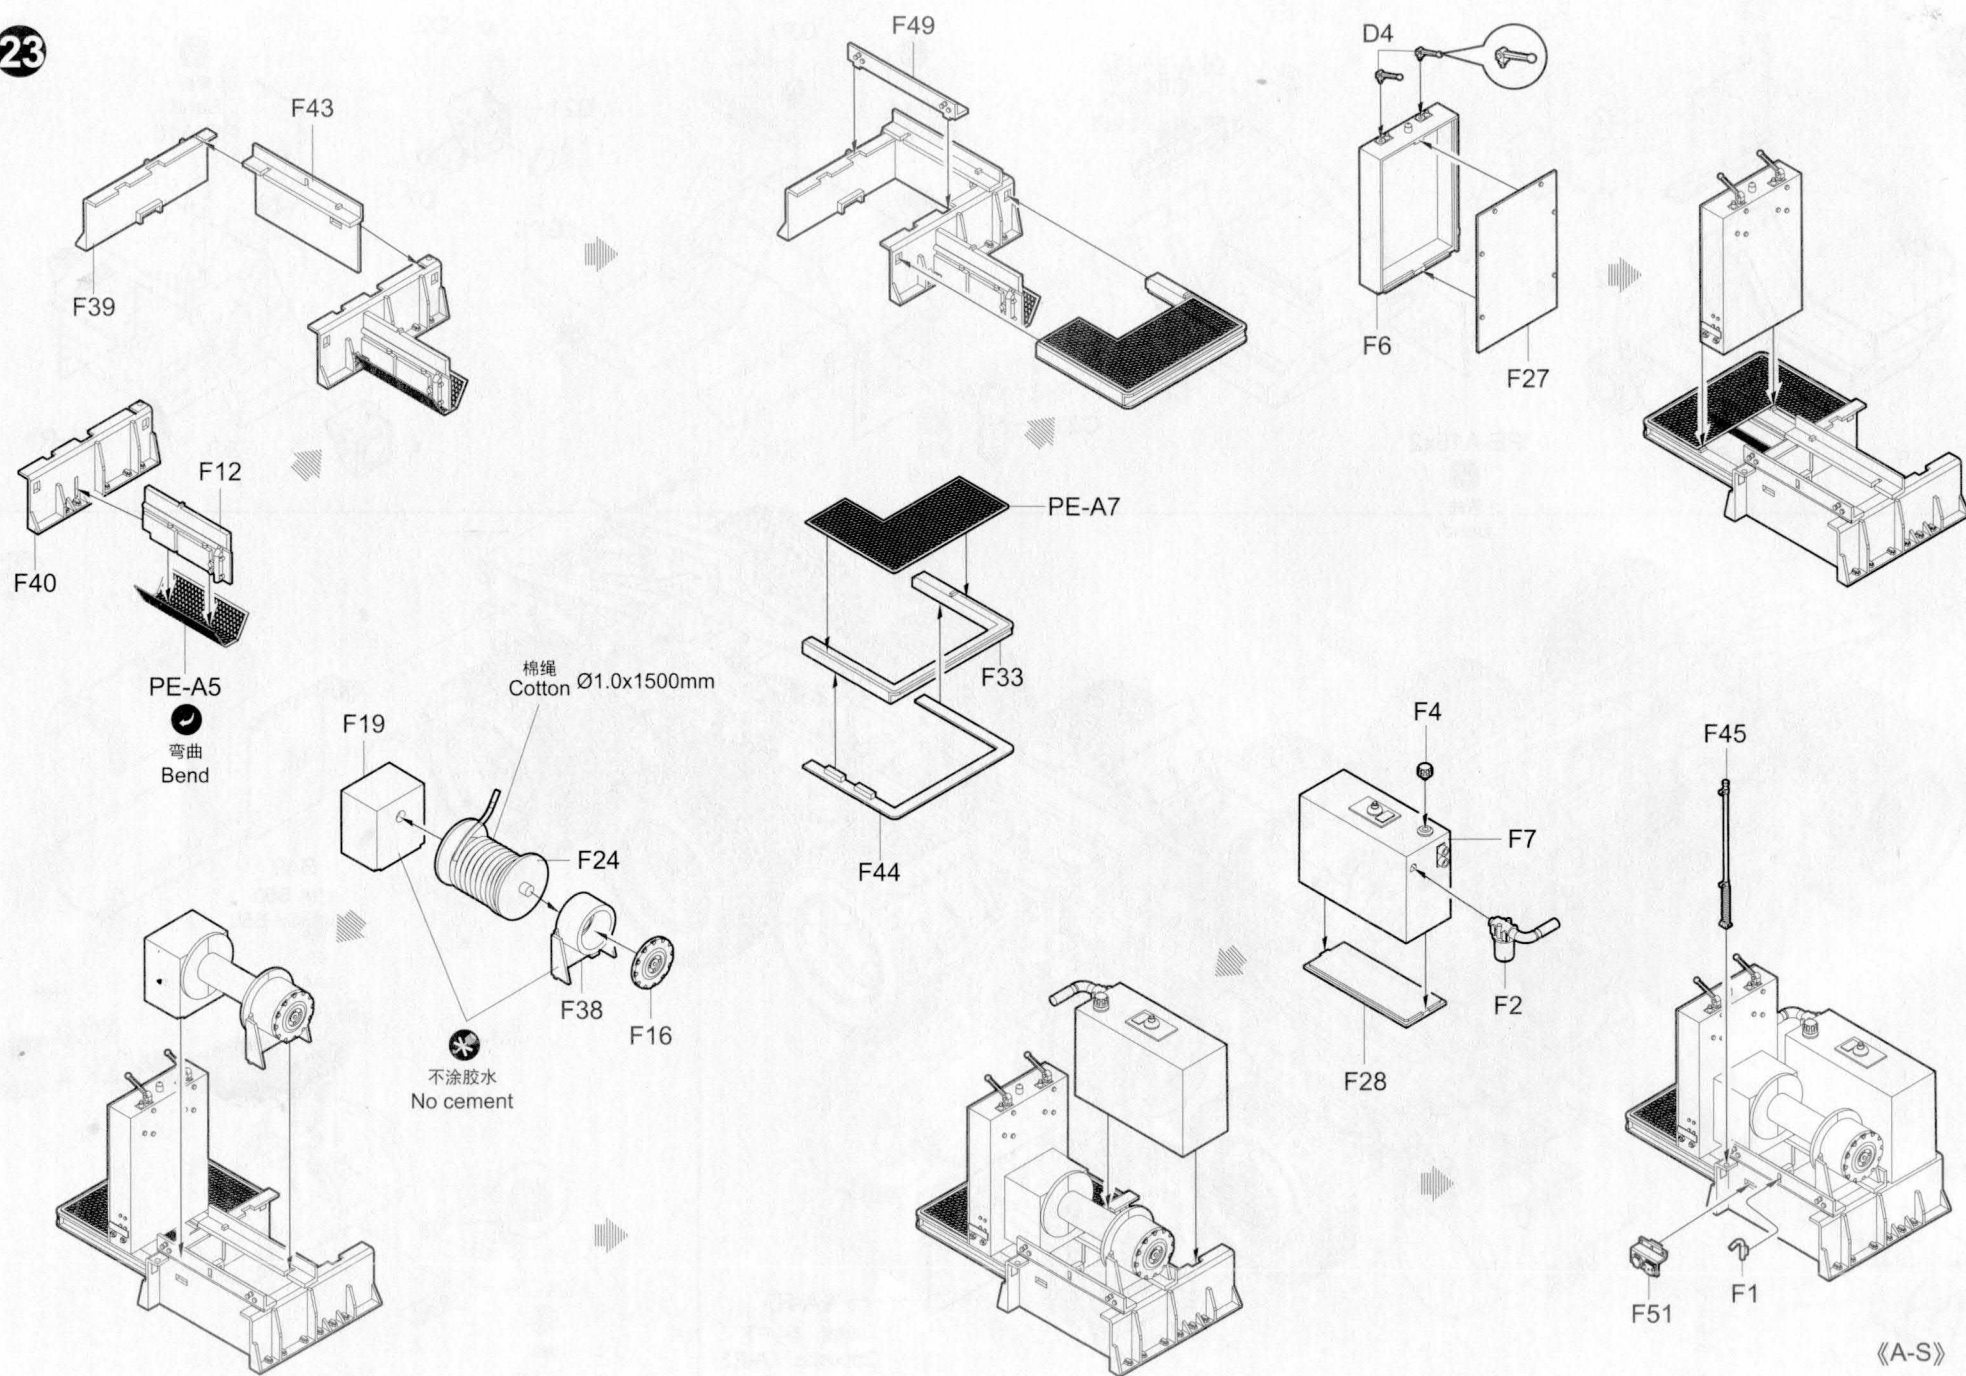

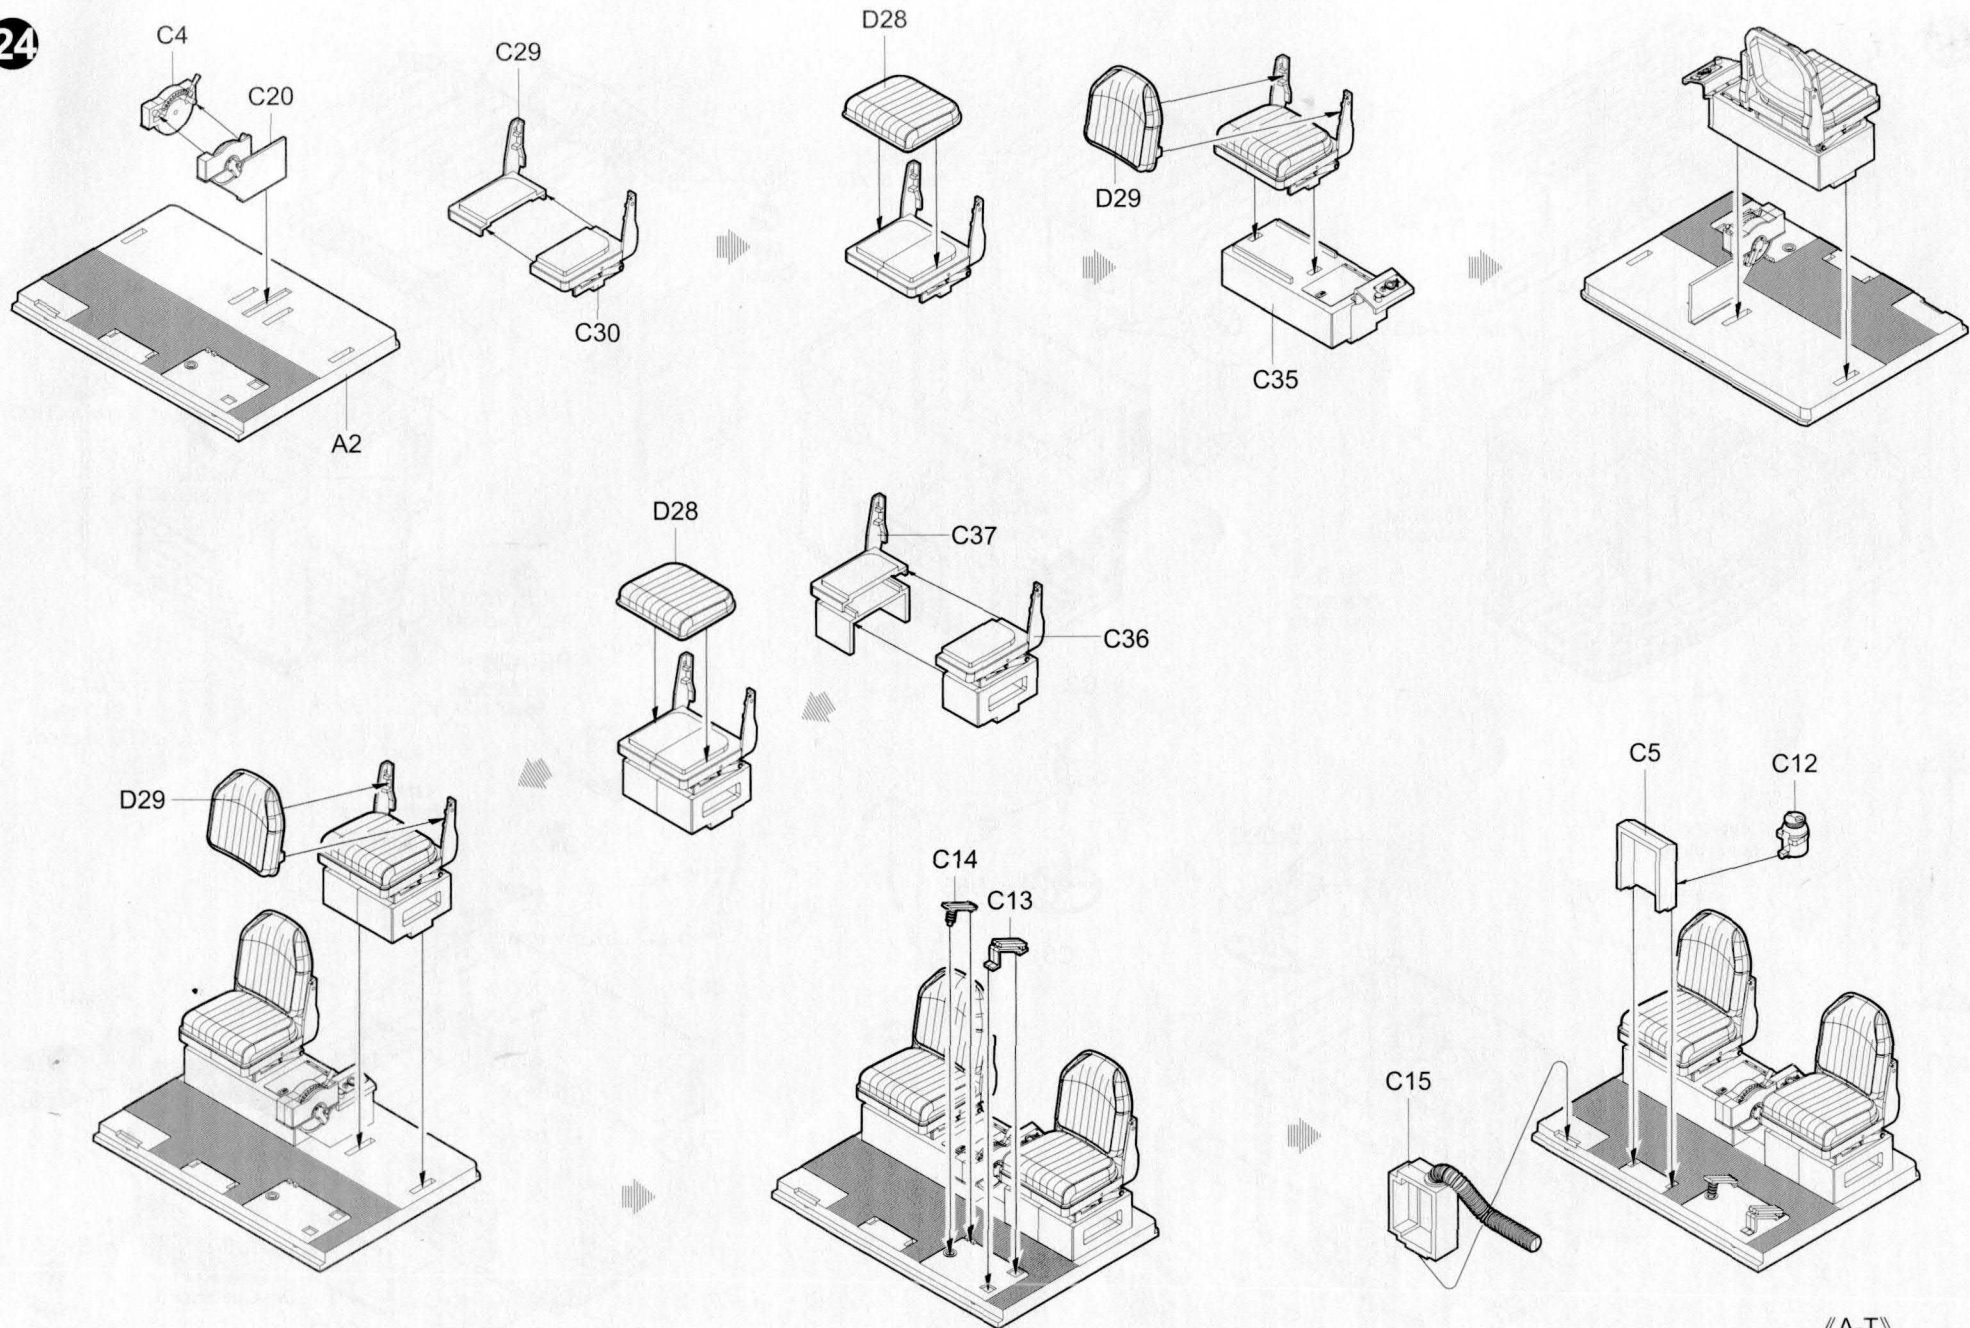





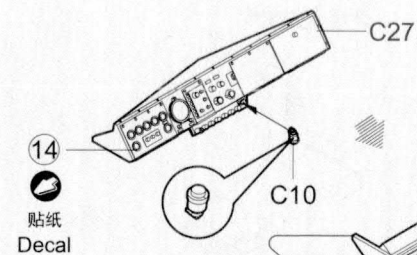
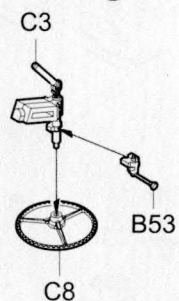
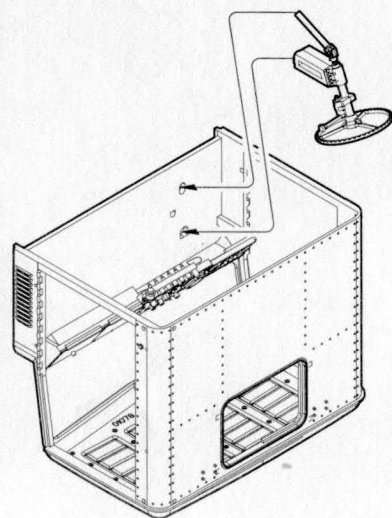
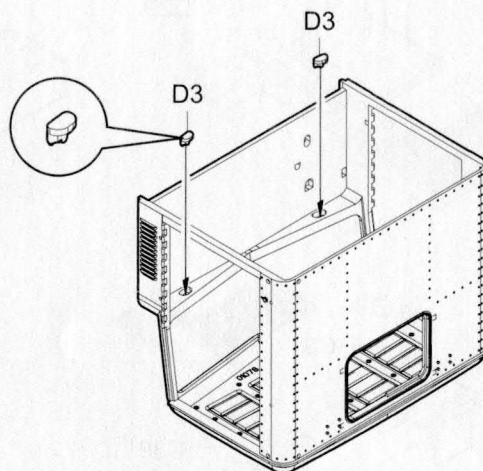
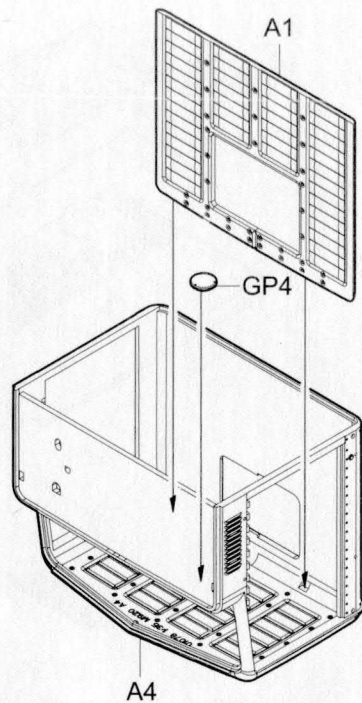


弯曲
Bend
PE-A23




《对侧相同》
Both sides
D41

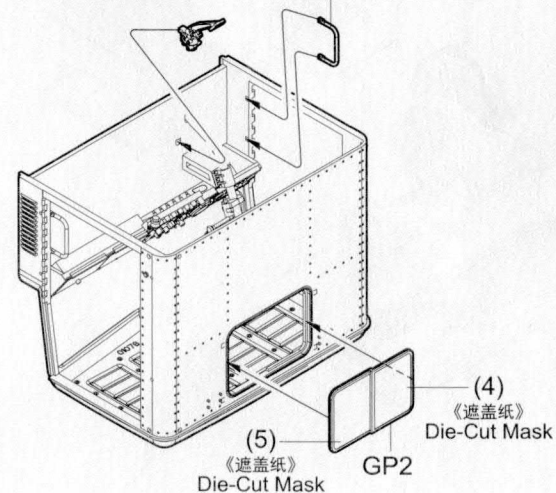


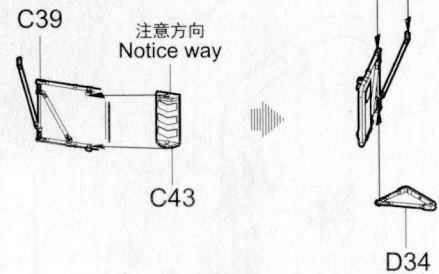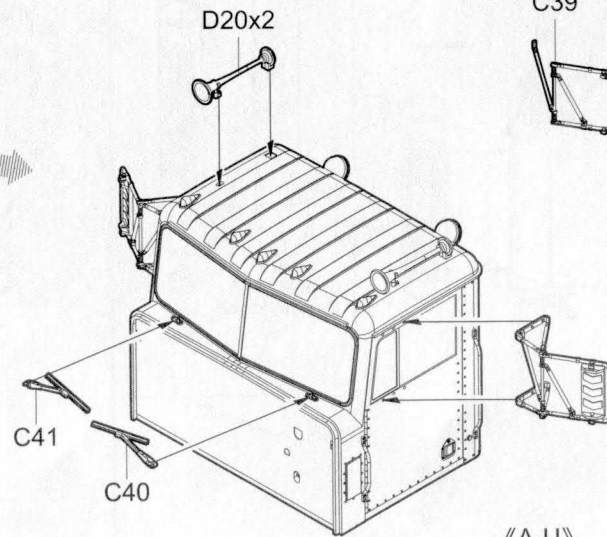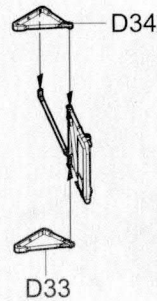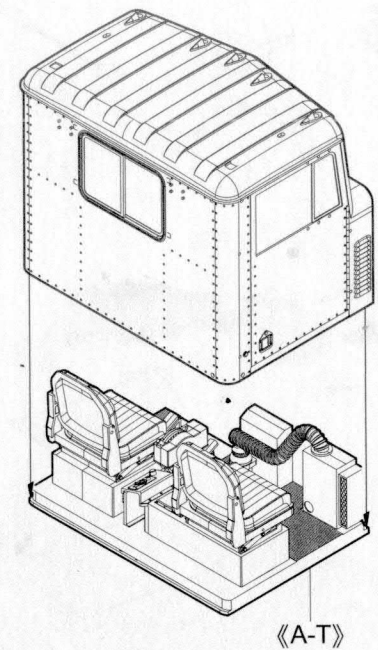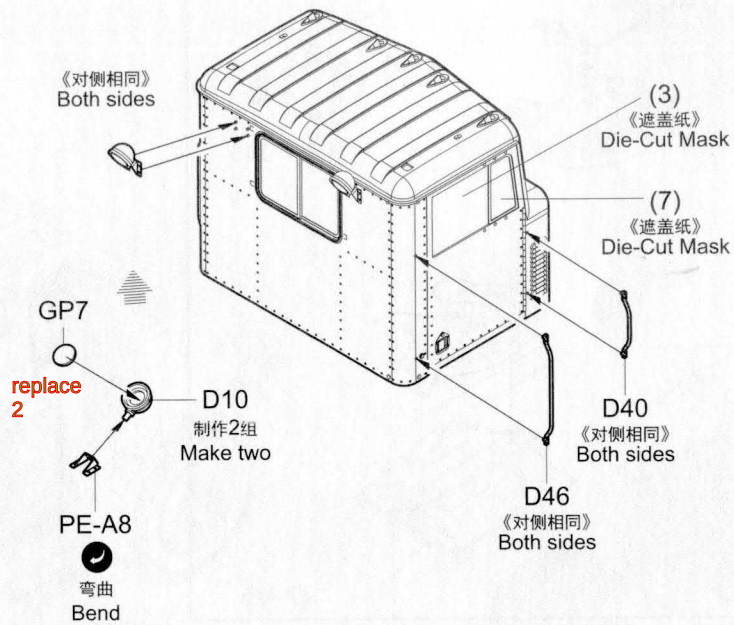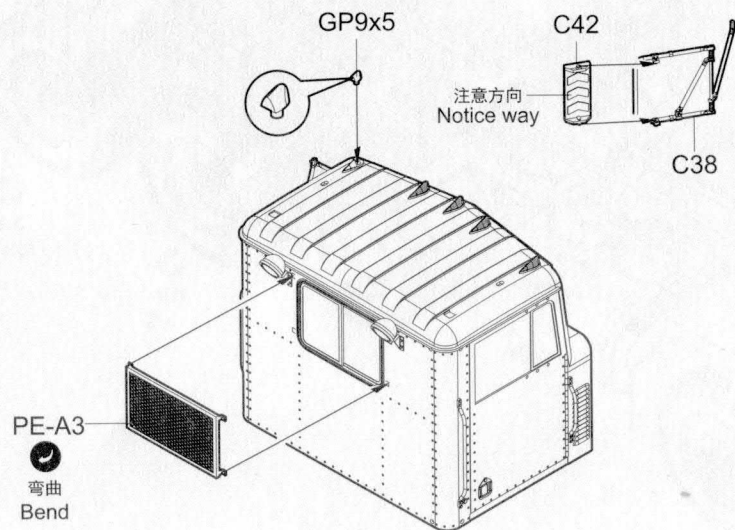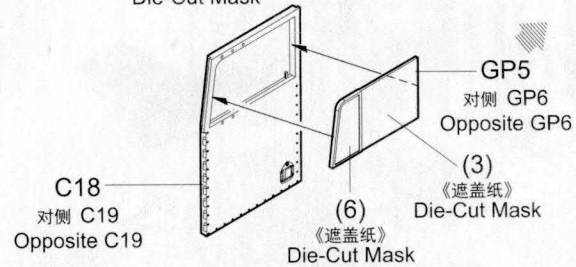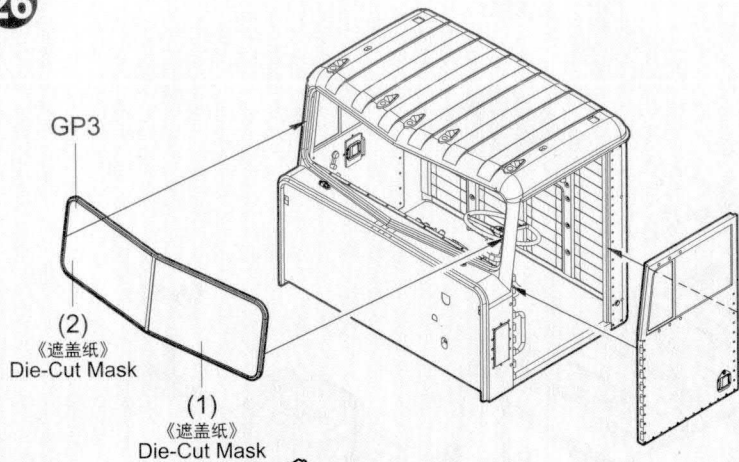


27

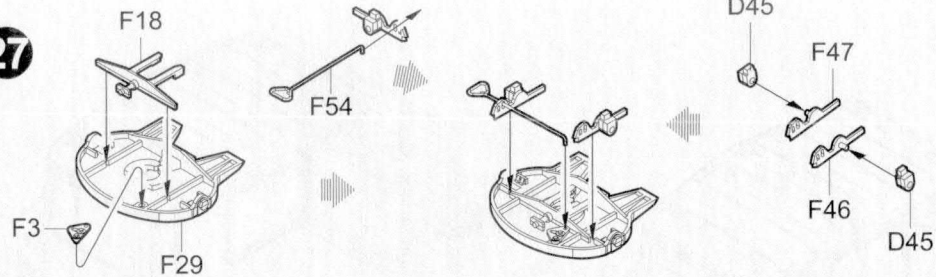

29

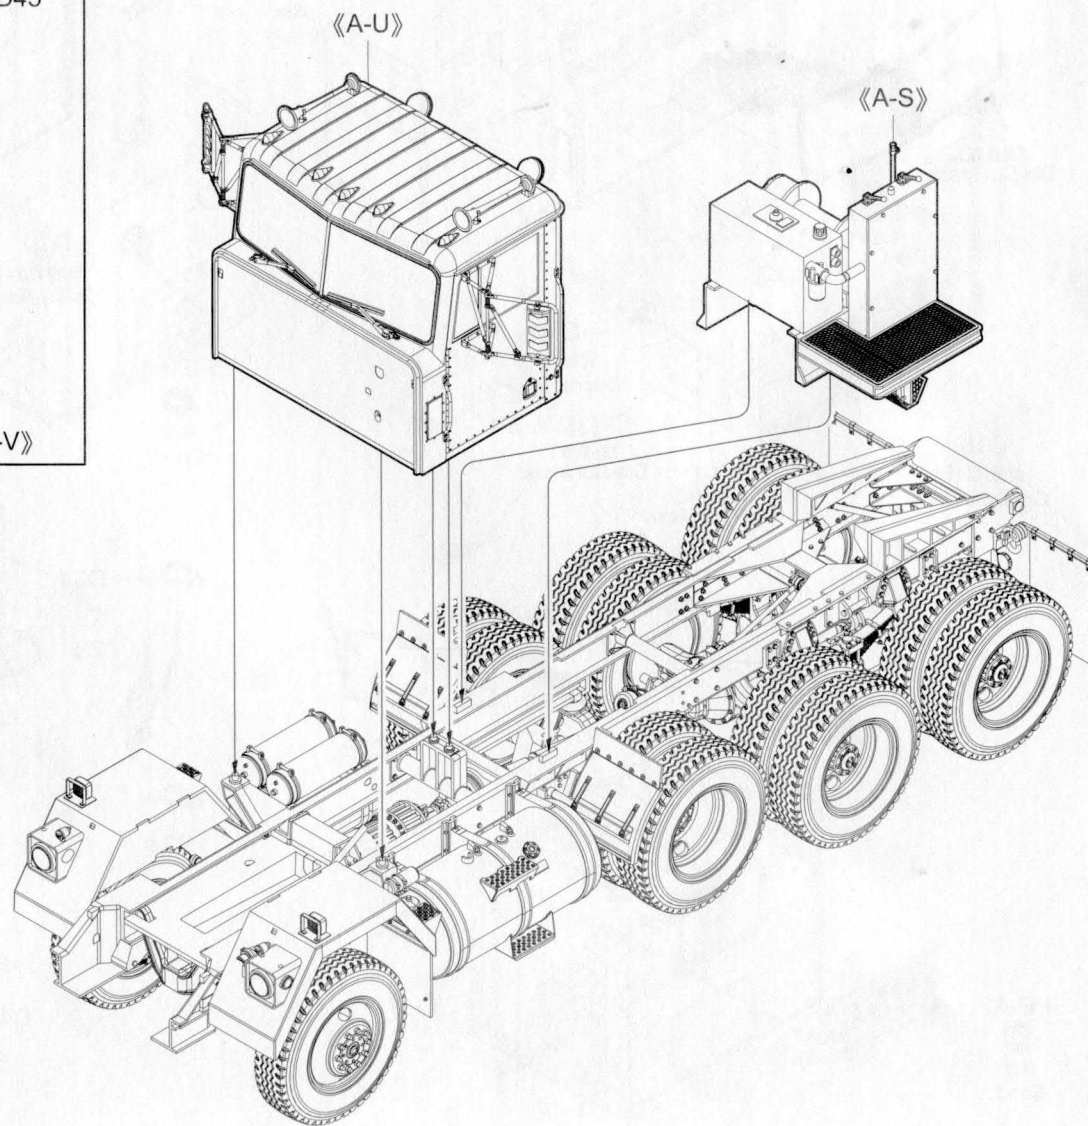

28

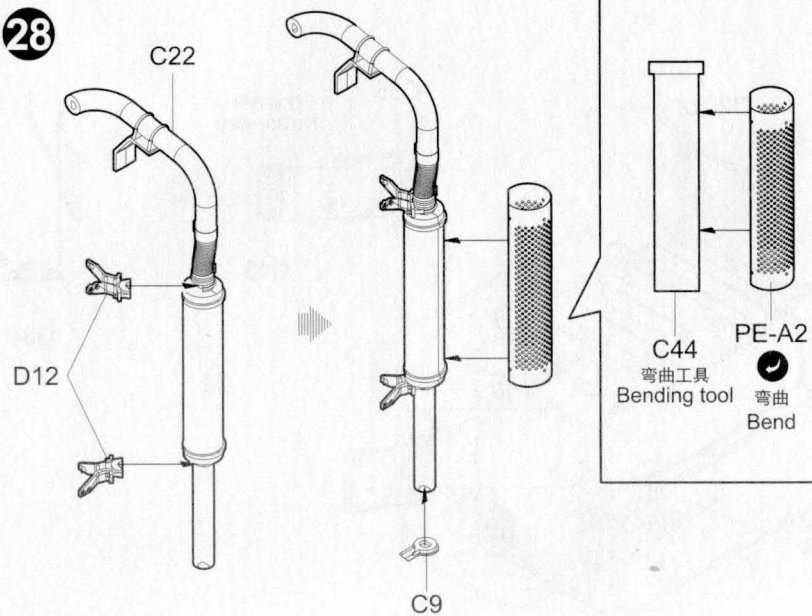


C44 弯曲工具
Bending tool
PE-A2 弯曲
Bend

《A-W》


《A-V》

《A-U》


《A-S》

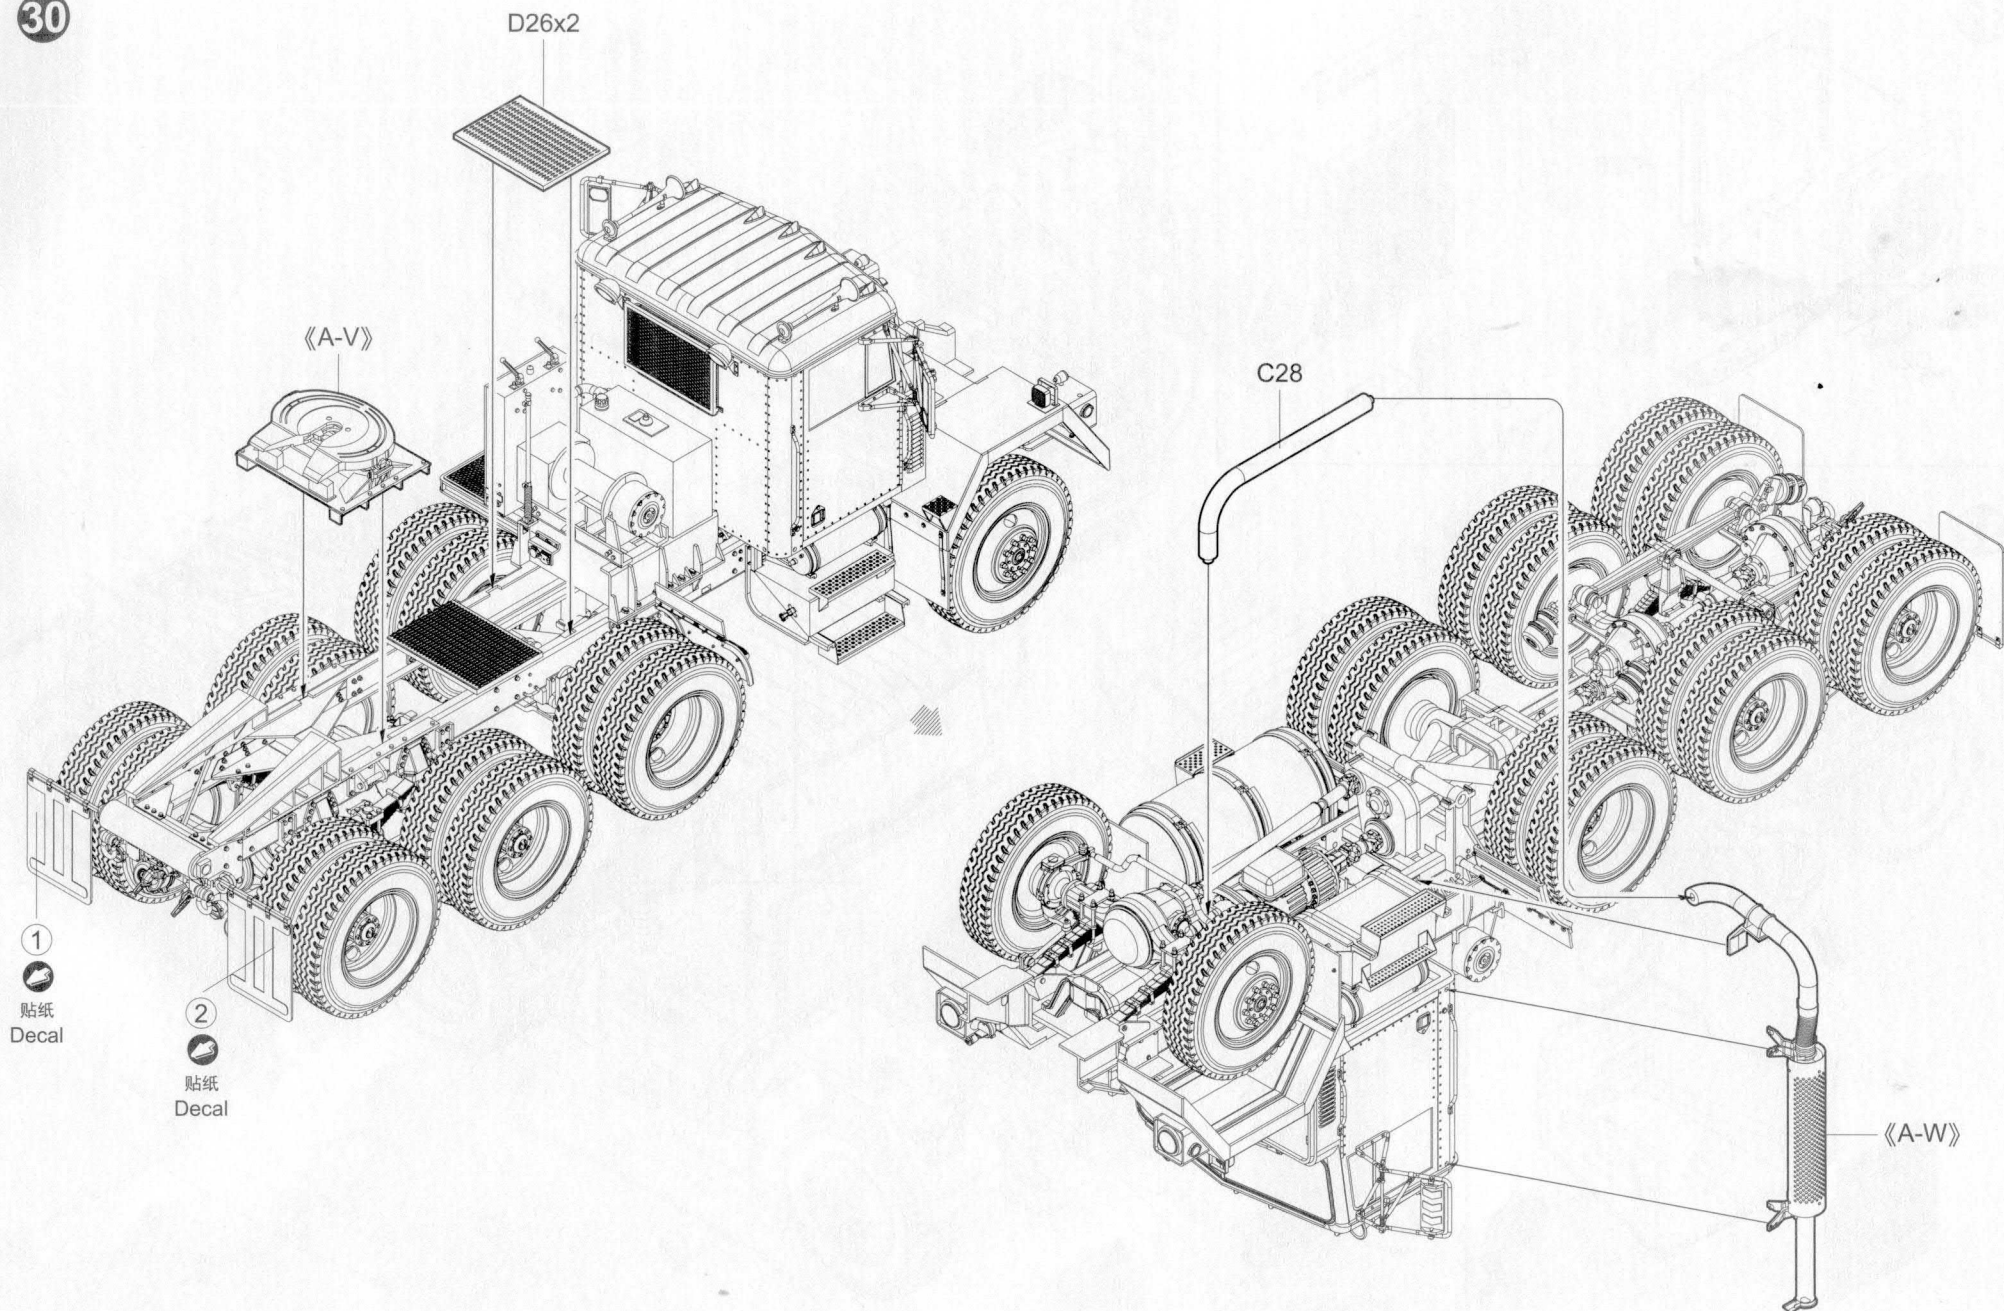


31




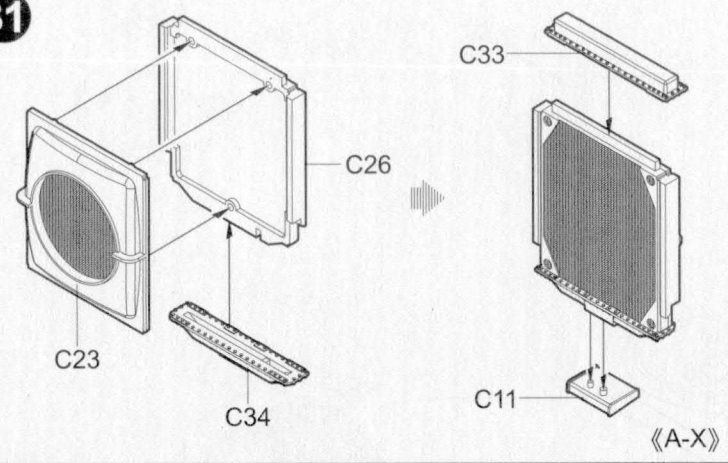


33



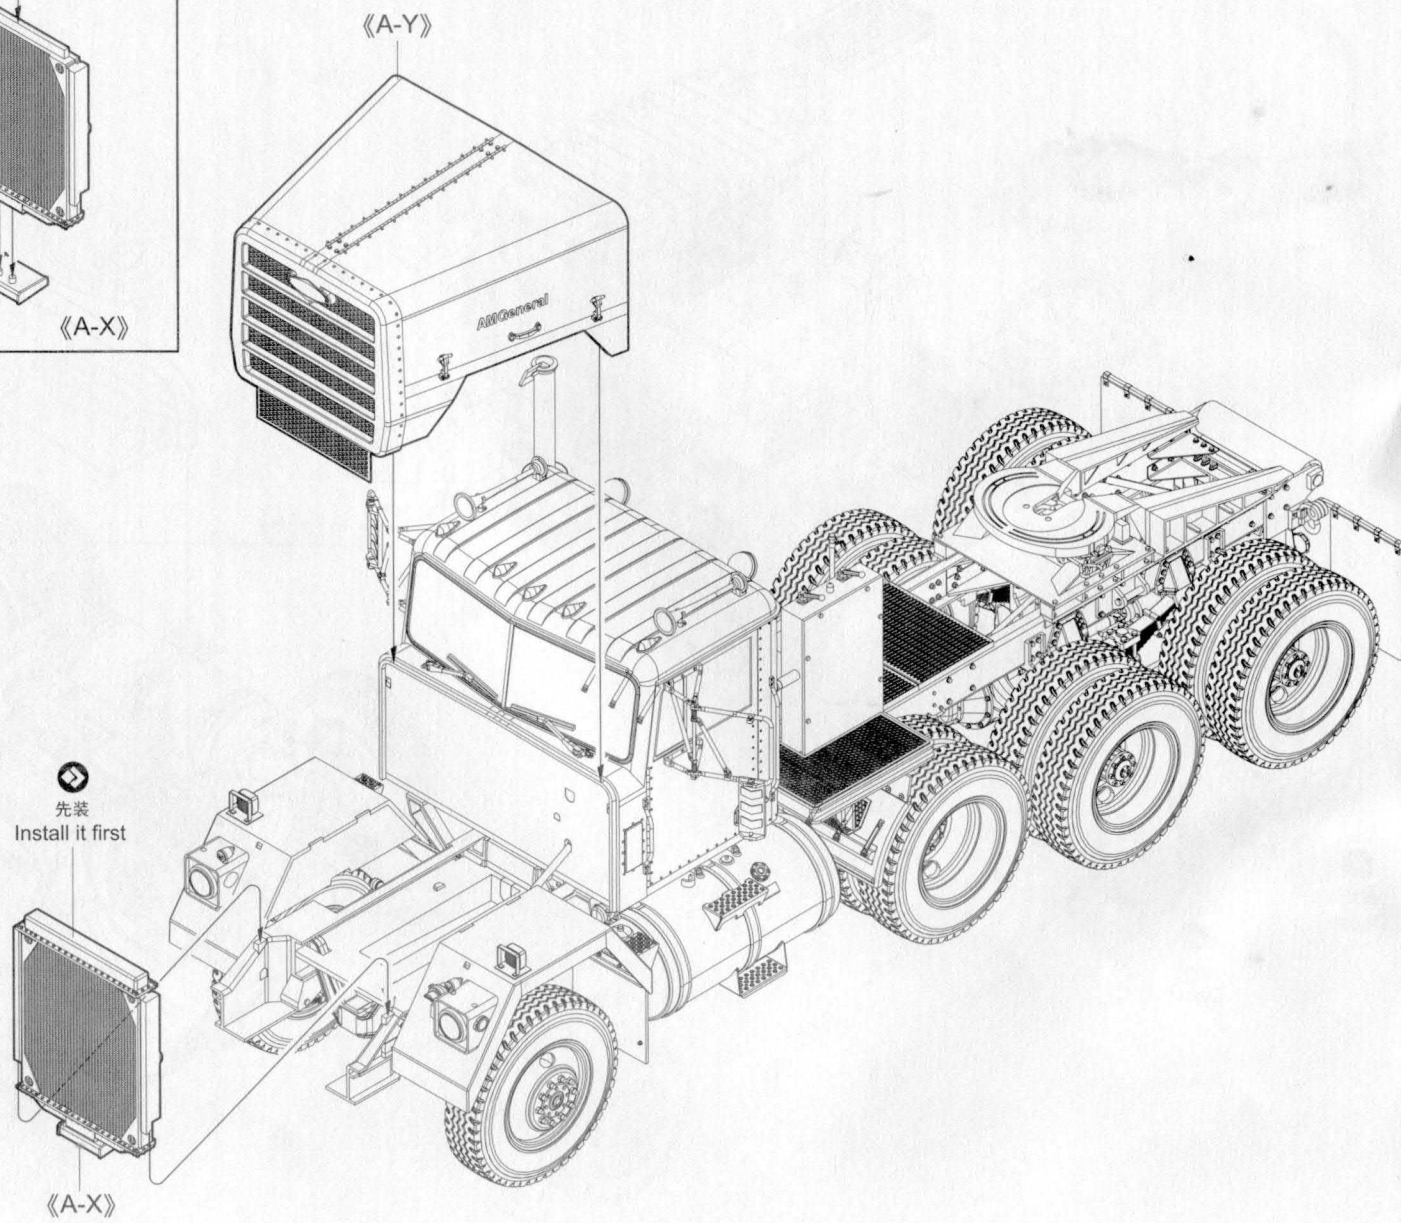


32





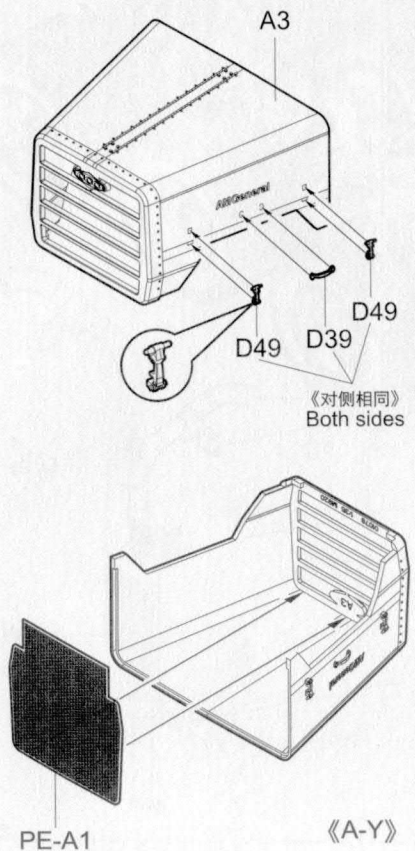


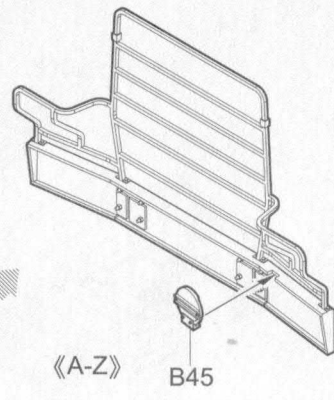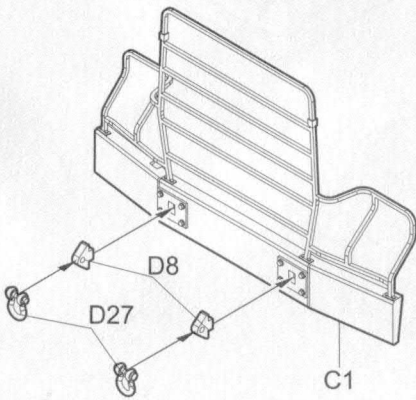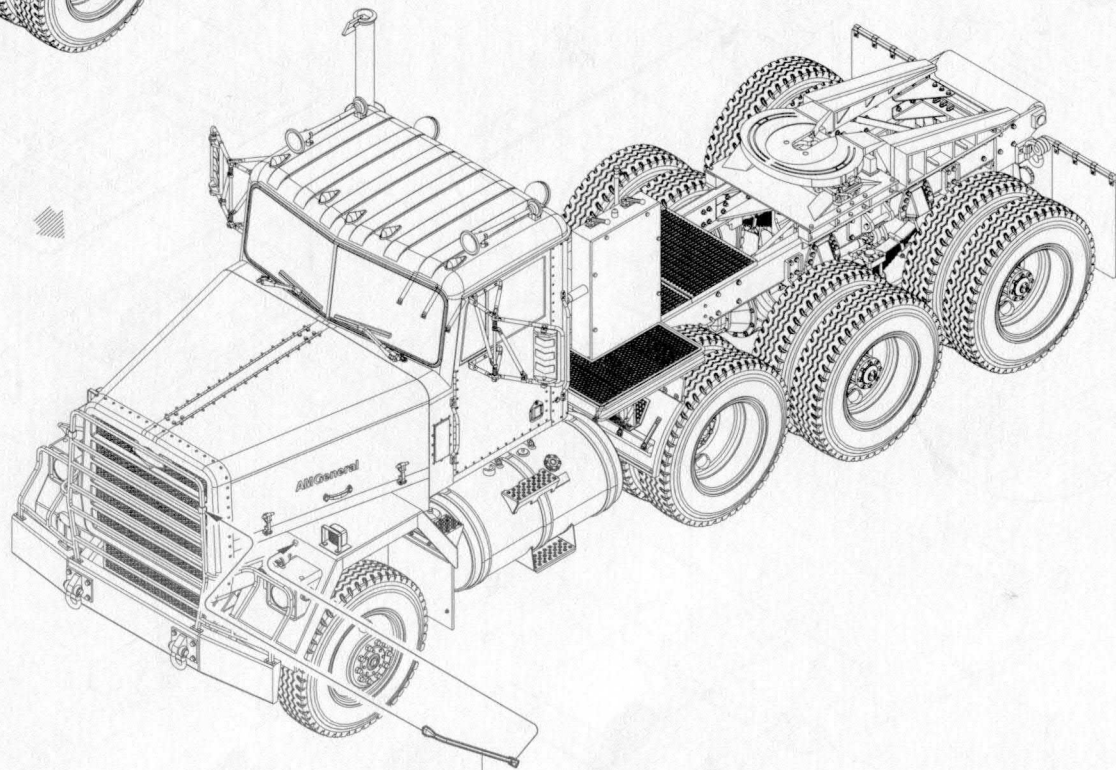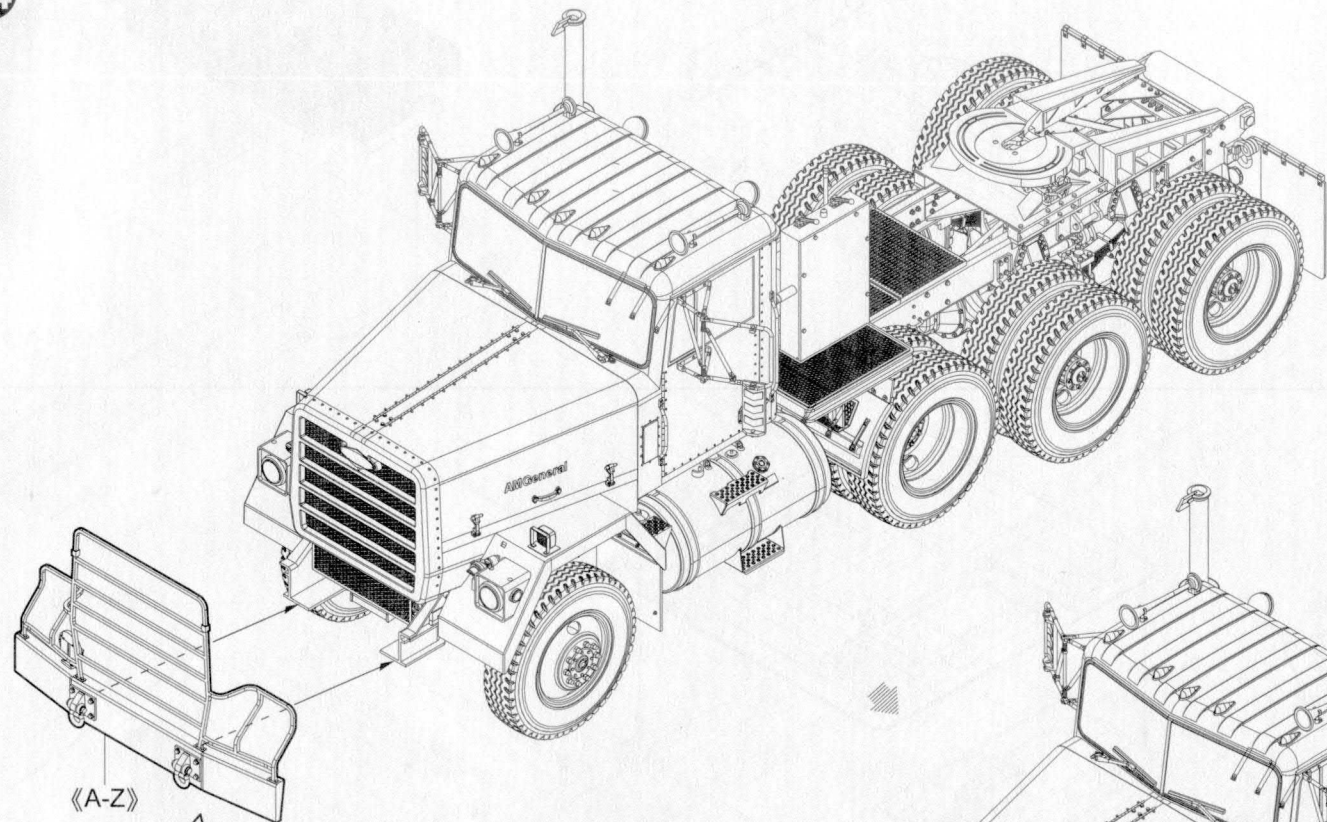

35

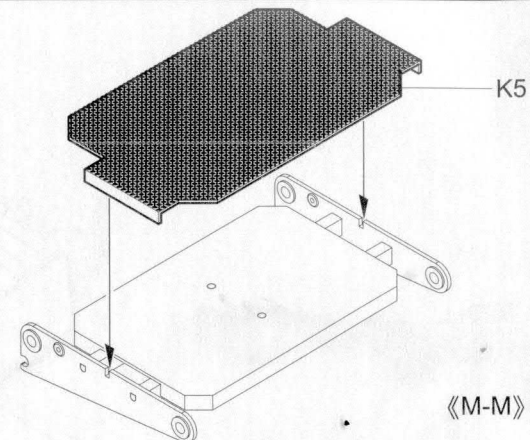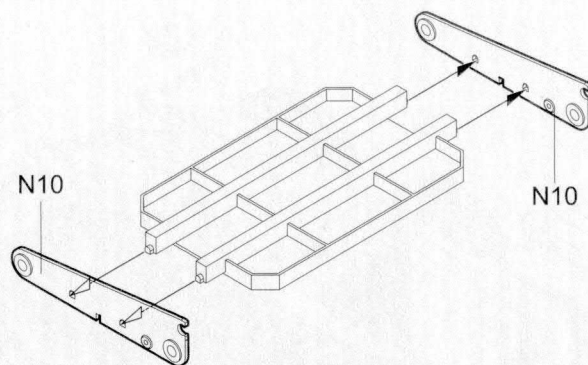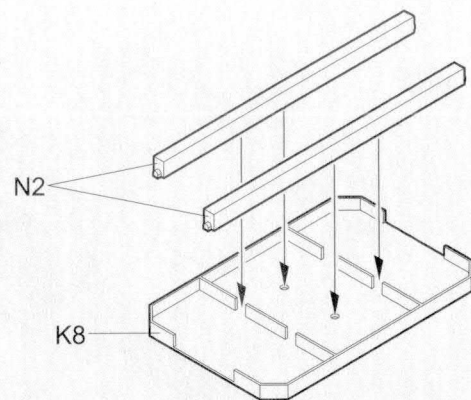



36

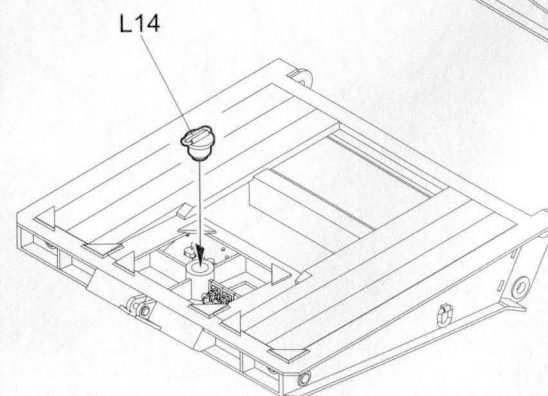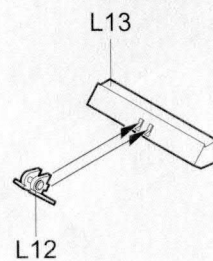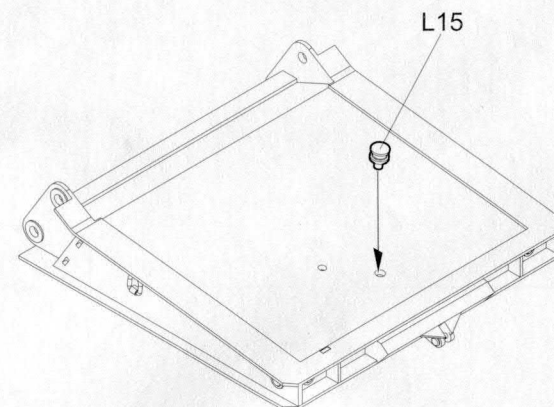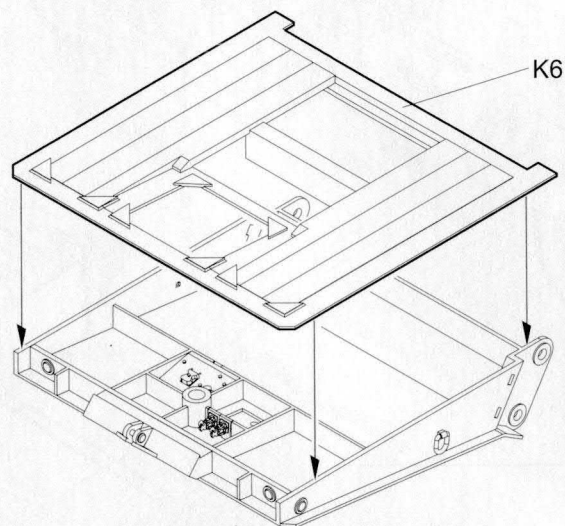
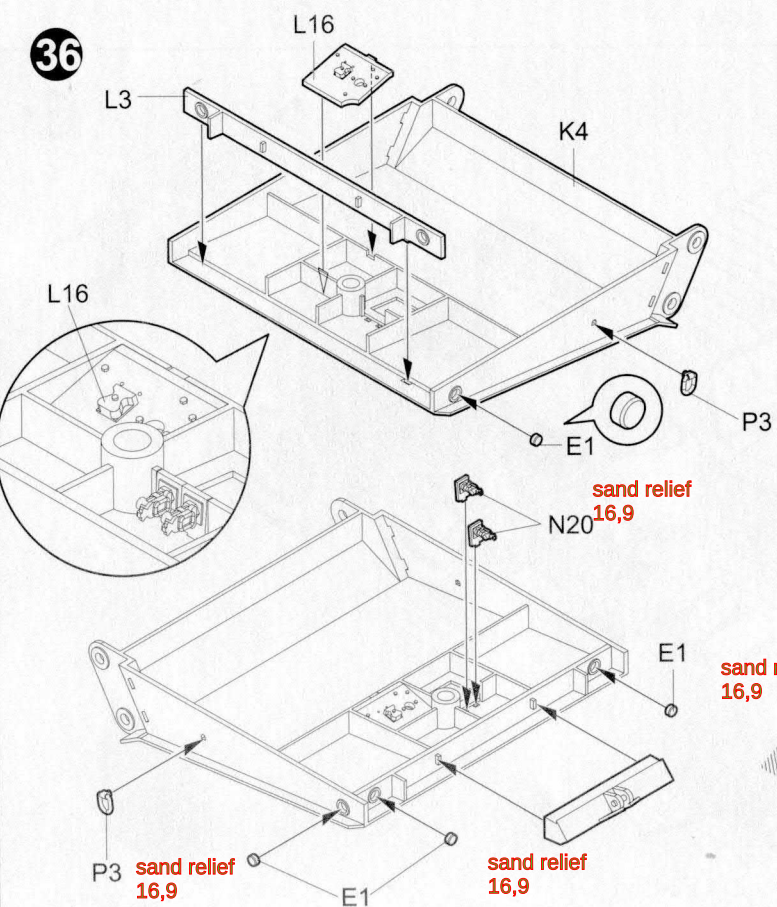


<N-N>


37

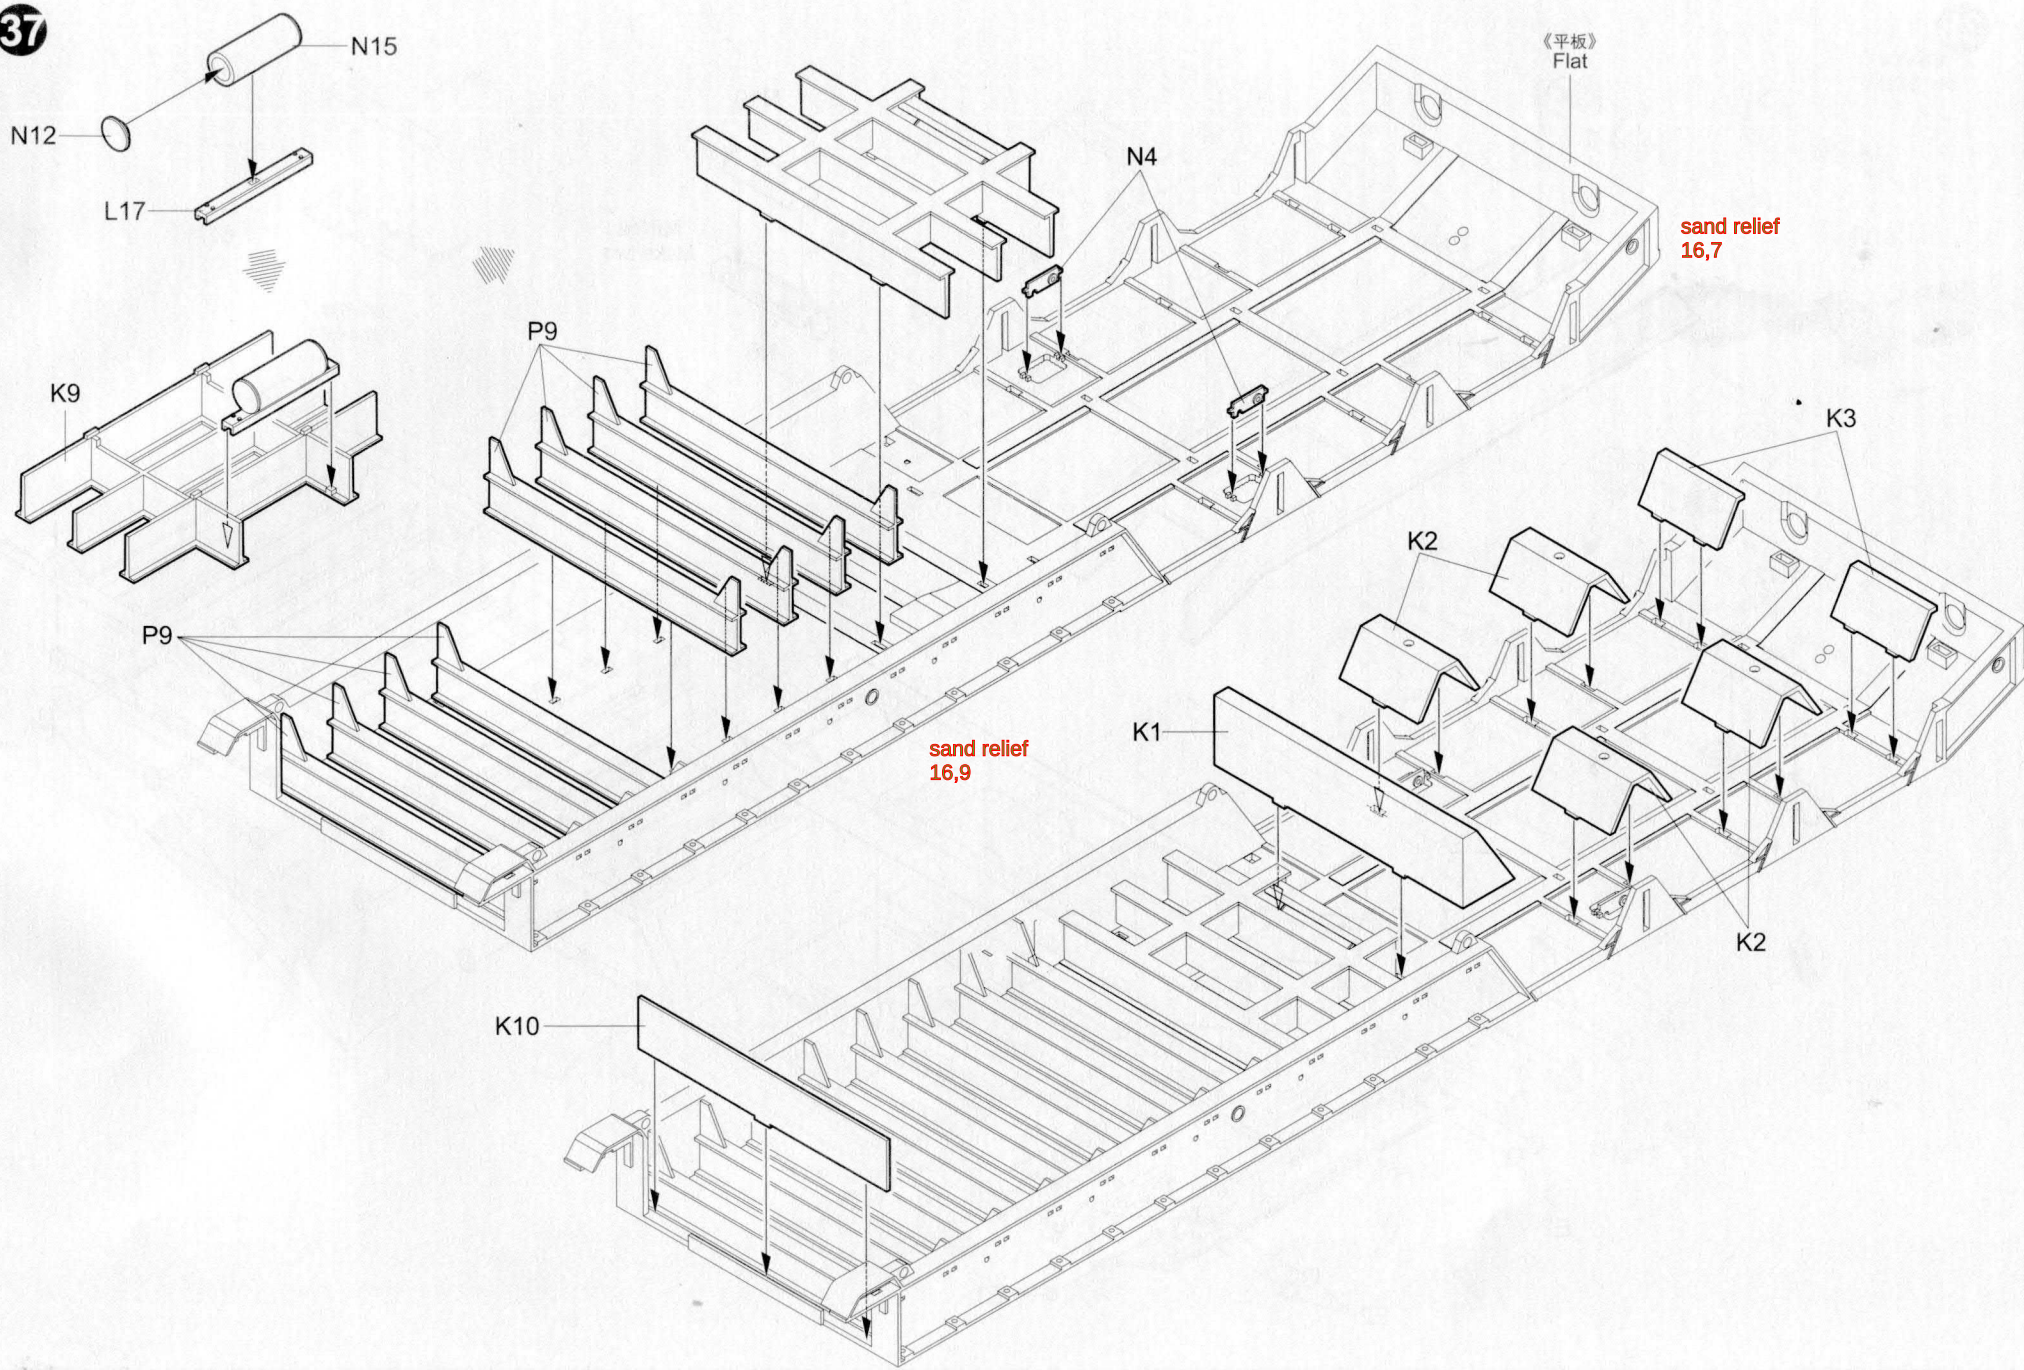

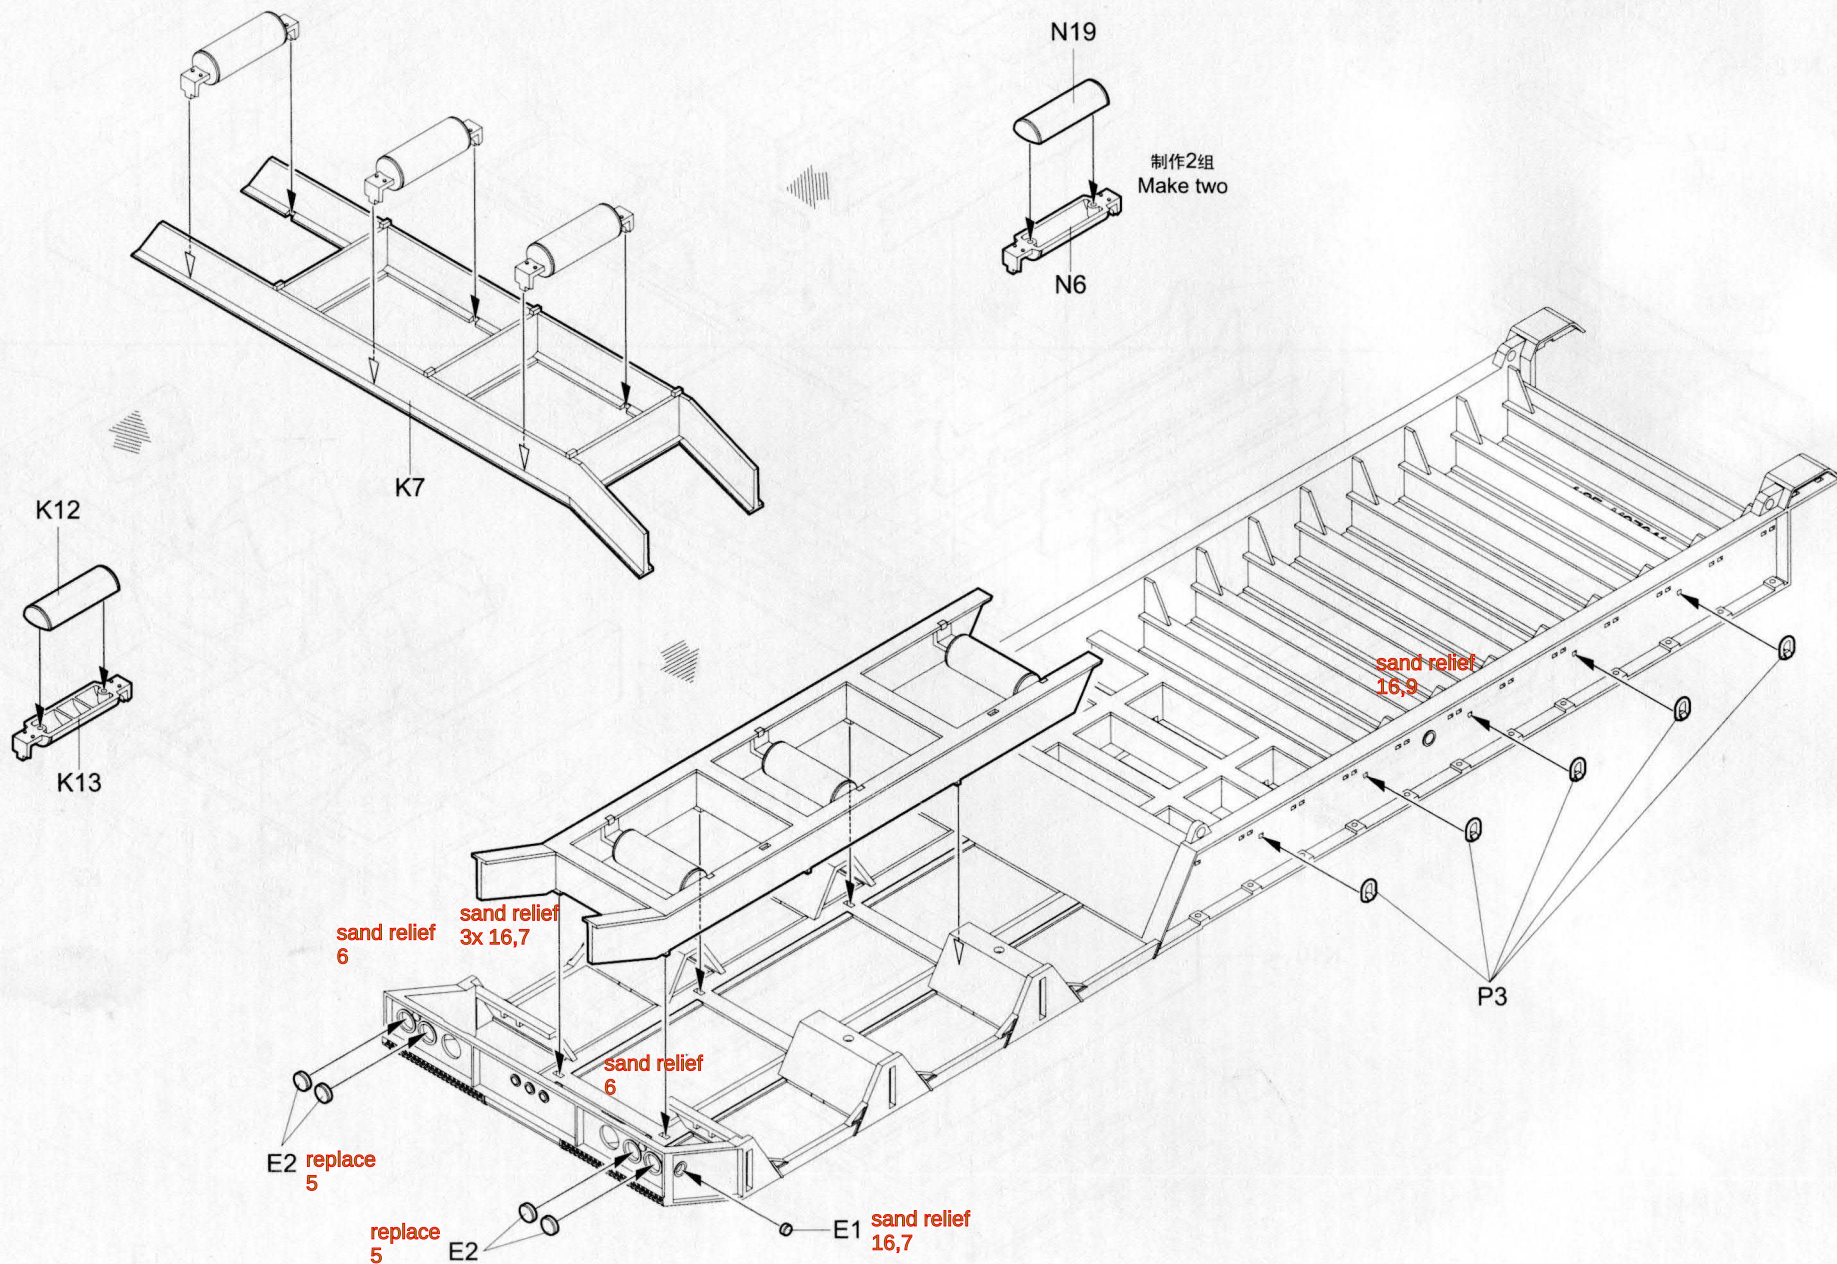


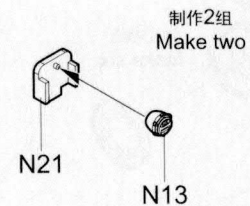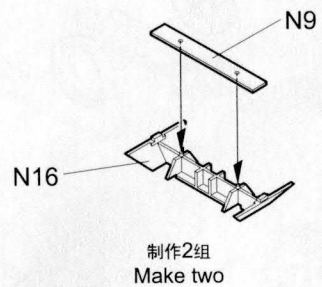


sand relief
18,19,12,13

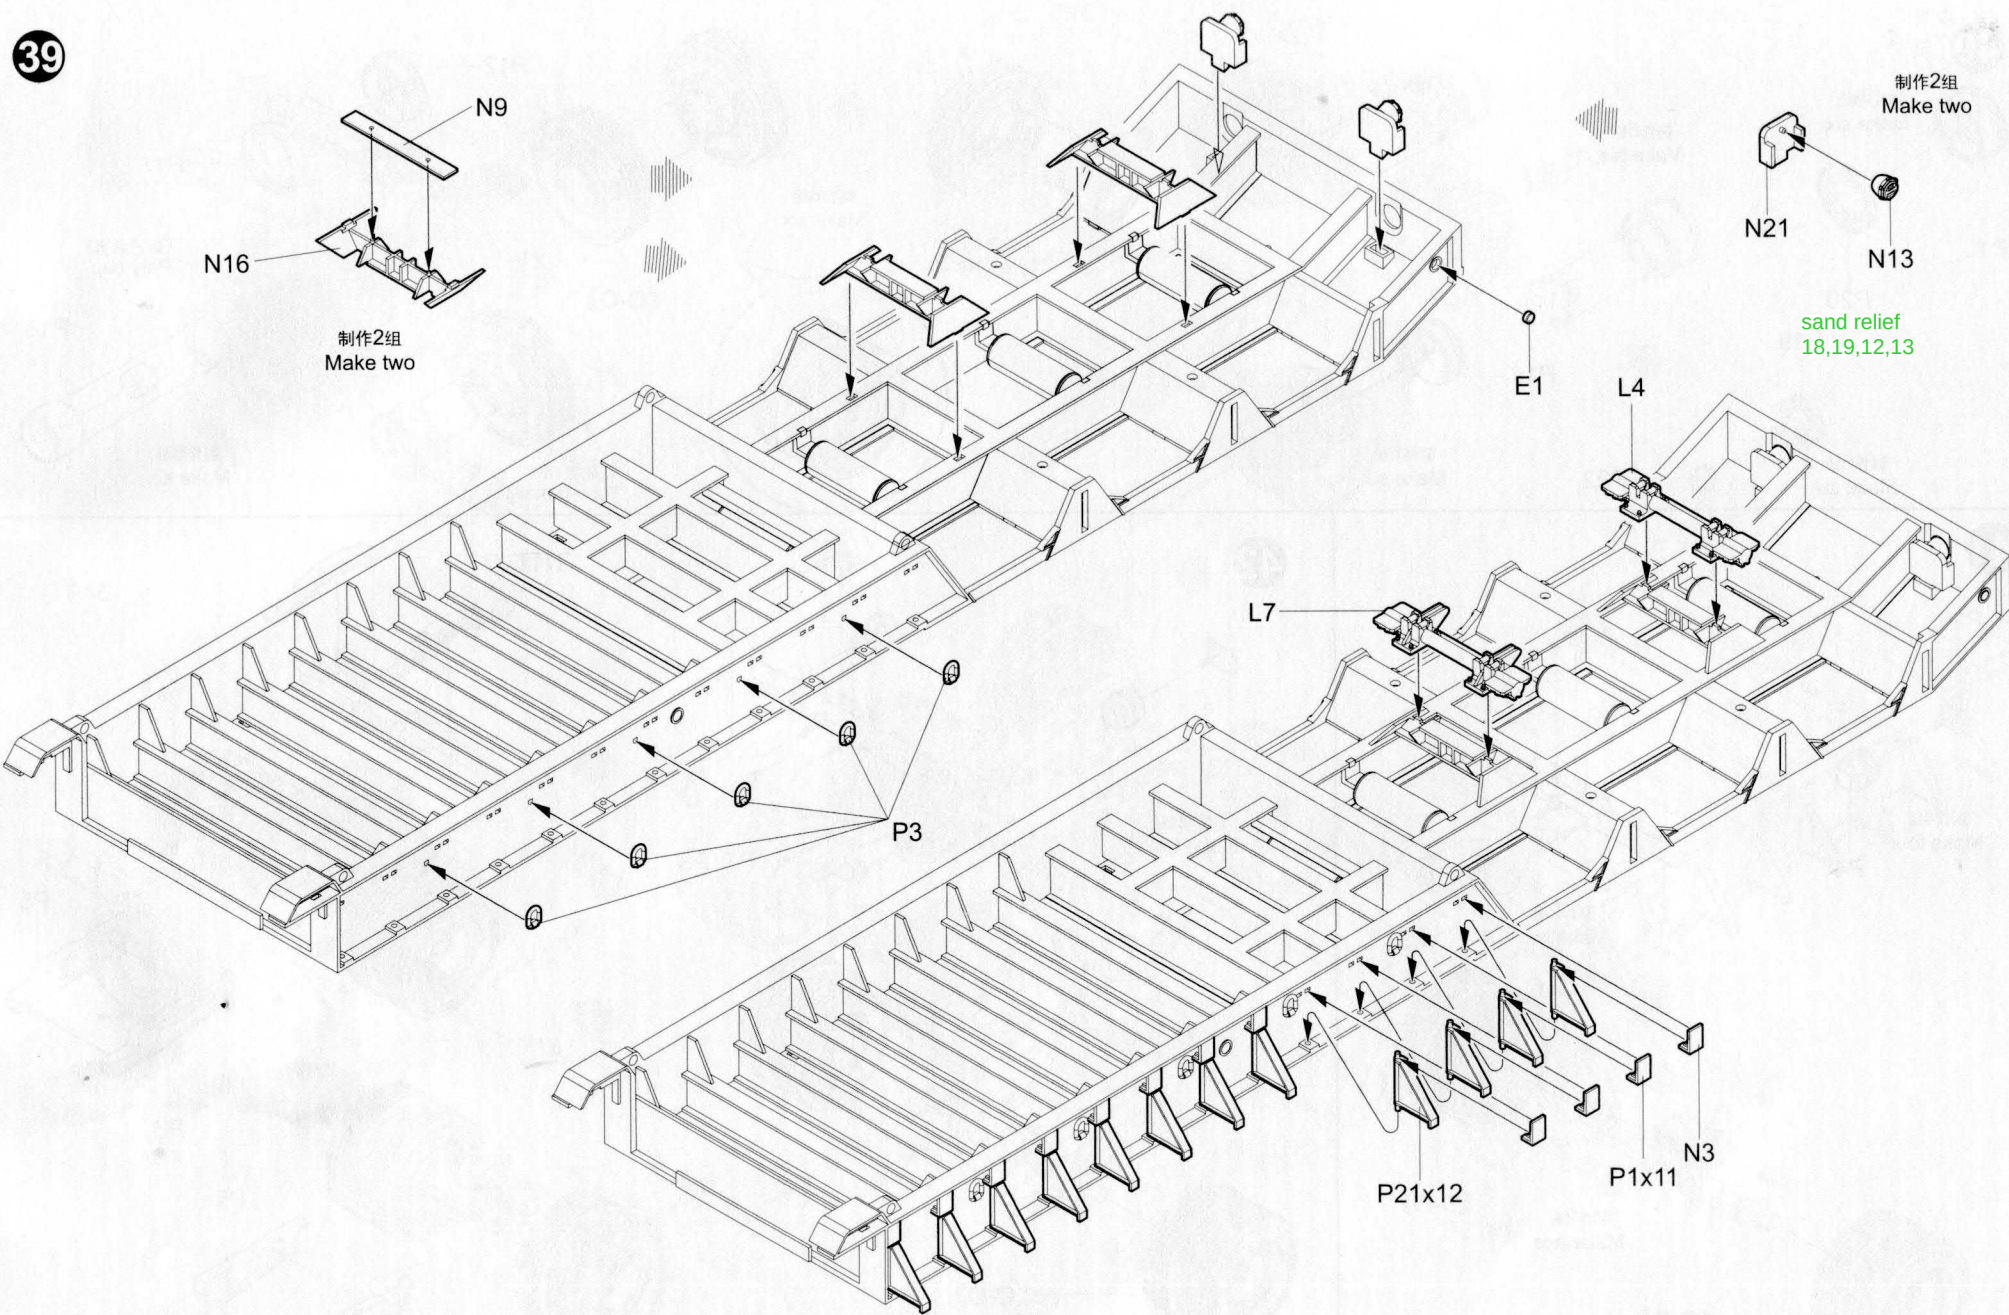


40

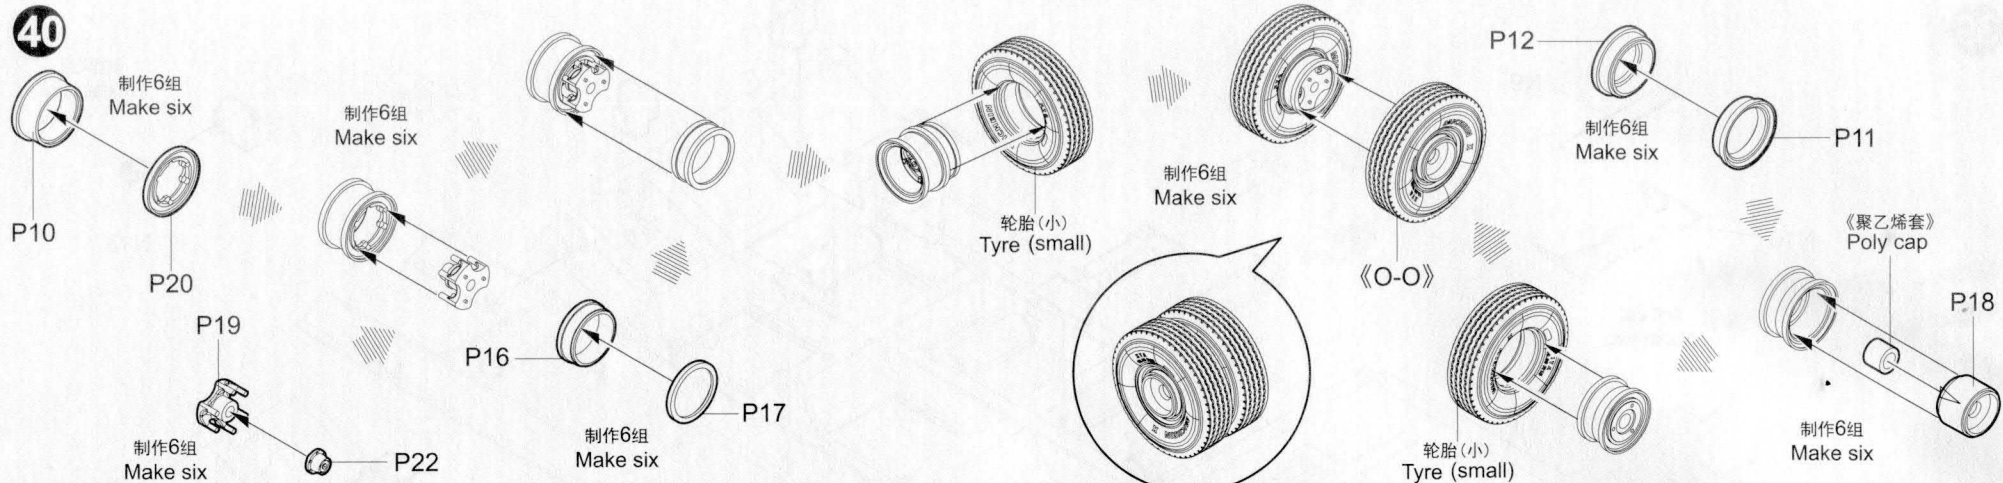



41

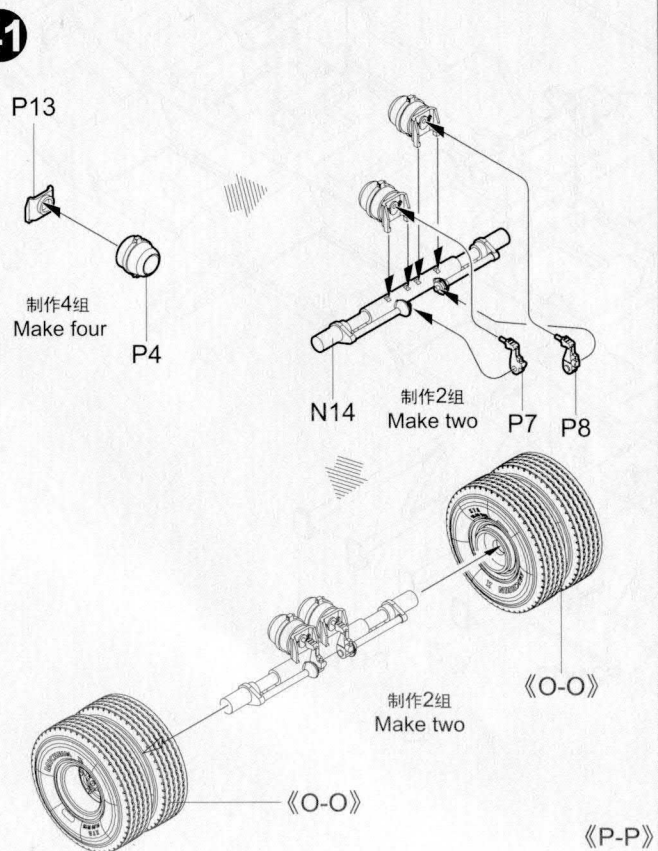


42

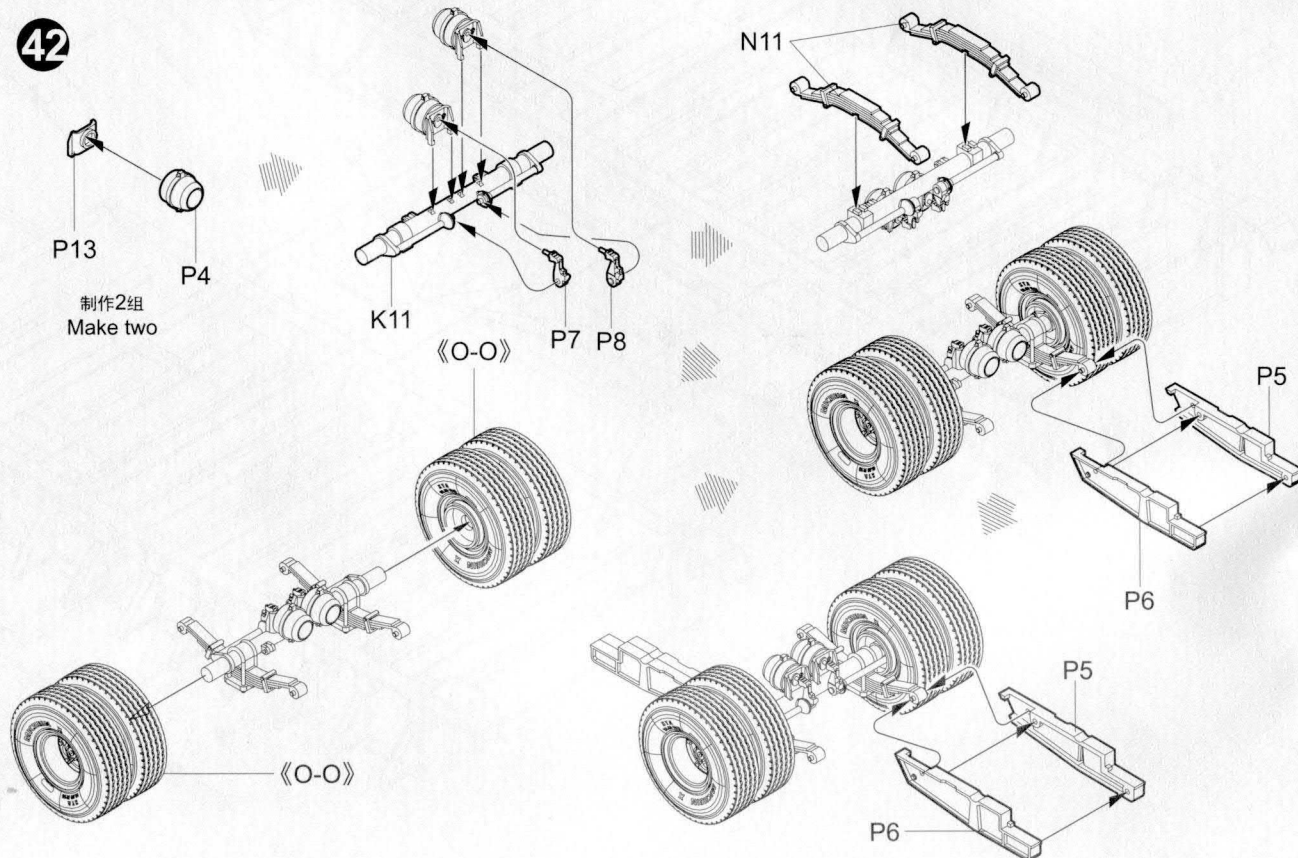

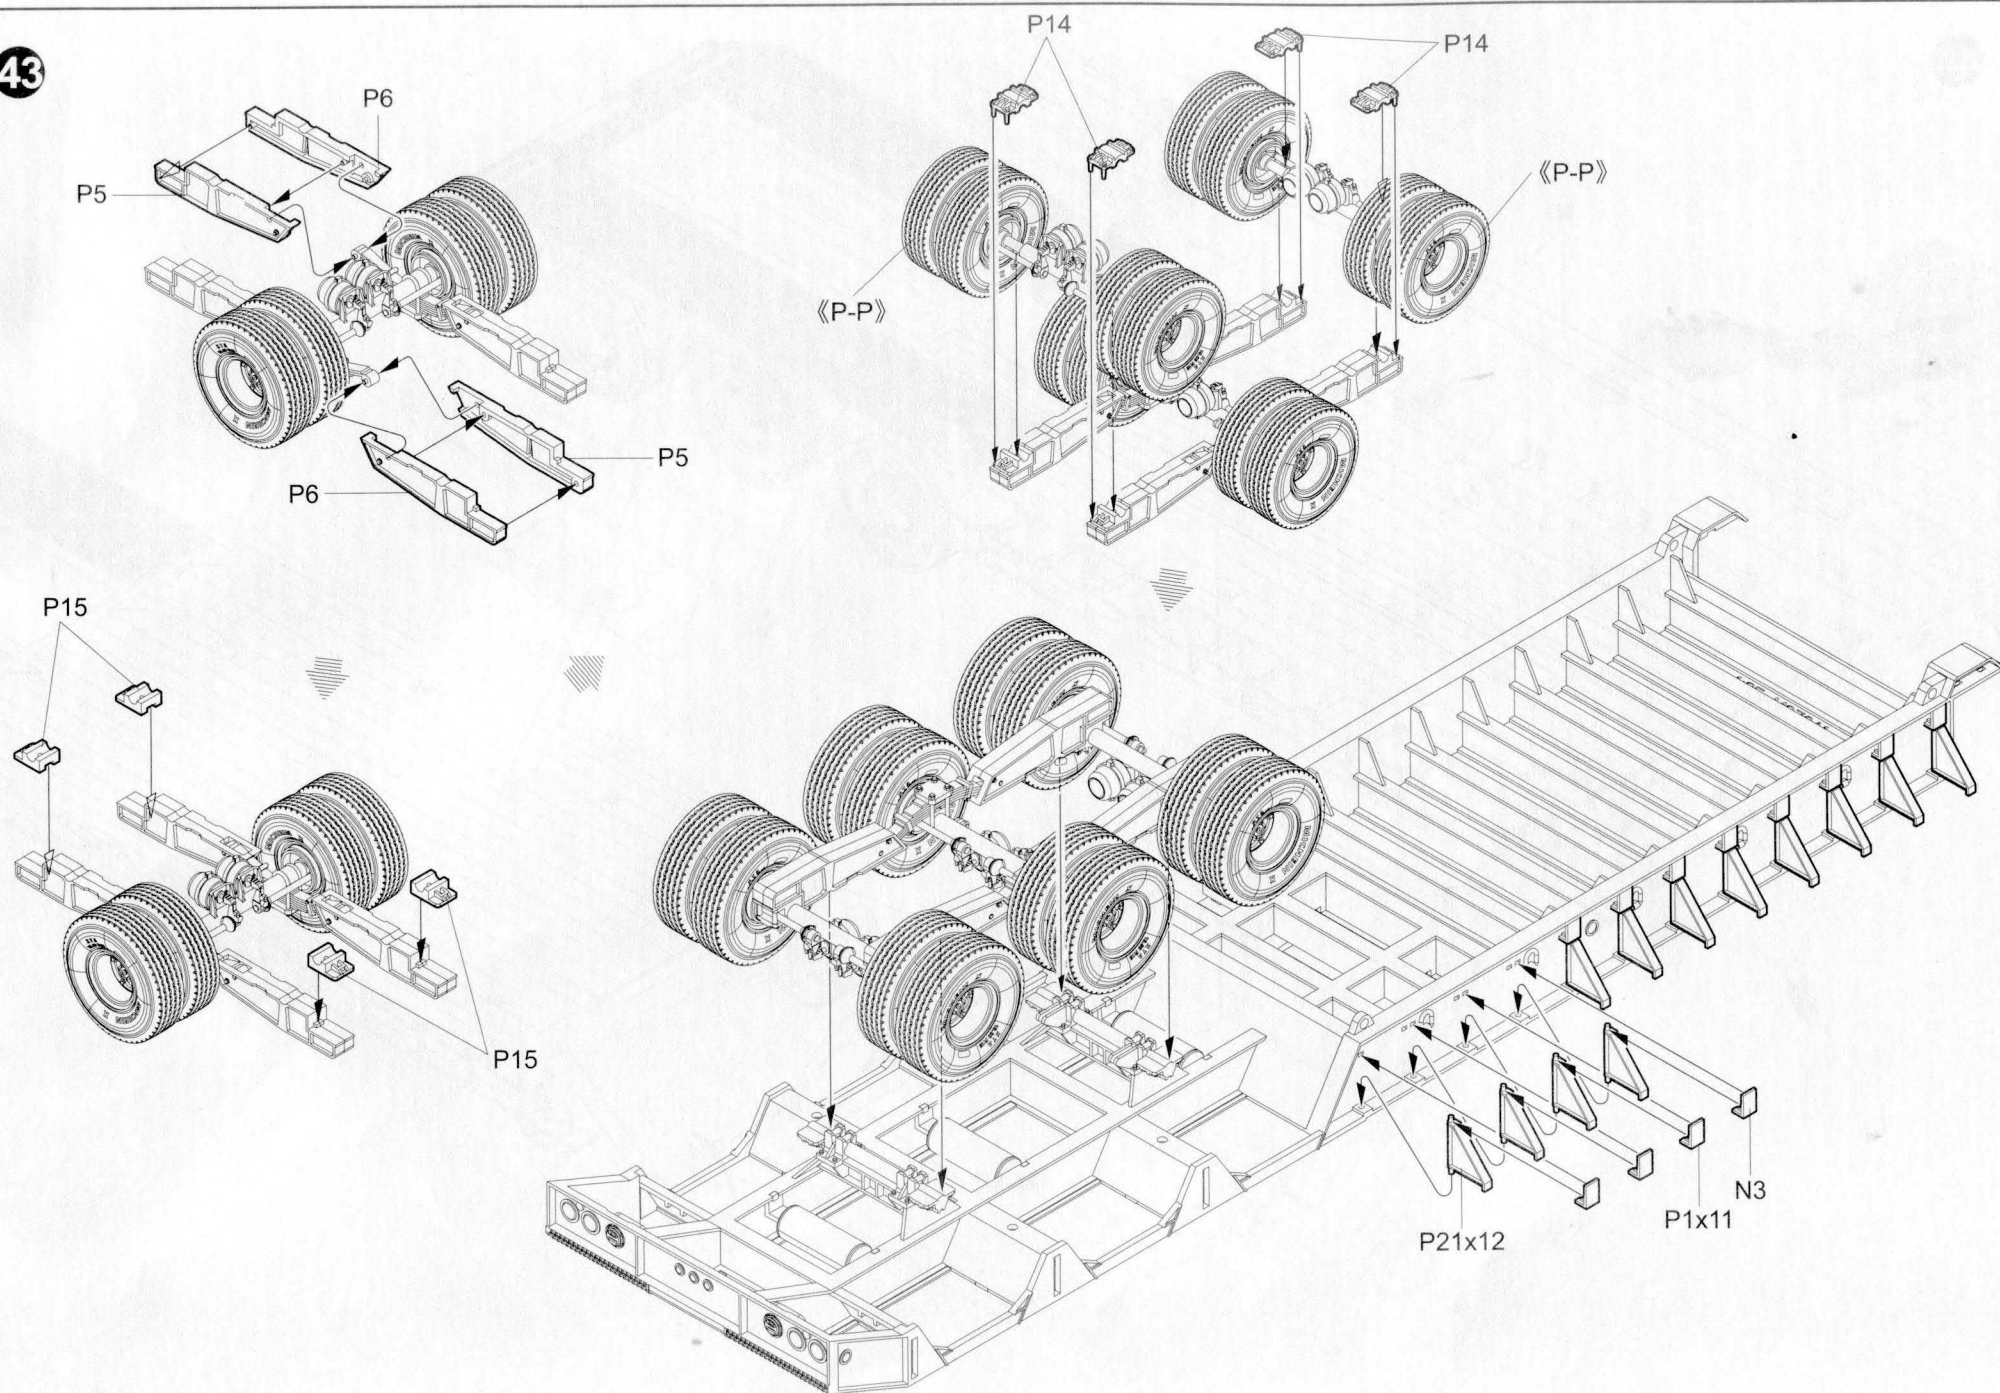

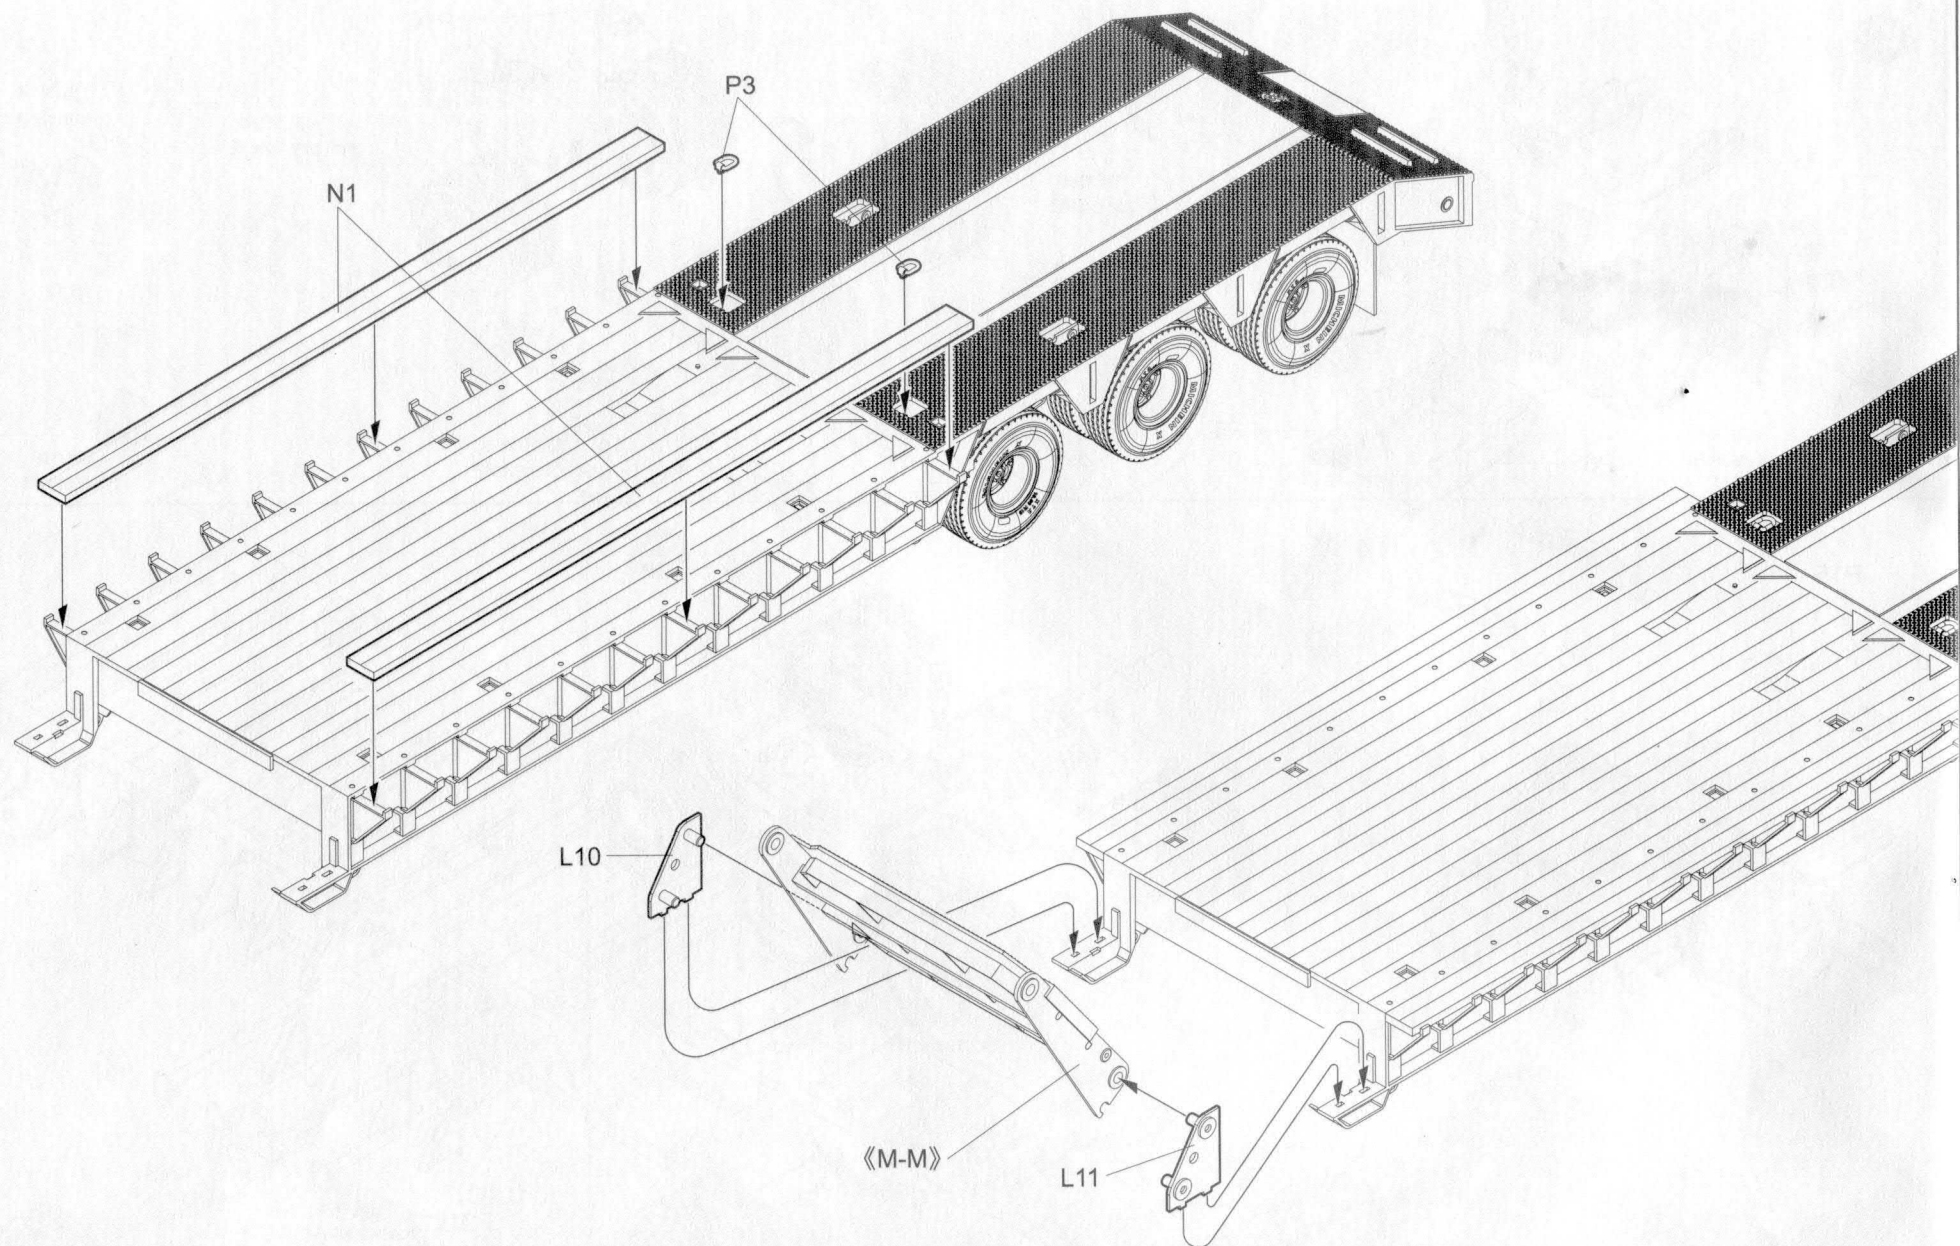

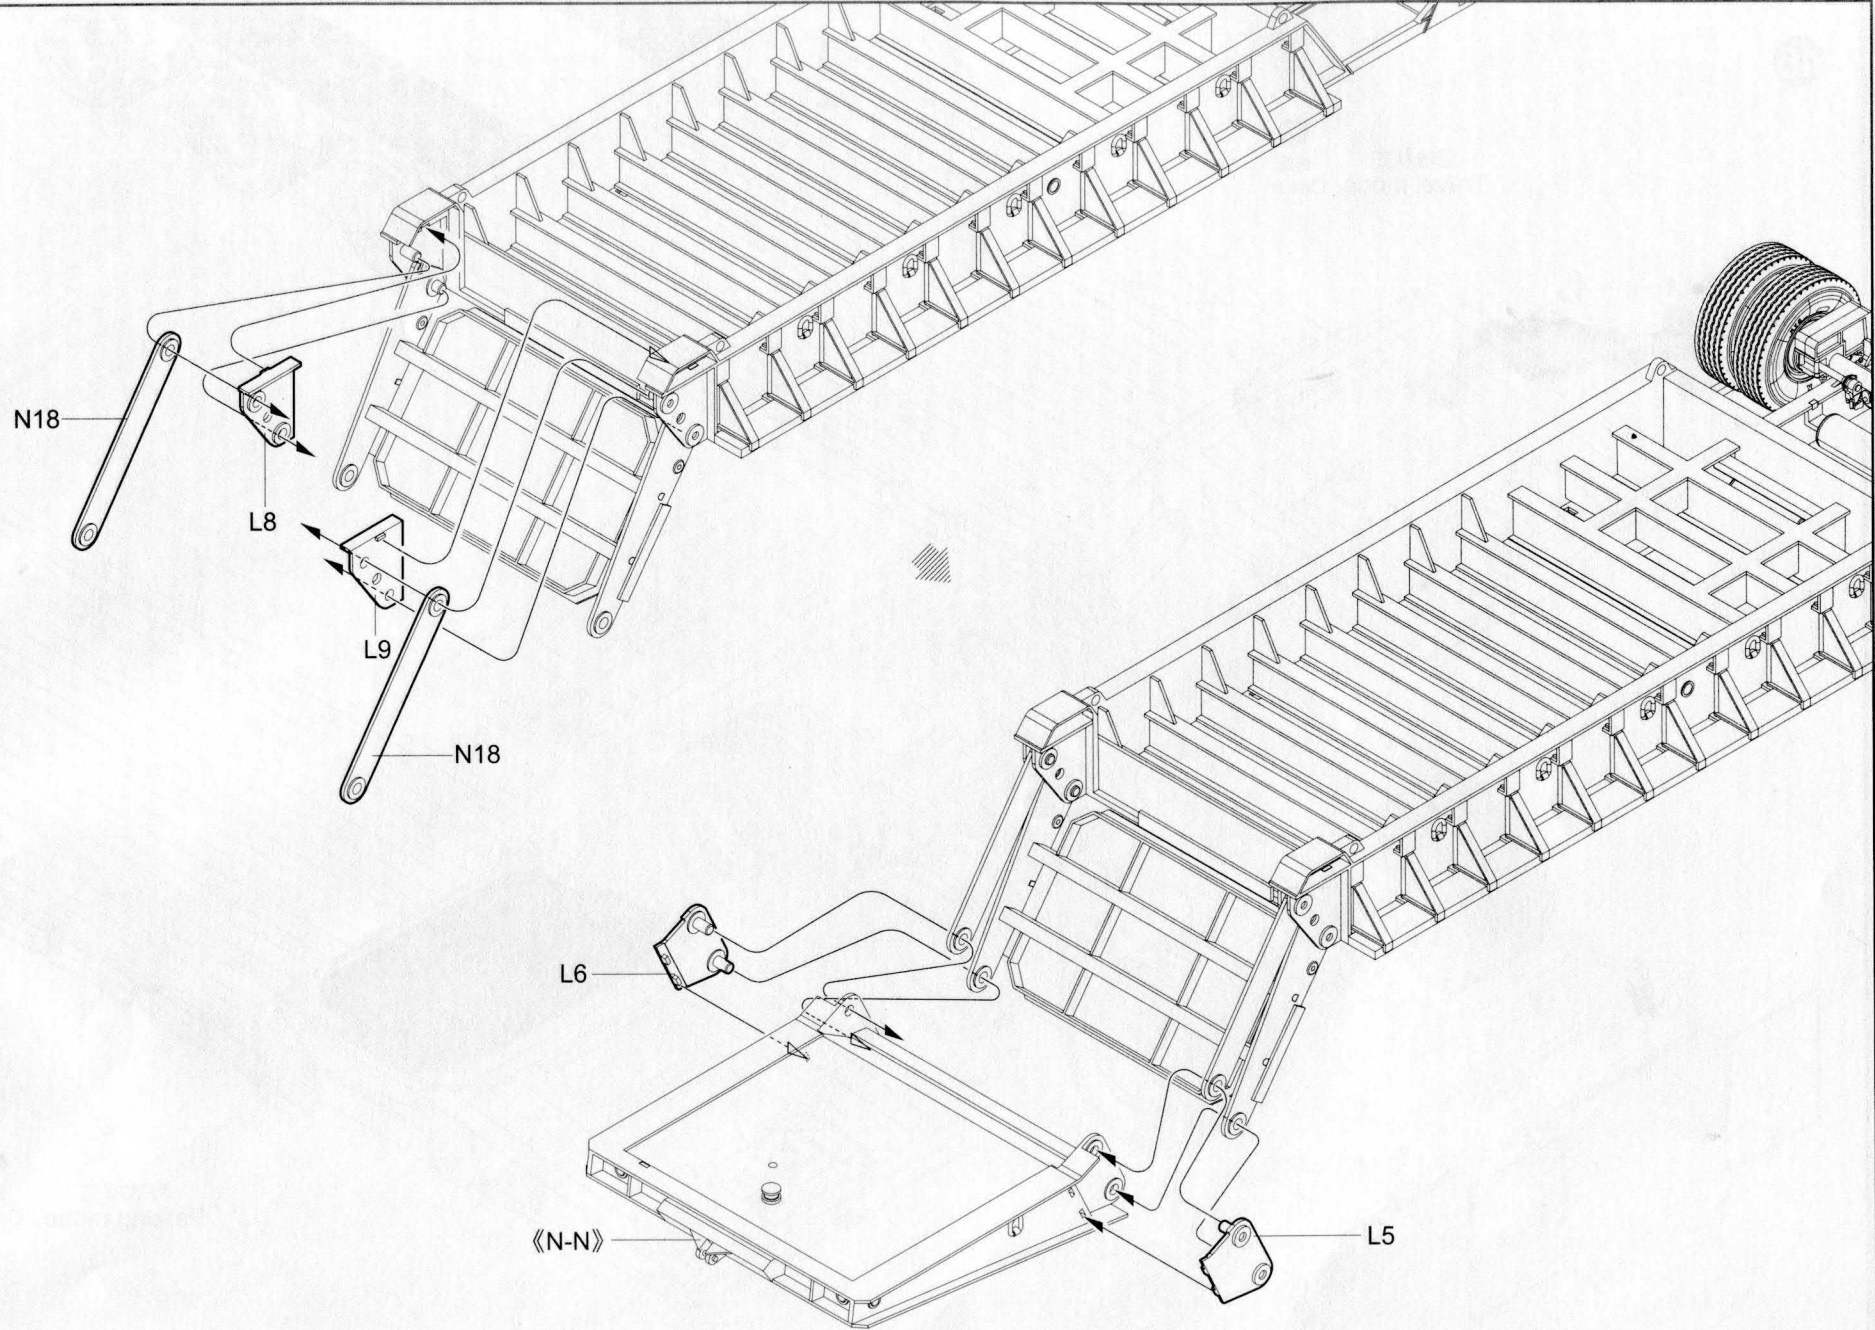

运输状态
Travel mode



选择

Option

L1
? 选择
Option


L2
? 选择
Option


停放状态
Parking mode




选择



Option

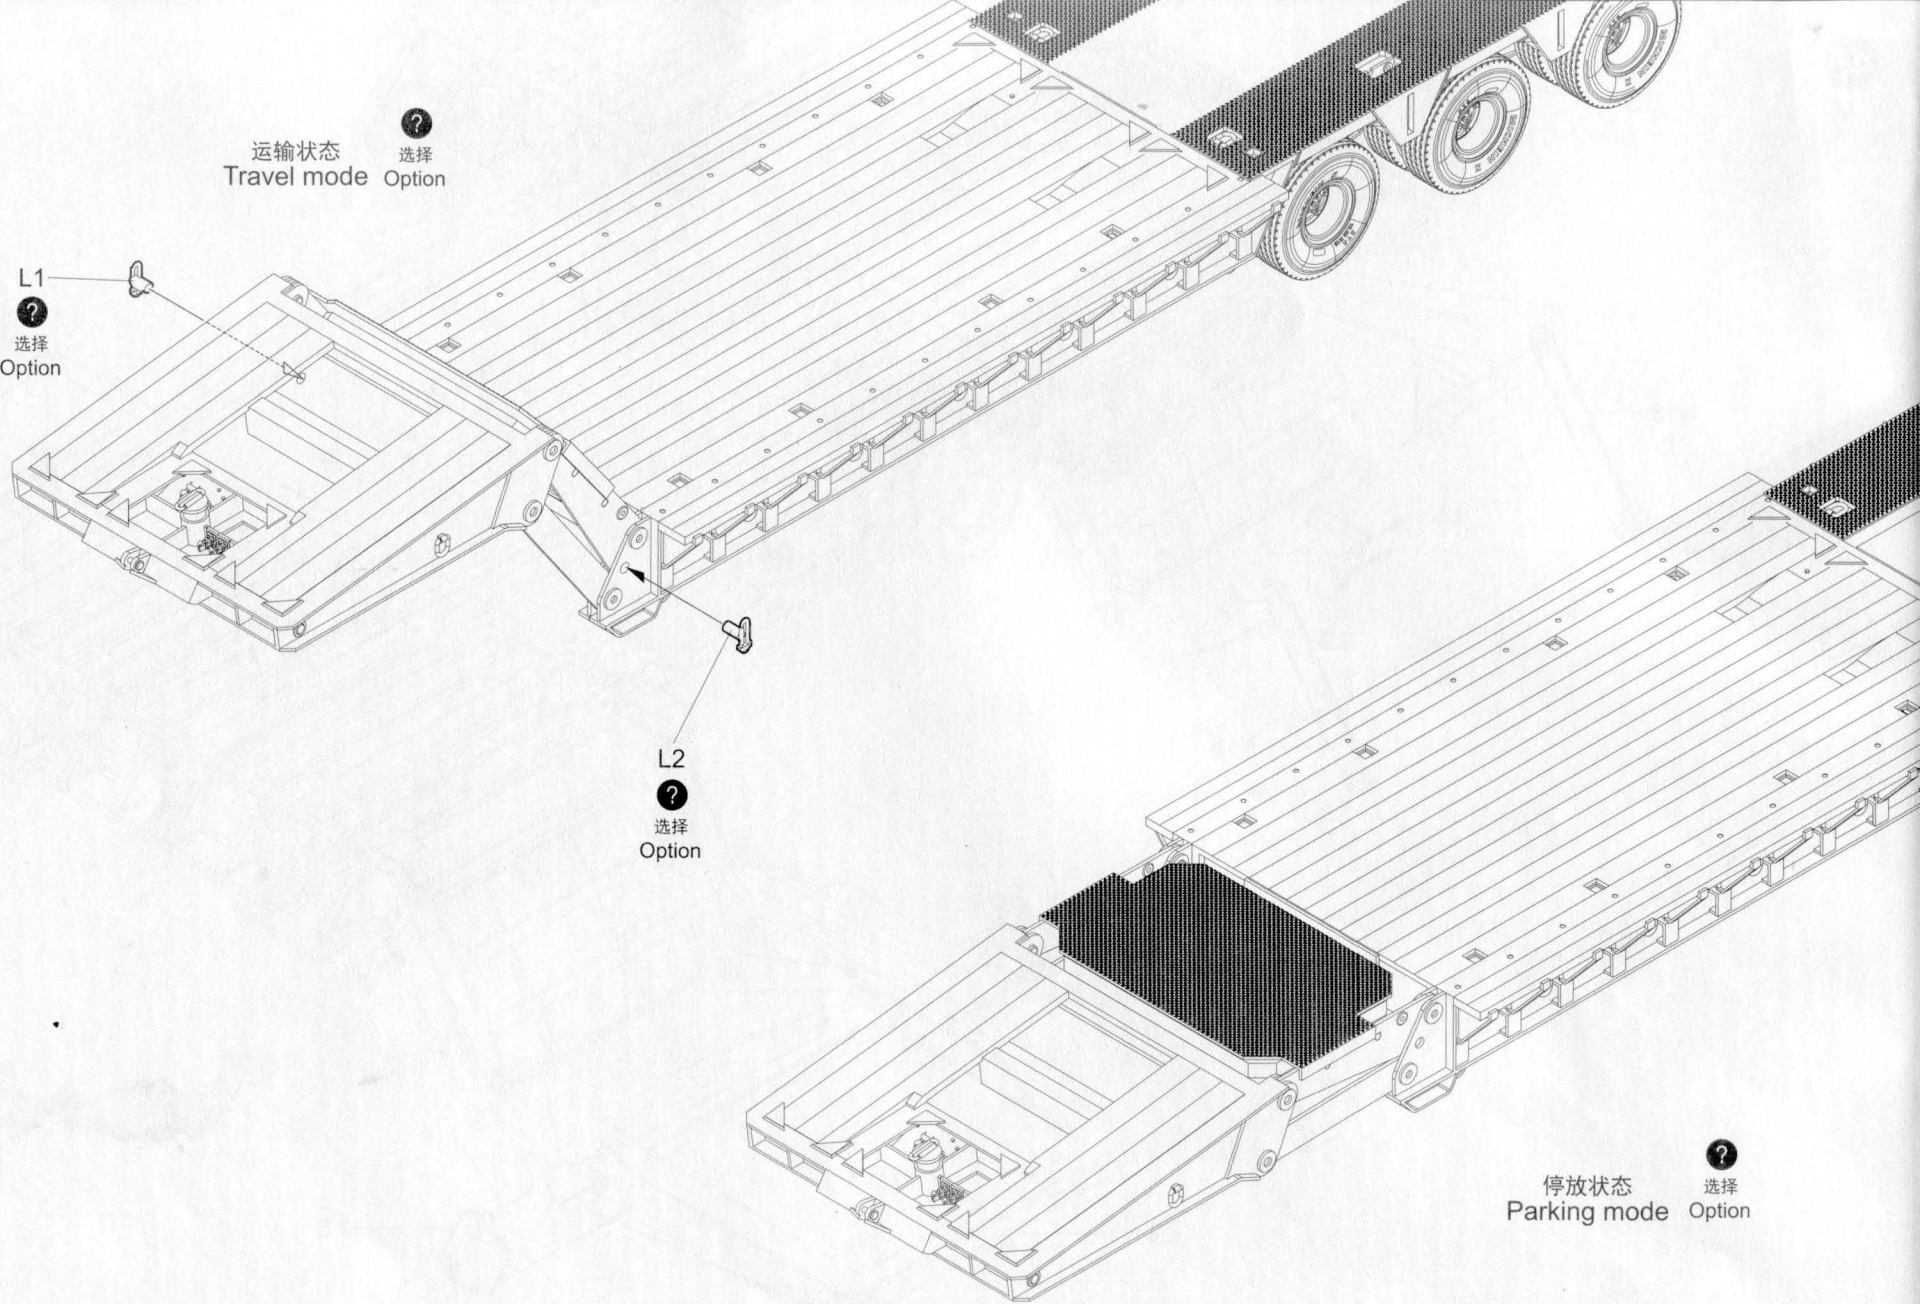


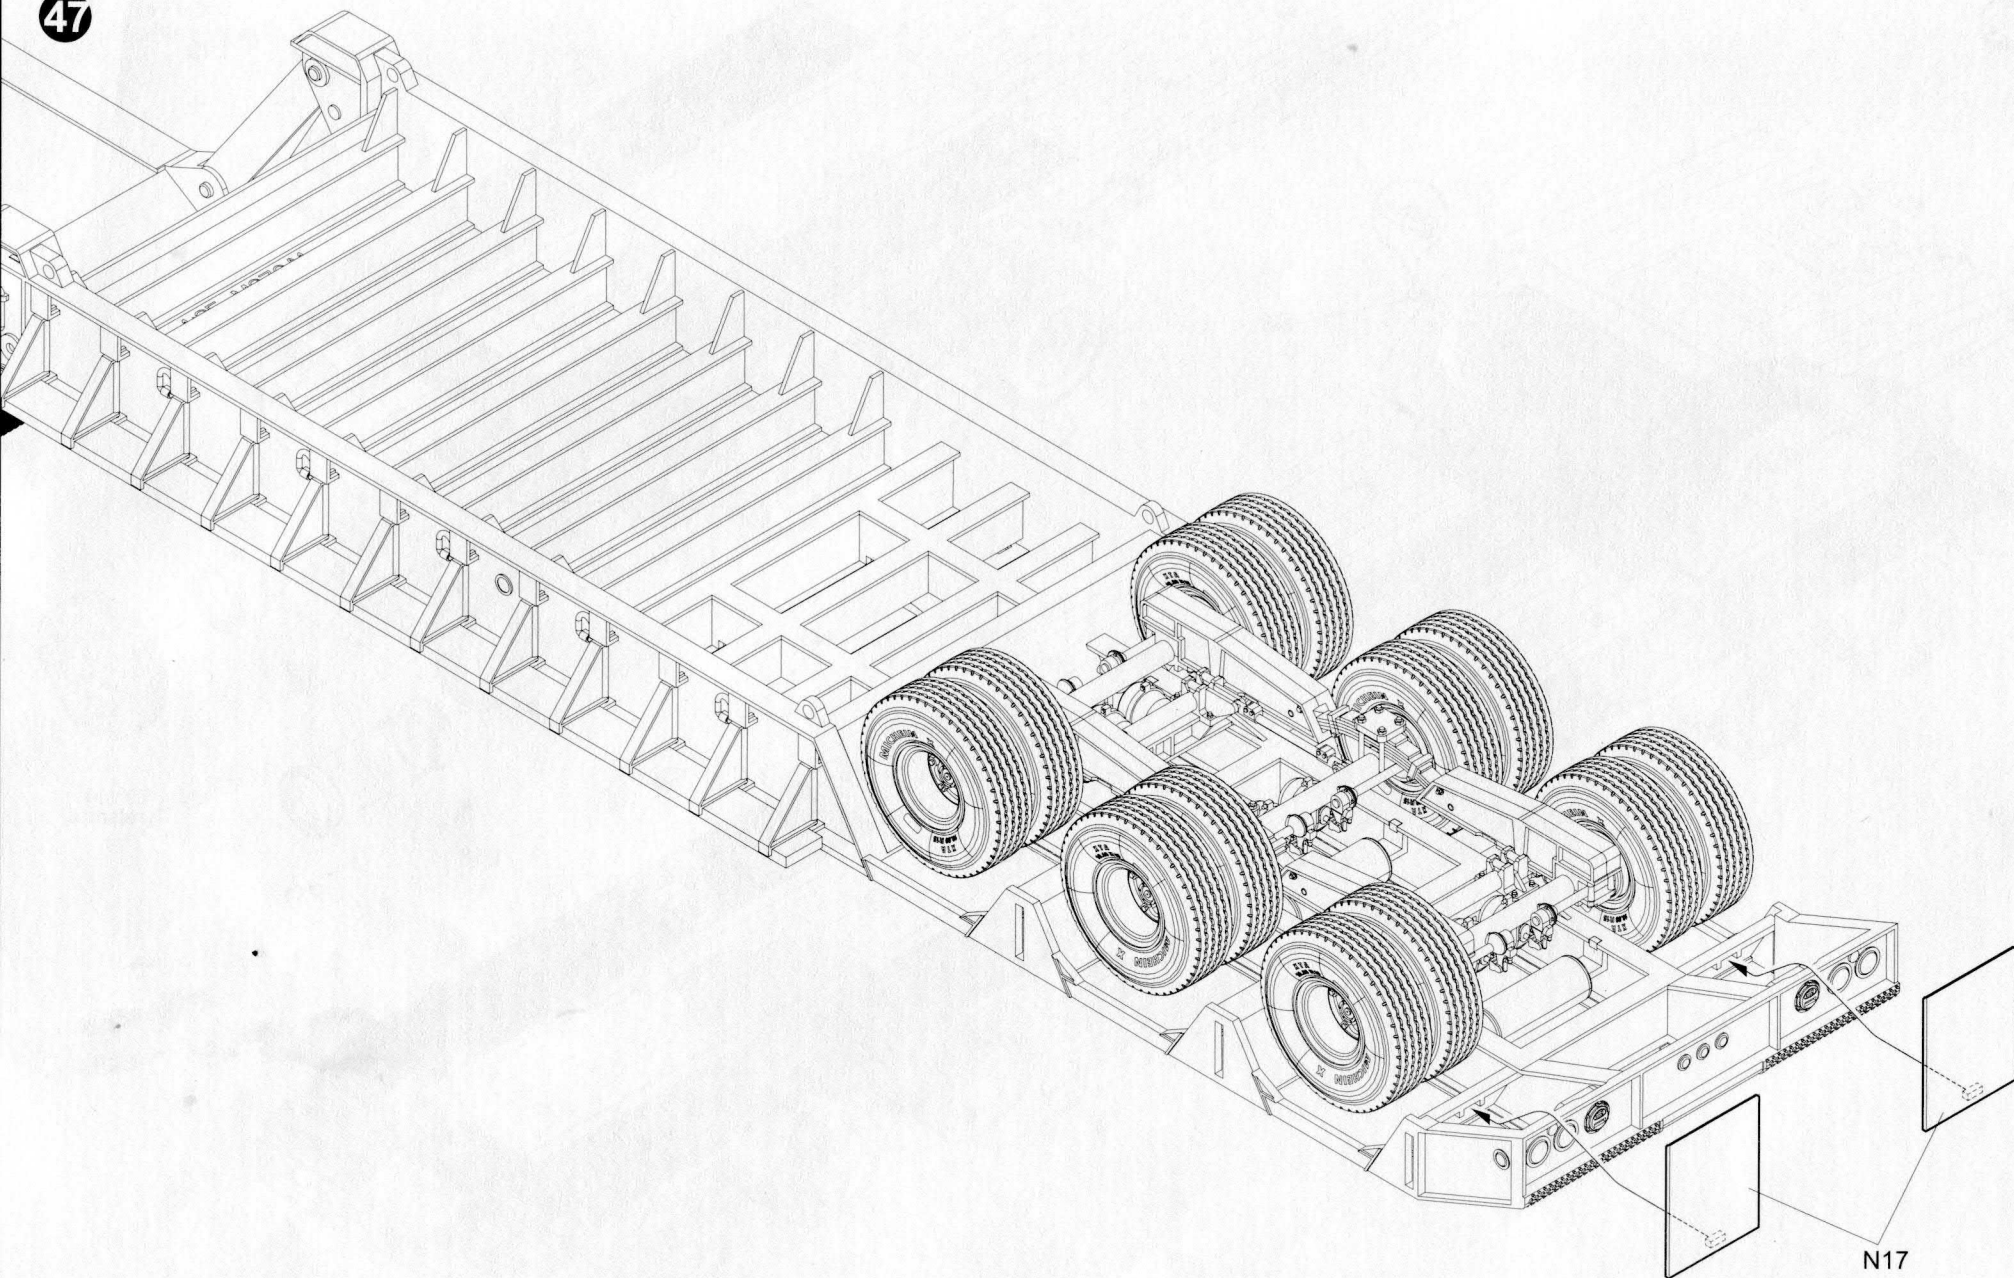

N17

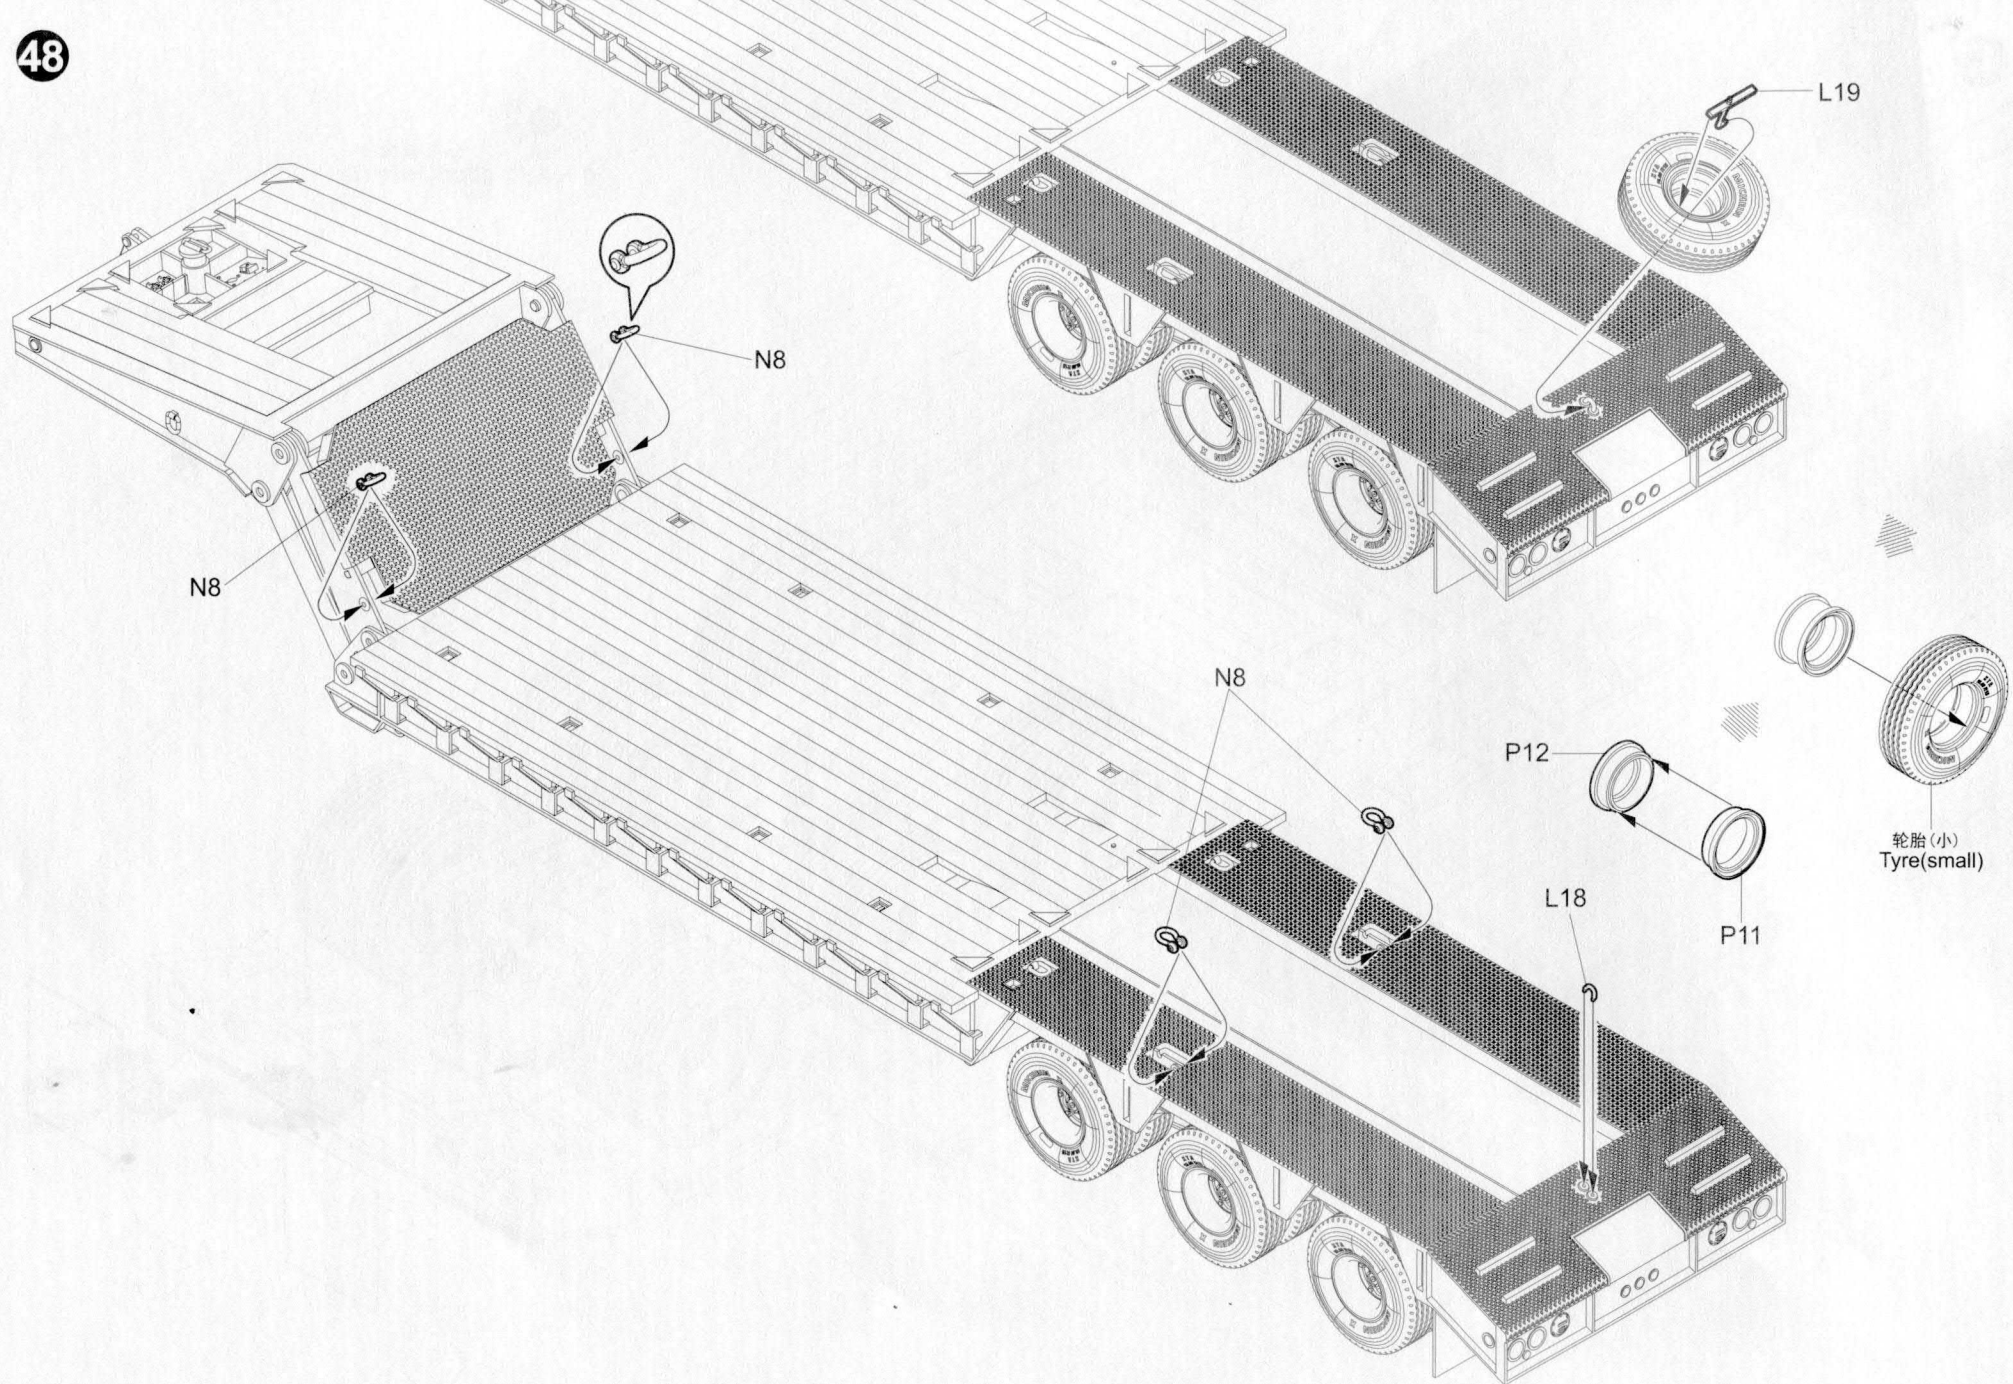


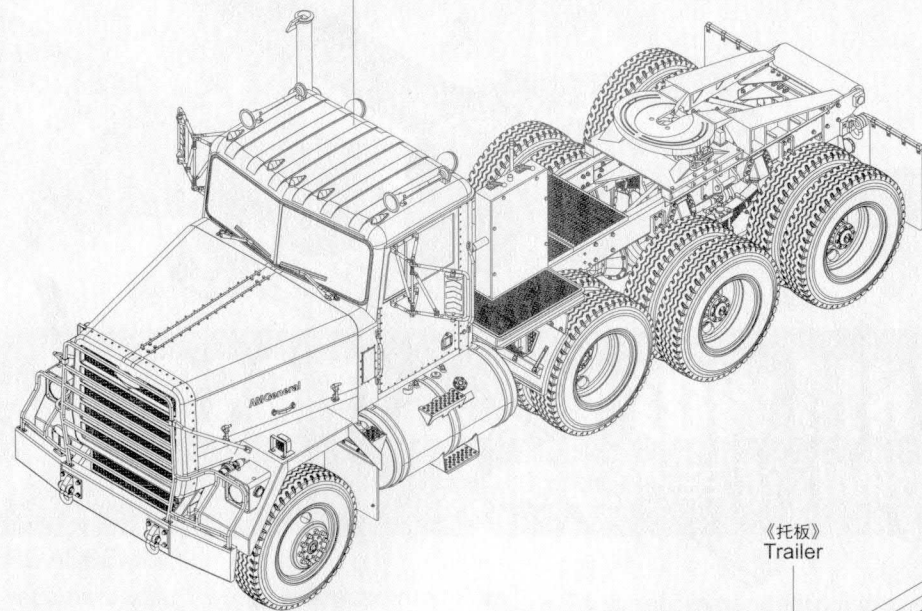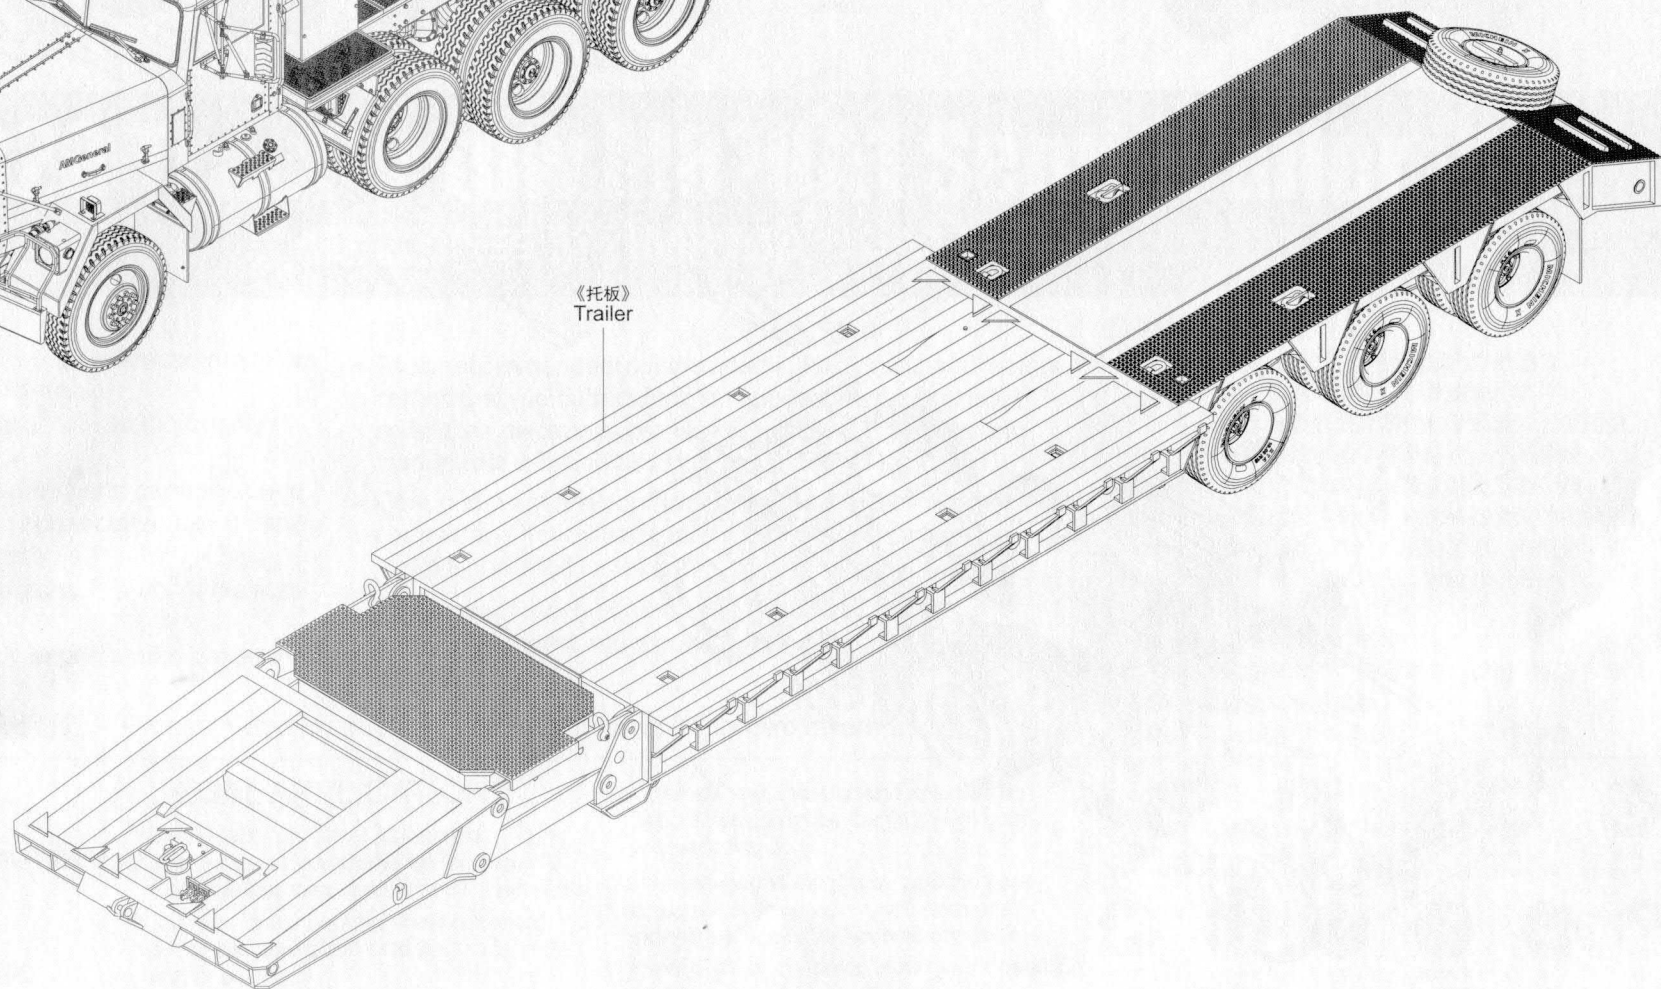《拖车》
Tractor《托板》
Trailer

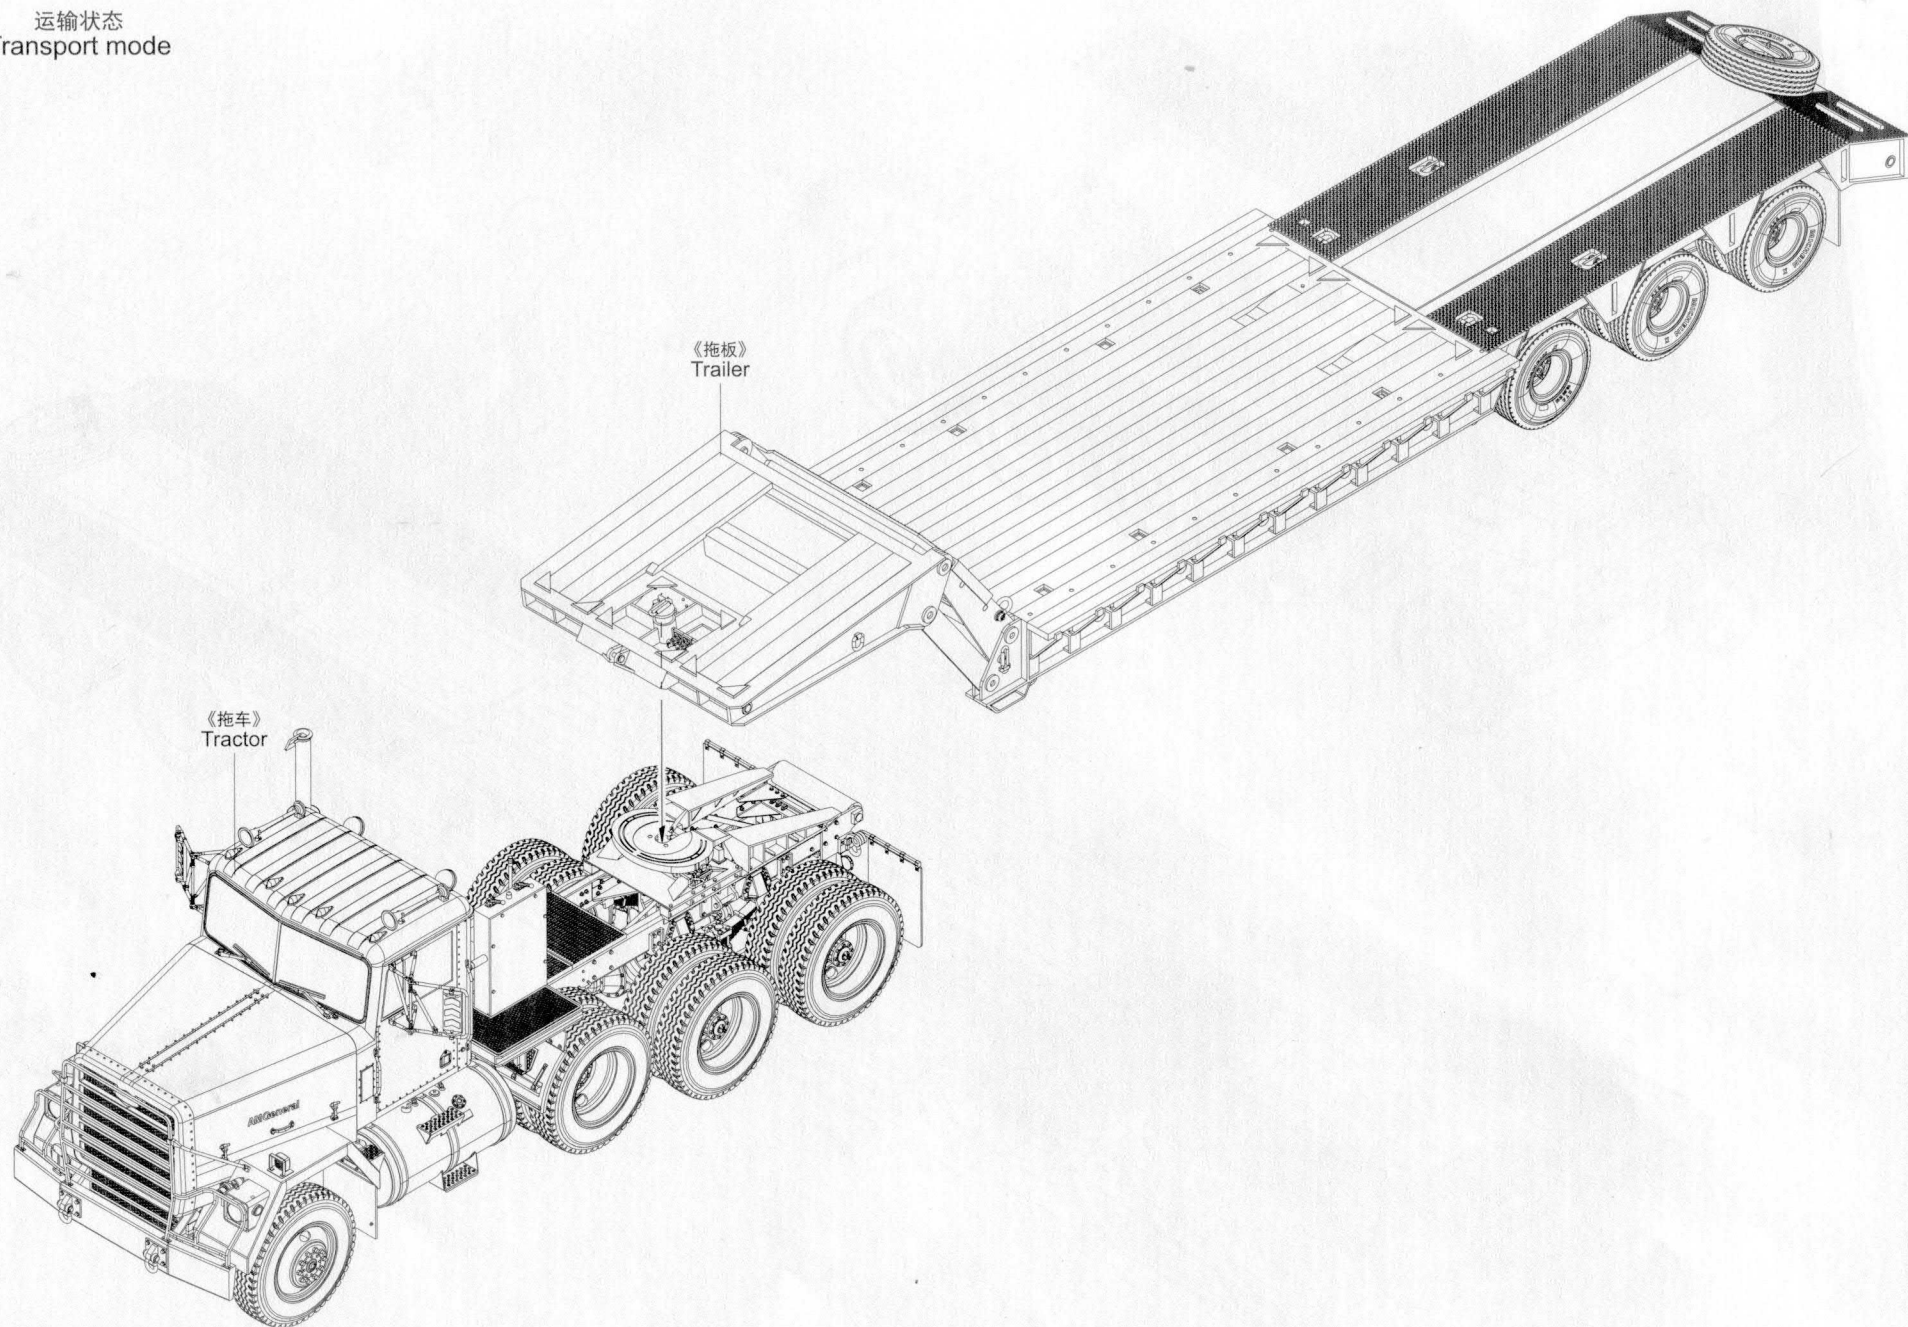

涂装同标贴指示
Painting & Marking guide


B

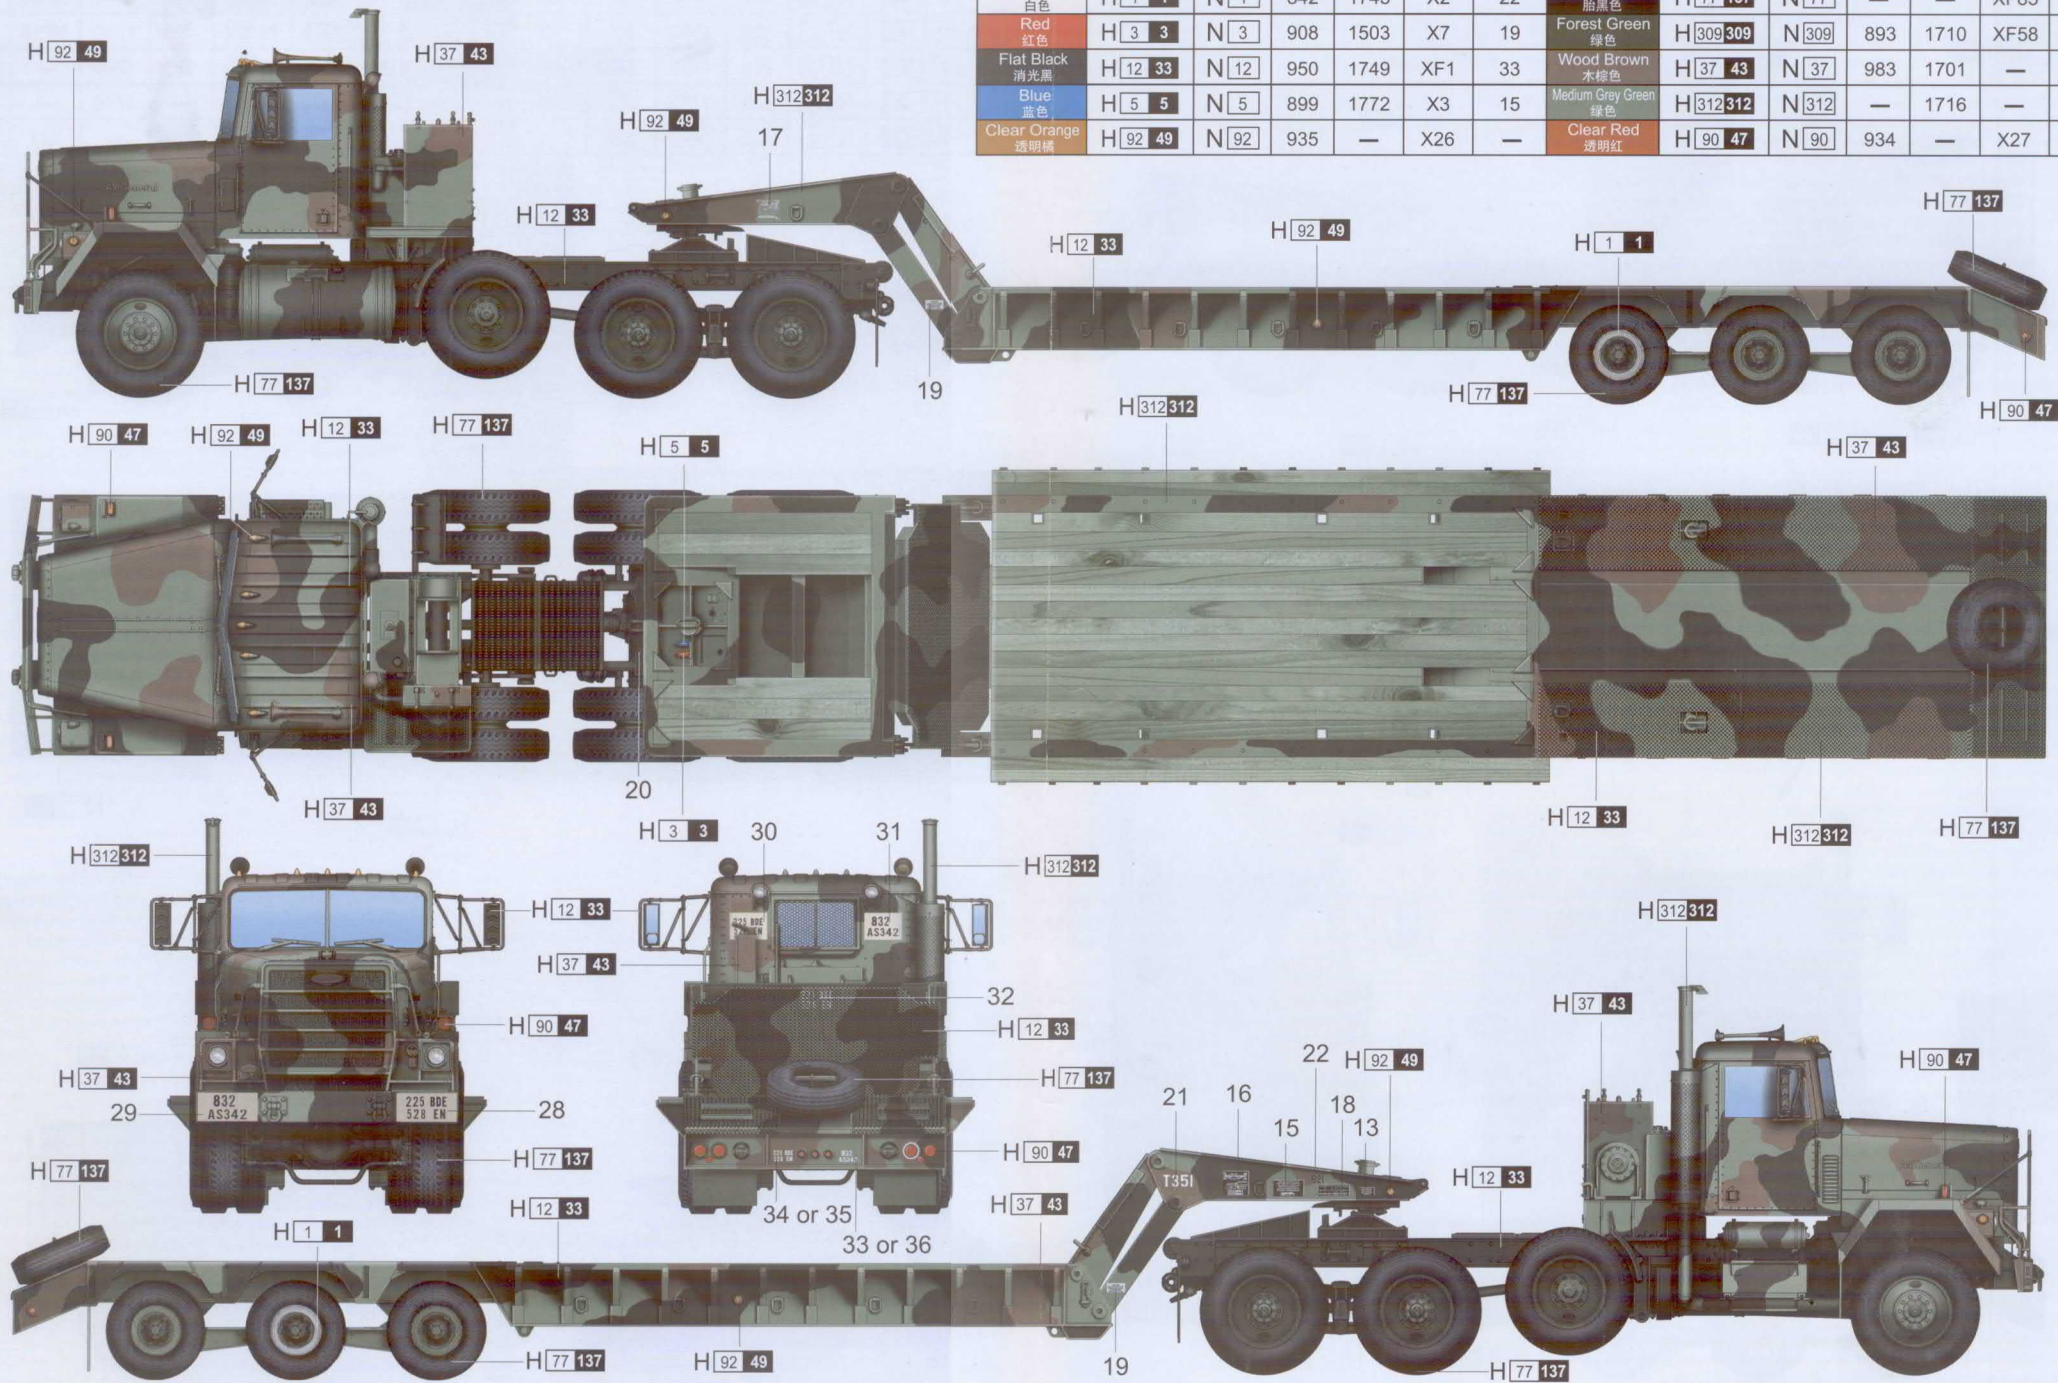

PAINT REFERENCE COLOR													
Color	Mr.Hobby	Acrysion	Vallejo	Model Master	Tamiya	Humbrol	Color	Mr.Hobby	Acrysion	Vallejo	Model Master	Tamiya	Humbrol
White 白色	H 1 1	N 1	842	1745	X2	22	Tire Black 胎黑色	H 77 137	N 77	—	—	XF85	—
Red 红色	H 3 3	N 3	908	1503	X7	19	Forest Green 绿色	H 309 309	N 309	893	1710	XF58	116
Flat Black 消光黑	H 12 33	N 12	950	1749	XF1	33	Wood Brown 木棕色	H 37 43	N 37	983	1701	—	186
Blue 蓝色	H 5 5	N 5	899	1772	X3	15	Medium Gray Green 绿色	H 312 312	N 312	—	1716	—	120
Clear Orange 透明橘	H 92 49	N 92	935	—	X26	—	Clear Red 透明红	H 90 47	N 90	934	—	X27	—

涂装同标贴指示
Painting & Marking guide

A

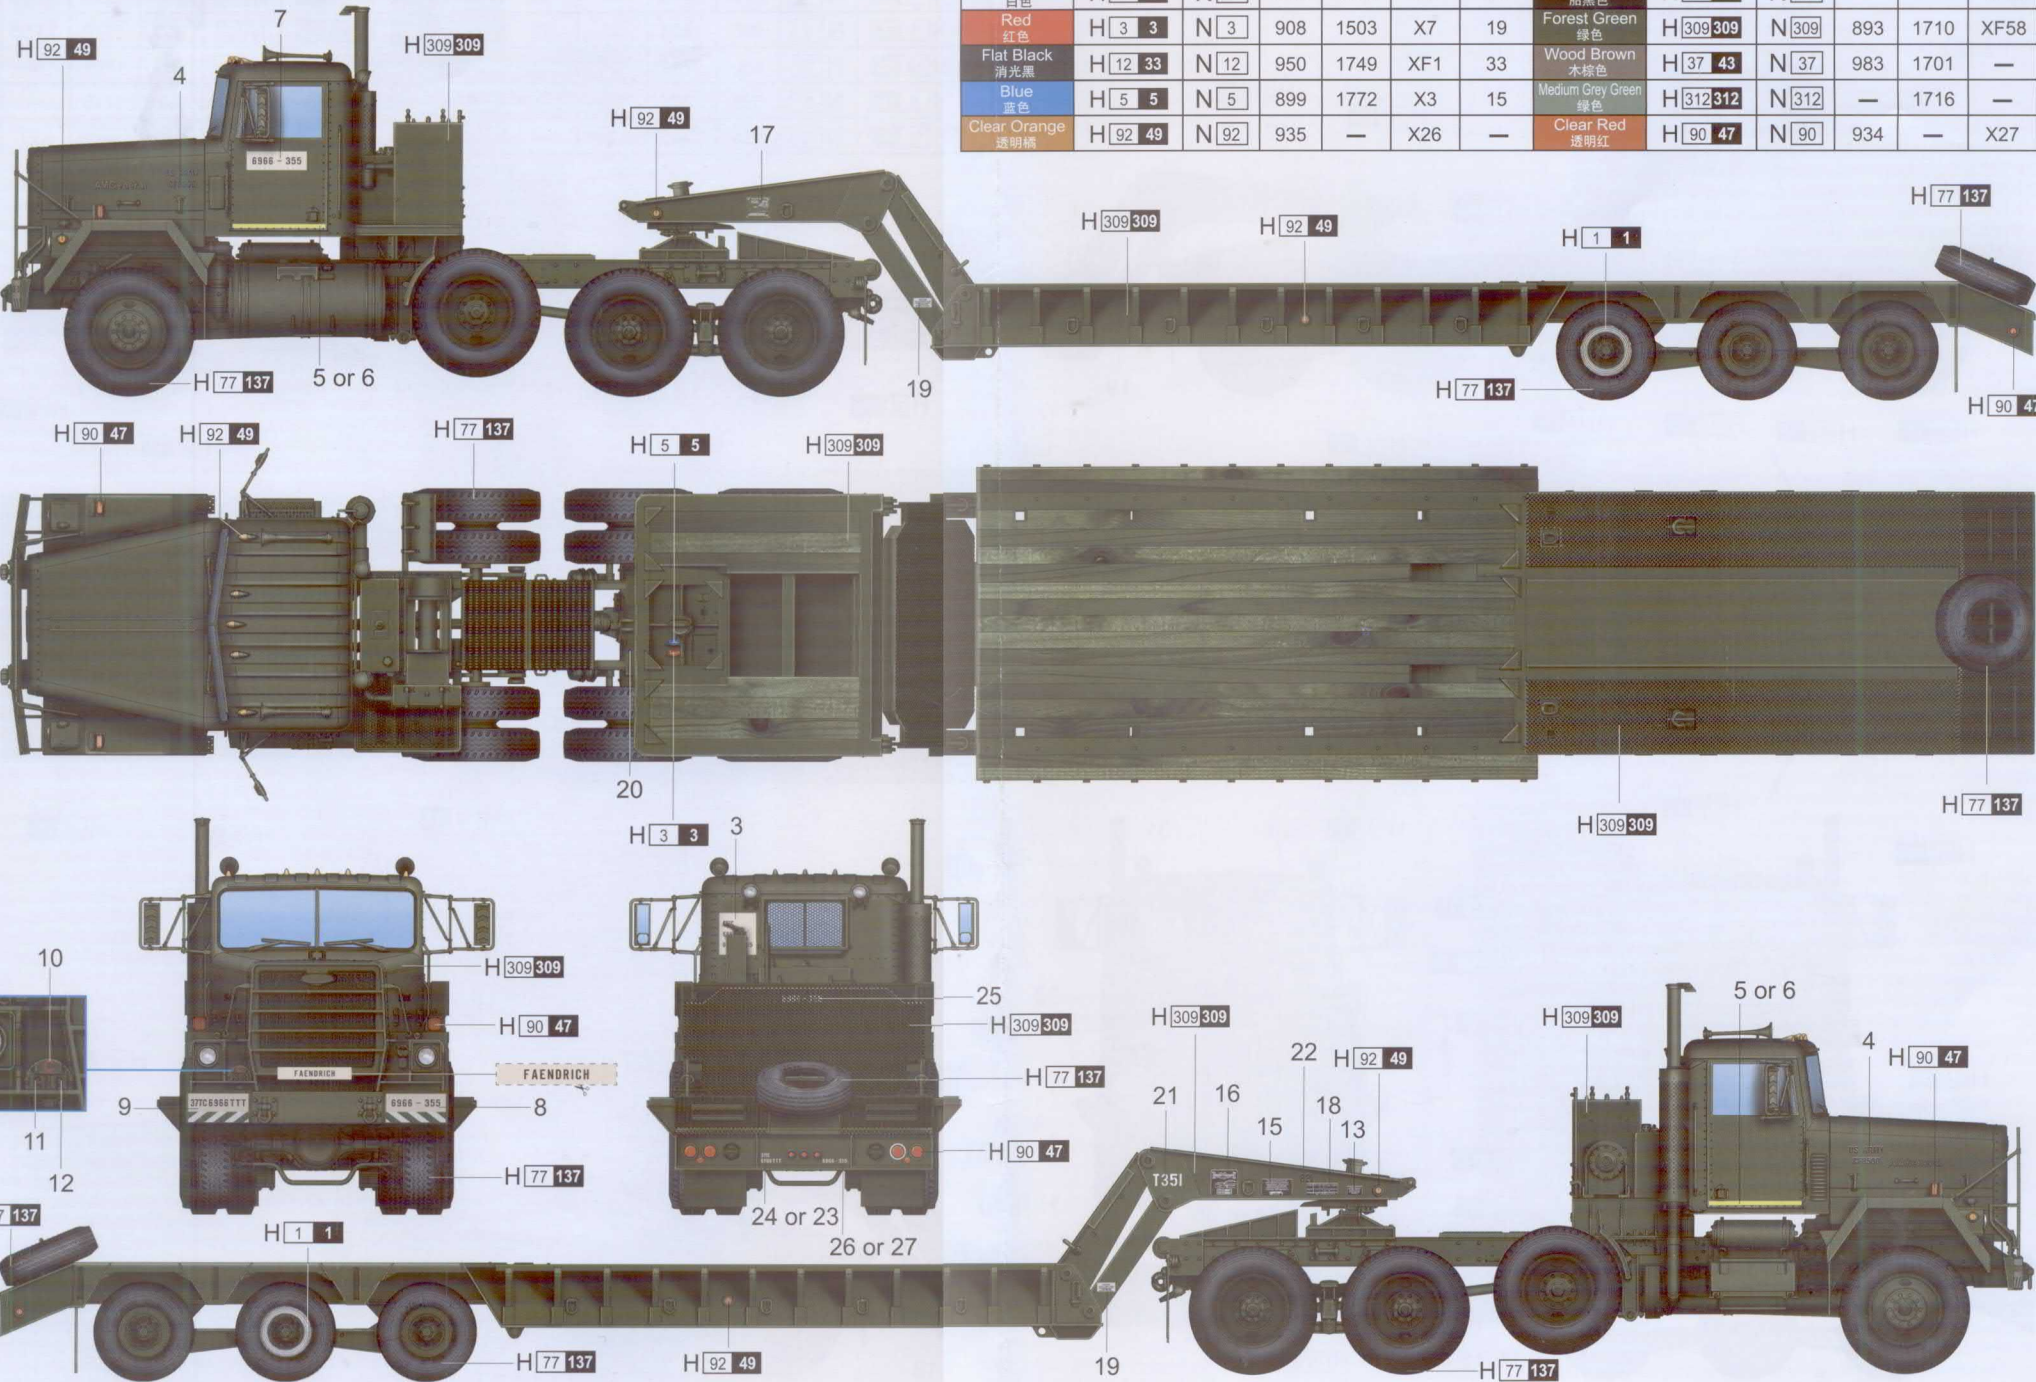

PAINT REFERENCE COLOR

Color	Mr.Hobby	Acrysion	Vallejo	Model Master	Tamiya	Humbrol	Color	Mr.Hobby	Acrysion	Vallejo	Model Master	Tamiya	Humbrol
White 白色	H 1 1	N 1	842	1745	X2	22	Tire Black 胎黑色	H 77 137	N 77	—	—	XF85	—
Red 红色	H 3 3	N 3	908	1503	X7	19	Forest Green 绿色	H 309 309	N 309	893	1710	XF58	116
Flat Black 消光黑	H 12 33	N 12	950	1749	XF1	33	Wood Brown 木棕色	H 37 43	N 37	983	1701	—	186
Blue 蓝色	H 5 5	N 5	899	1772	X3	15	Medium Grey Green 绿色	H 312 312	N 312	—	1716	—	120
Clear Orange 透明橘	H 92 49	N 92	935	—	X26	—	Clear Red 透明红	H 90 47	N 90	934	—	X27	—