
Das Werk

JAGDPANTHER G2

Sd.Kfz.173

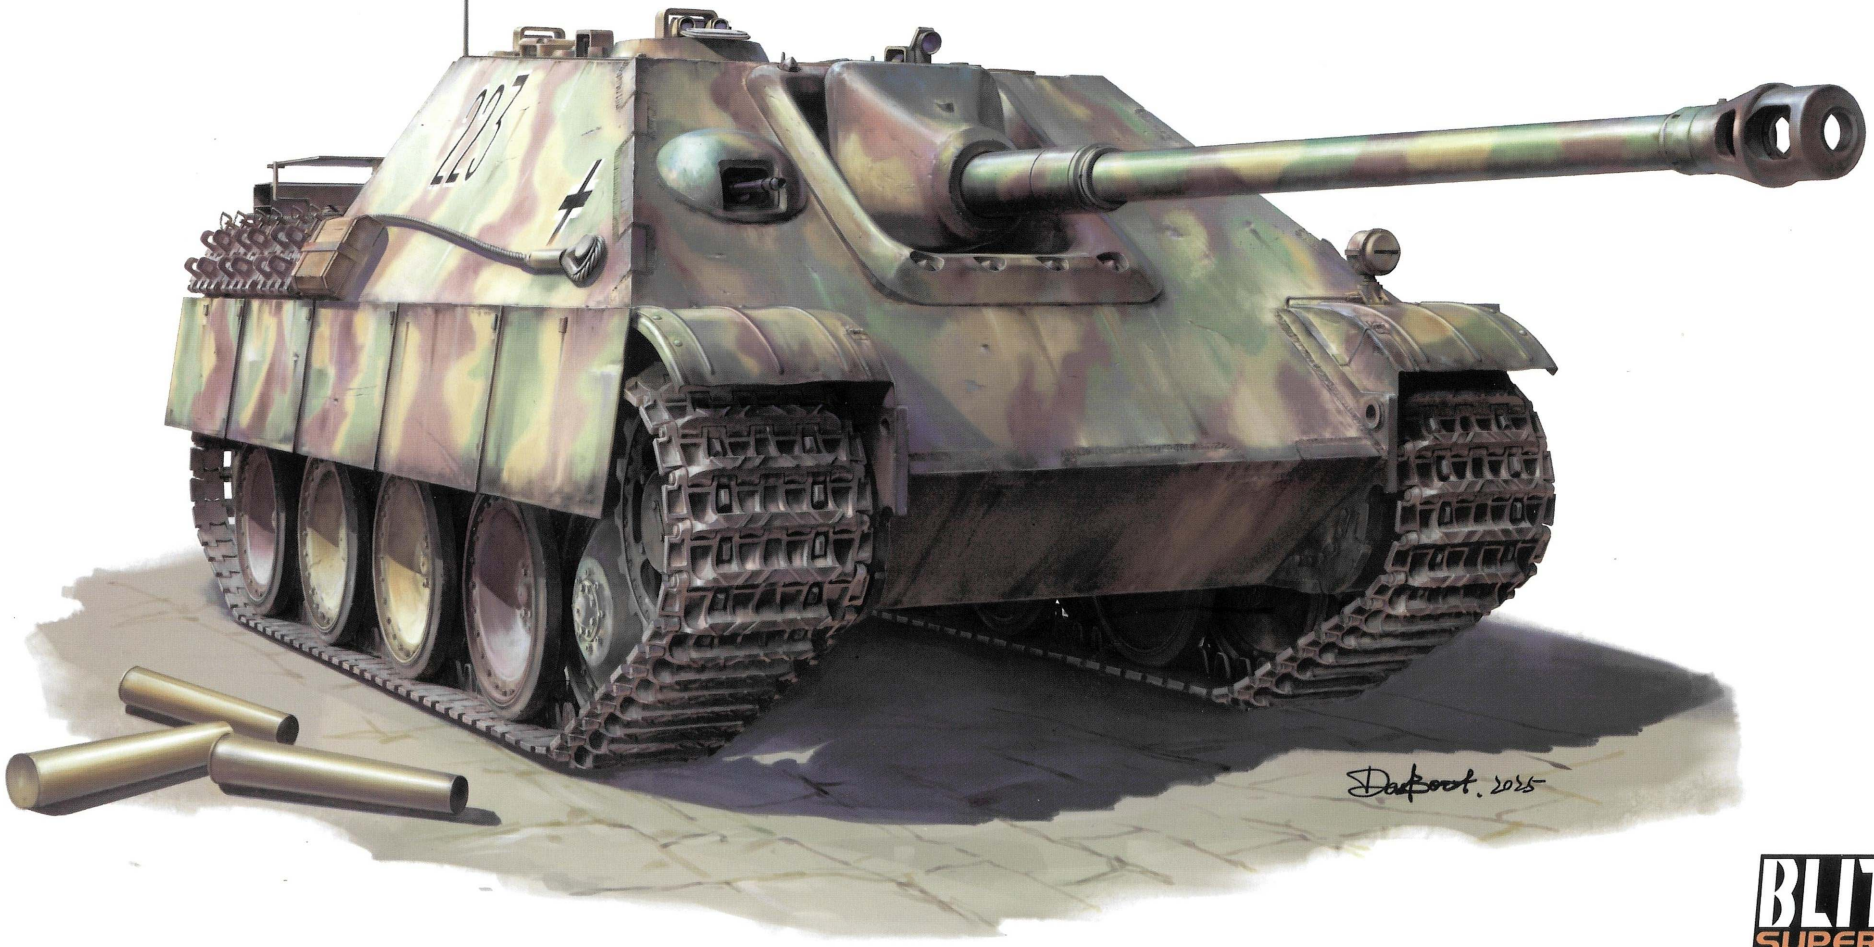

03.02.35042

BLITZ SUPER by TAKOM

READ BEFORE ASSEMBLY

CAUTION

●Read carefully and fully understand the instructions before commencing assembly. A supervising adult should also read the instructions if a child assembles the model.
●When assembling this kit,tools including knives used.Extra care should be taken to avoid personal injury.
●Keep out of reach of small children.Children must not be allowed to suck any part, or pull vinyl bag over their heads.


Be Careful



Optional


Drill



Instant Glue for Metal

APPLYING DECALS


1.Clean the model surface with a wet cloth.
2.Cut out each decal design from sheet,and dip it in tepid water for 15~20 sec.
3.Hold the backing sheet edge and slide decal onto the model.
4.Move decal into position by wetting decal with finger.
5.Press decal gently down with a soft cloth until excess water and air bubbles are gone.

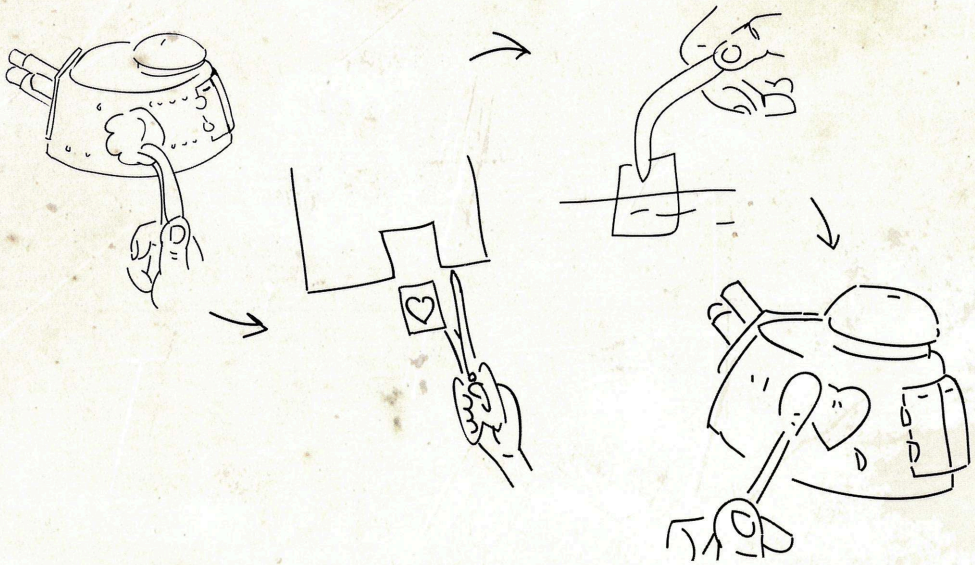


REMOVING PE

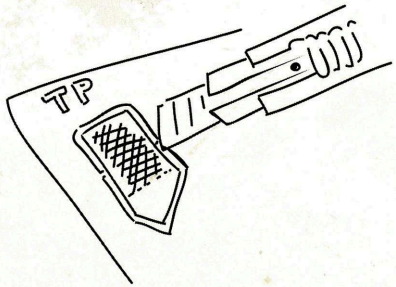

Be careful not to hurt when removing PE parts.

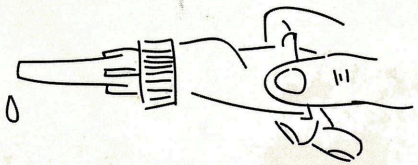



Secure using instant glue (not included).

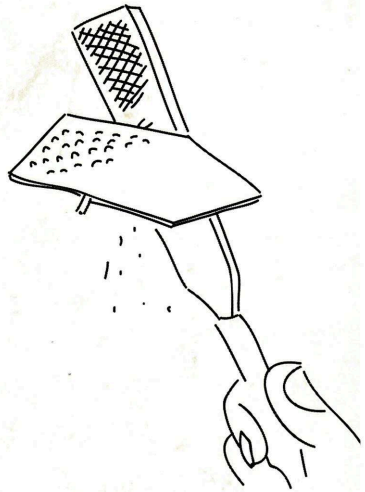



Finish using file.


PARTS

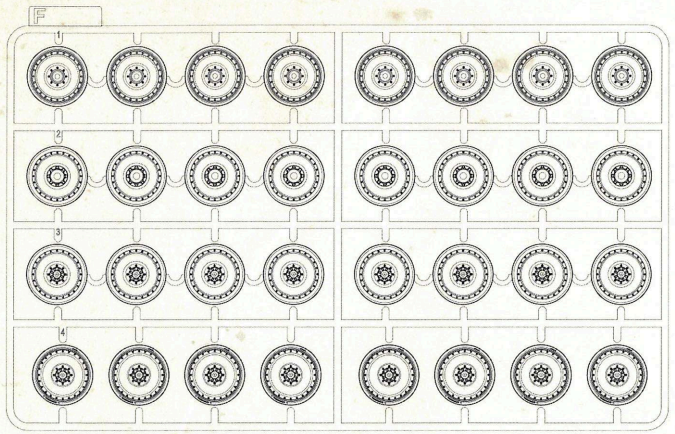

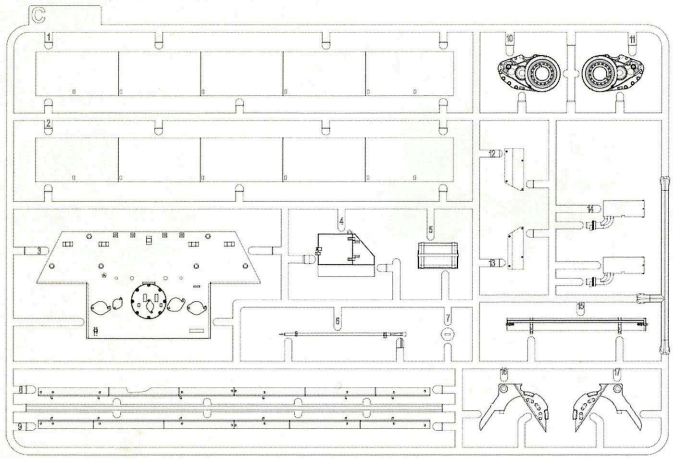


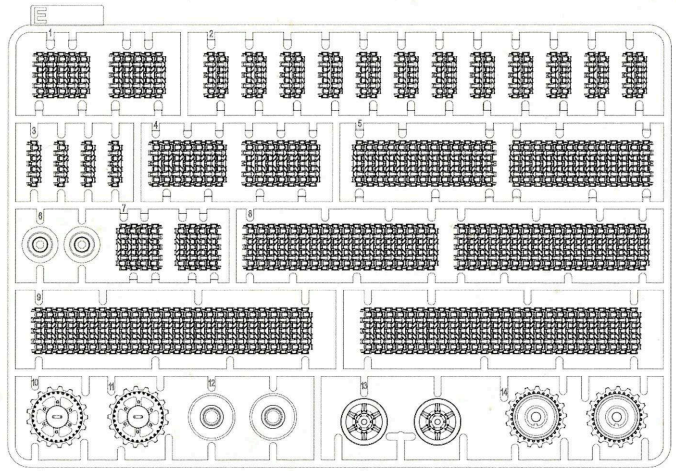


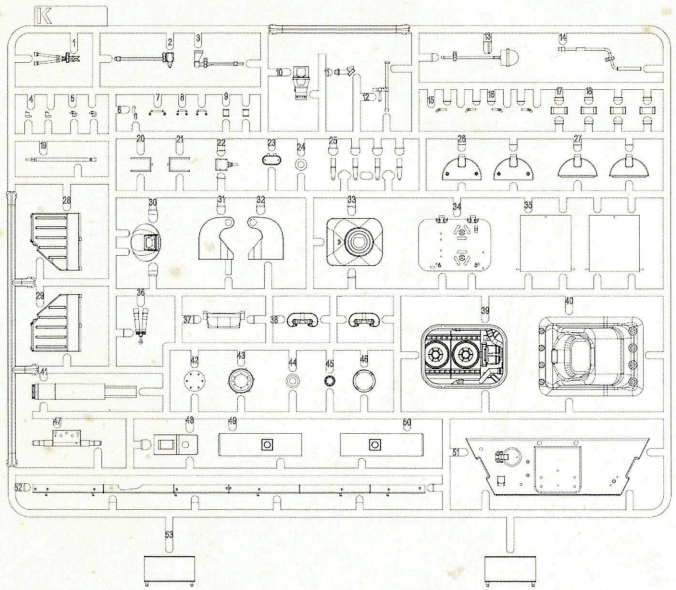

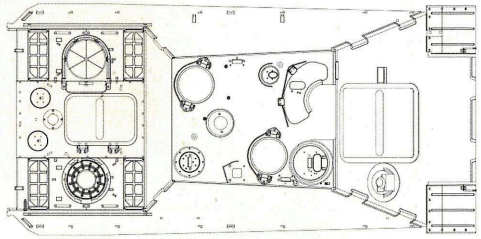


Upper Hull

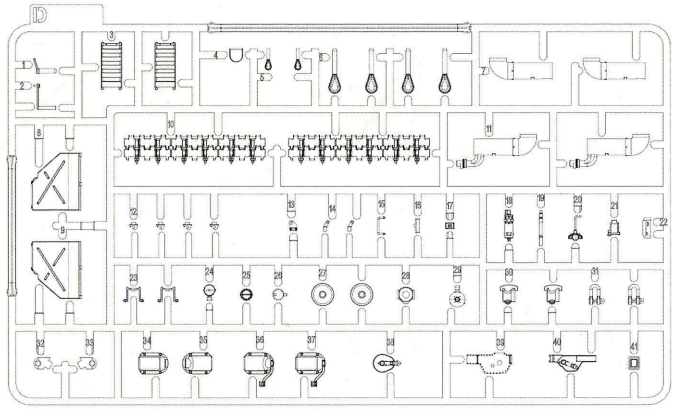




Metal Gun Barrel

Cable

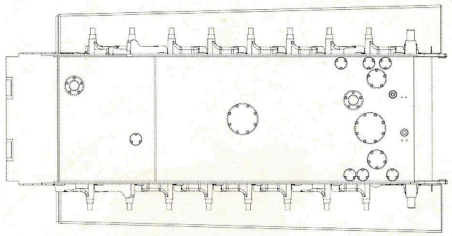


Lower Hull




Decal




TP

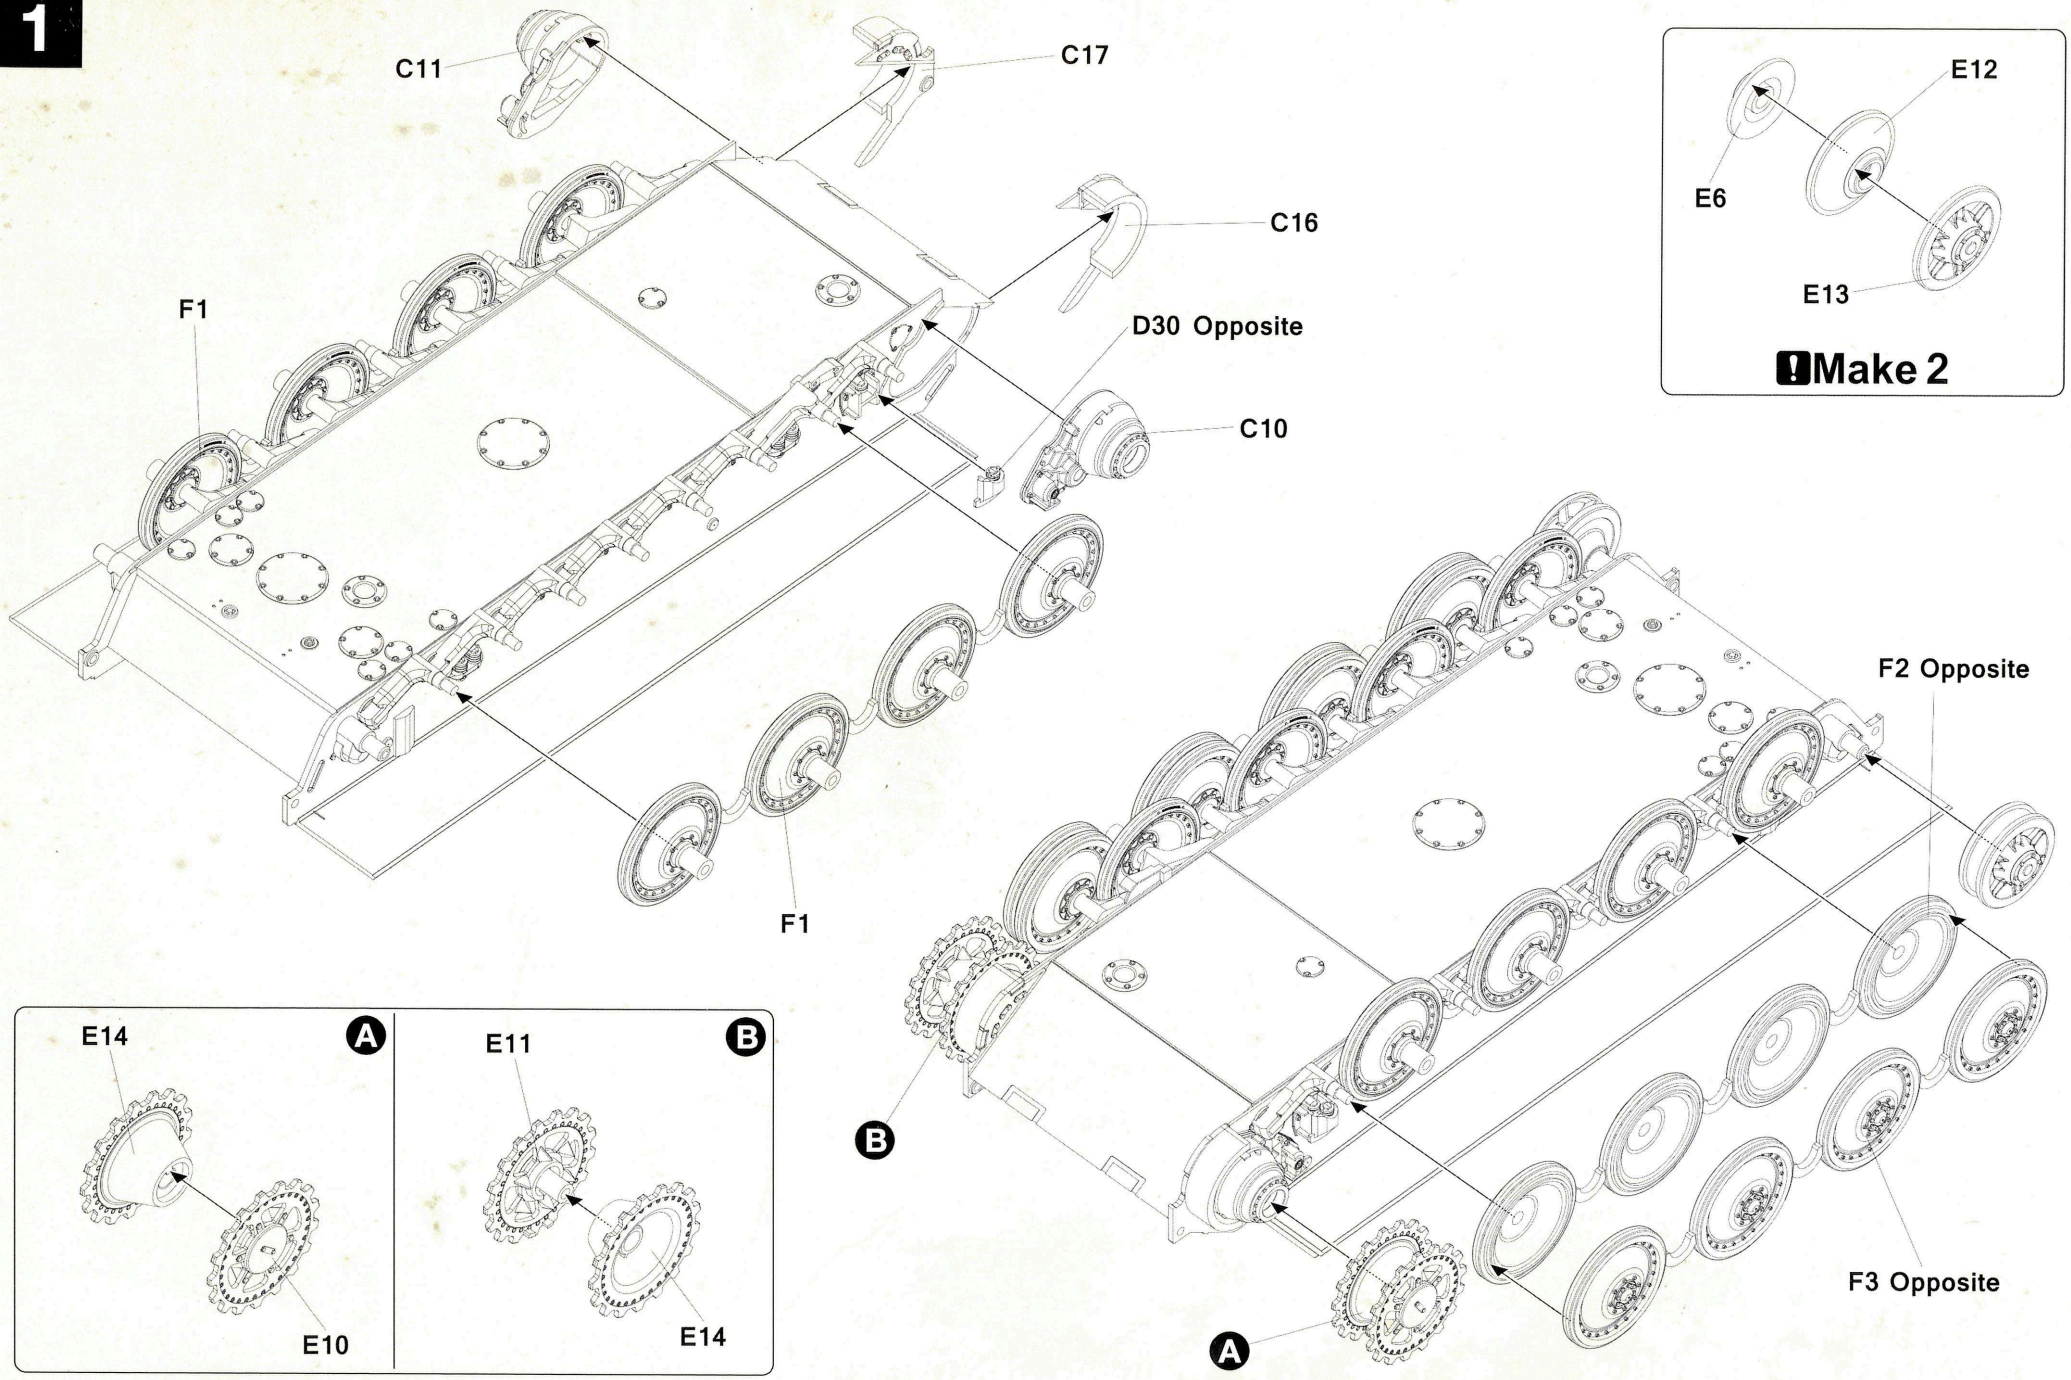

C11
C17
C16
F1
D30 Opposite
C10
F1
E12
E6
E13
Make 2
F2 Opposite
B
A
F3 Opposite
E14
A
E10
E11
B
E14

2

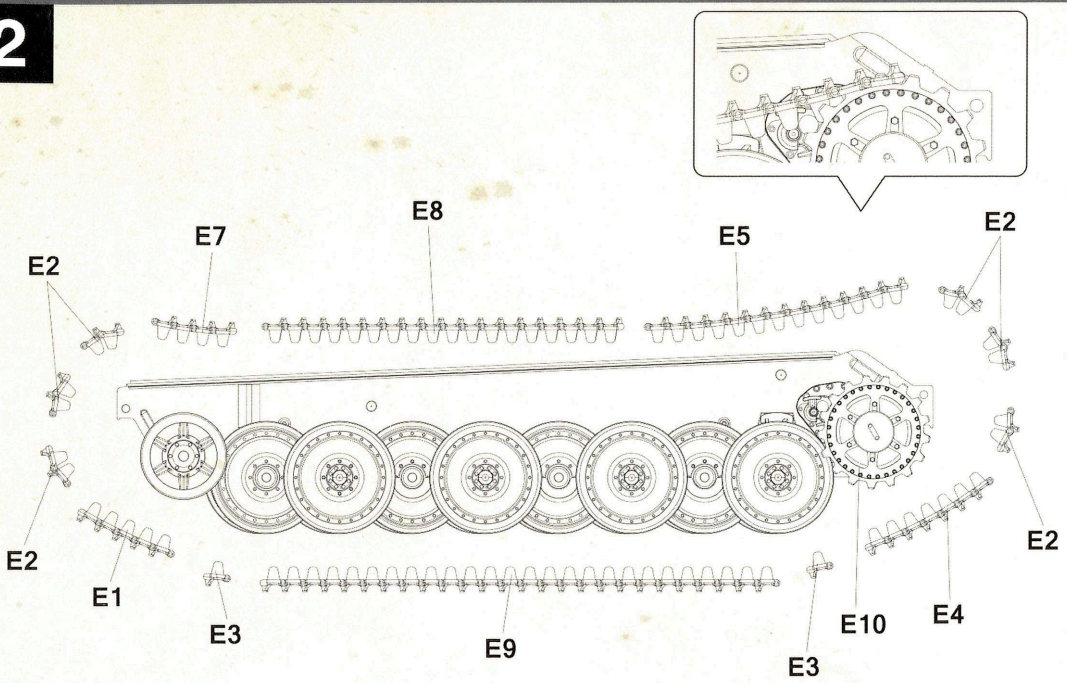

E2
E7
E8
E5
E2
E2
E1
E3
E9
E3
E10
E4
E2

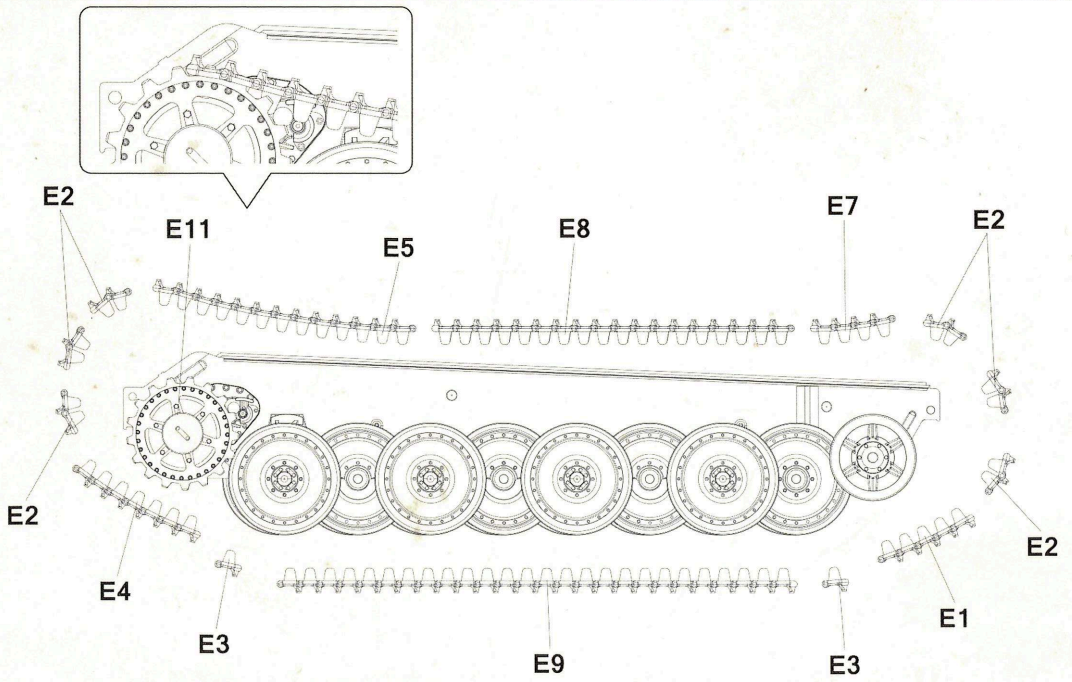

E2
E11
E5
E8
E7
E2
E2
E4
E3
E9
E3
E1
E2


3

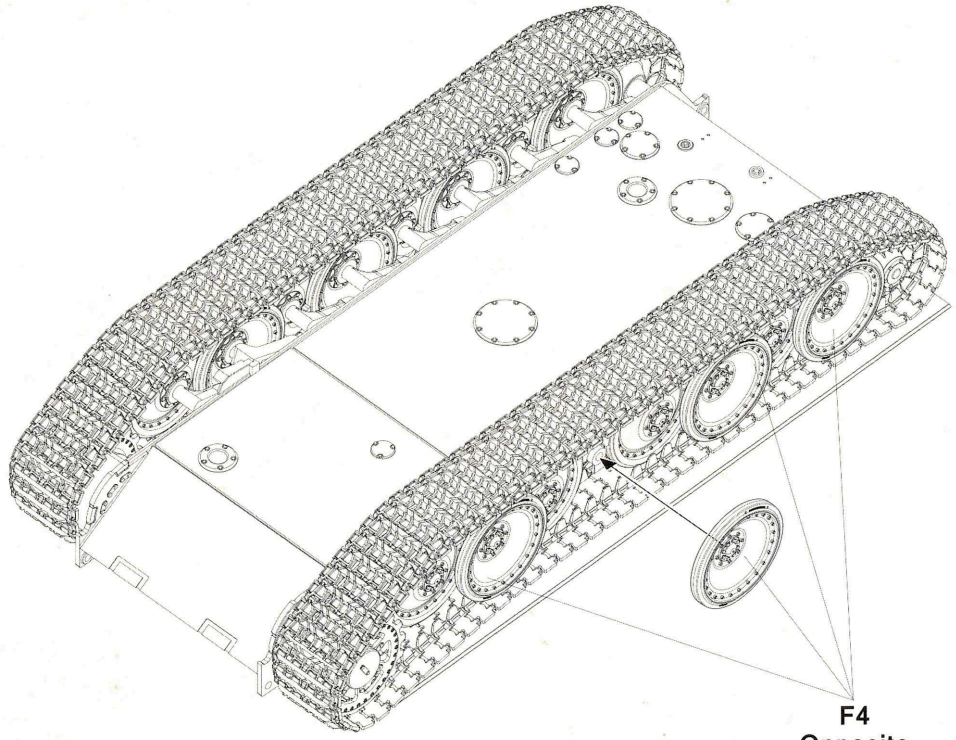
F4
Opposite


4

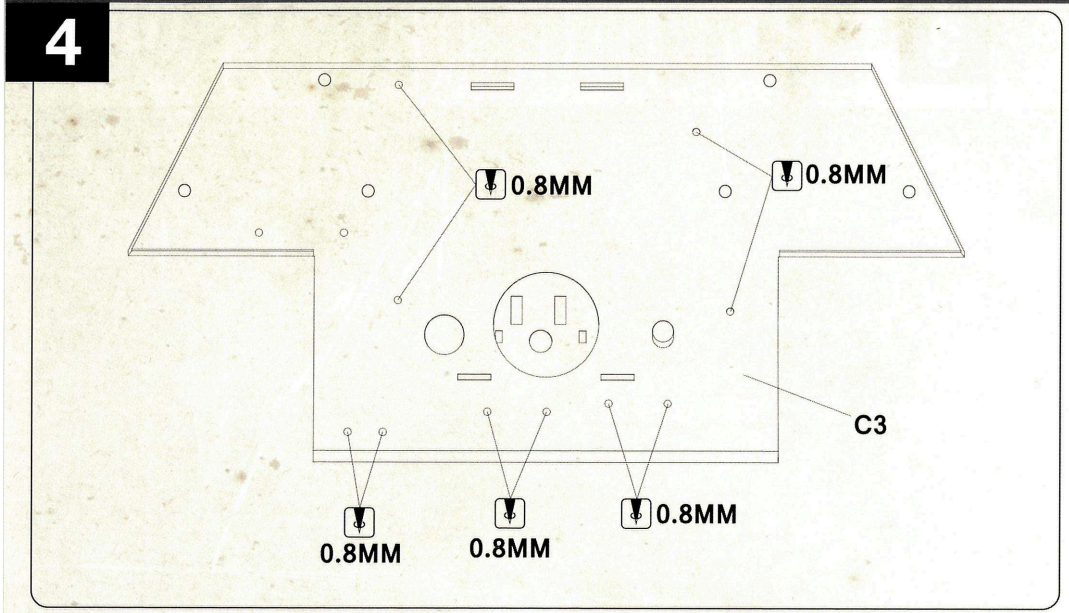

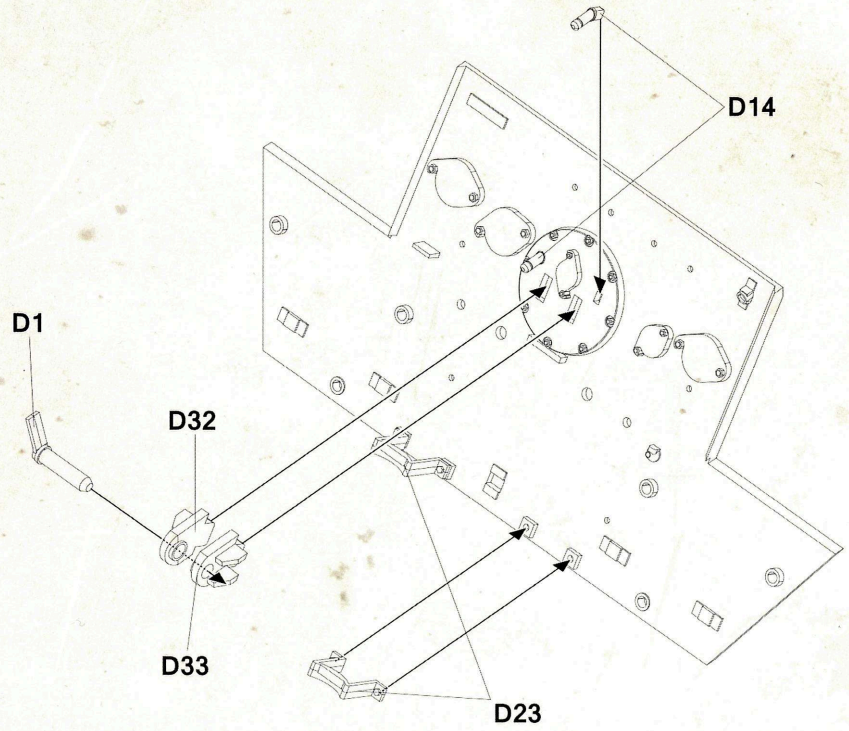


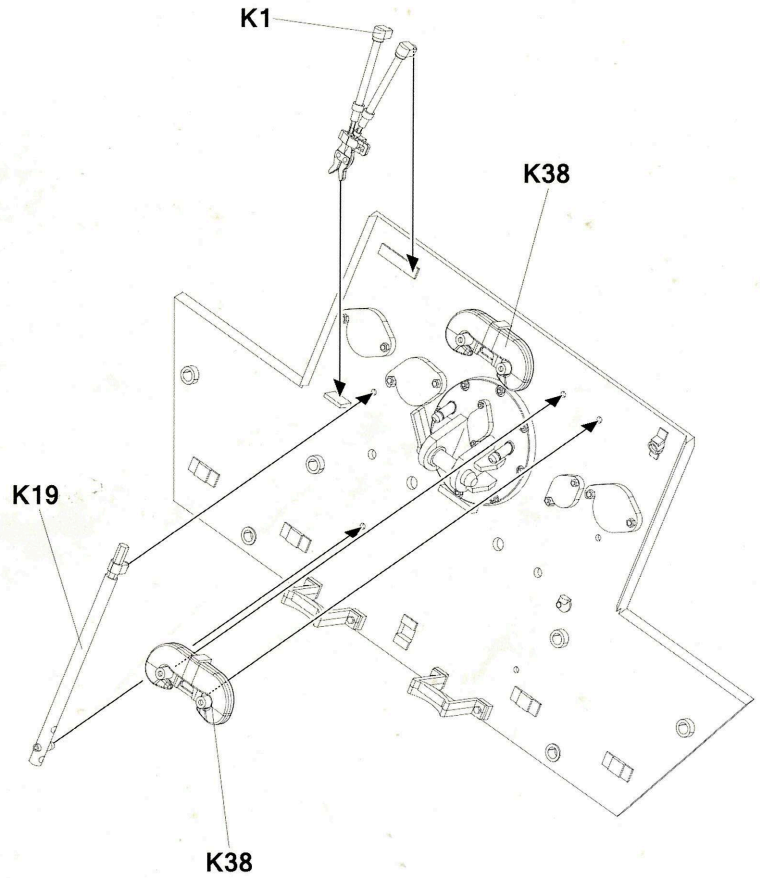



5

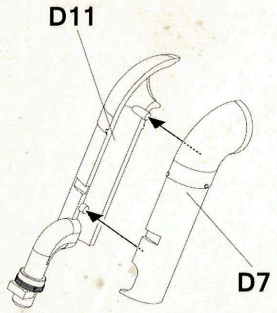

D11
D7

!Make 2

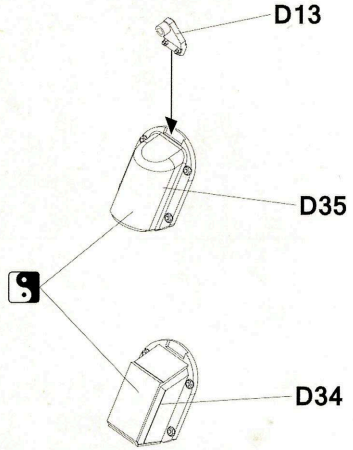

D13
D35
D34

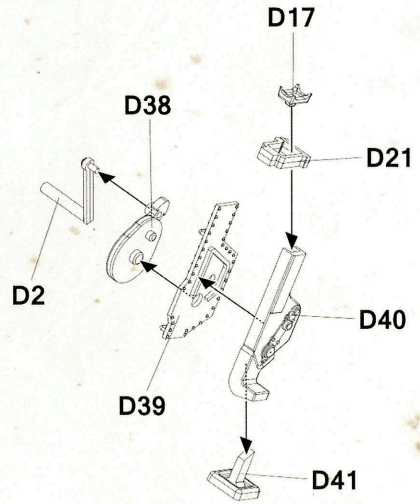
D17
D38
D21
D2
D40
D39
D41

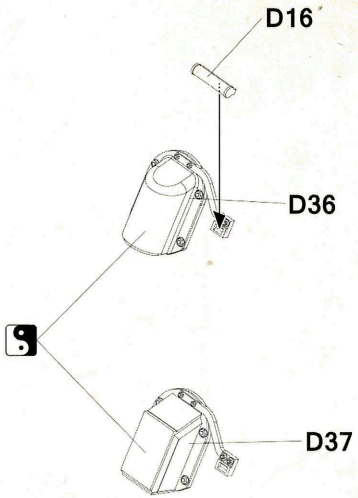

D16
D36
D37

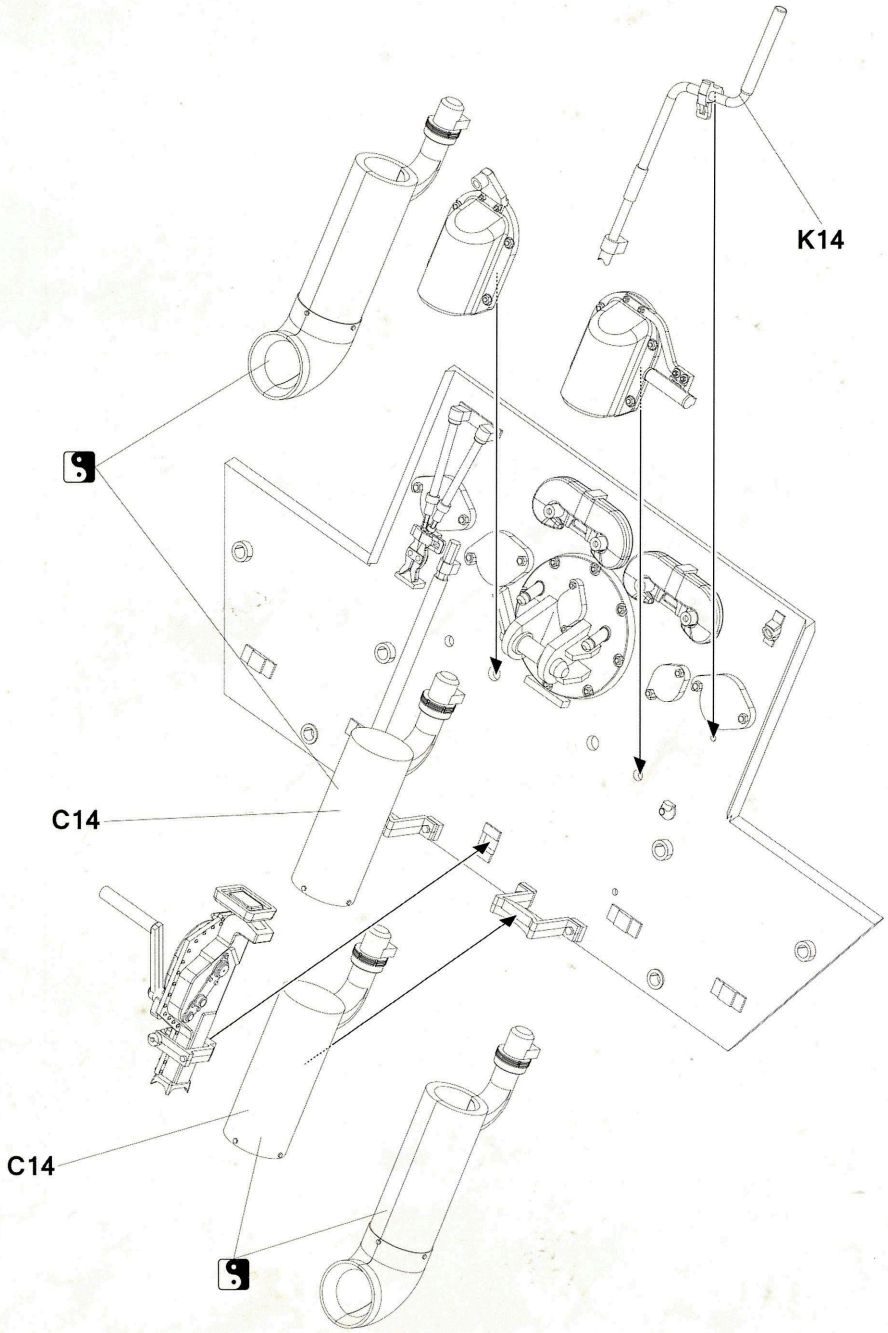

K14
C14
C14

6

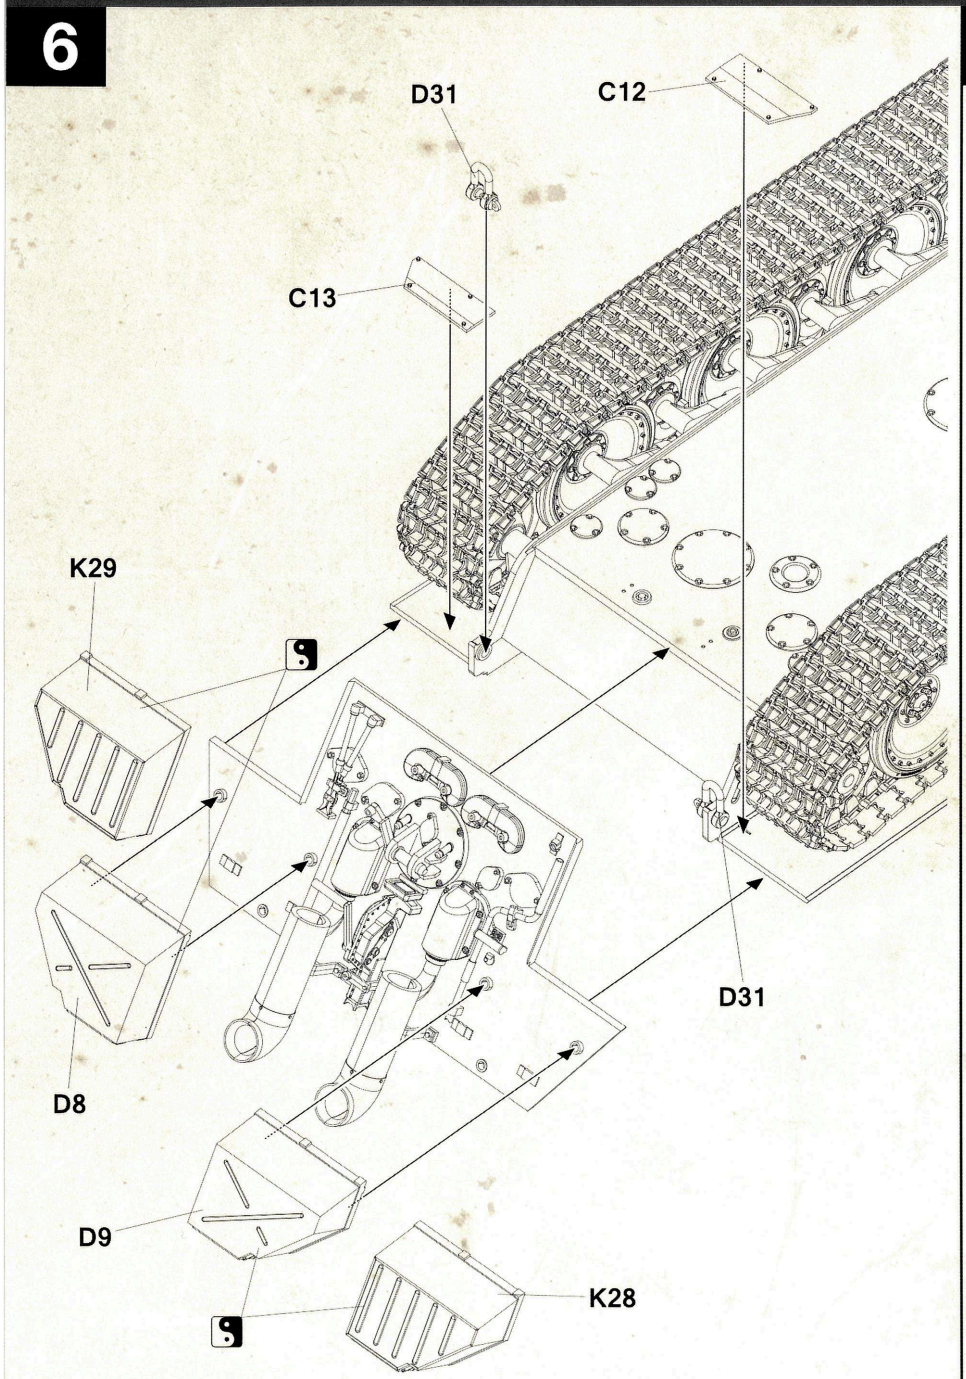


7

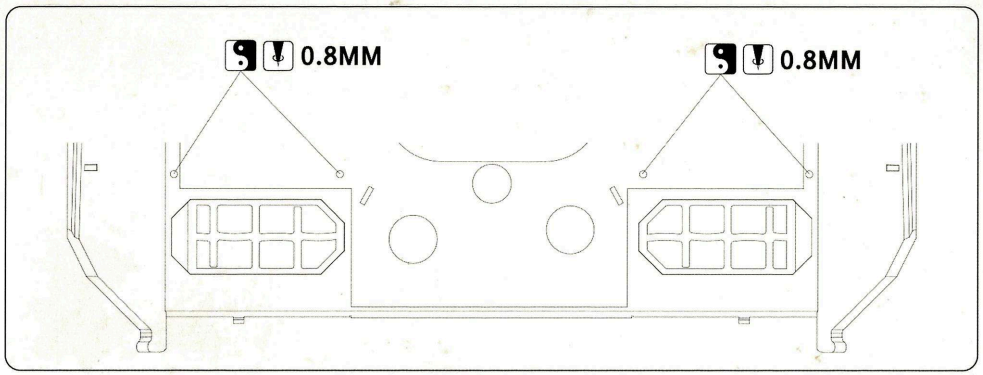

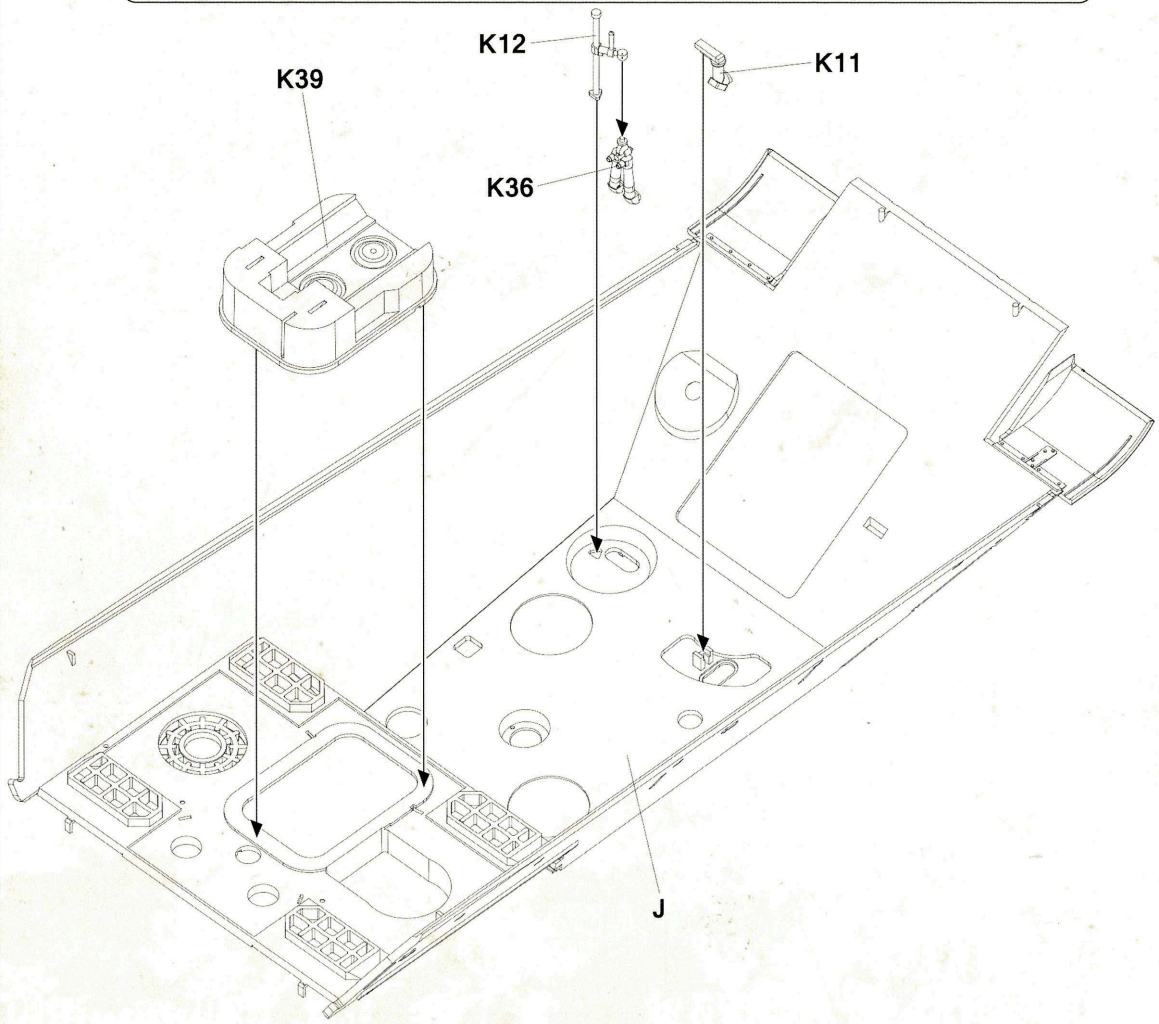


Ⓐ

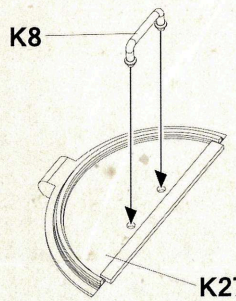



!Make 2


Ⓑ

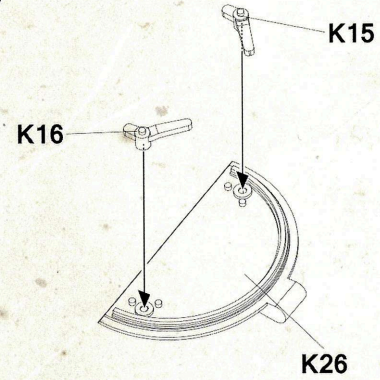



!Make 2

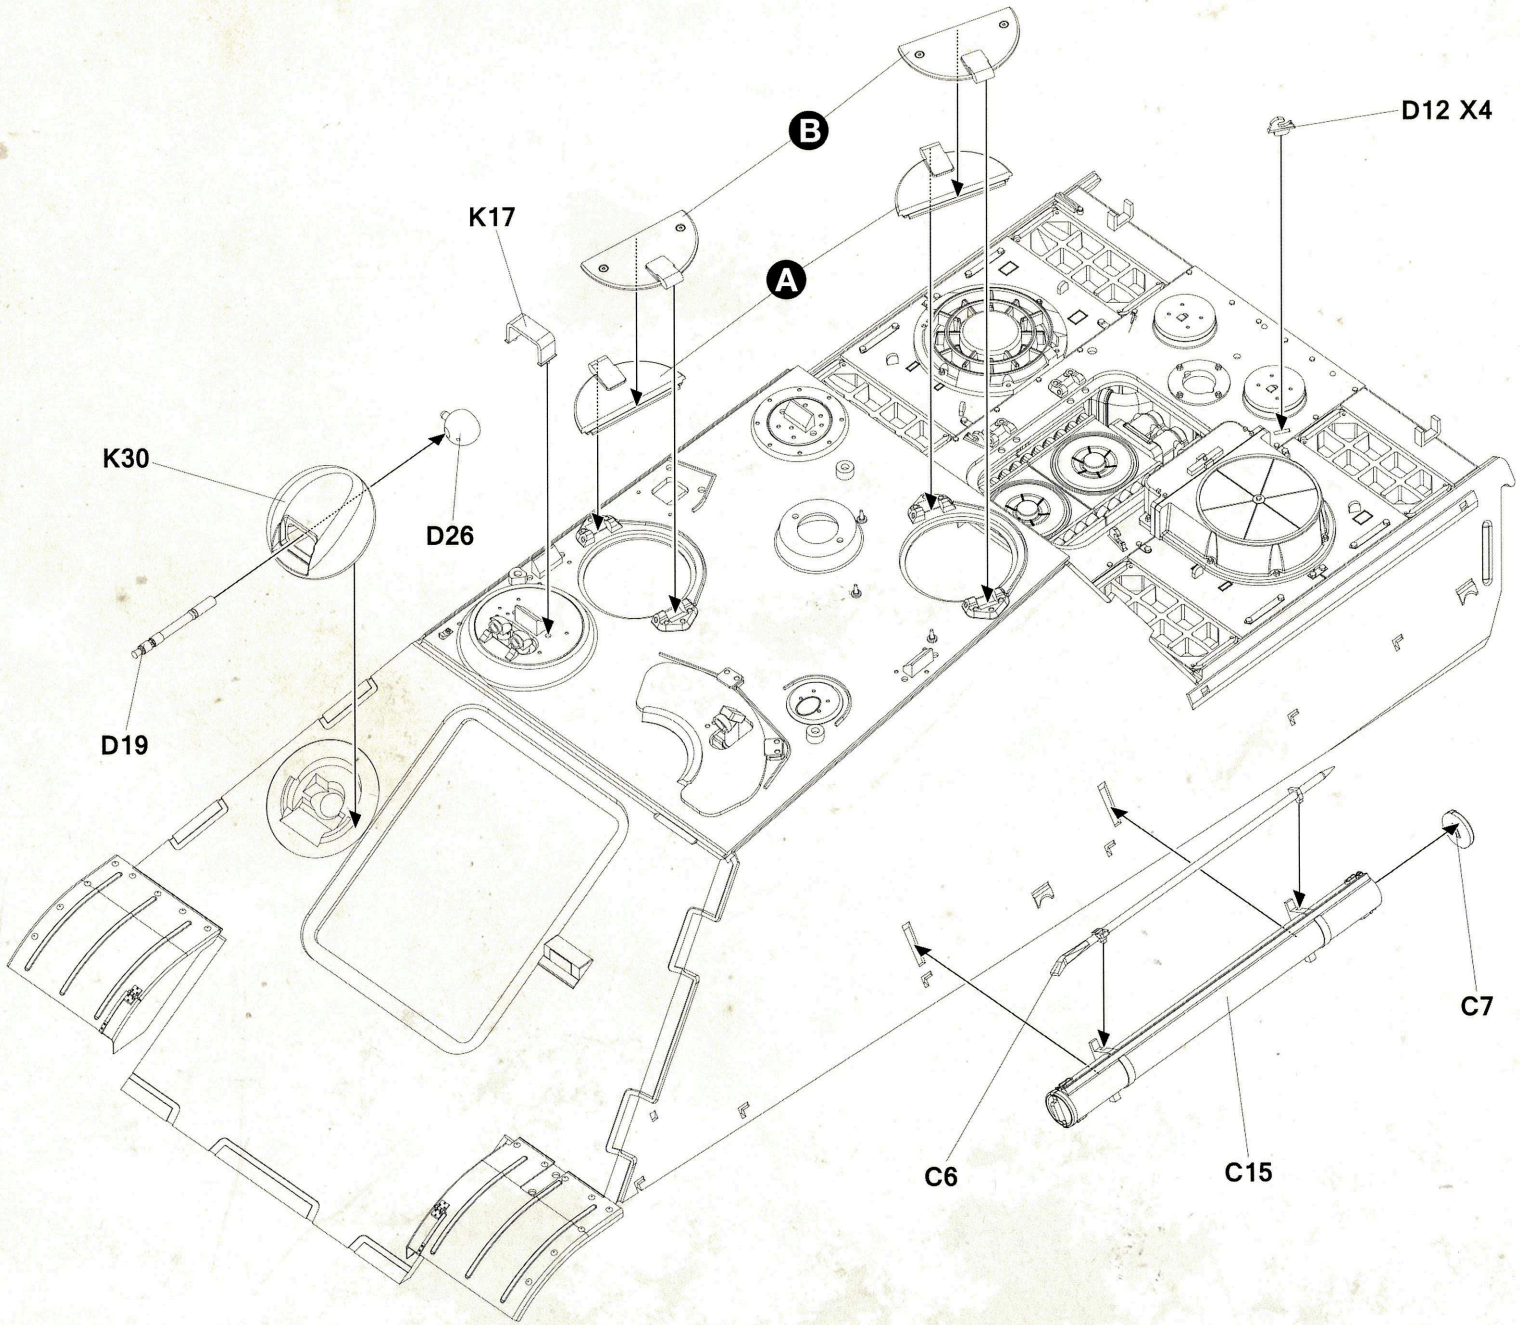

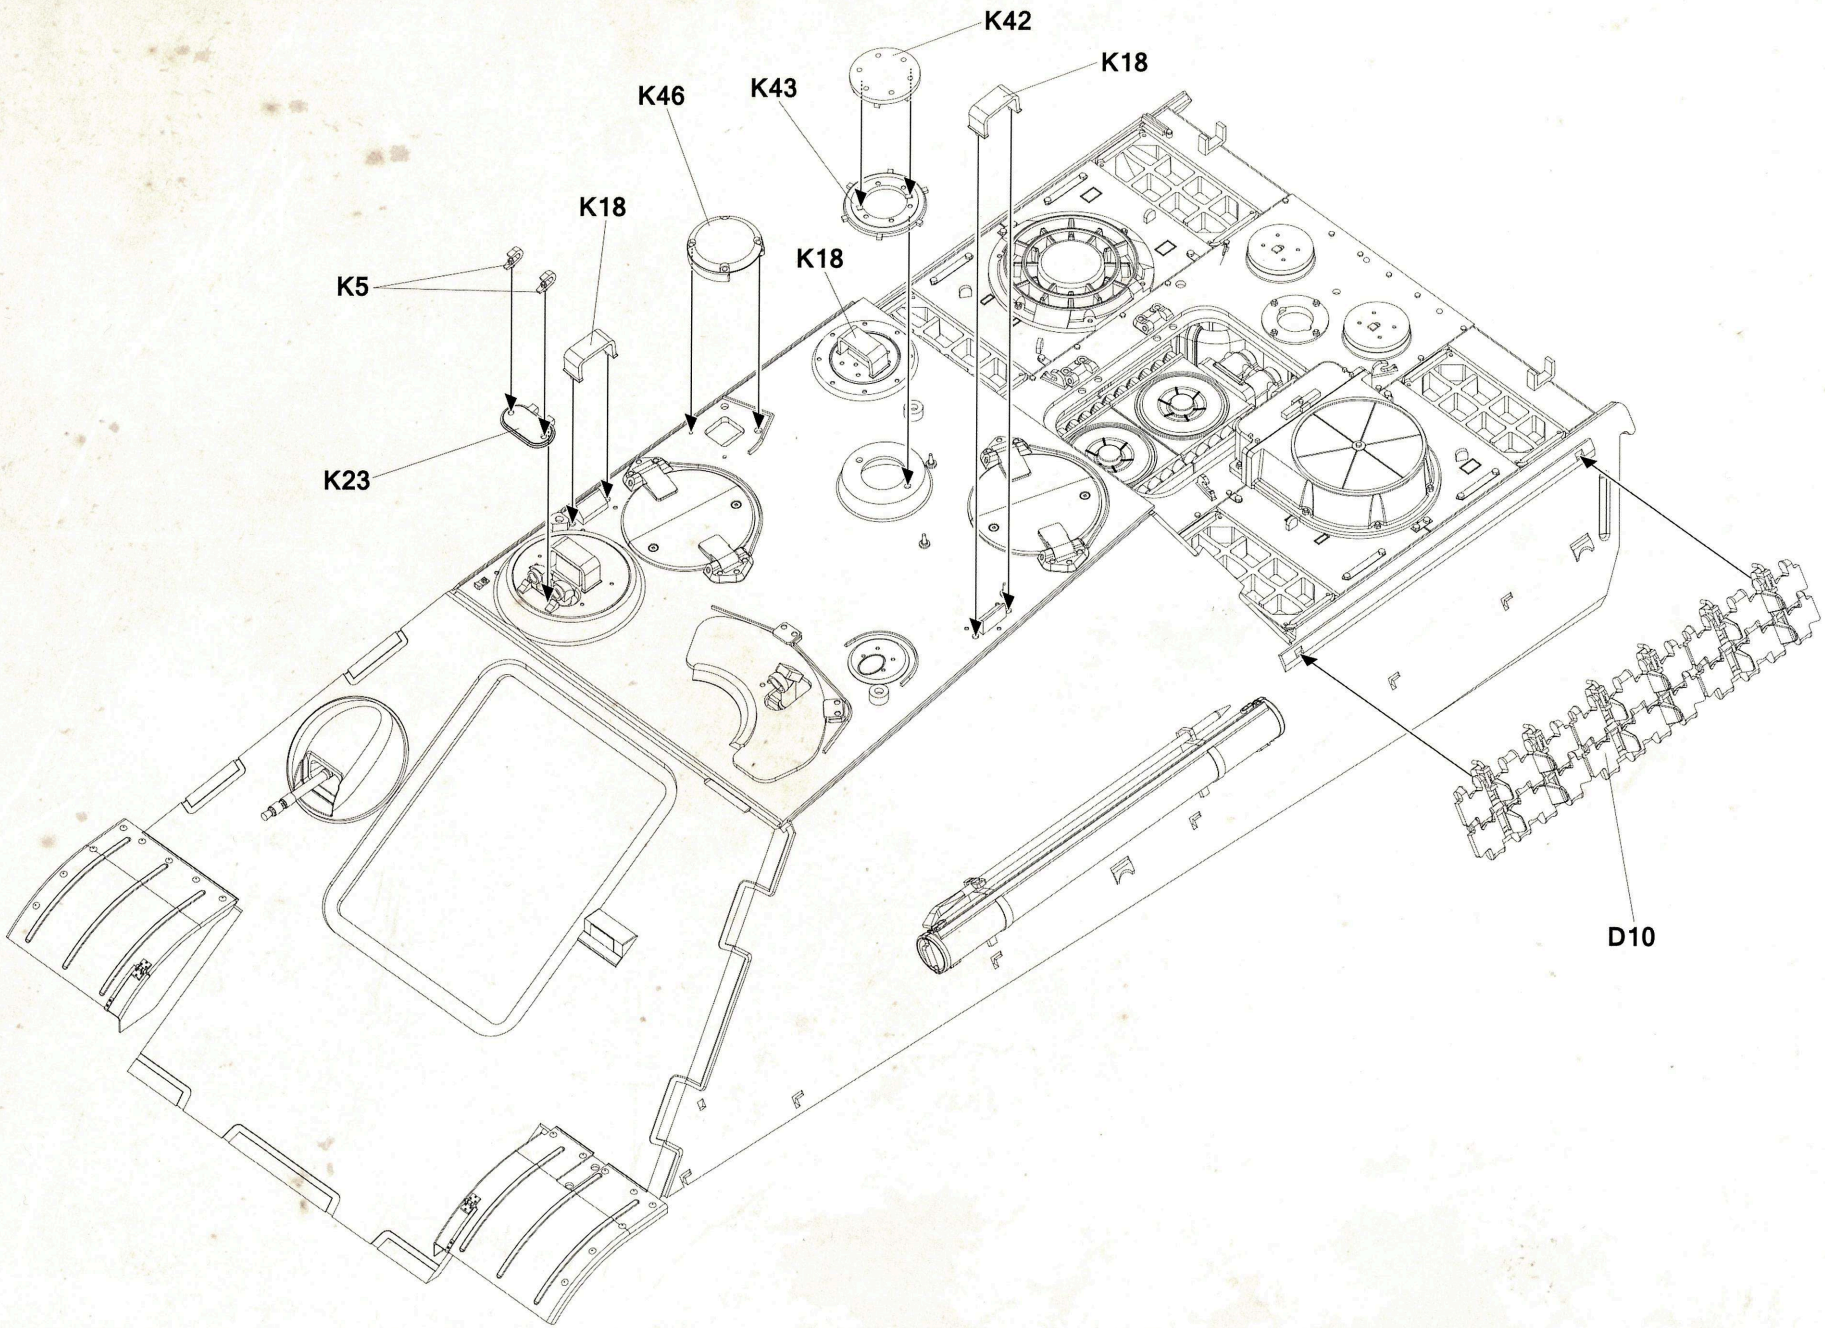

K42
K18
K46
K43
K18
K18
K5
K23
D10

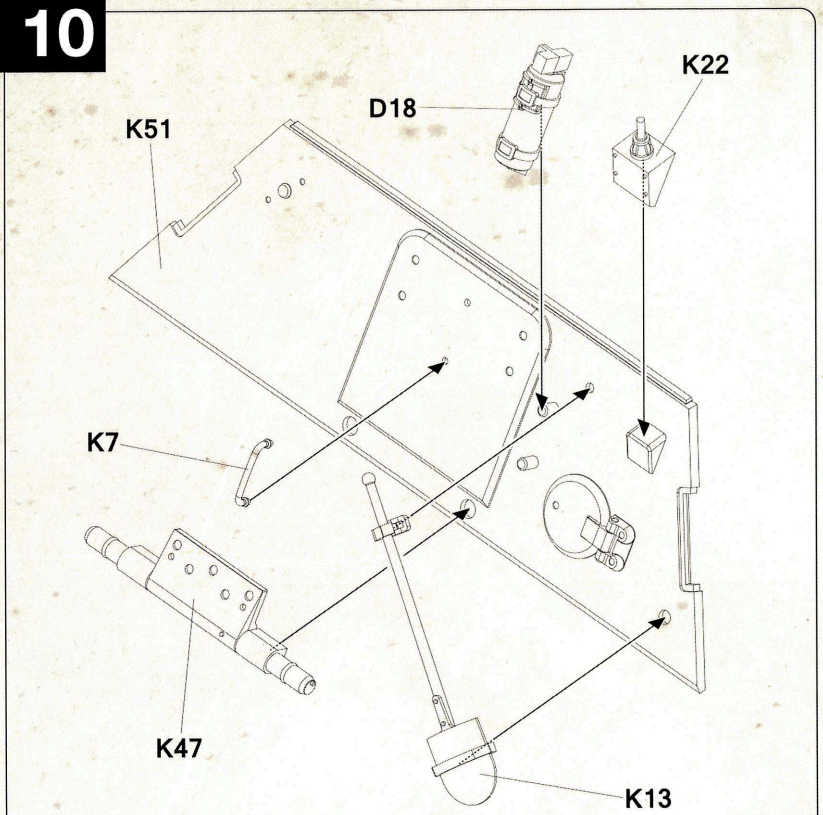
K51
D18
K22
K7
K47
K13

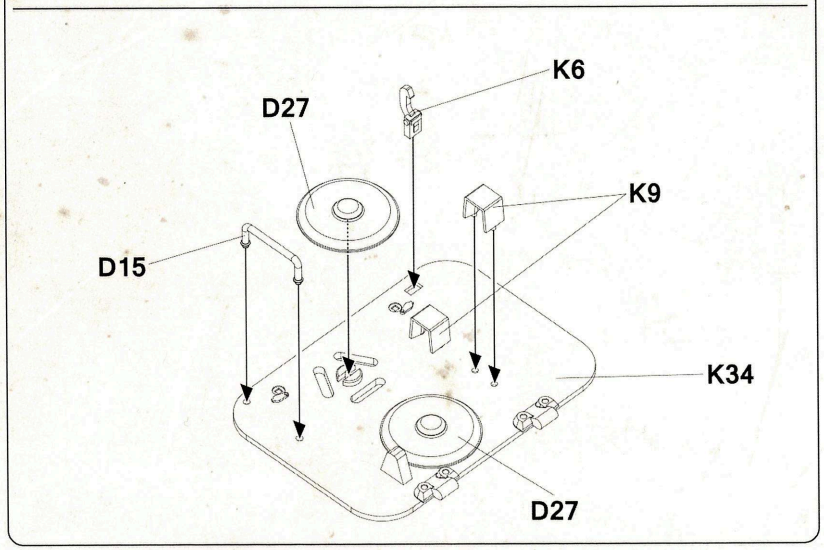

K6
D27
K9
D15
K34
D27

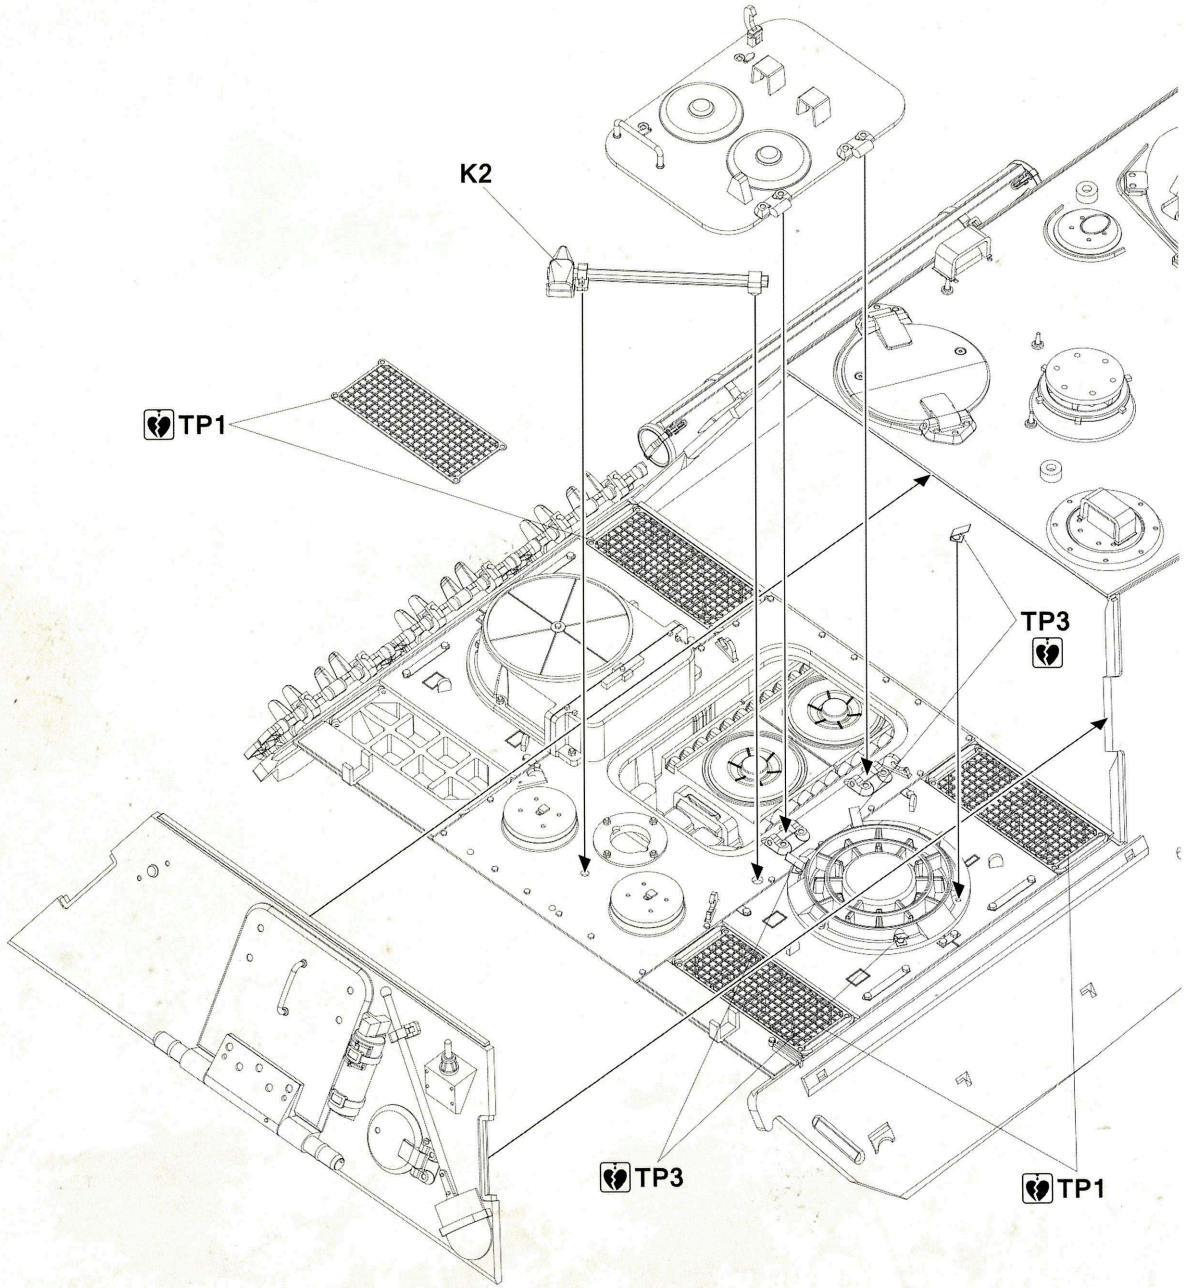

K2
TP1
TP3
TP3
TP1

11

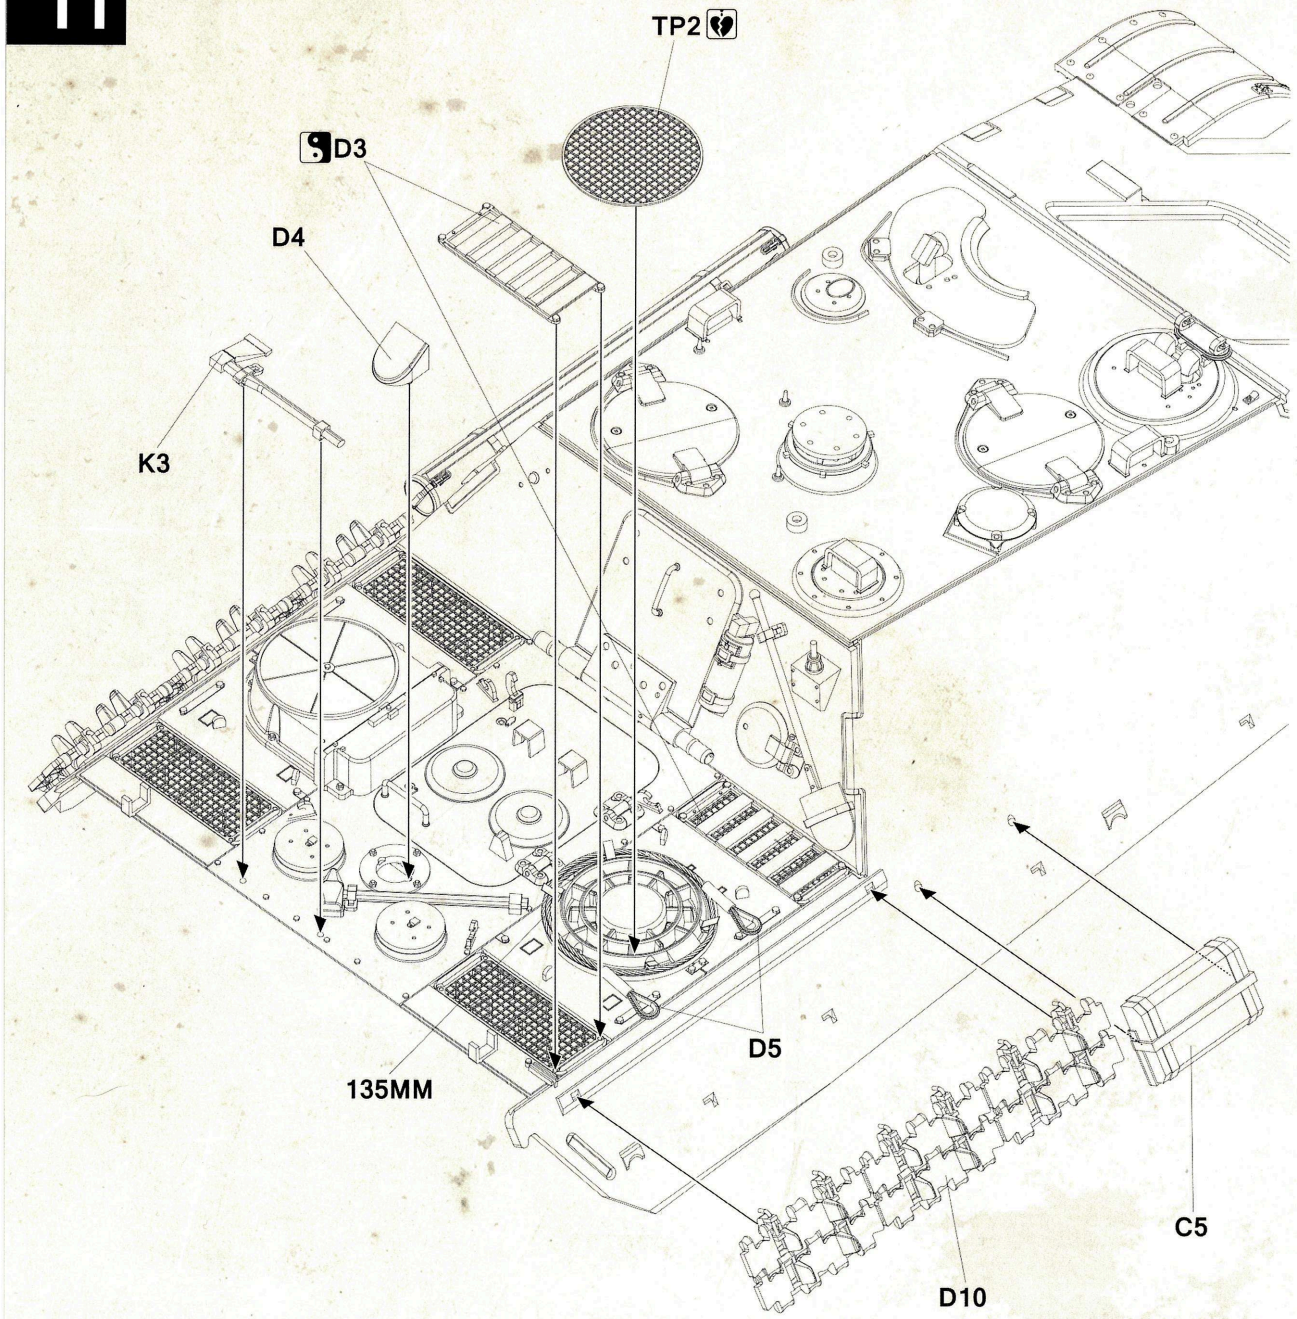



12

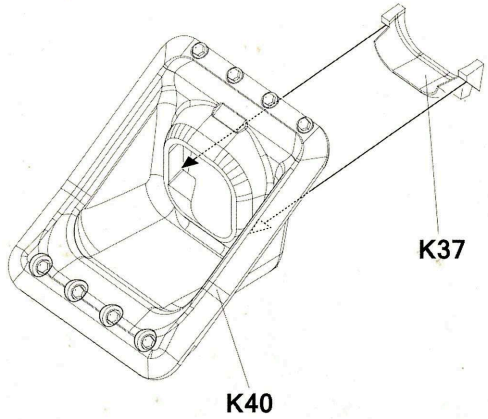

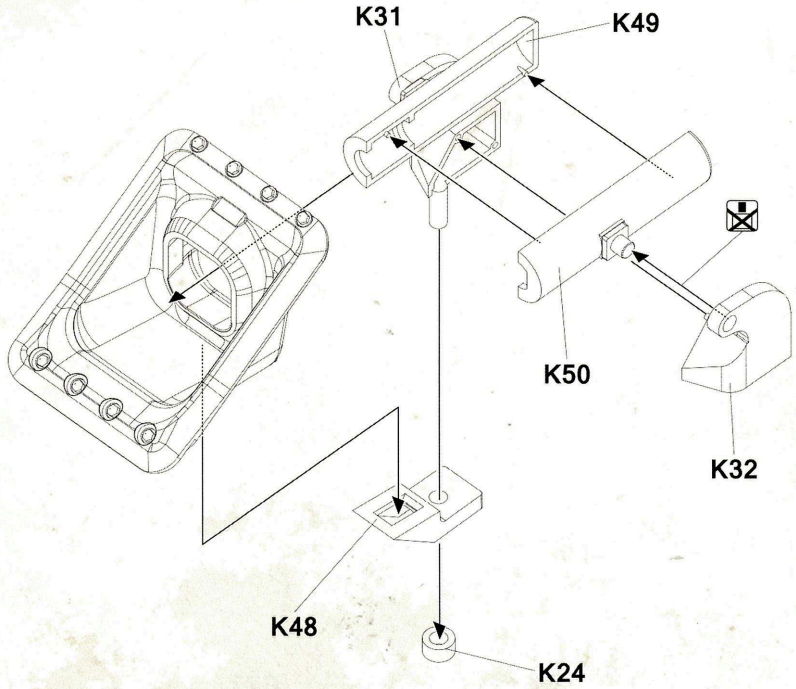


13

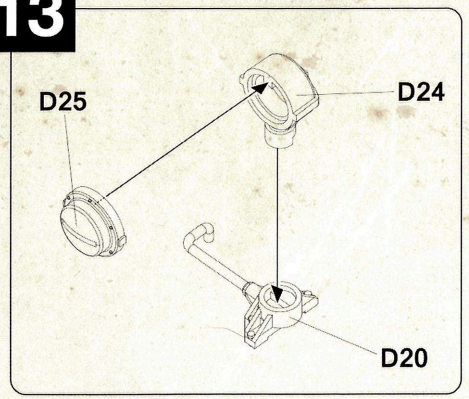


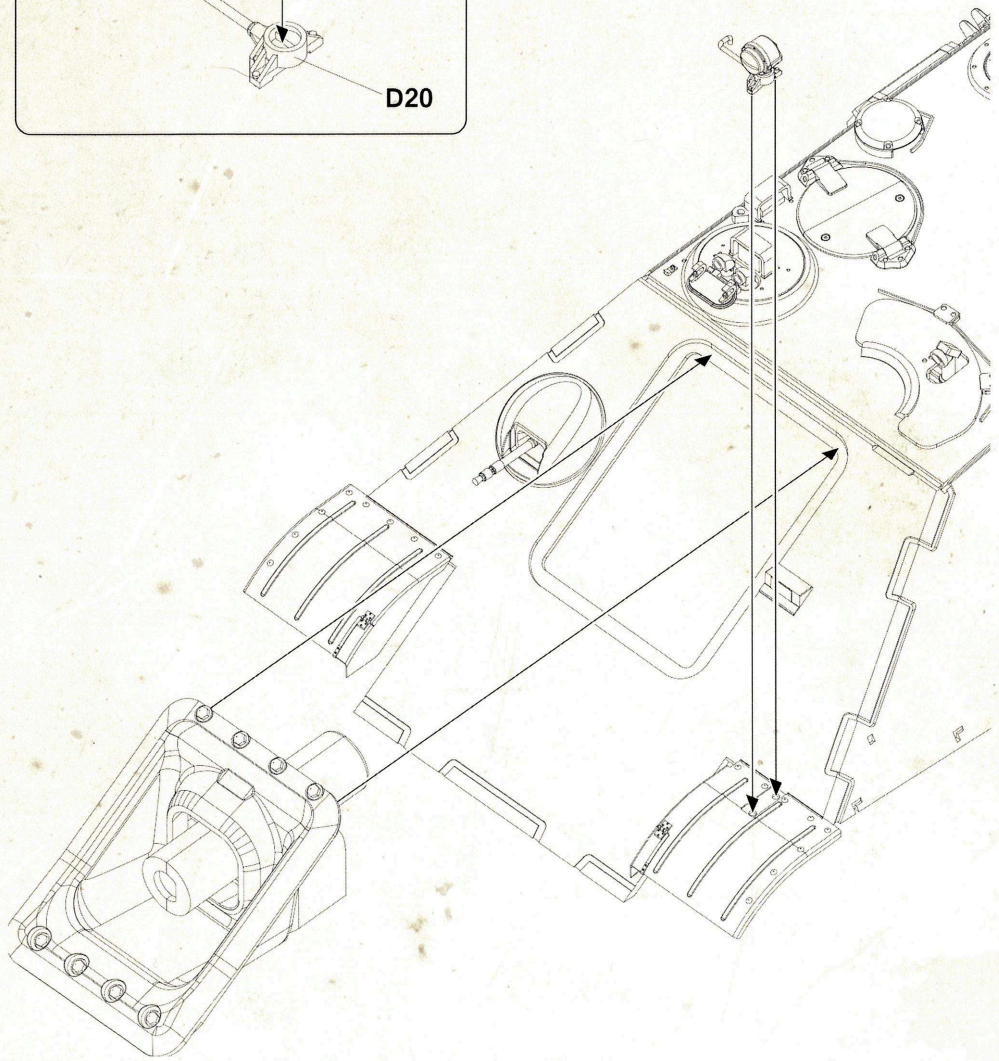


14

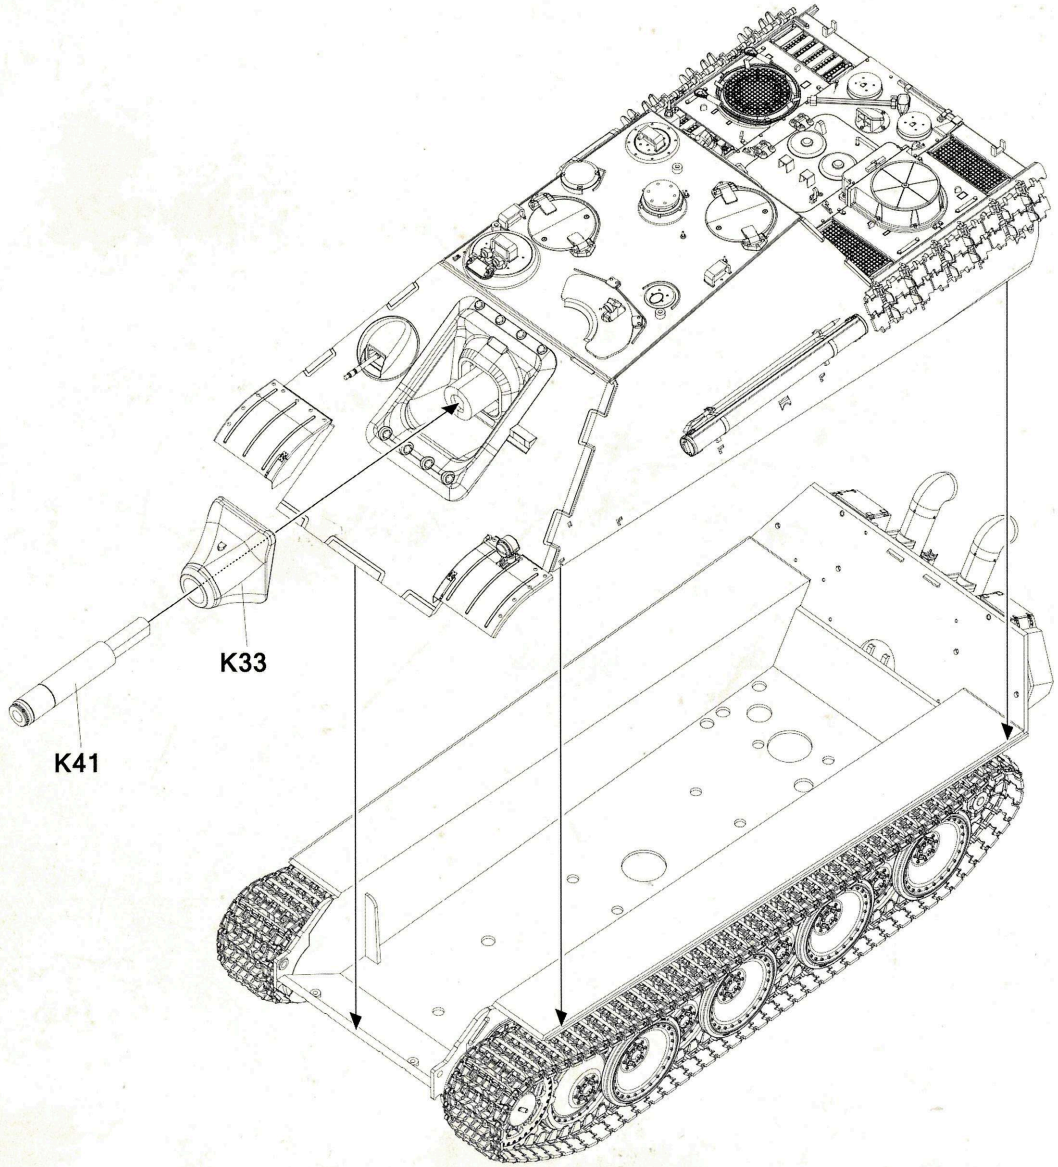


15

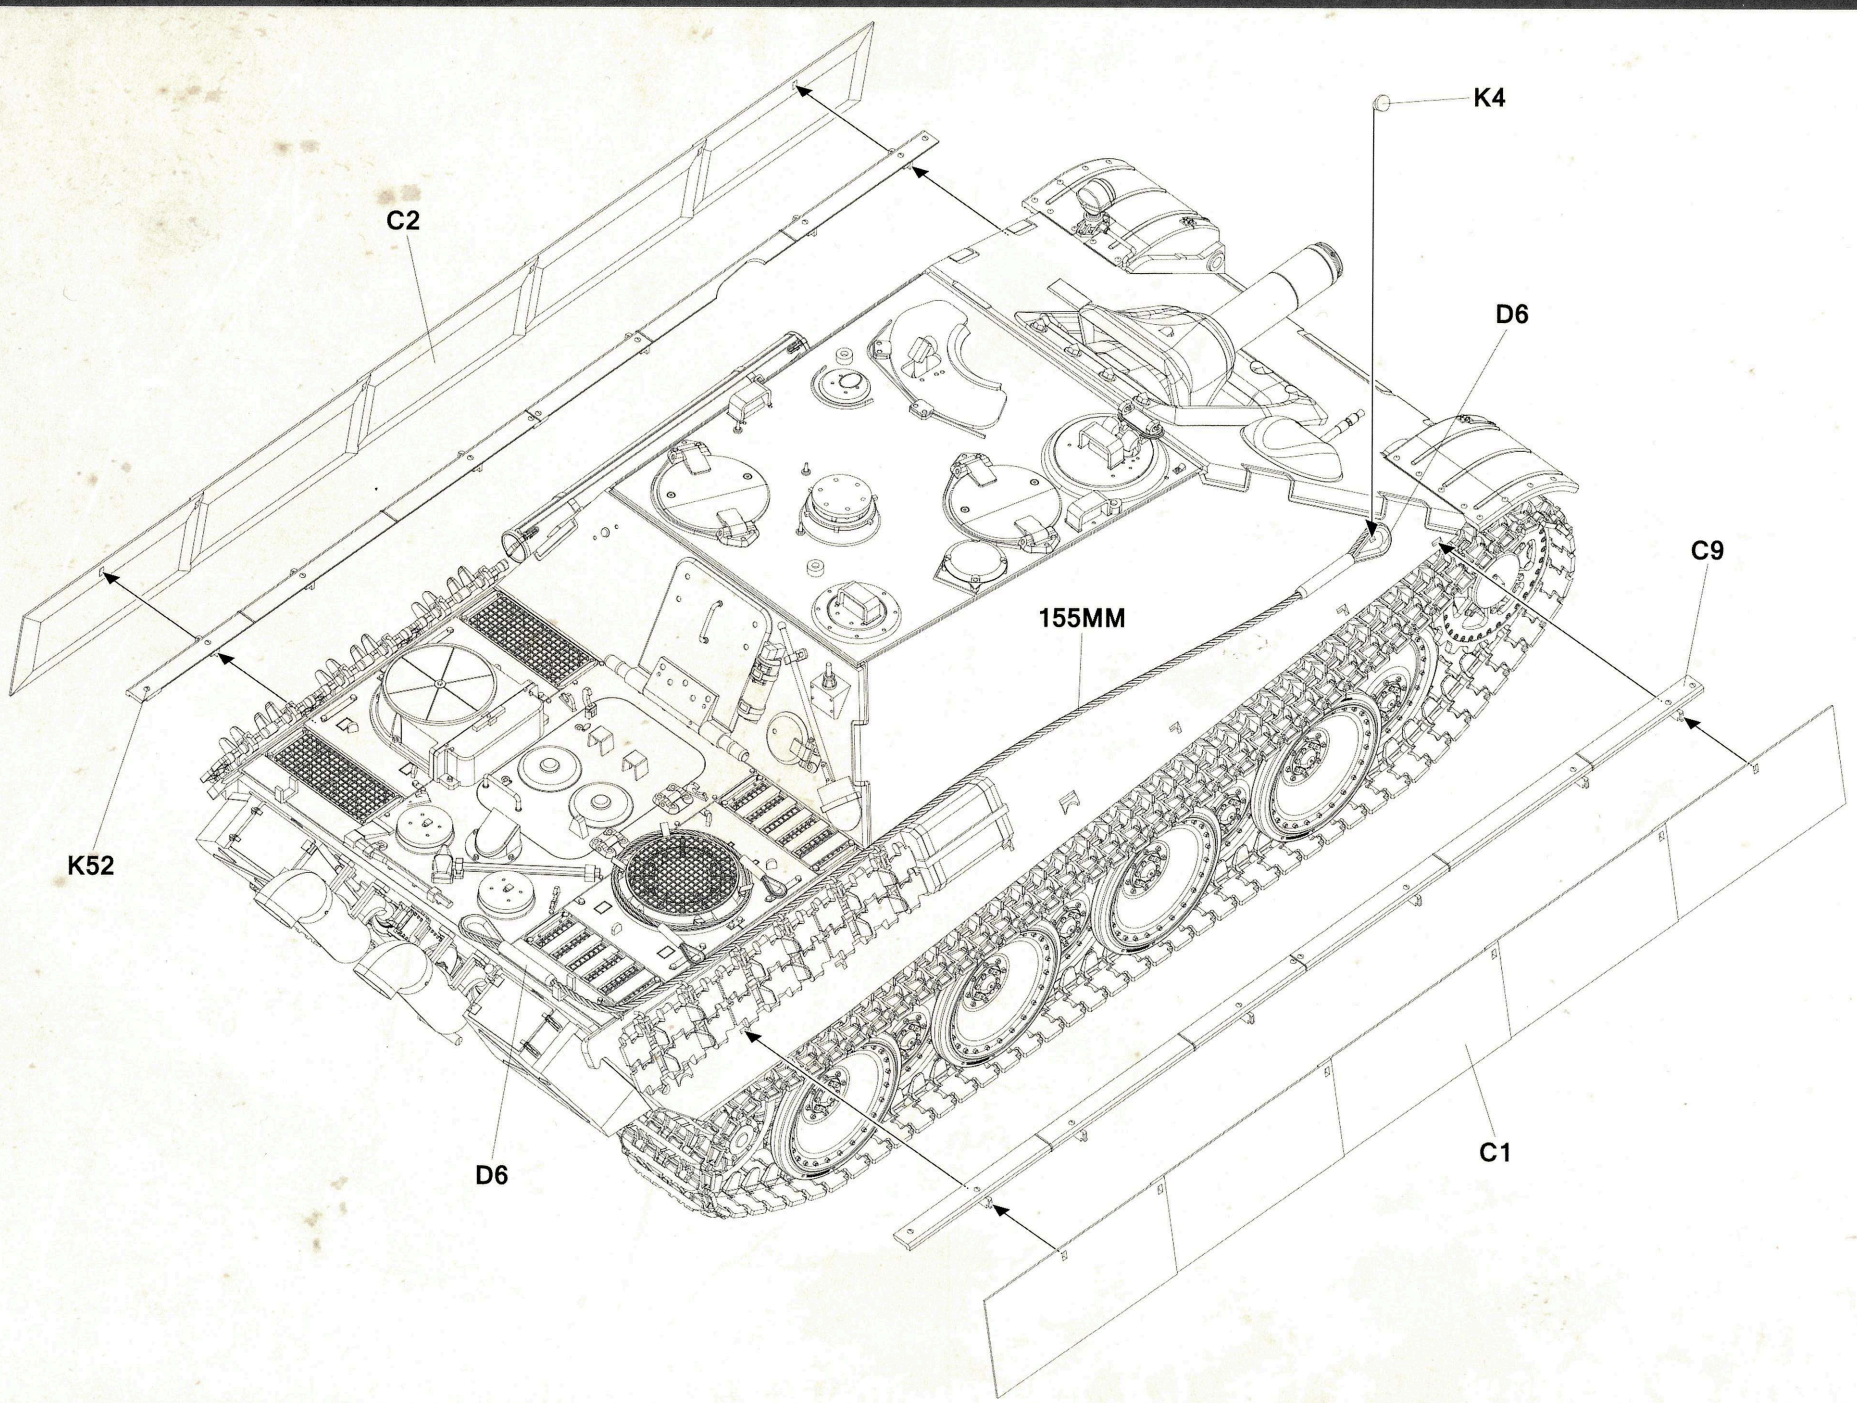

16

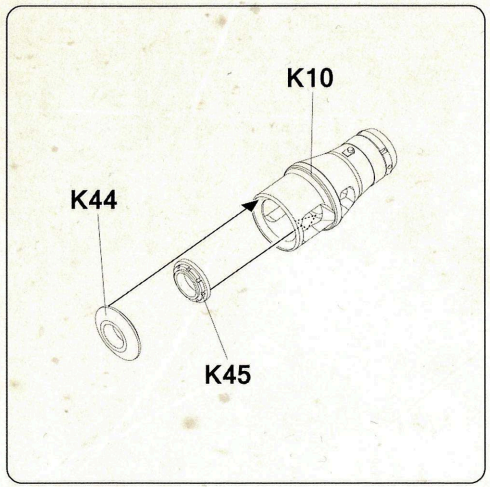
K10
K44
K45

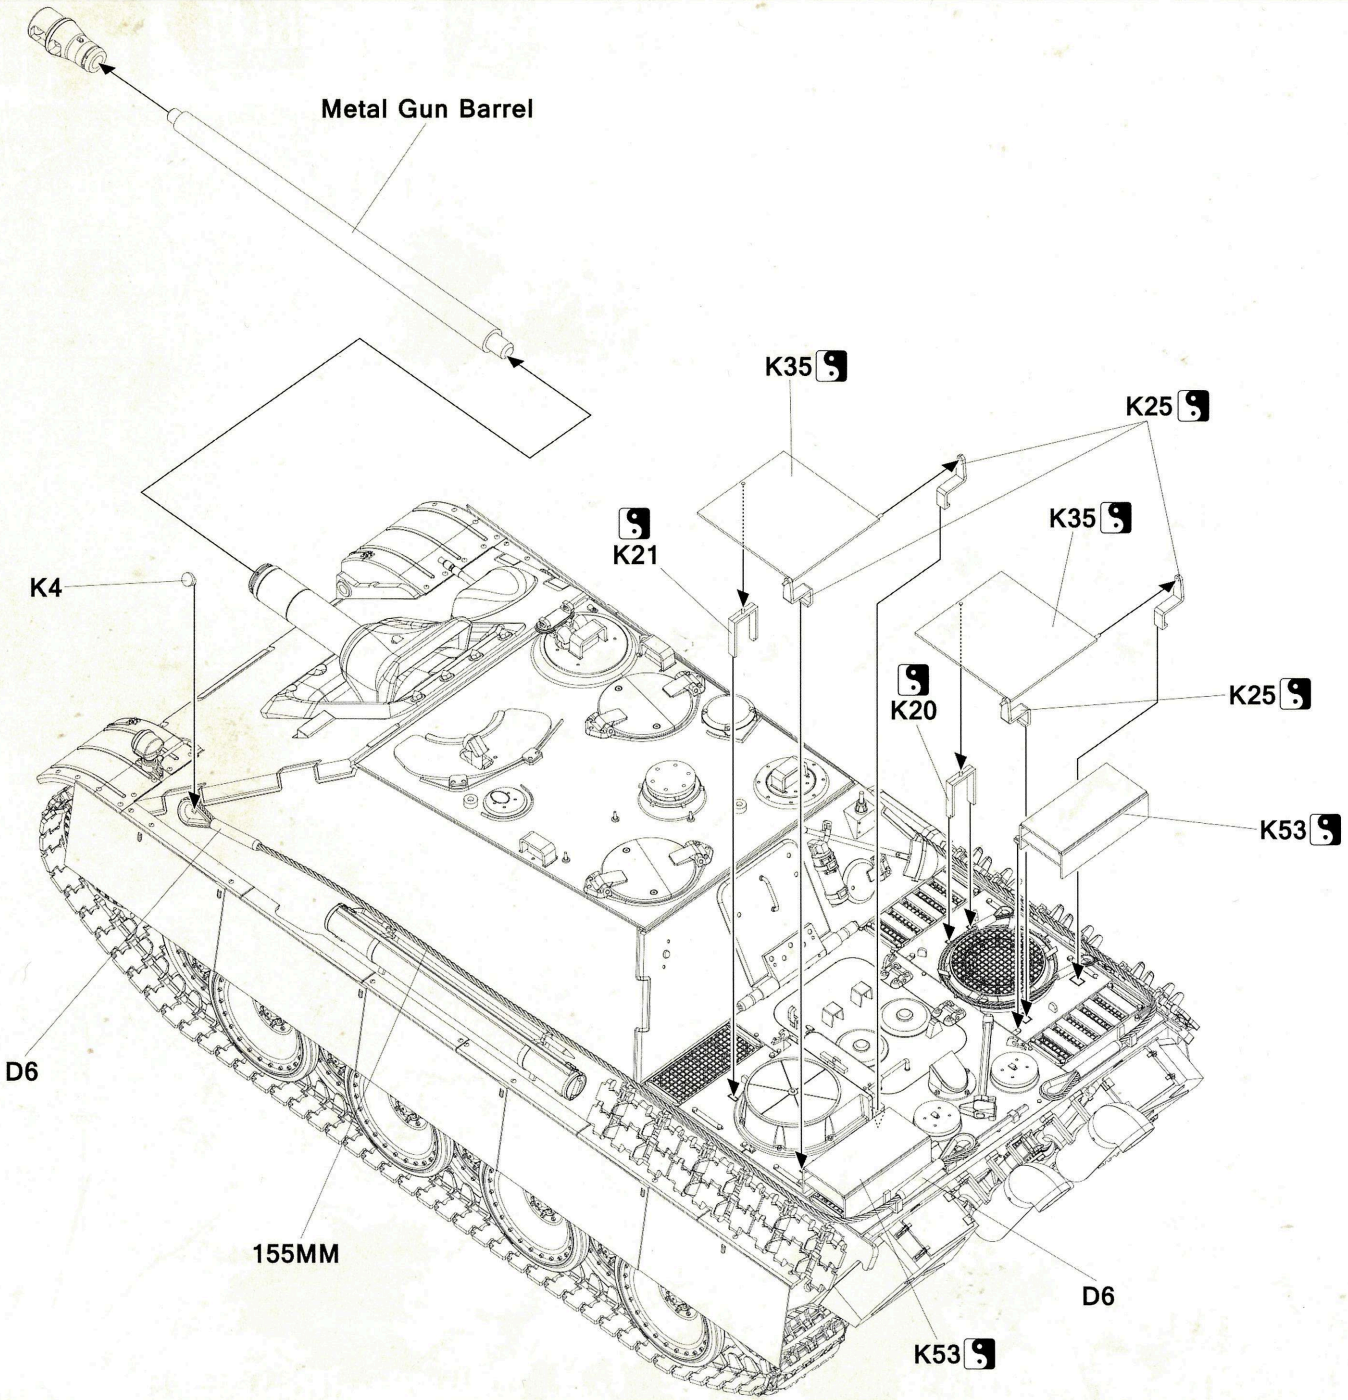

Metal Gun Barrel
K35
K25
K21
K35
K4
K20
K25
K53
D6
155MM
D6
K53

03.03.35042

Jagdpanther G2

Painting and Marking Guide

II. Abteilung, Pz. Lehr Rgt. 130, Germany, April 1945.

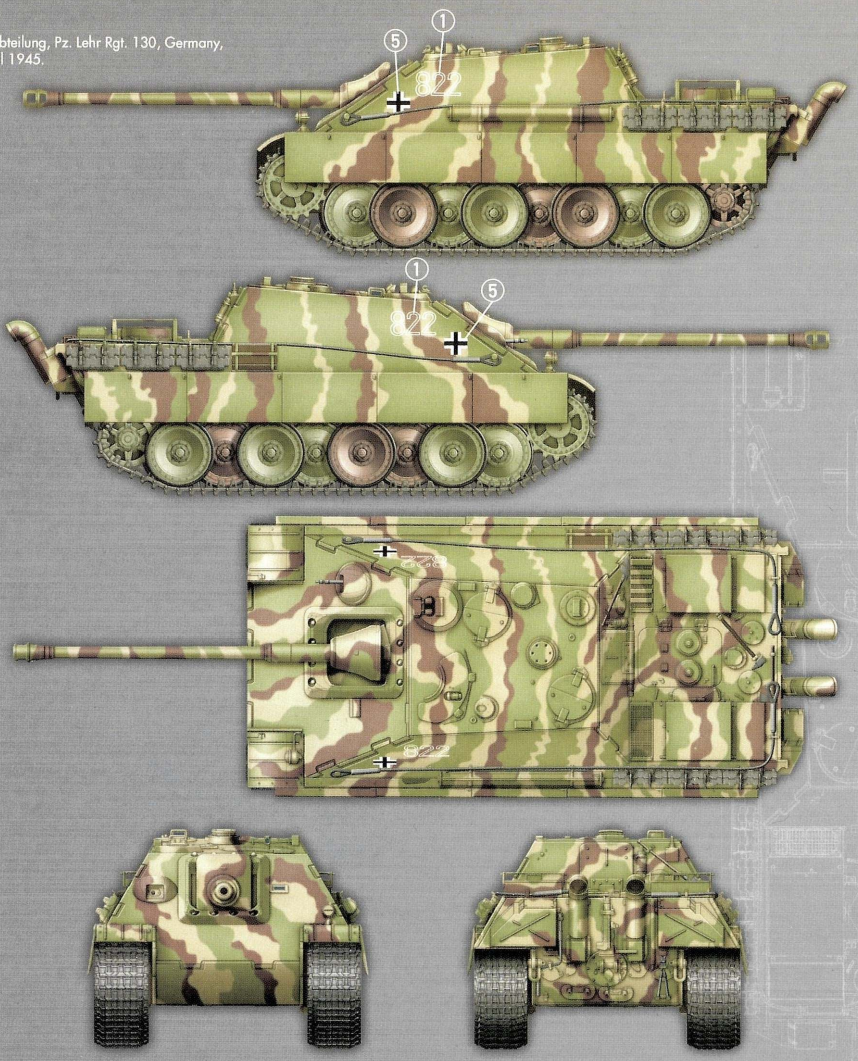


03.03.35042

Jagdpanther G2


Painting and Marking Guide

II. Abteilung, Pz. Lehr Rgt. 130, Germany, April 1945.

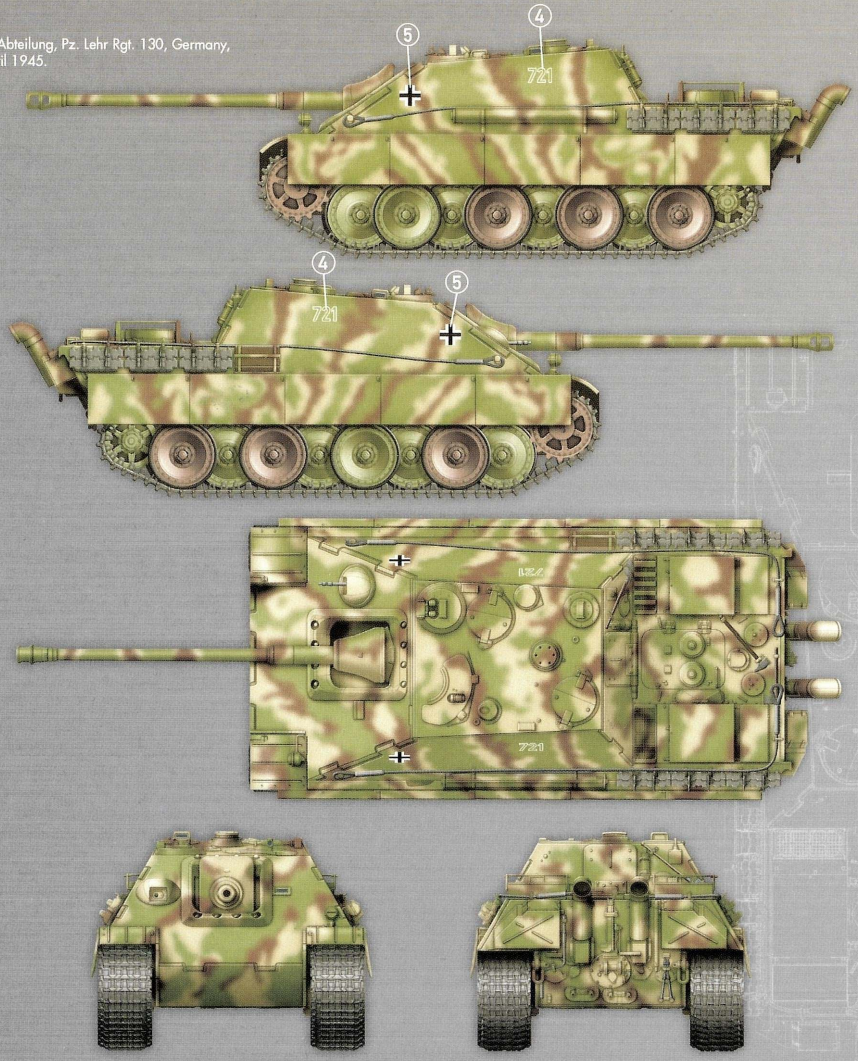

Painting and Marking Guide


s. Pz. Jg. Abt 655, Meppen, Germany, May 1945.

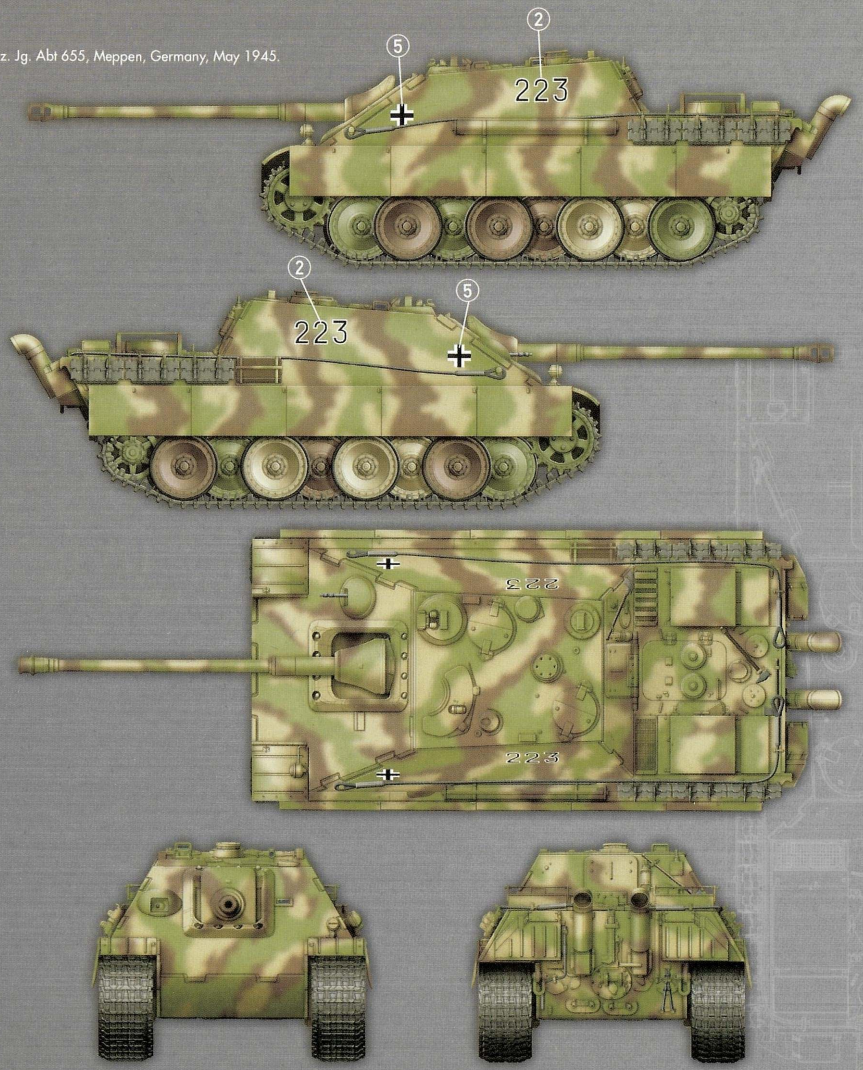

03.03.35042
BLITZ SUPER by TAKOM Jagdpanther G2

Painting and Marking Guide

KG Wiking, Hannover, Germany, Spring 1945.

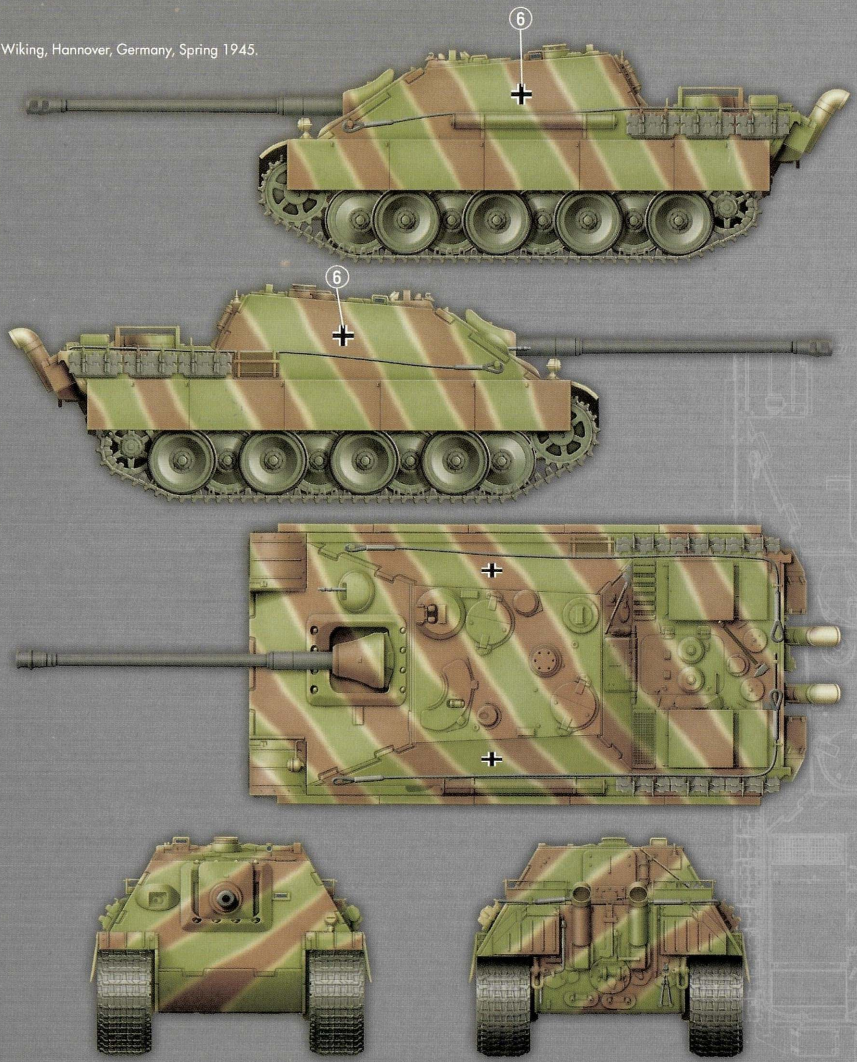


03.03.35042

Jagdpanther G2

Painting and Marking Guide

s. Pz. Jg. Abt 655, Meppen, Germany, April 1945.

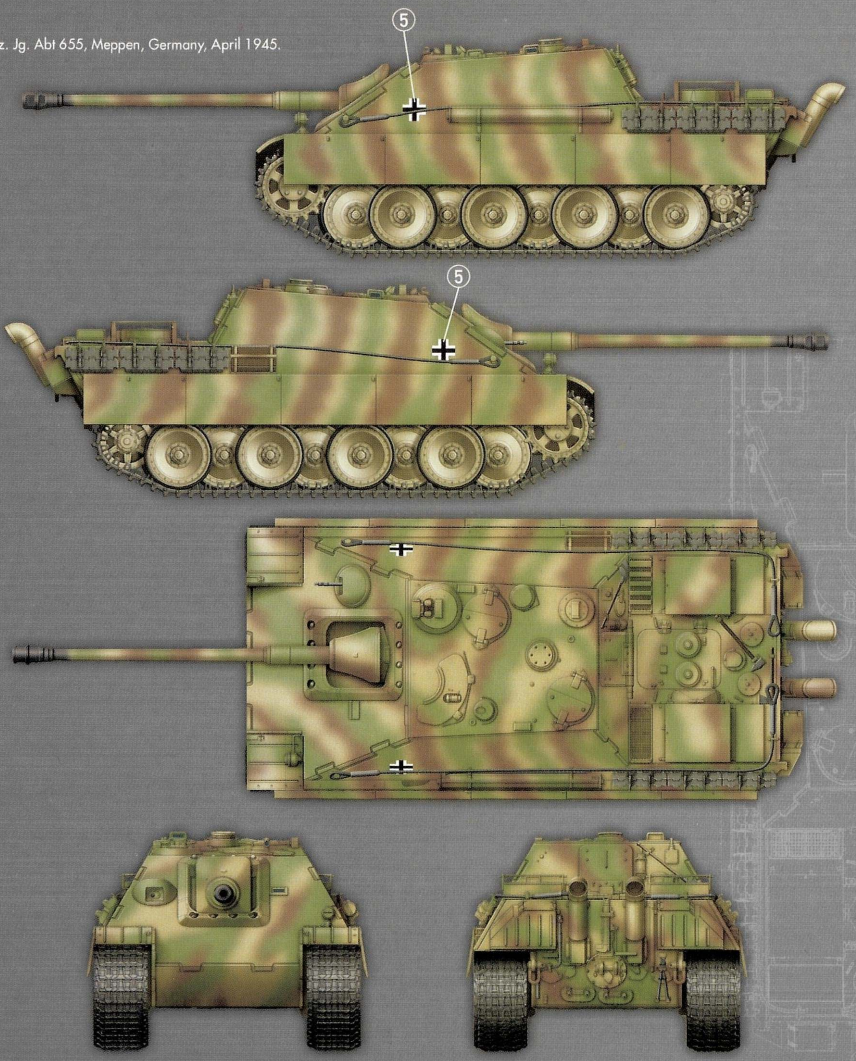


03.03.35042

Jagdpanther G2

Painting and Marking Guide

s. Pz. Jg. Abt 655, Meppen, Germany, April 1945.

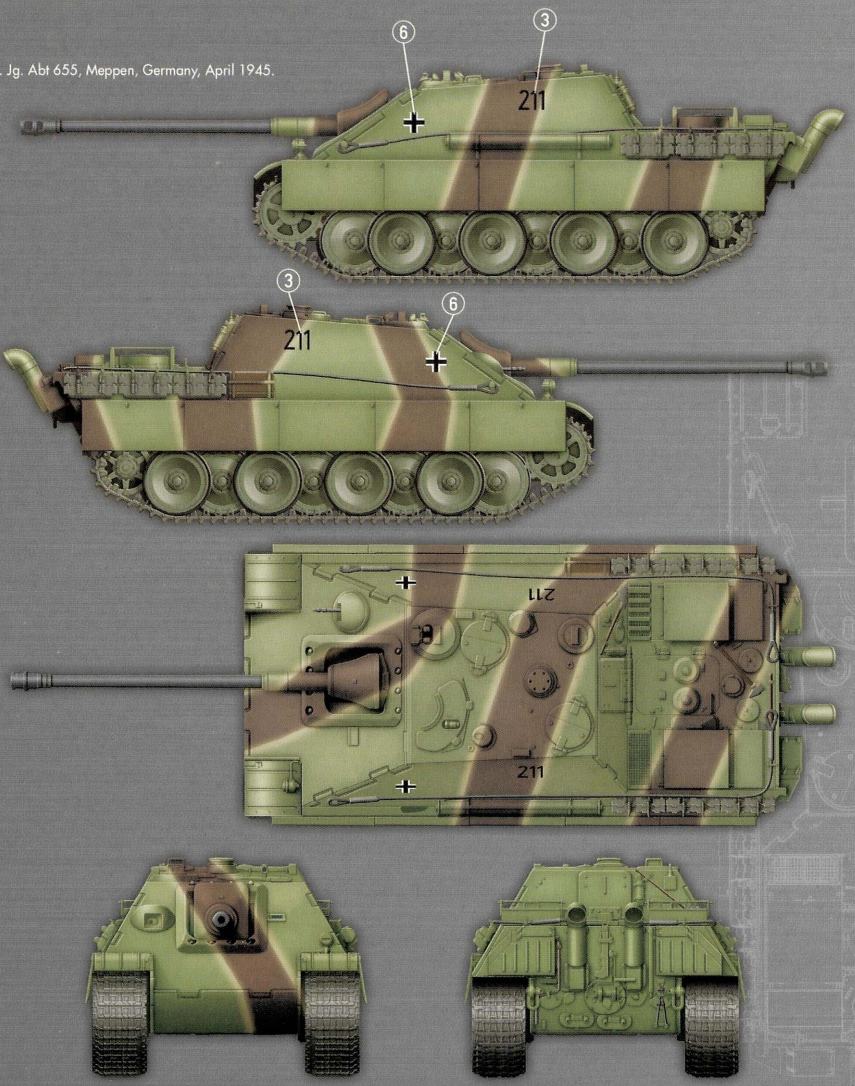

Das Werk

Check out other great kits from us:



DW35036 - RakJgPz. Jaguar 2 (1:35)



DW35041 - Panther G (1:35)



DW32002 - Messerschmitt P-1101 (1:32)



DW16024 - Leopard 2 A7V (1:16)




DW16020 - 7.5cm Pak40 mid/late (1:16)




DW16018 - Sd.Kfz.250/1 Ausf.A (1:16)

www.das-werk-models.com

2025/35042

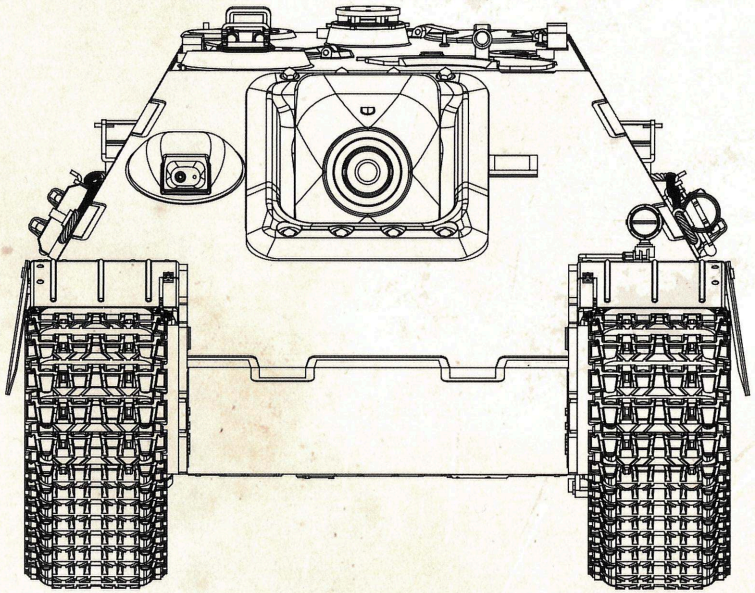

14

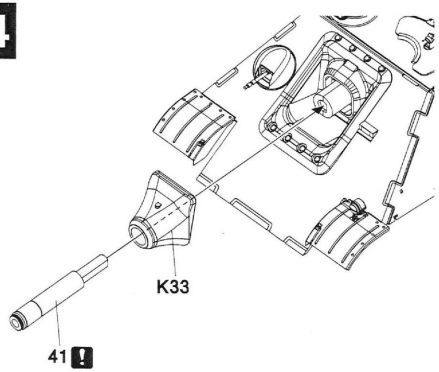

16

