


THUNDERBOLT P-47D-10RE RAZORBACK

48030

SCALE
1:48

GENERAL INSTRUCTION

- HIGHLY DETAILED PLASTIC MODEL KIT
- PHOTO-ETCHED PARTS INCLUDED
- CLEAR PLASTIC PARTS INCLUDED
- HATCHES CAN BE ASSEMBLED IN OPEN OR CLOSED POSITION
- 2 TYPES OF WHEELS INCLUDED
- DECAL SHEET FOR 3 VARIANTS

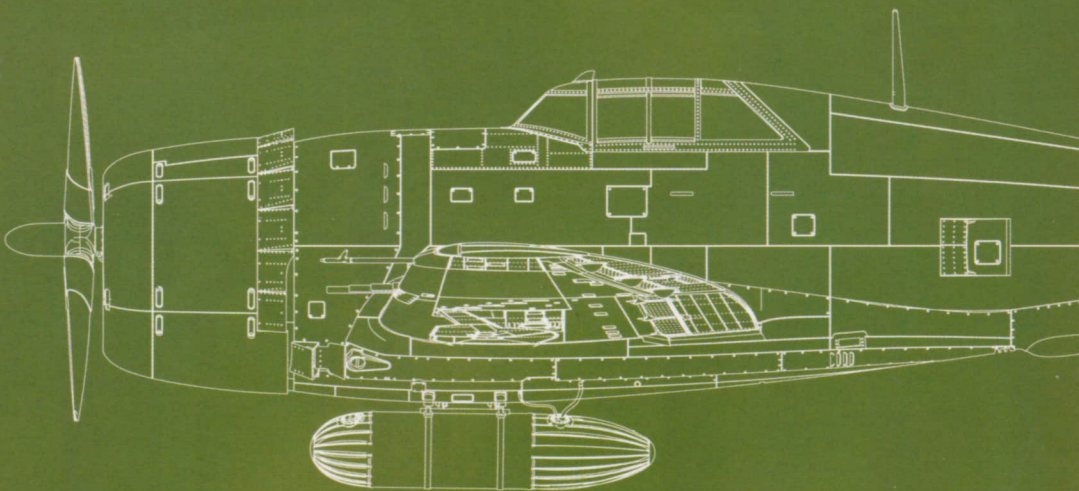

UWAGA

Przy stosowaniu kleju i farb wszystkie prace należy wykonywać w przewiewnym miejscu z dala od źródeł ognia.

Oddziel części od wlewków nożem lub innym ciętym narzędziem. Oczyszcz lampę błyskową i wytnij punkty pilnikiem igłowym i papier ścierny. Złóż modele zgodnie z schemat montażu.

Dla ułatwienia montażu każda część jest oznaczona numerem. Po złożeniu zestawu mogą pozostać niewykorzystane części.

УВАГА

При використанні клею та фарб всі роботи проводити подалі від джерел вогню у приміщенні, що добре провітрюється.








Деталі відокремлювати від літників ножем або іншим ріжучим інструментом. Зачистити облой і місця зрізу за допомогою надфілю та наждачного паперу. Будівництво моделі виконувати згідно зі схемою. Для зручності побудови кожна деталь позначена номером.

Після складання можуть залишитися невикористані деталі.

CAUTION

When you use glue or paint, do not use near open flame, and use in well ventilated room. When you take parts off from the runner frame, use modeling scissors or cutter.

See the bottom of this column for the meaning of symbols. Extra details can remain after assembling of the kit.

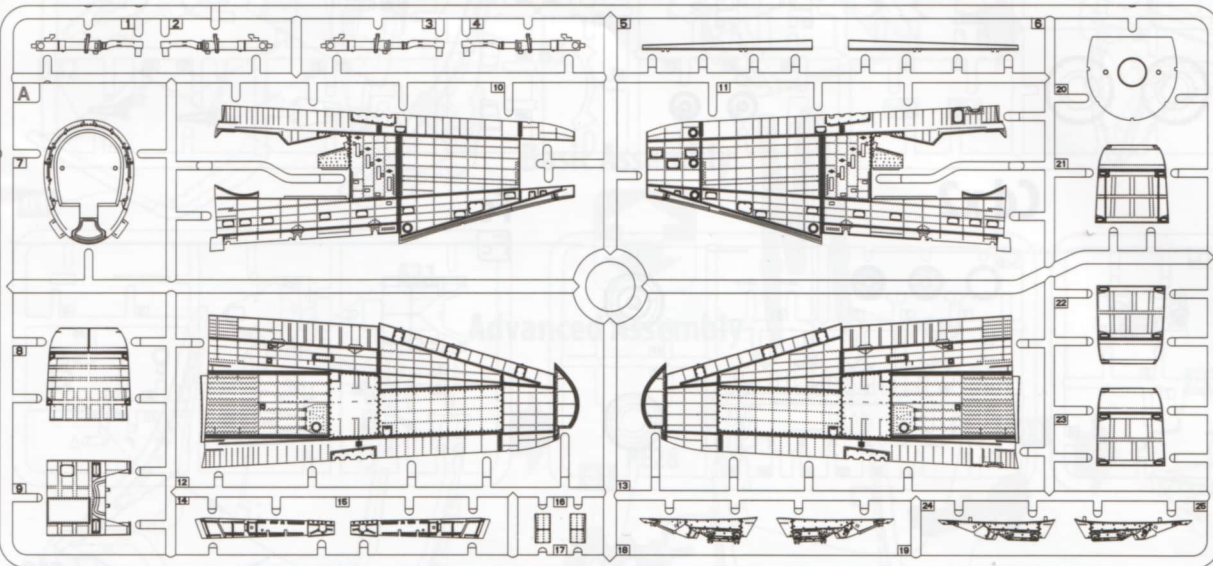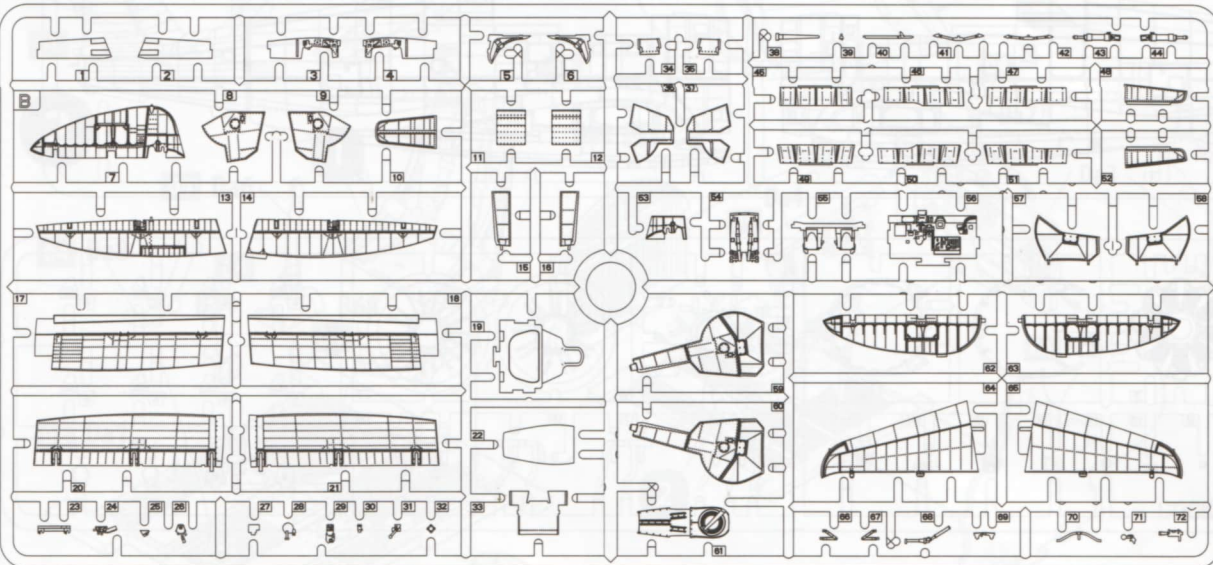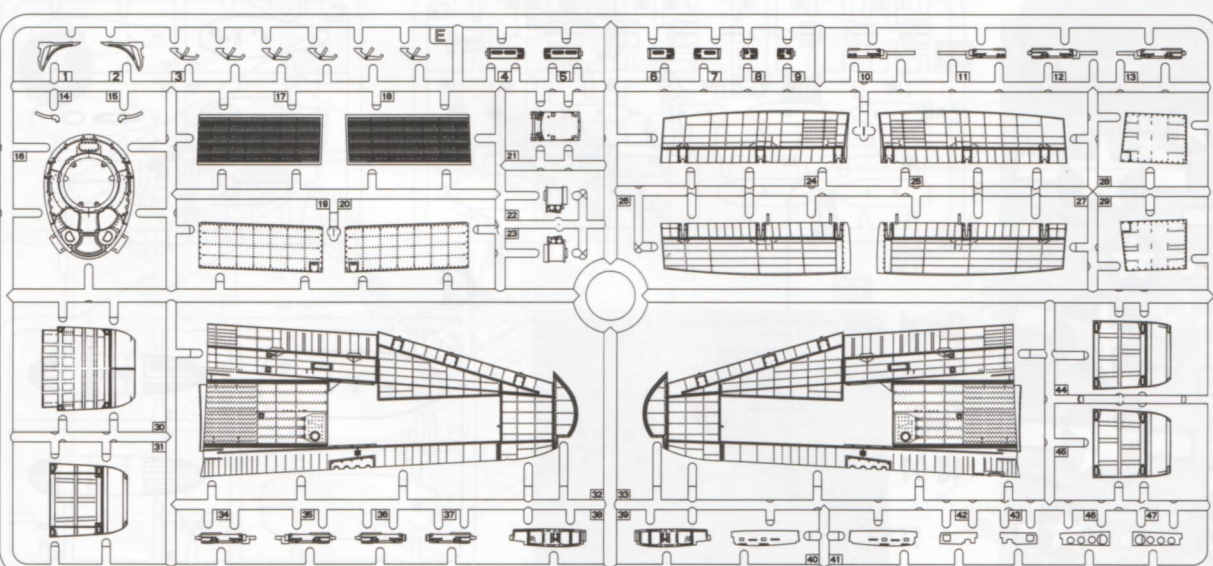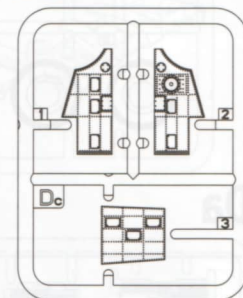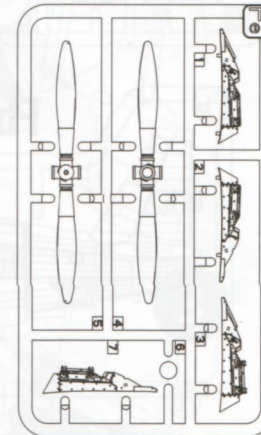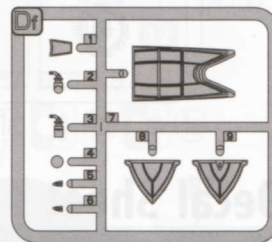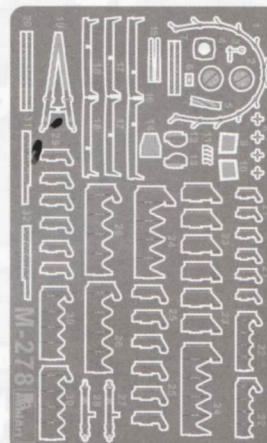PARTS**A****B****E****Dc****Fe****Df Clear Parts****PE Parts M-278**

x2



POWTOŹRZ DWA RAZY
MAKE 2PCS
2 TEILE FERTIGEN
EFFECTUER 2 PIECES
FARE DUE PEZZI
TEE 2 KPL
GOR 2 ST
КІЛЬКІСТЬ РАЗІВ

NIE UŻYWAJ KLEJU
DO NOT CEMENT
NICHT KLEBEN
NE PAS COLLER
NON INCOLLARE
EILIMAAJ
LIMMAEJ
HE KLEITÄI







OPCJE
OPTIONAL
NACH BELIEBEN
FACULTATIF
FACOLTATIVO
VALINNANVARAINEN
VALBAR
BARIANTTI

ZROBIĆ DZIURĘ
OPEN HOLE
OFFNEN
FAIRE UN TROU
FORO APERTO
AVAA REIKÄ
OPPNA Hålet
ЗРОБИТИ ОТВІР






ODCIĄĆ
REMOVE
ENTFERNEN
RETIRER
SEPARARE
POISTA
AVLÄGSNA
ВІДПІЗАТИ

ZGINĄĆ
BEND
BITTE BIEGEN
PLIER S'IL VOUS PLAİT
PIEGARE
TAITA
BOCKA
ВИГНУТИ


ZRÓB TO SAM
SCRATCHBUILD
AM MEISTEN ZU MACHEN
FAIRE LE PLUS
RENDITI
TEE ITSE
GOR DIG SJÄLV
ЗРОБИТИ САМОМУ

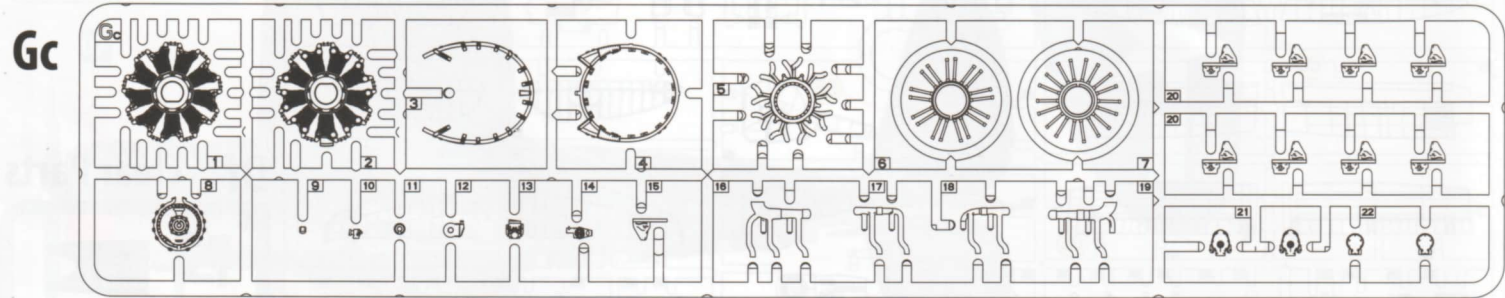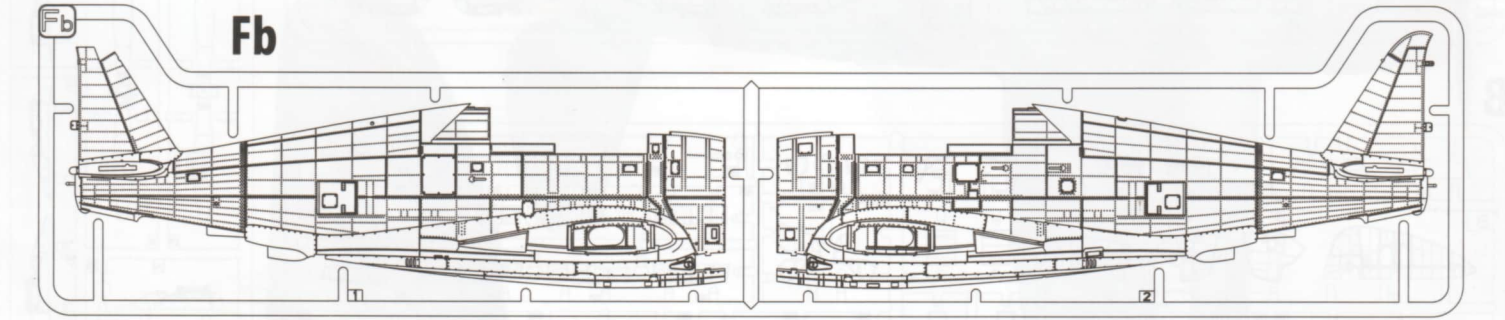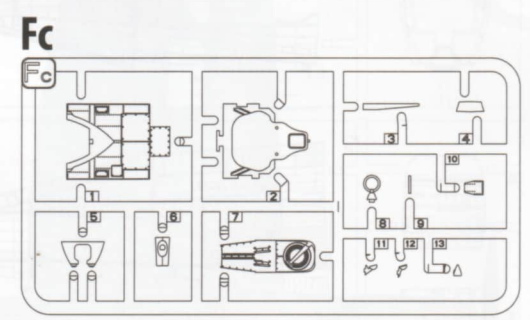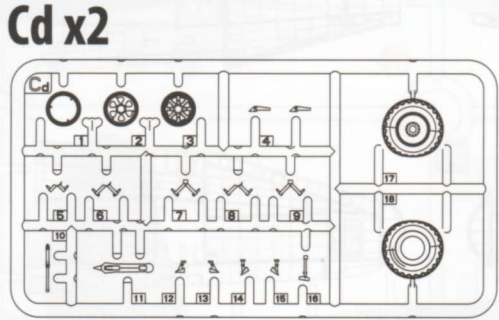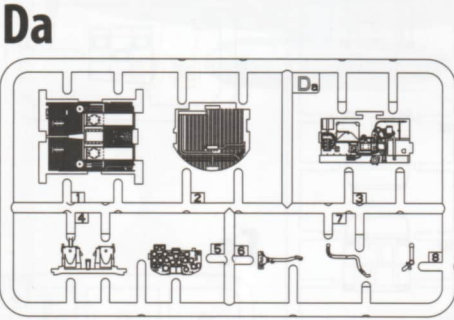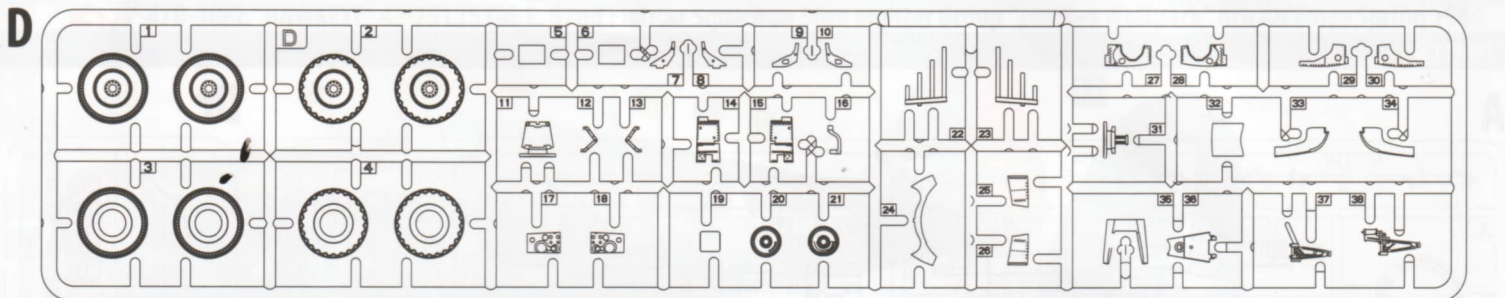


Decal Sheet

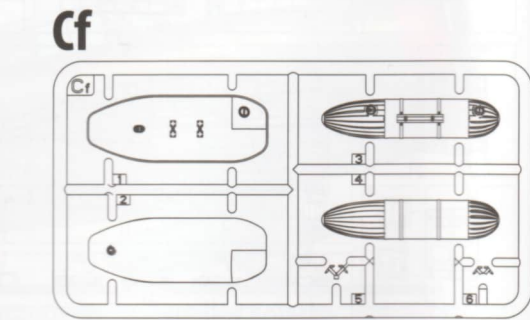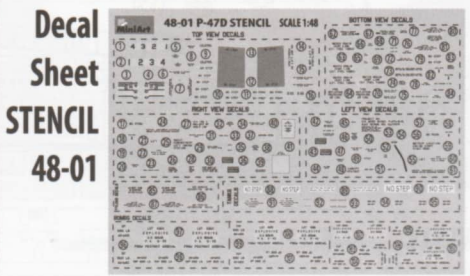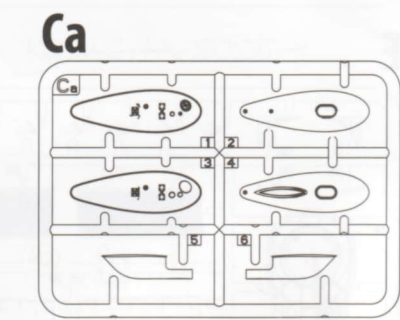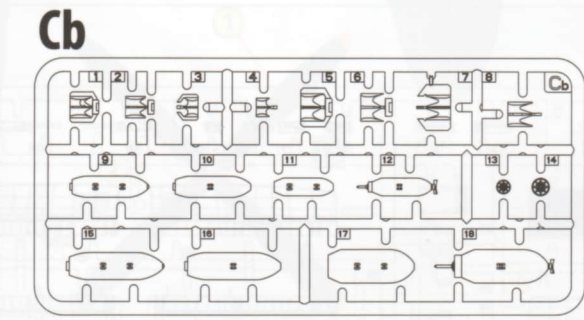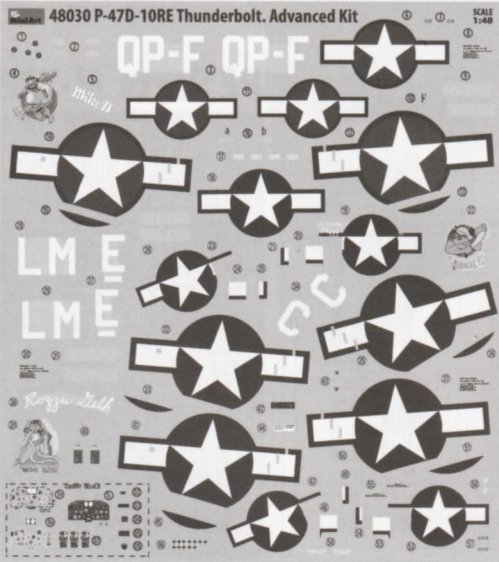


1

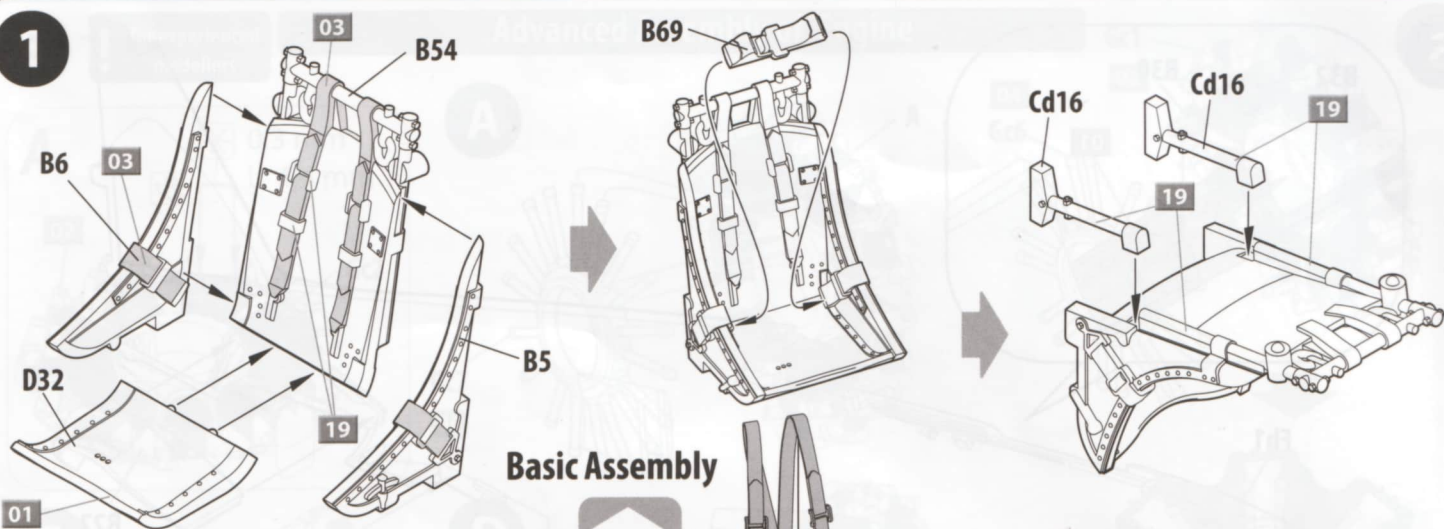


Advanced Assembly

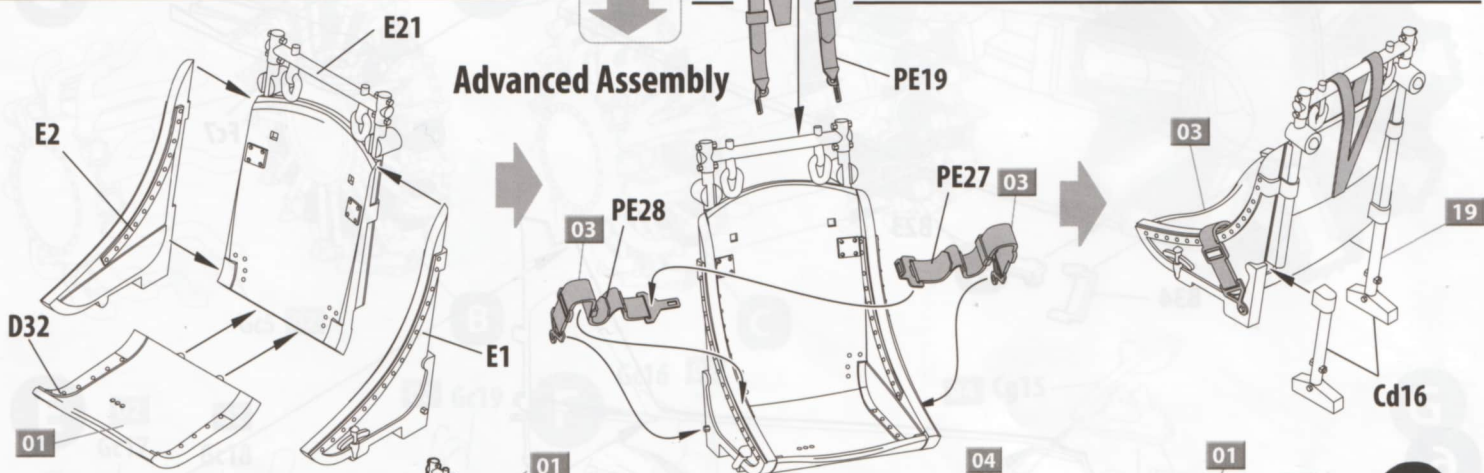


2

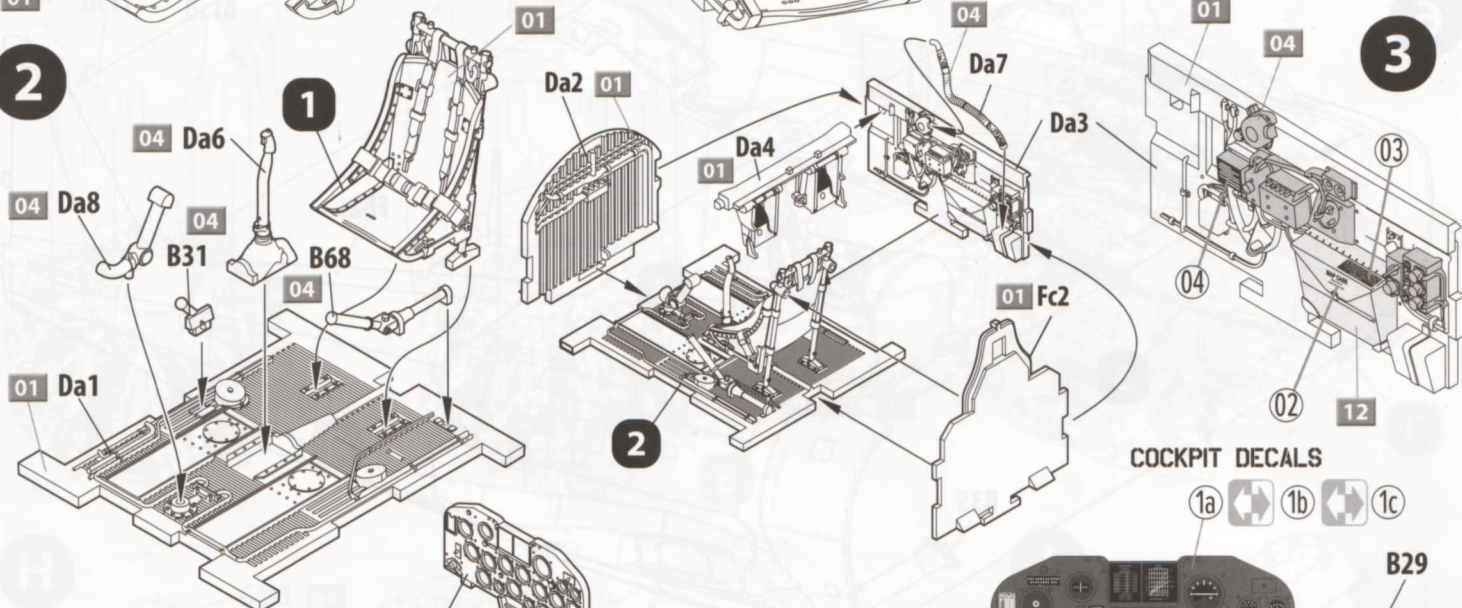


4

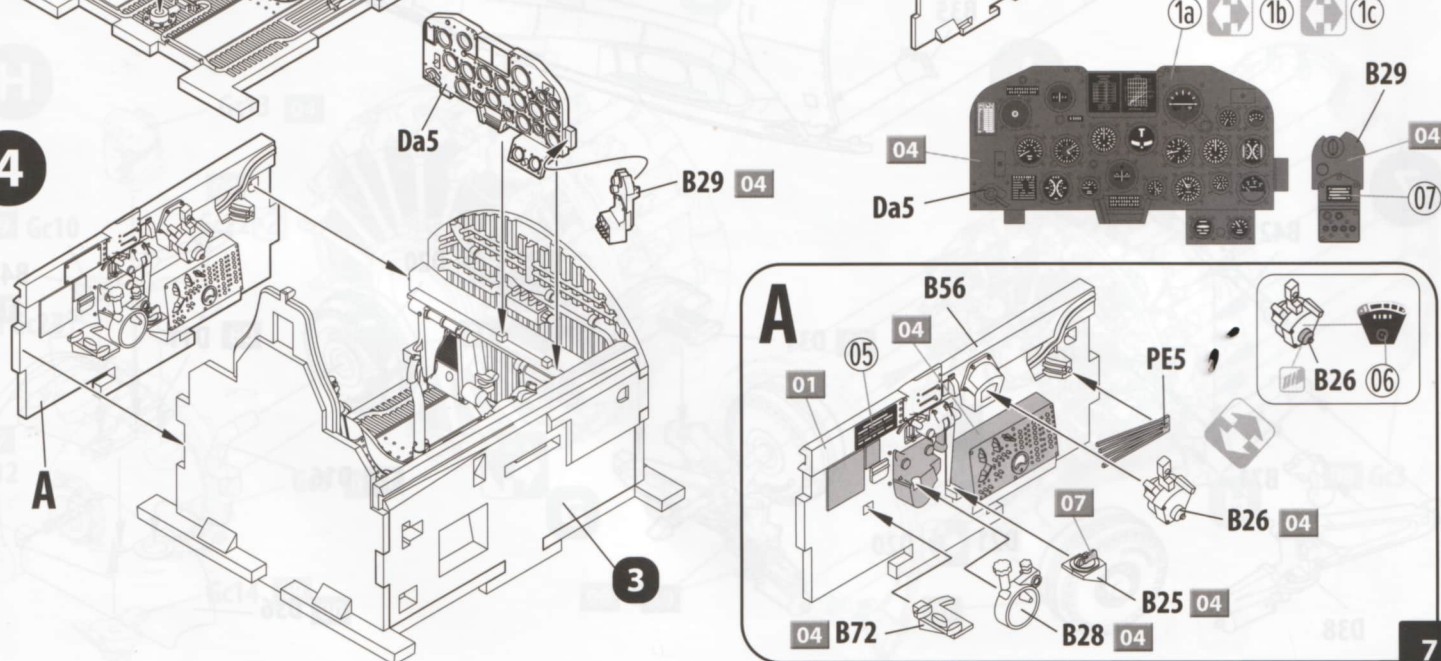


5

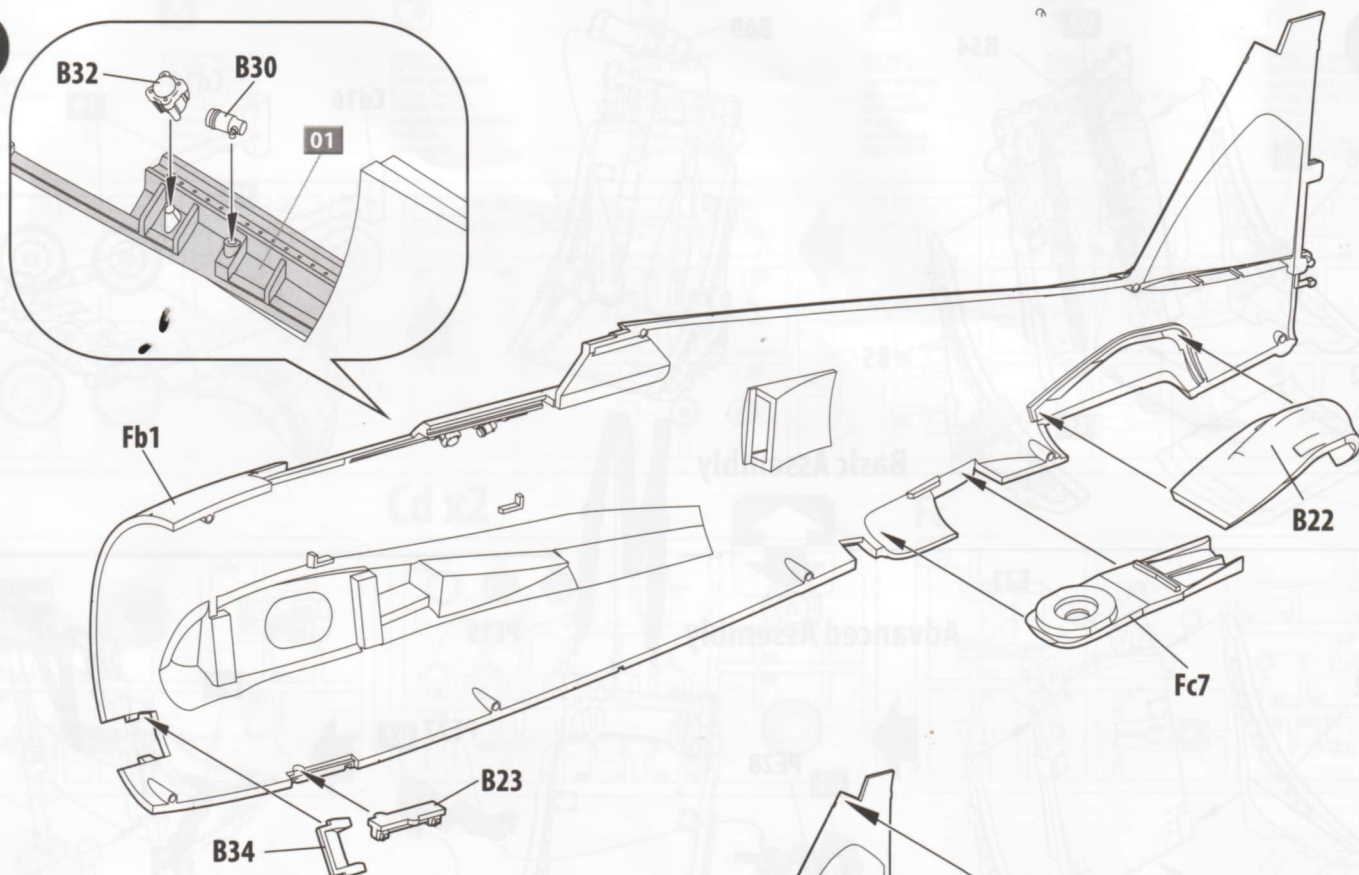



6

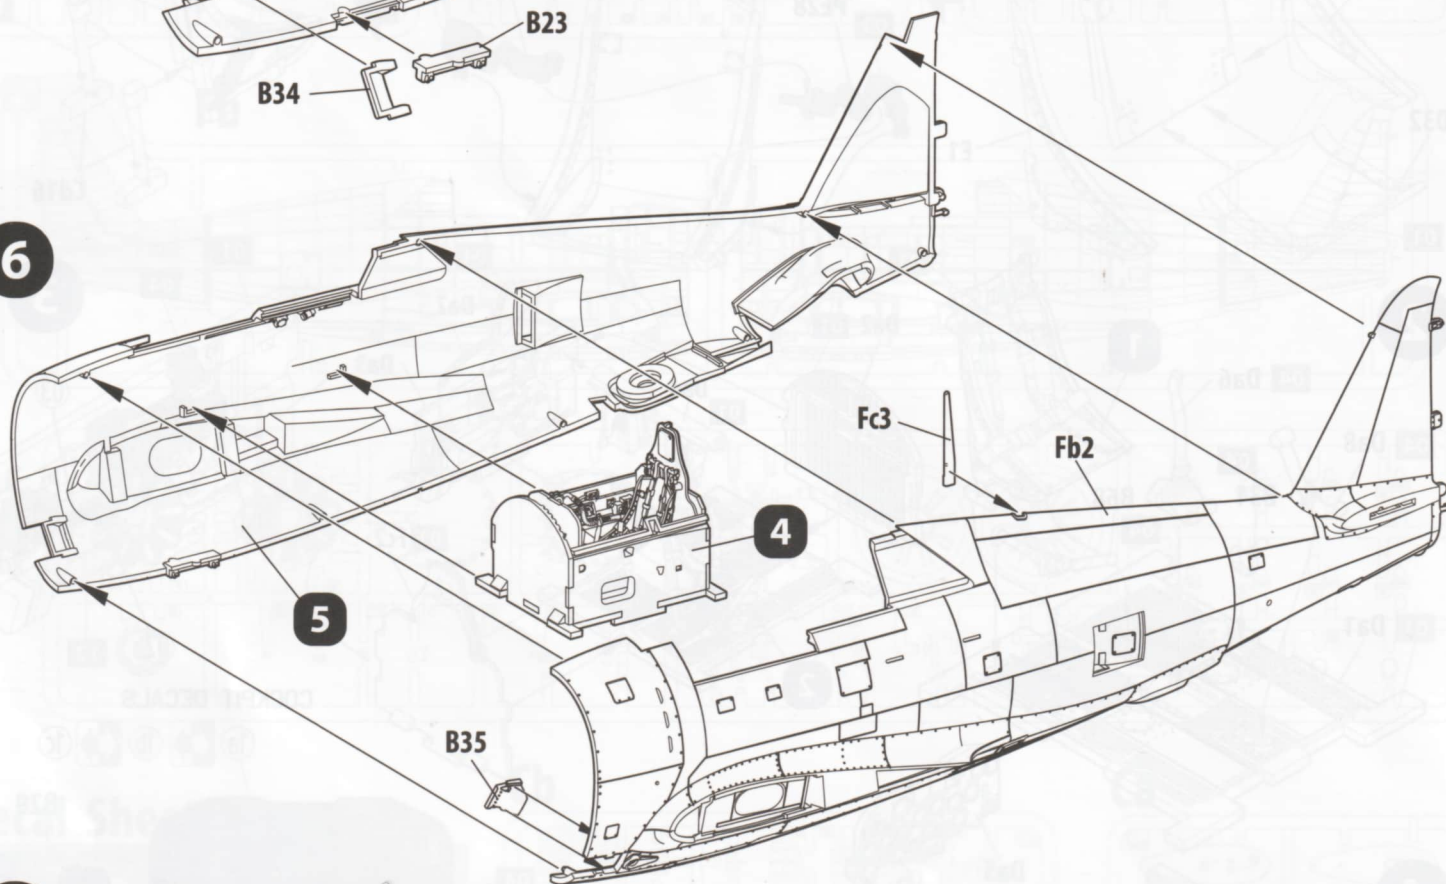

7

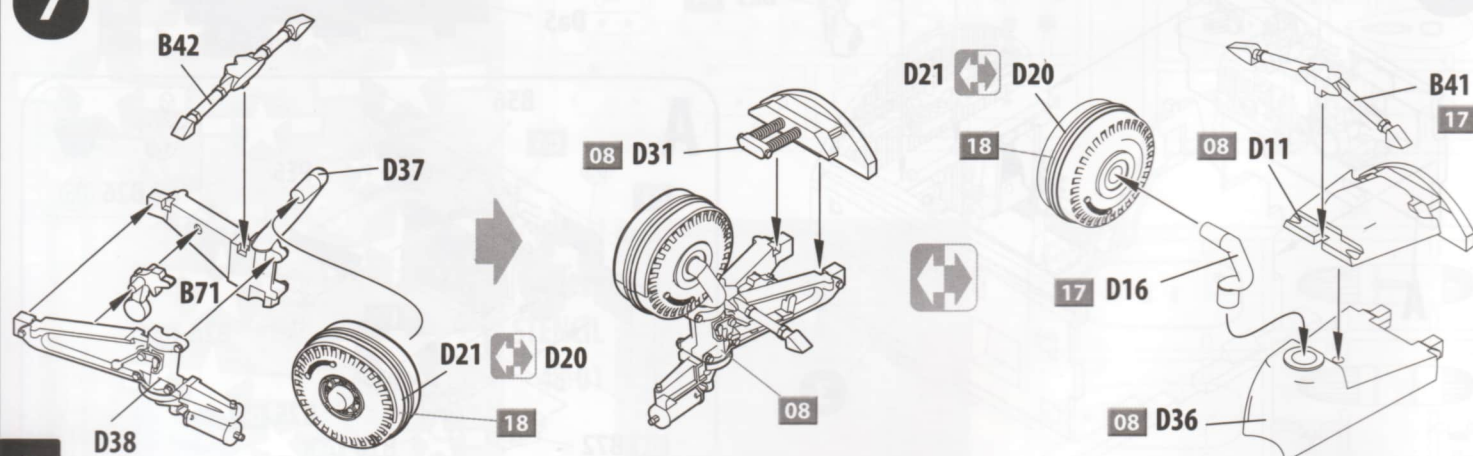

8



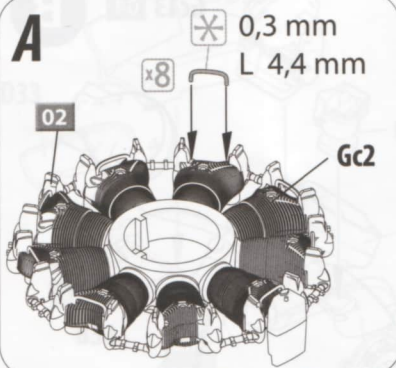
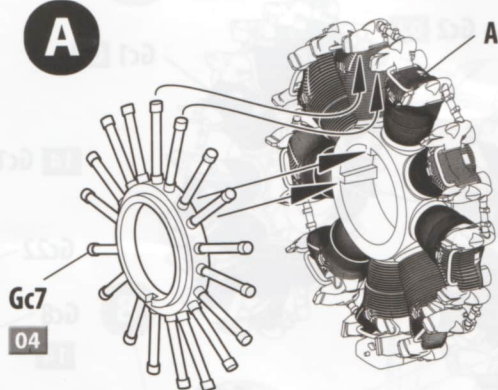
**A**

04

Gc6


Gc1

02

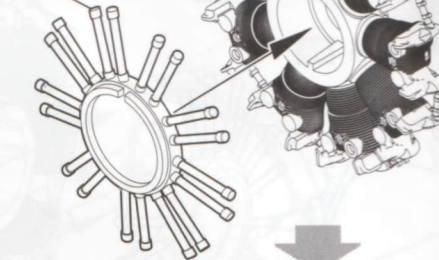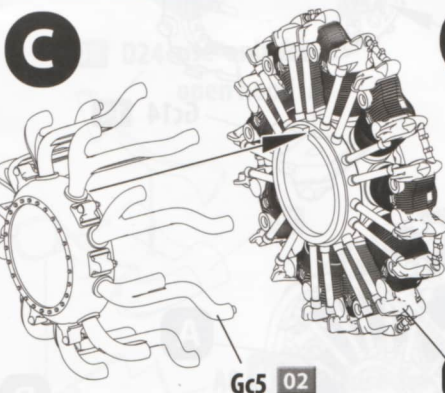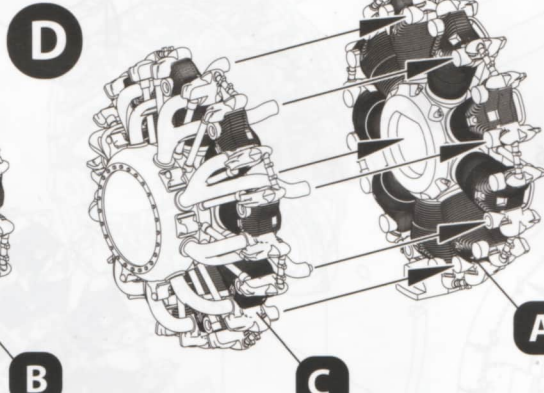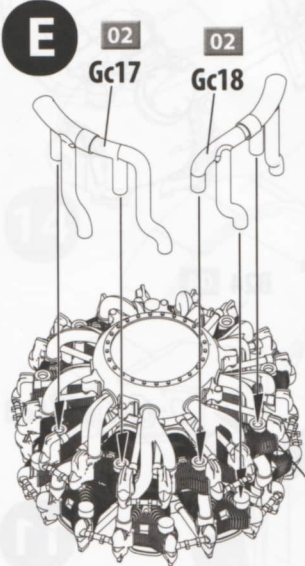**C****D****E**




02


Gc19

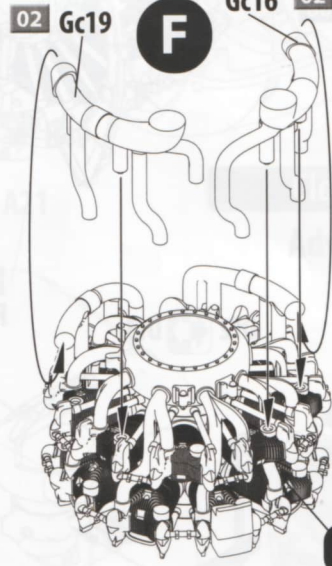F


04

Cg15

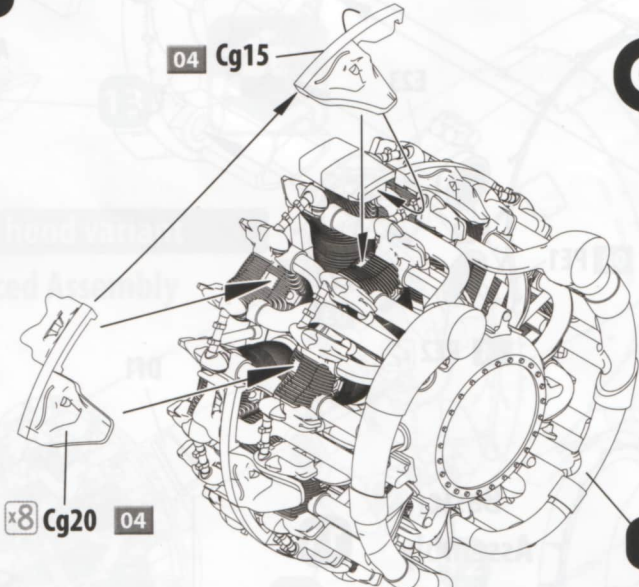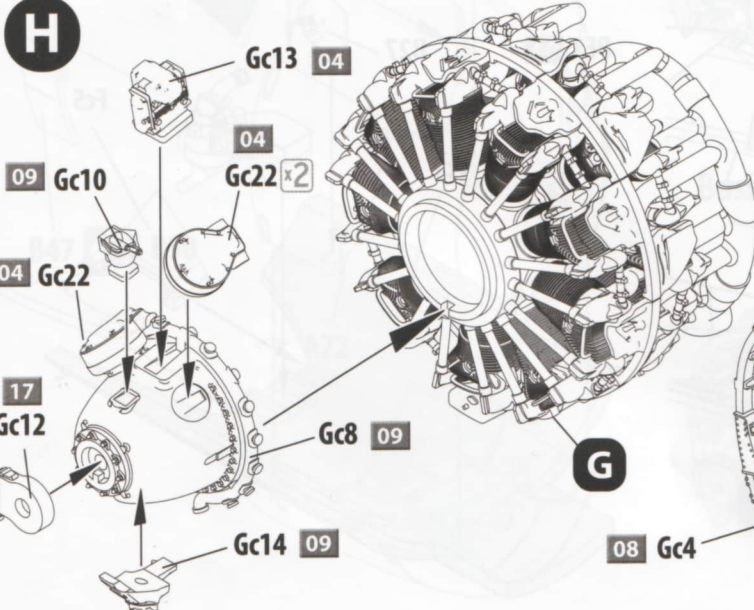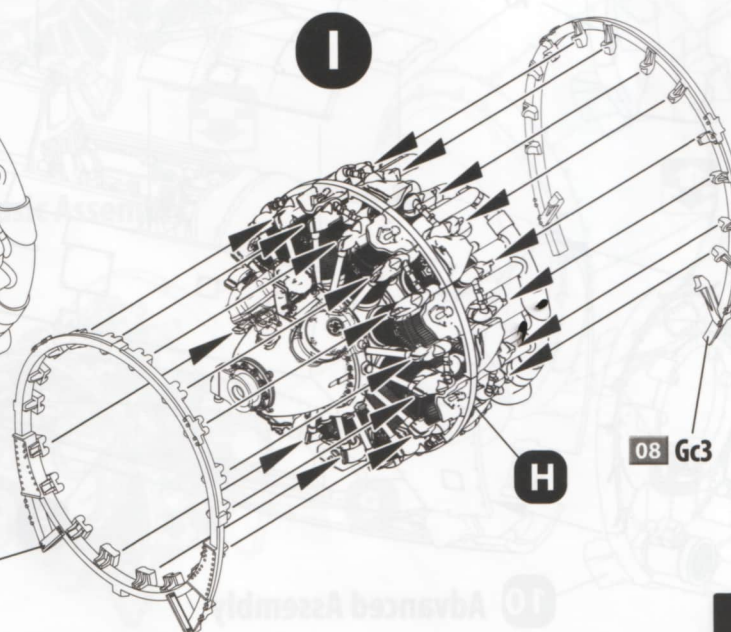
G**H****I**

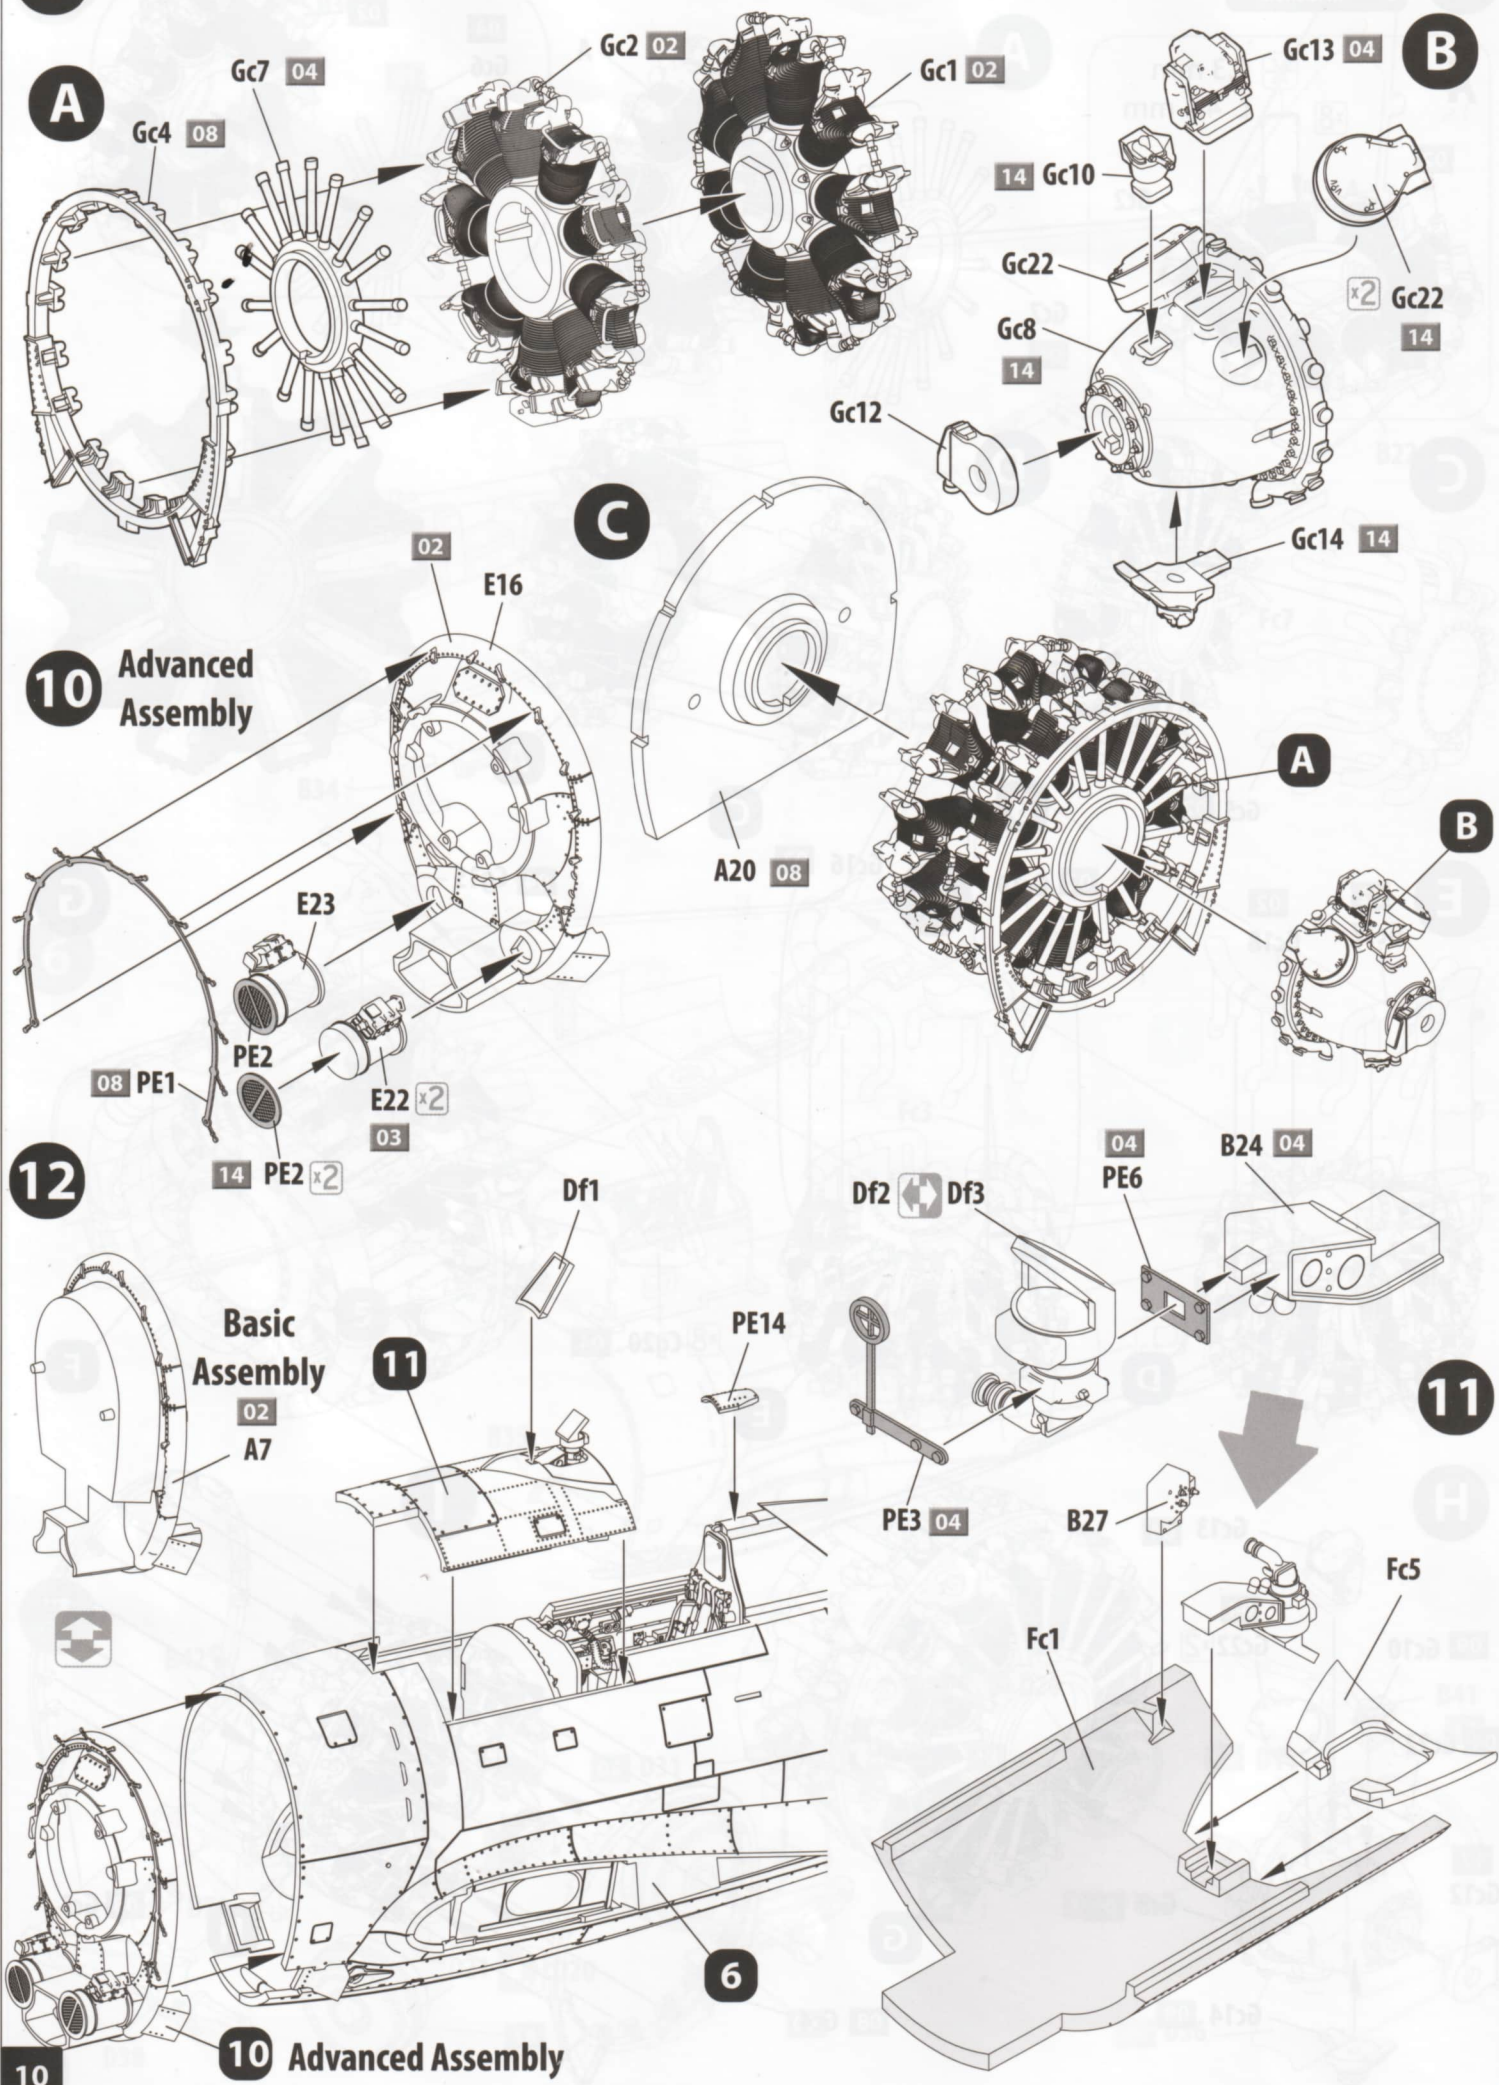


13

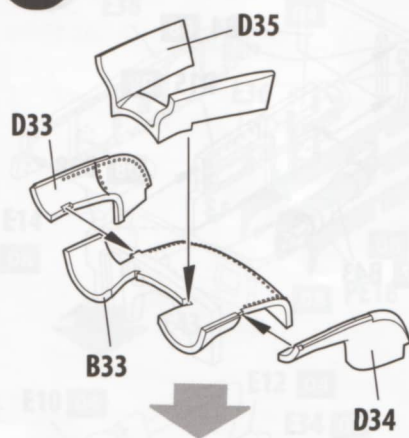

08 D24 use only for open hood

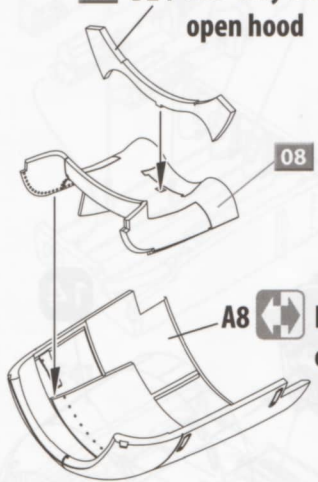


14

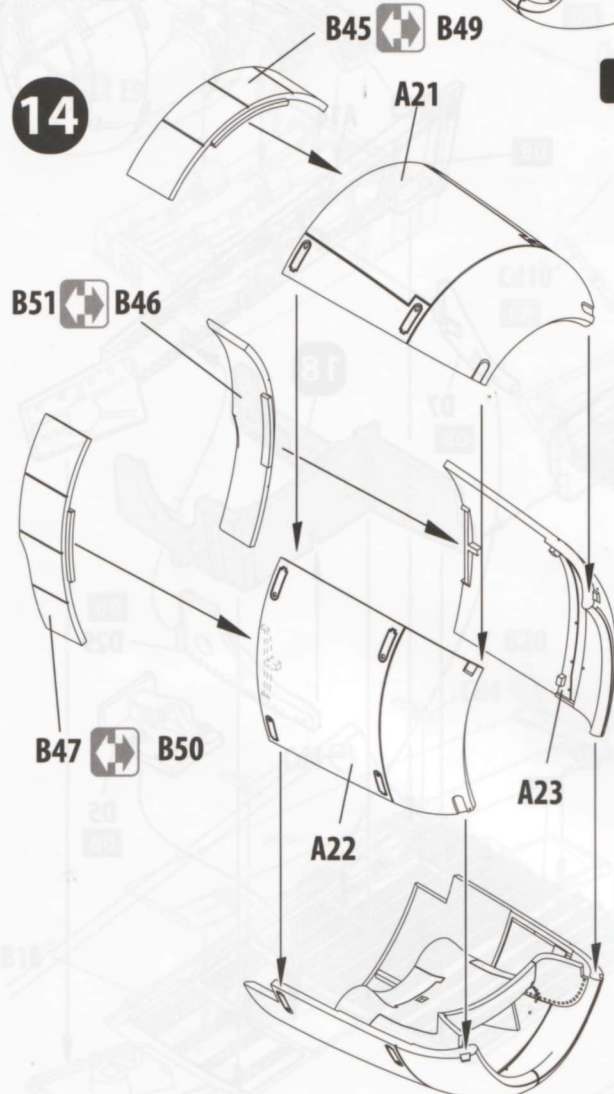


15



Advanced Assembly (Open hood variant)

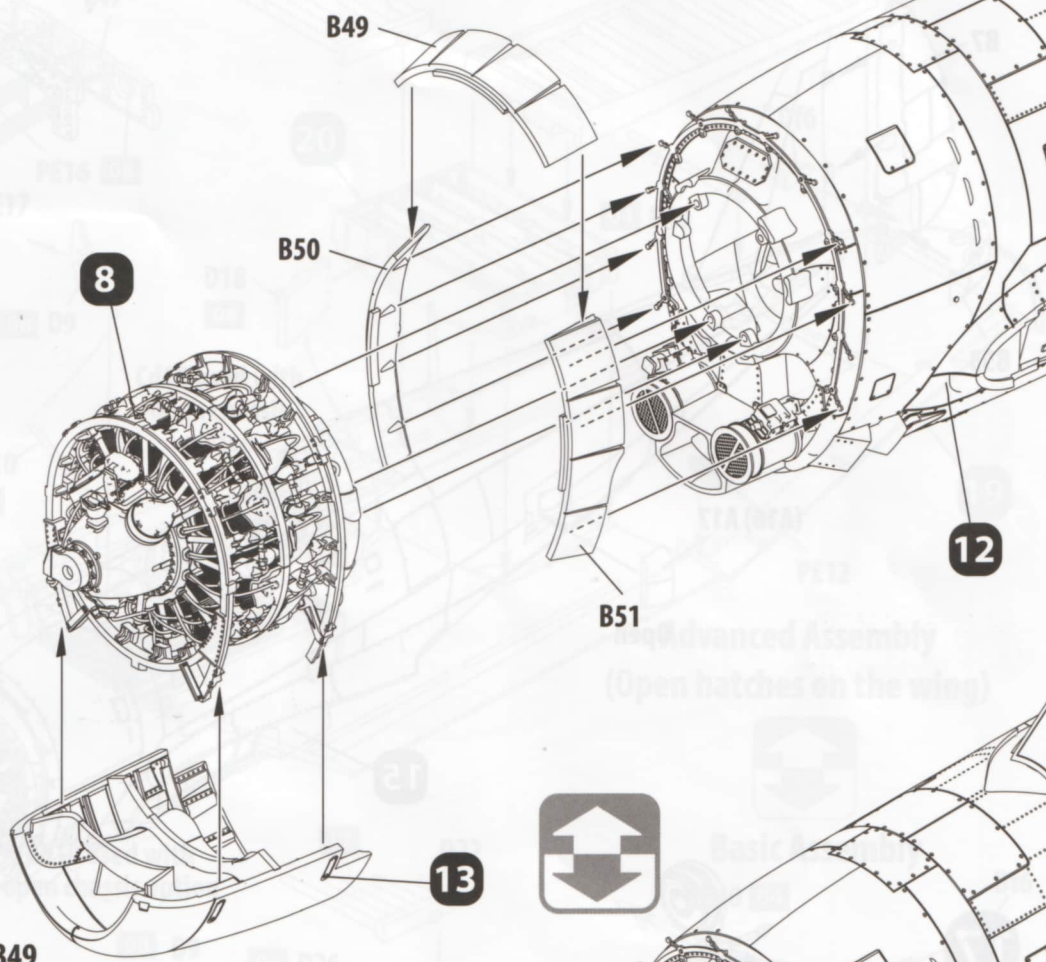


Closed hood variant
Advanced Assembly

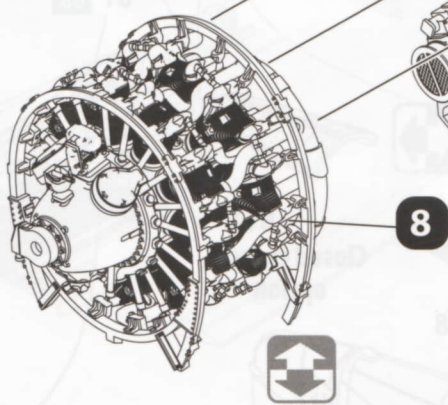

Basic Assembly

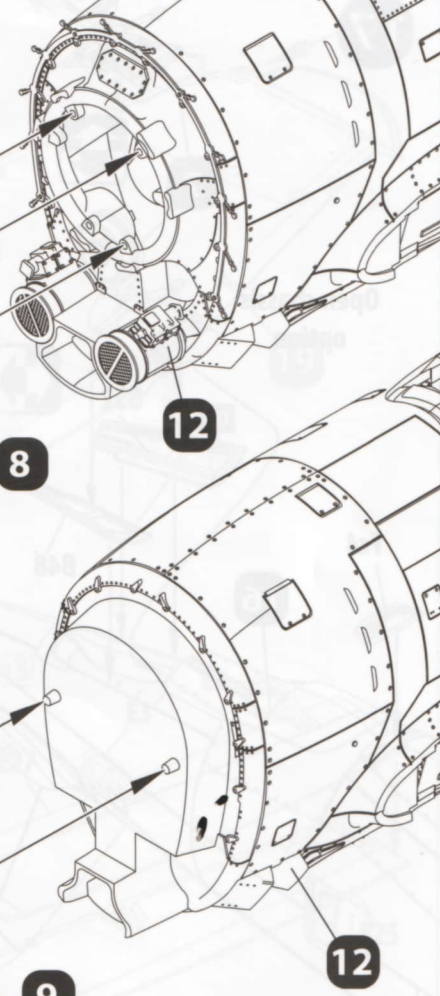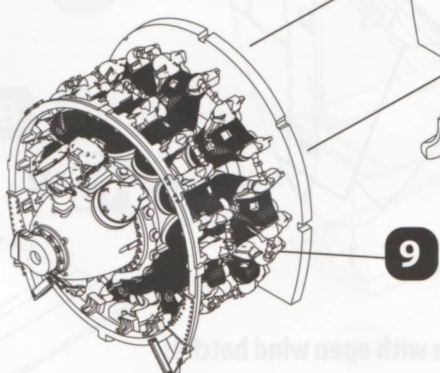

11

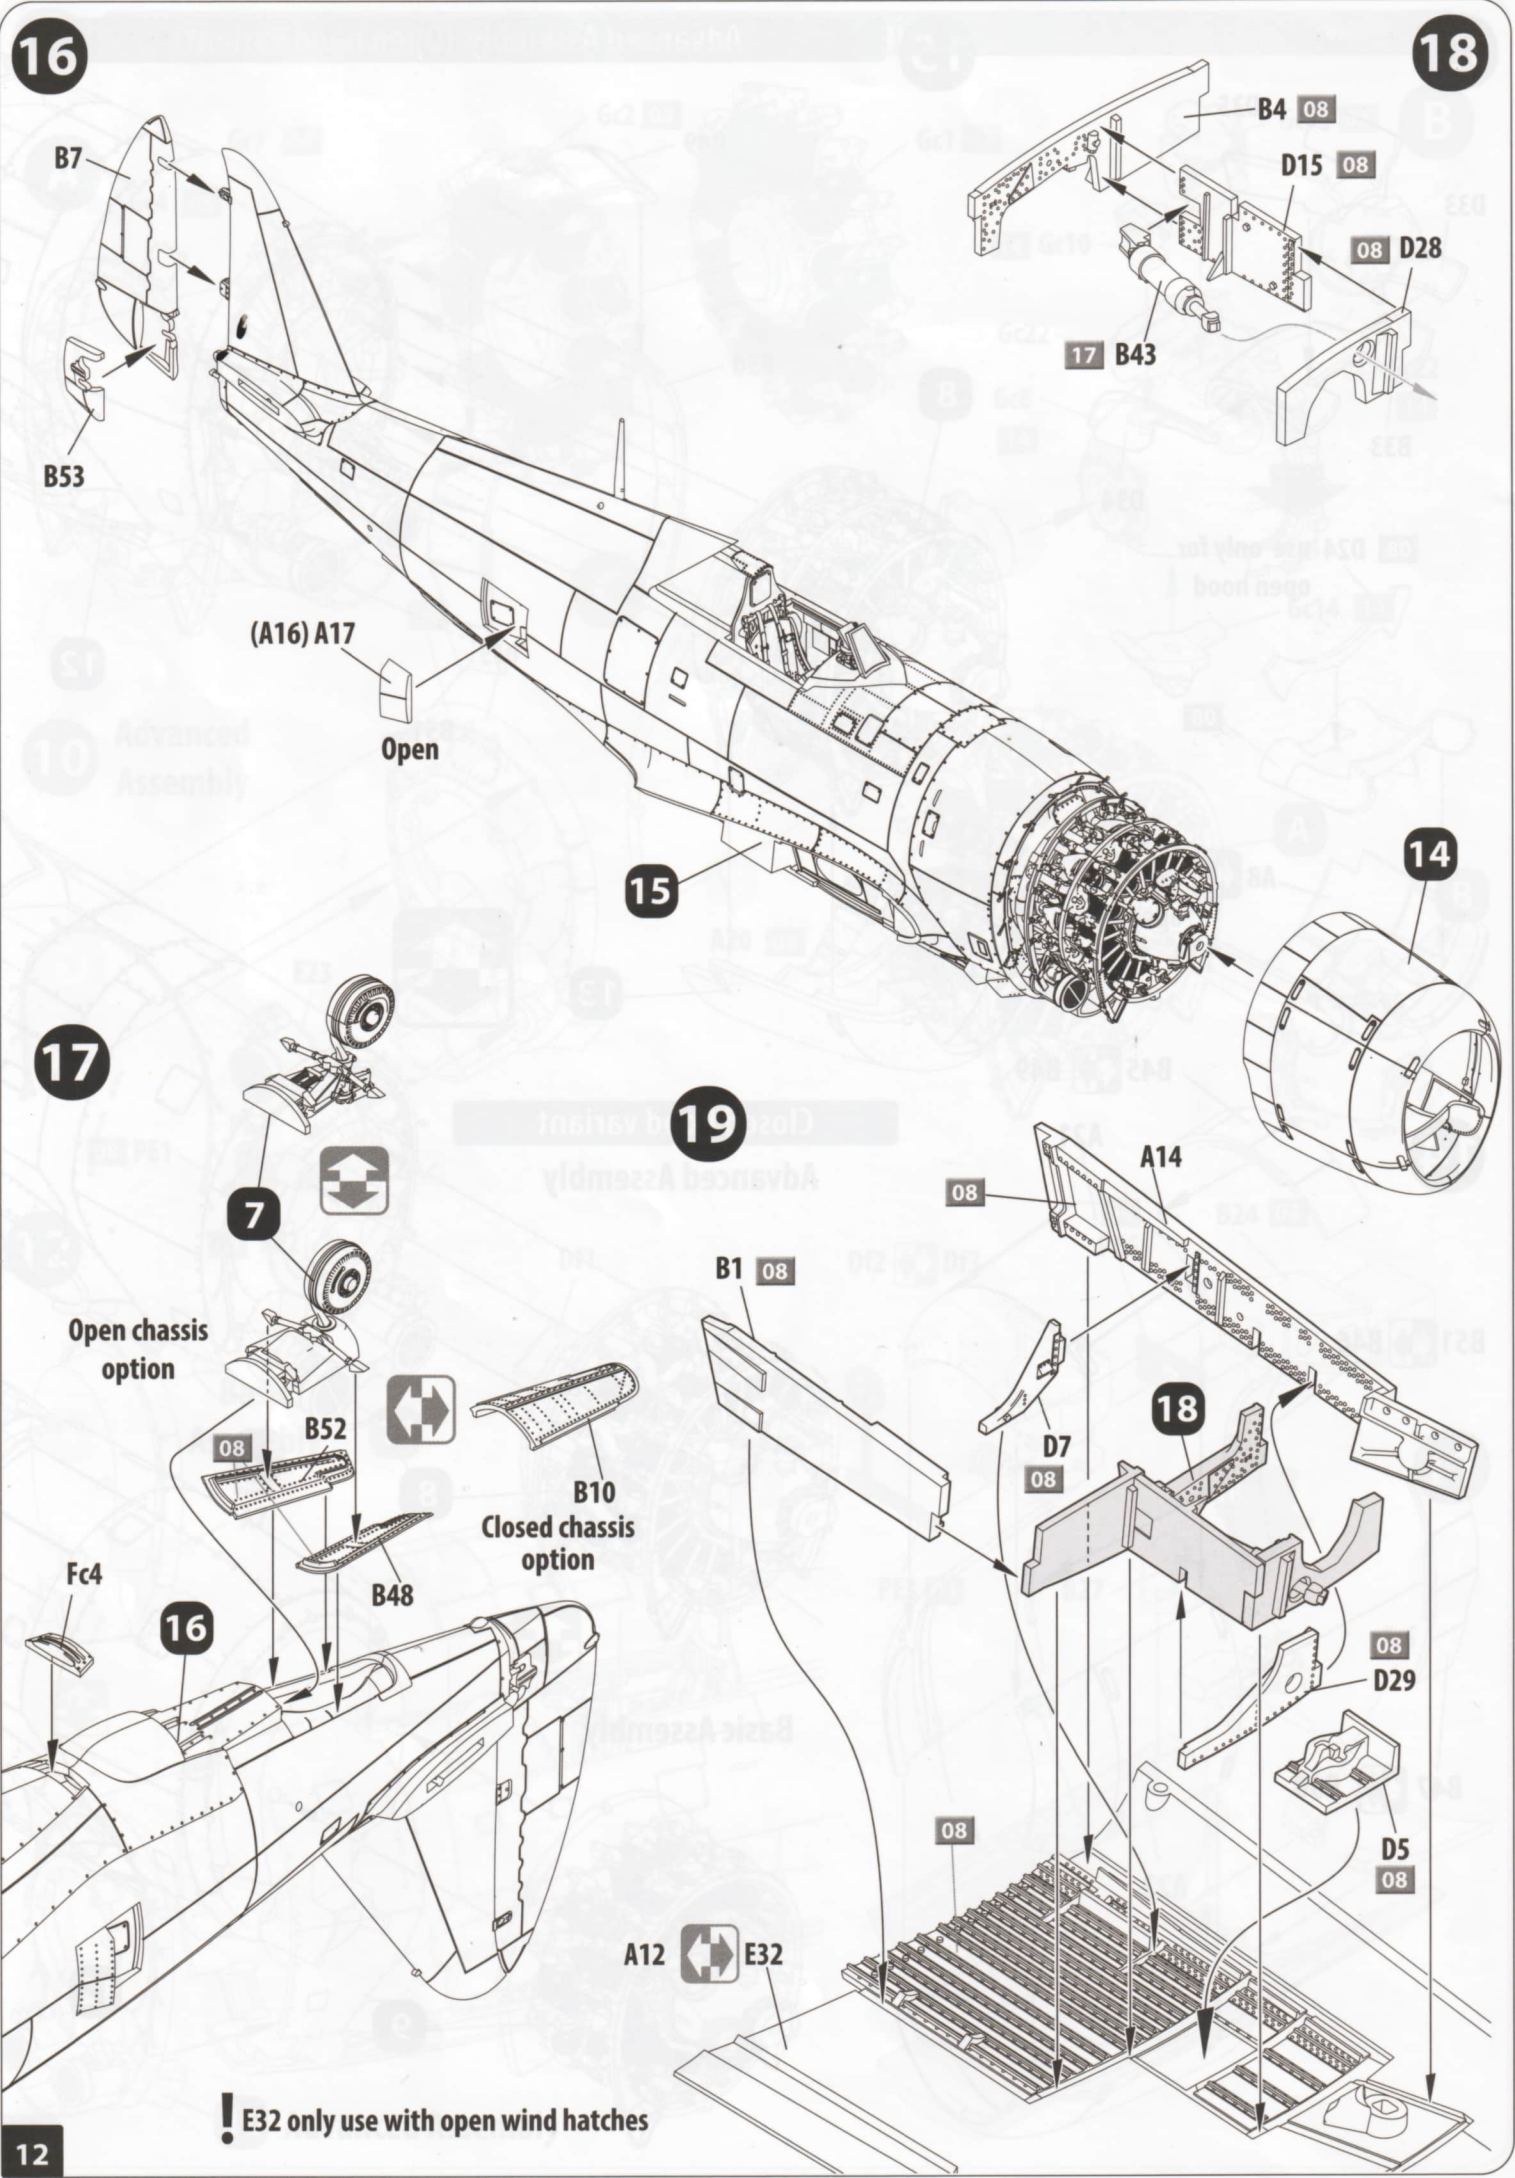

(A16) A17
Open


Open chassis
option

B10
Closed chassis
option

! E32 only use with open wind hatches


20

Use only for open hatch on the wind

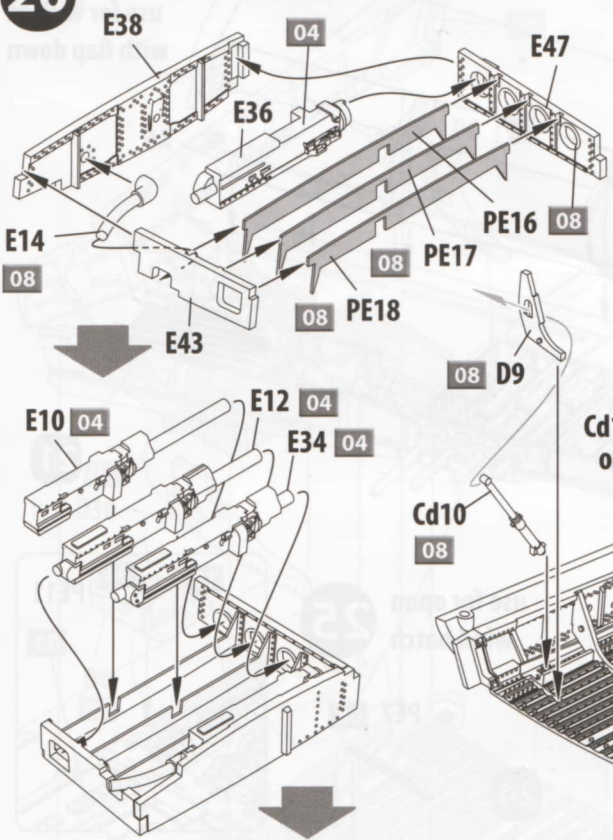

The parts E17 use only for open hatch on the wind


21

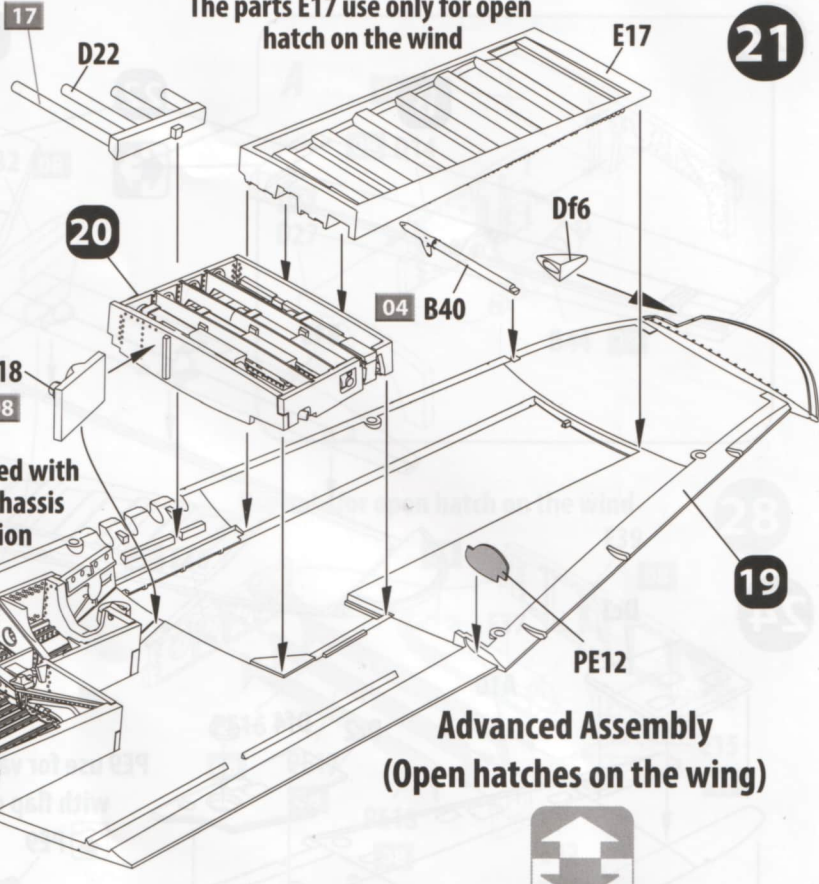




Advanced Assembly
(Open hatches on the wing)



Basic Assembly

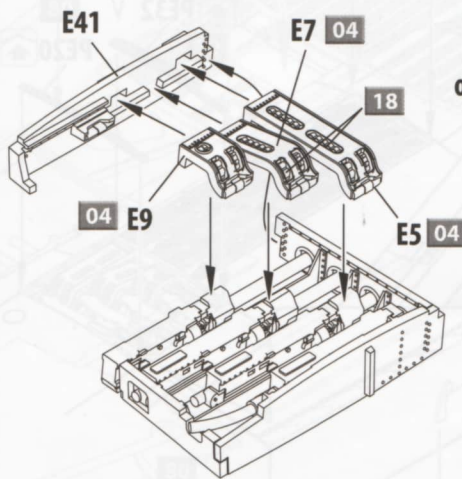

Cd10 used with open chassis option

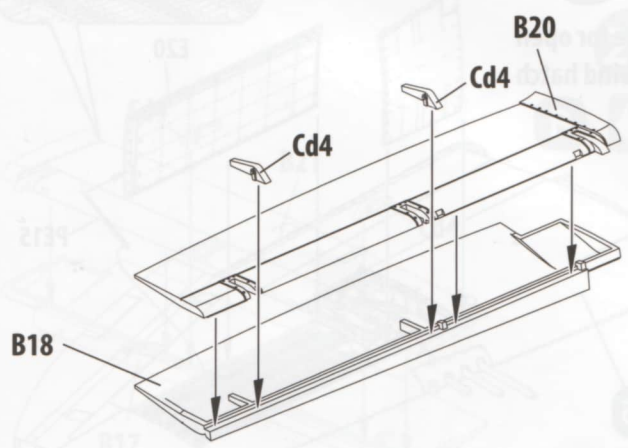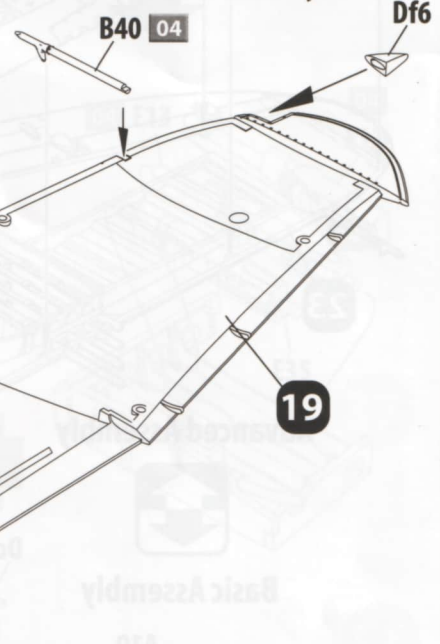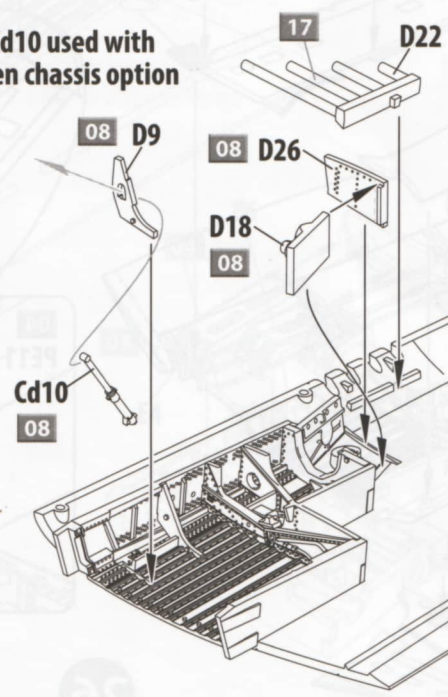


22

B




A


use for variant
with flap down

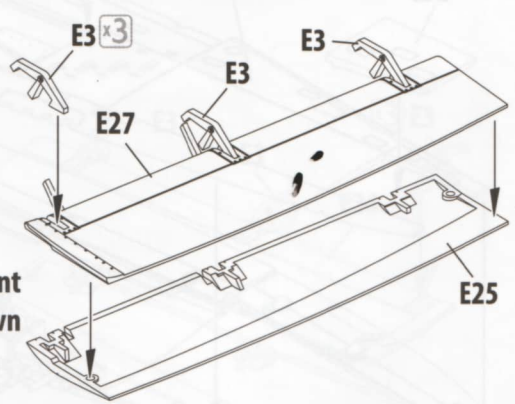

23

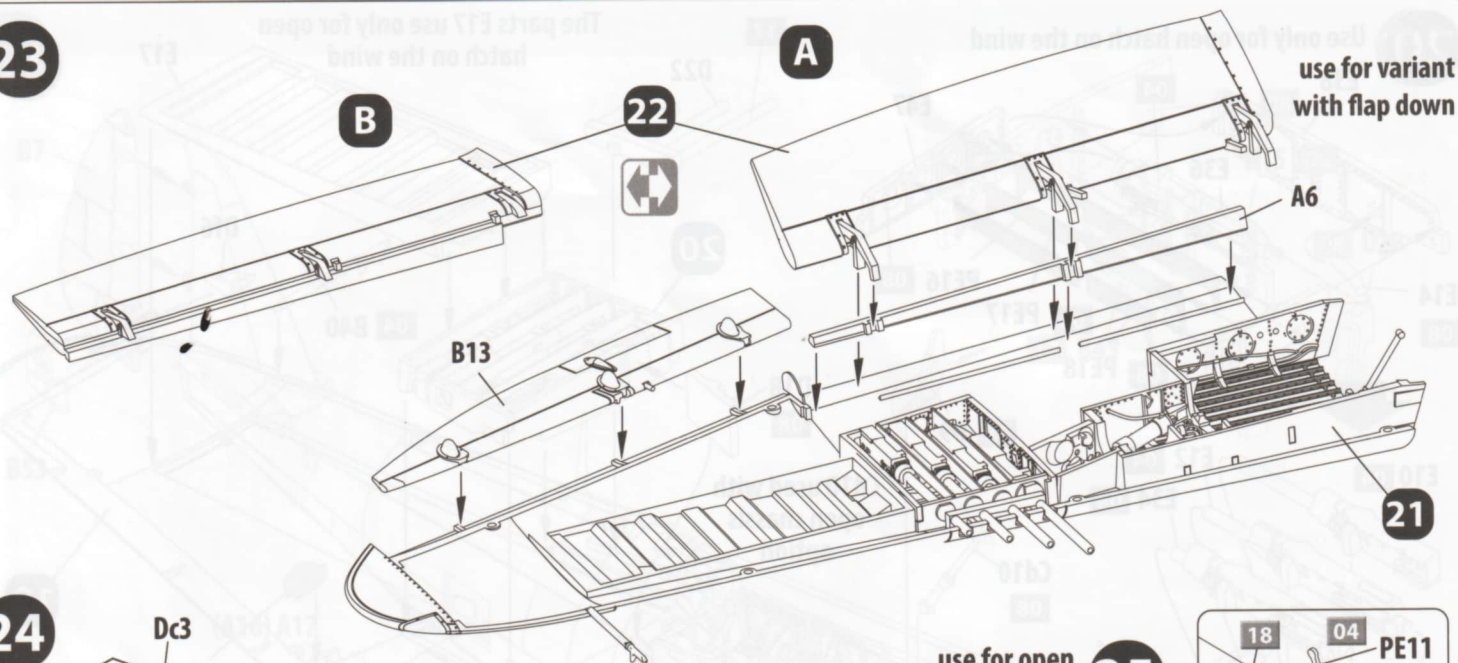


24

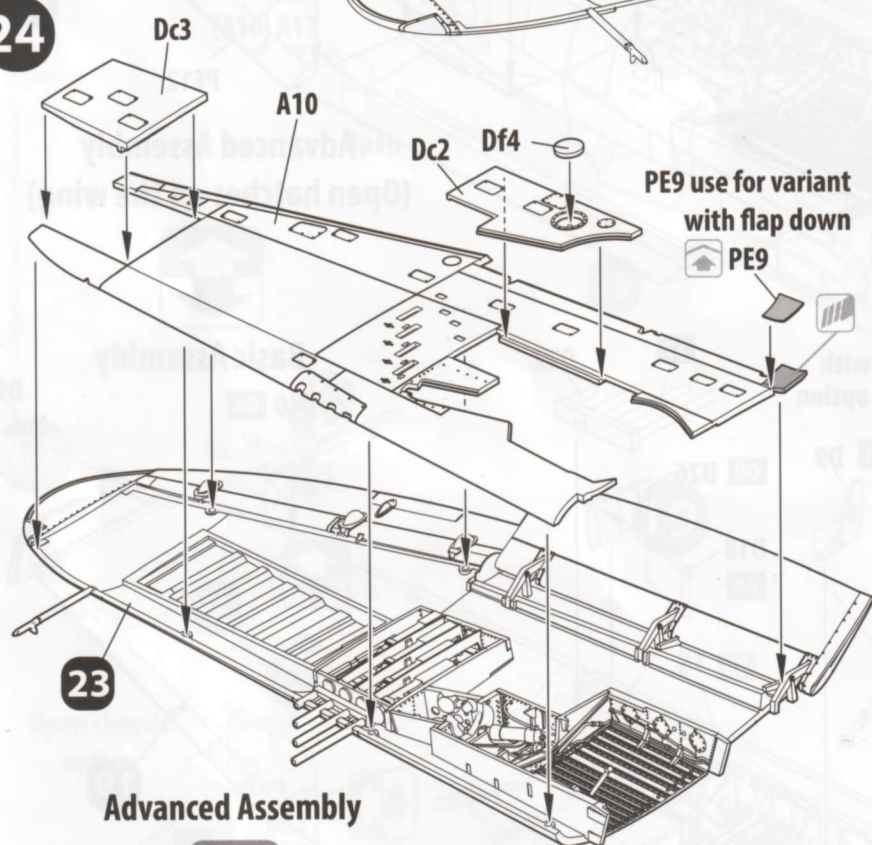

Advanced Assembly




Basic Assembly

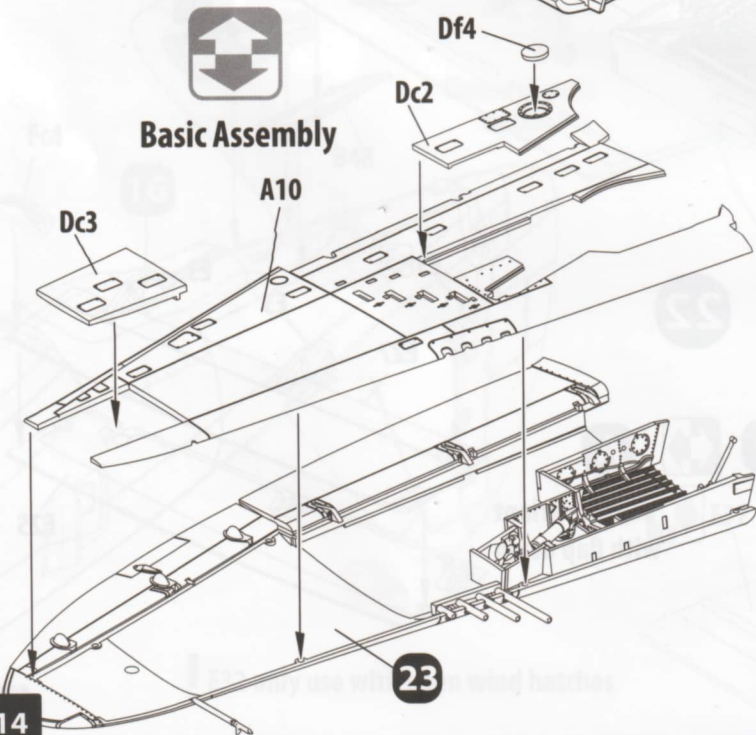


use for open wind hatch

25

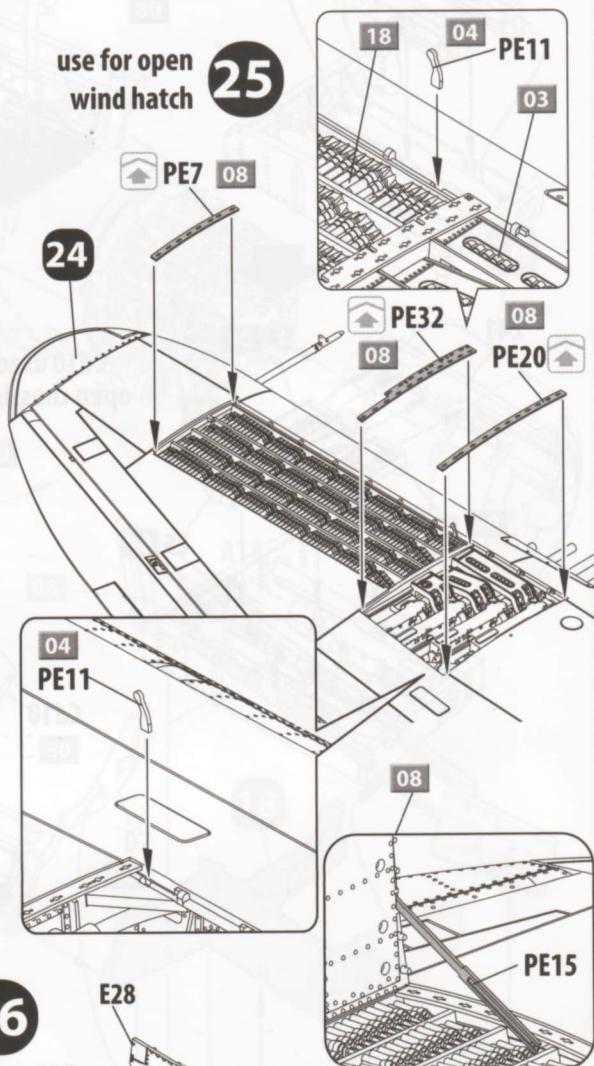


26

use for open wind hatch

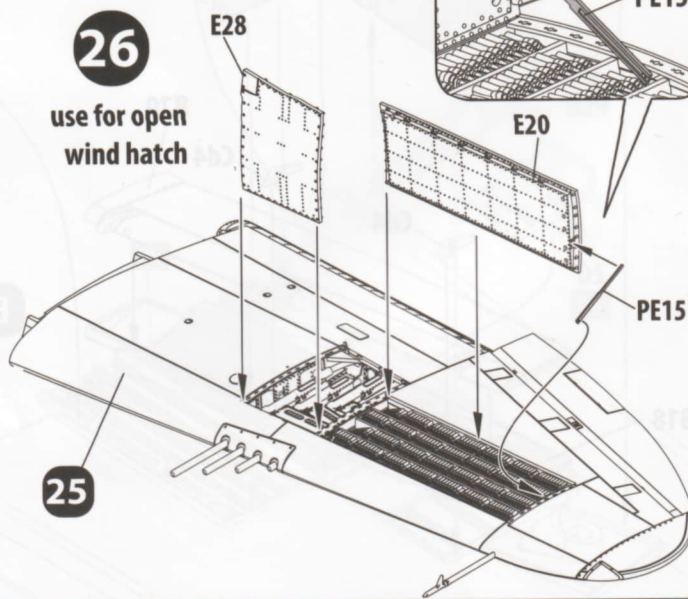



14

27

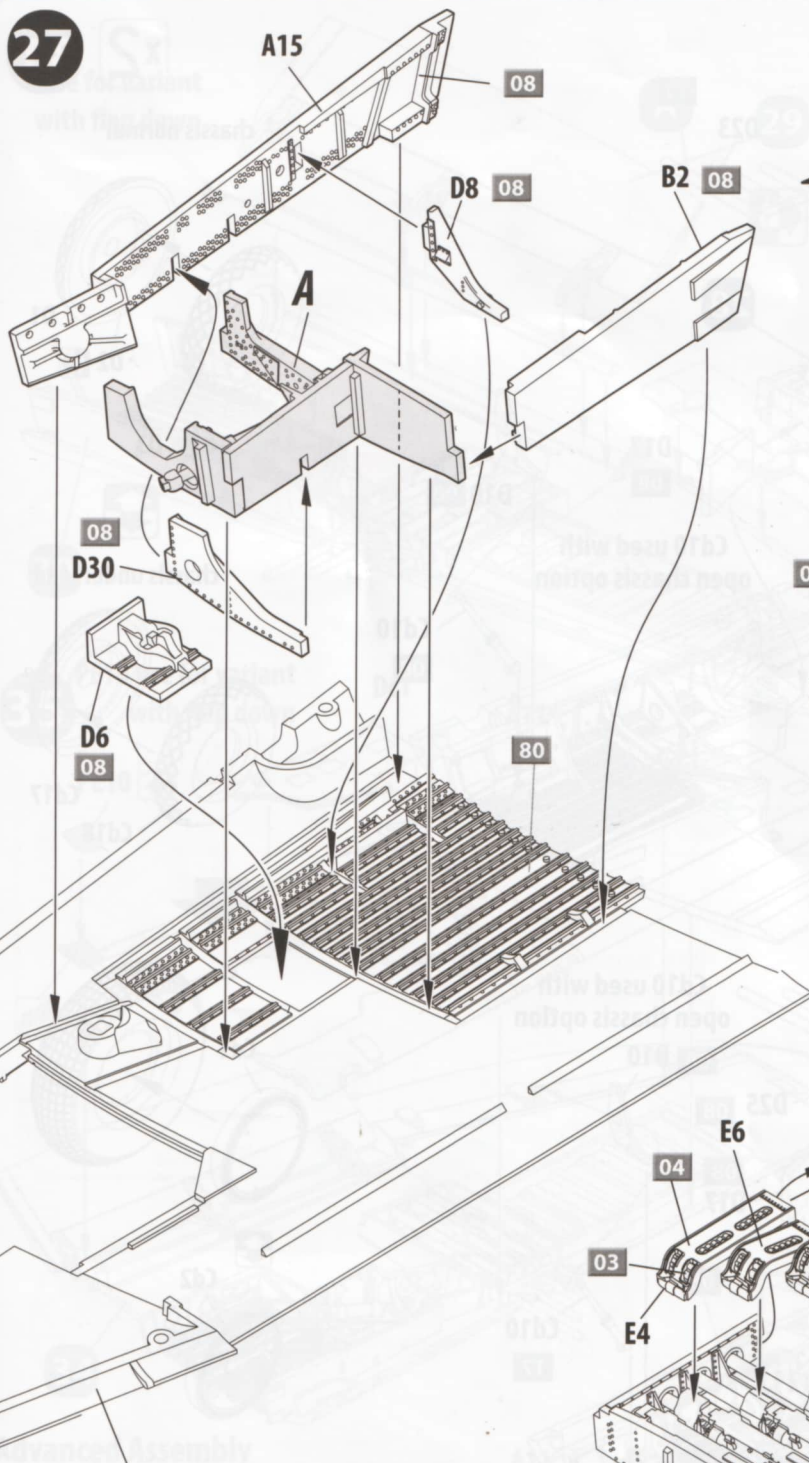



E33 A13 basic assembly

E33 only use with open wind hatches advanced assembly

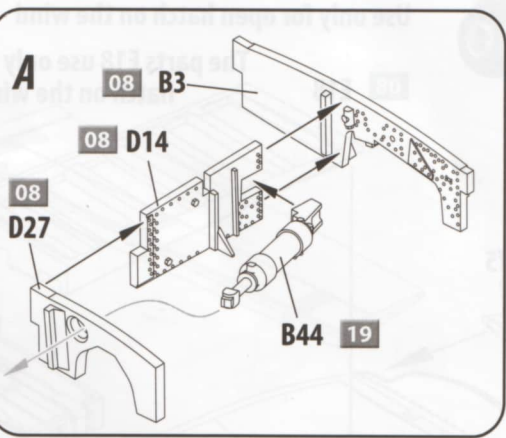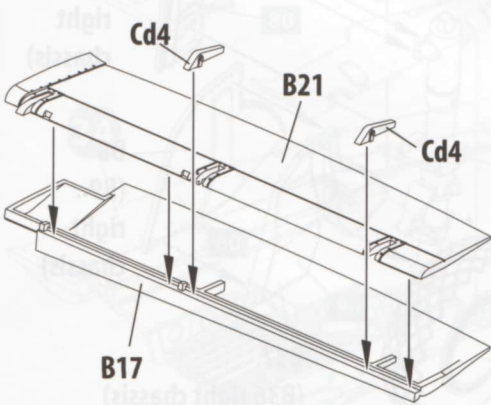

Use only for open hatch on the wind


28

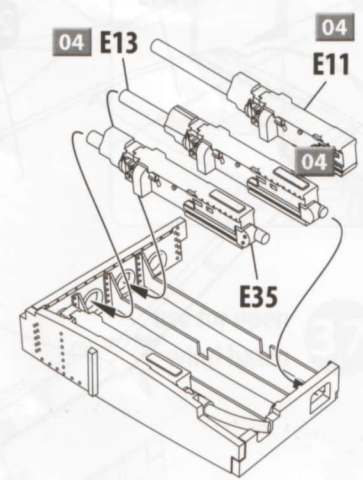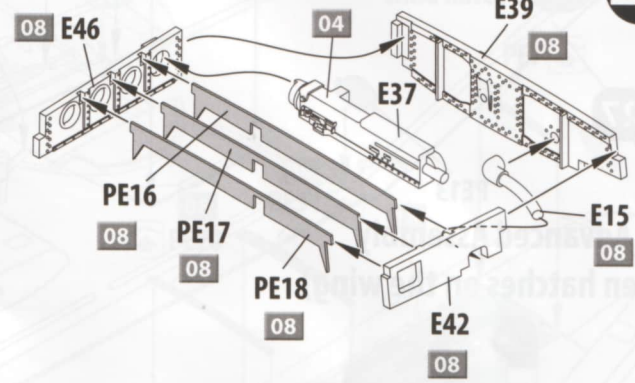

29

B

A use for variant with flap down

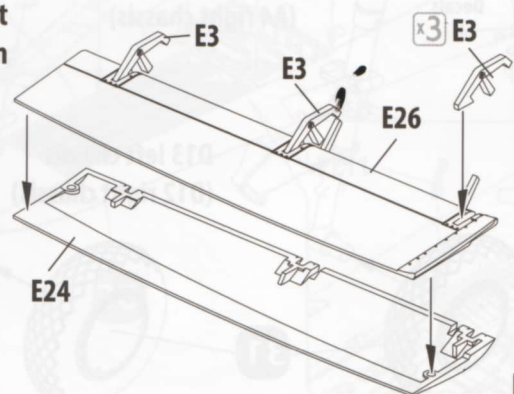


15

30


Use only for open hatch on the wind

The parts E18 use only for open hatch on the wind

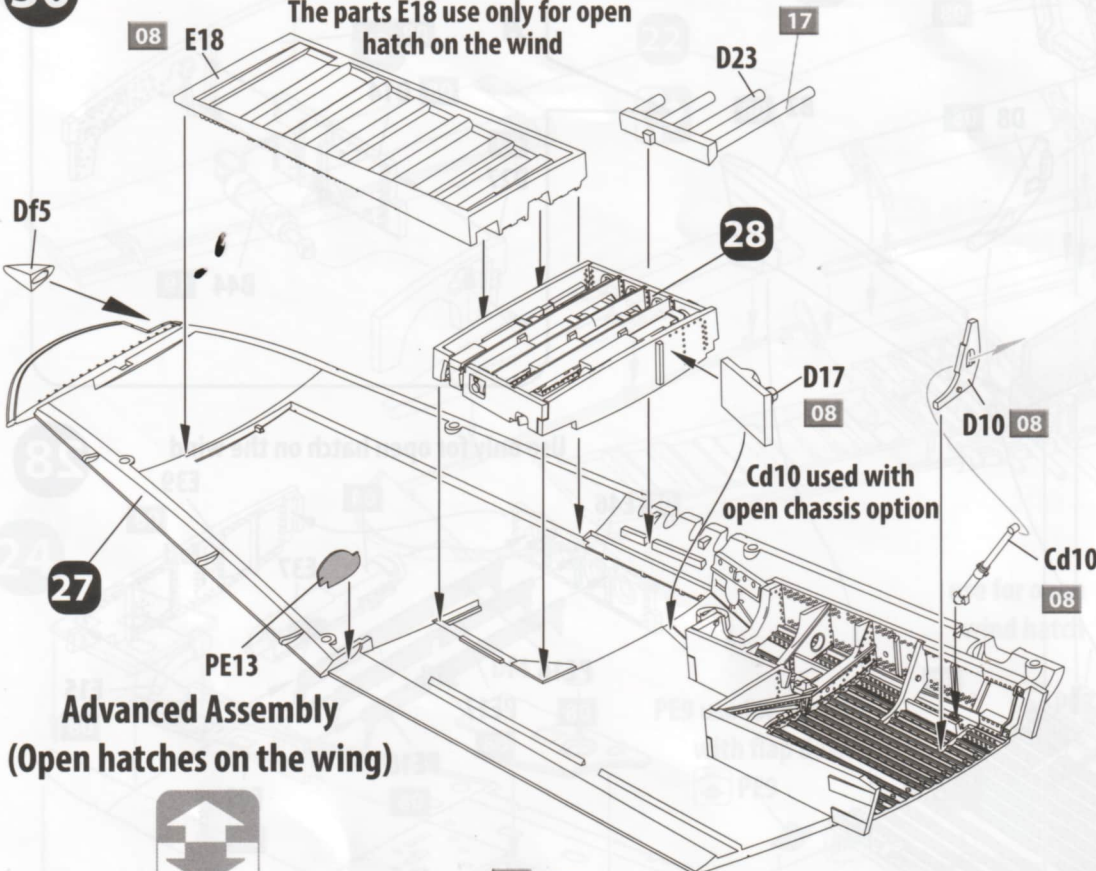


27

Advanced Assembly
(Open hatches on the wing)

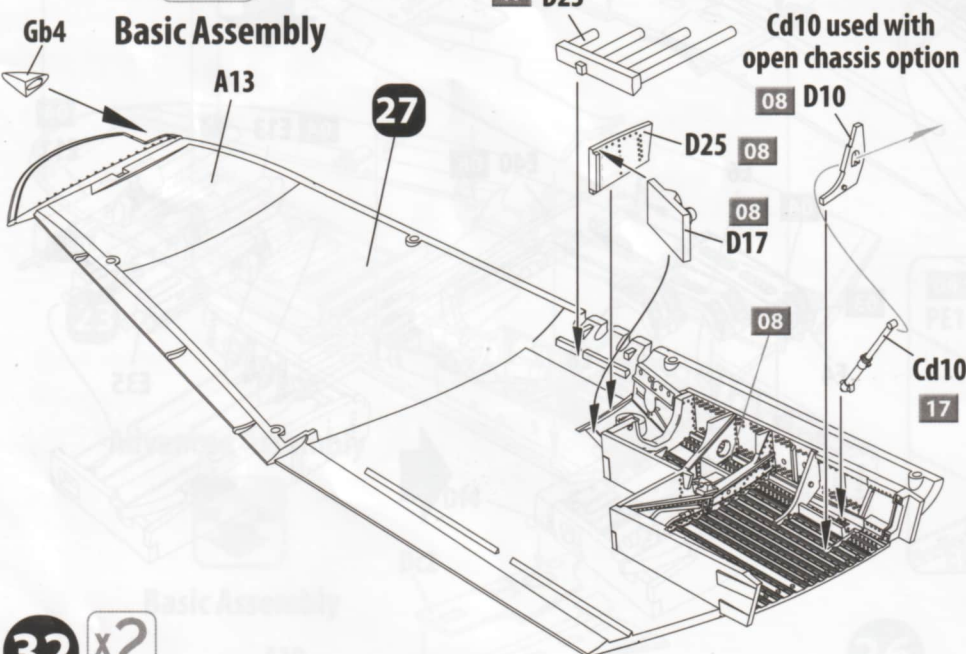

32 x2


chassis normal chassis under load

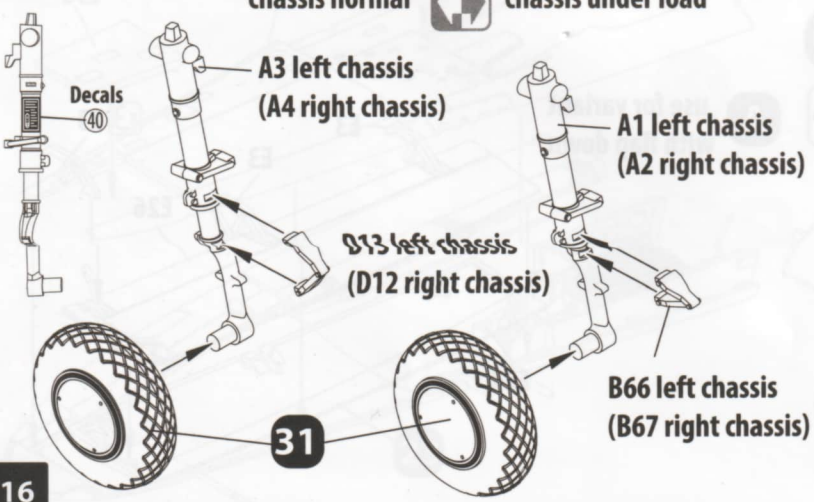



x2

31


chassis normal

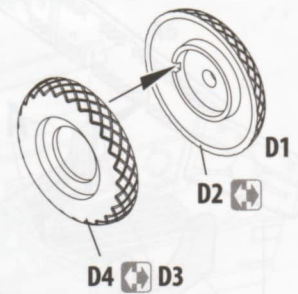

chassis under load

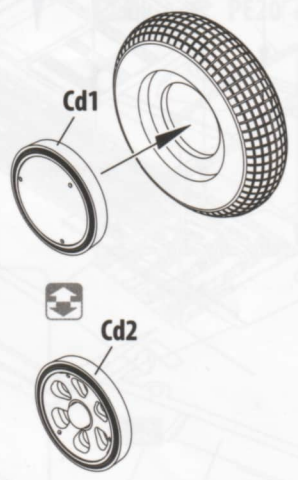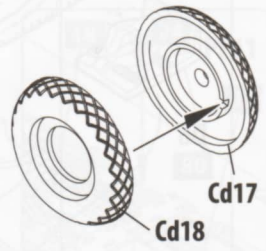

33 x2

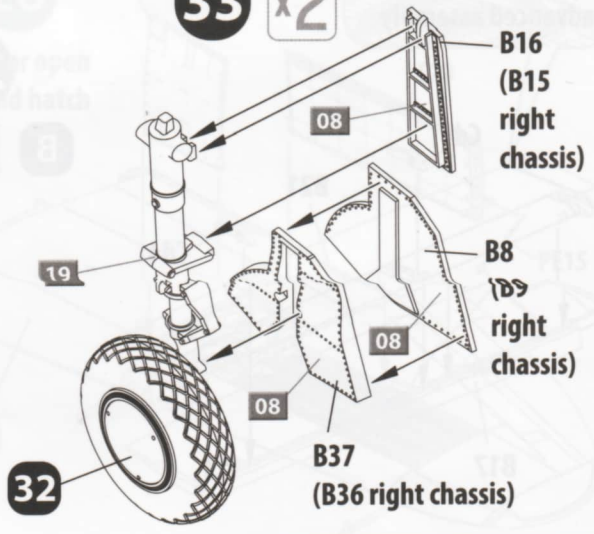

use for variant
with flap down

A5

A

29

B



B14

30

use for open
wind hatch

36

PE7

35

35

PE10 use for variant
with flap down

Dc1

A11

PE10



08

08

PE31

18

08


PE20

08

04

PE11

34

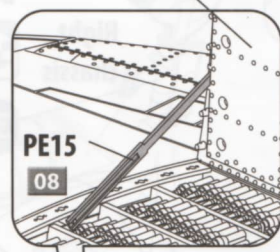

PE15

08

use for open
wind hatch

37

Advanced Assembly



Basic Assembly

A11

Dc1

E19




E29




PE15

34


36

PE11

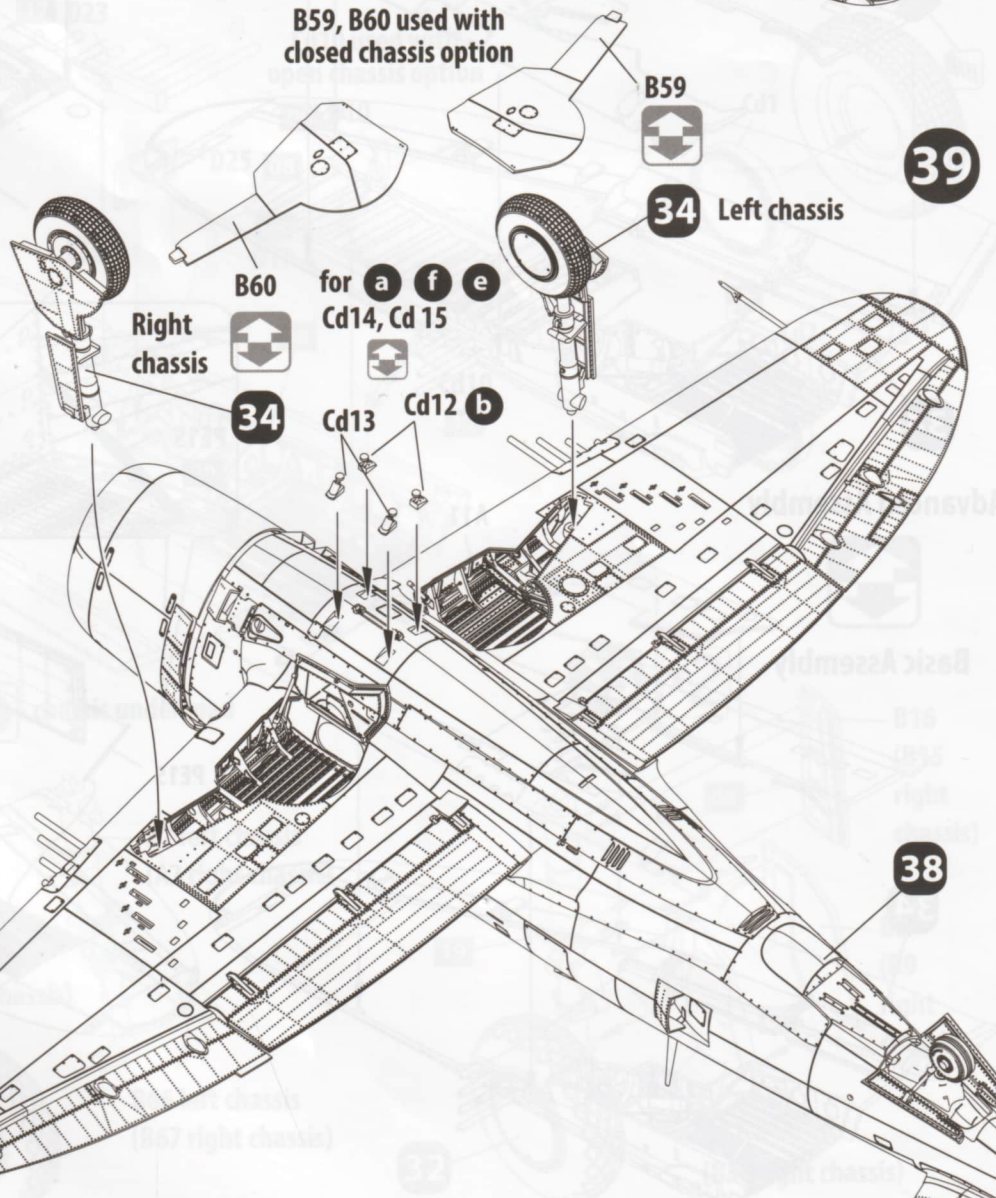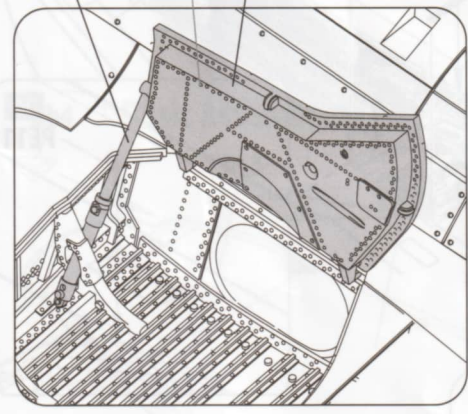
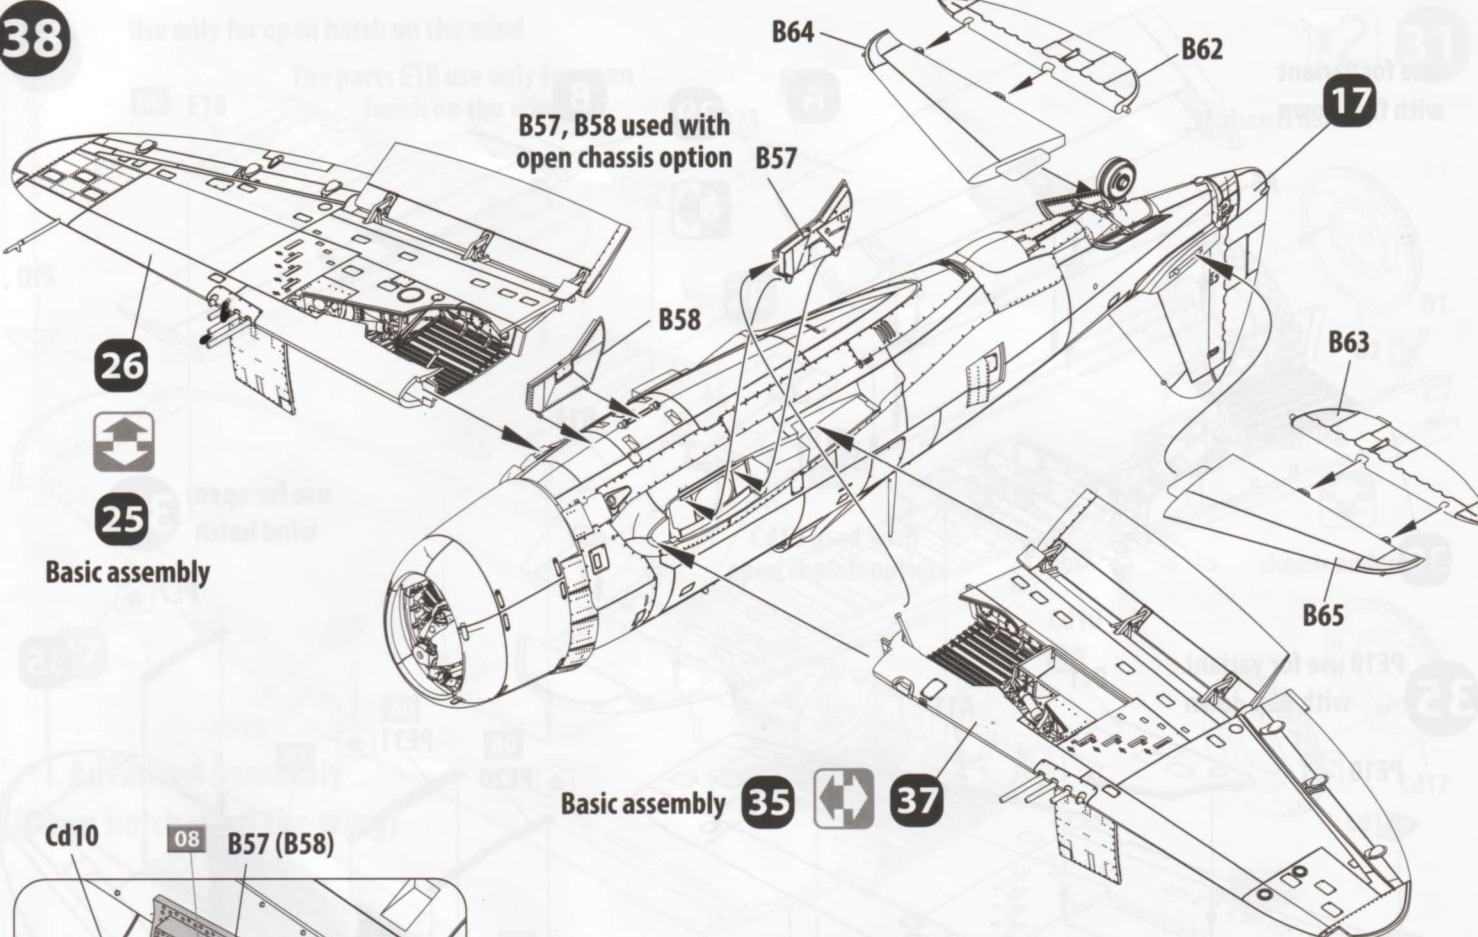


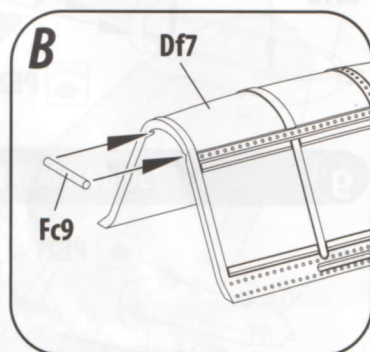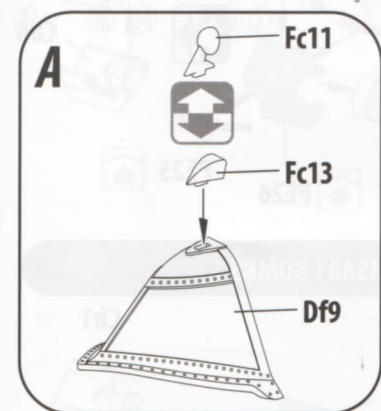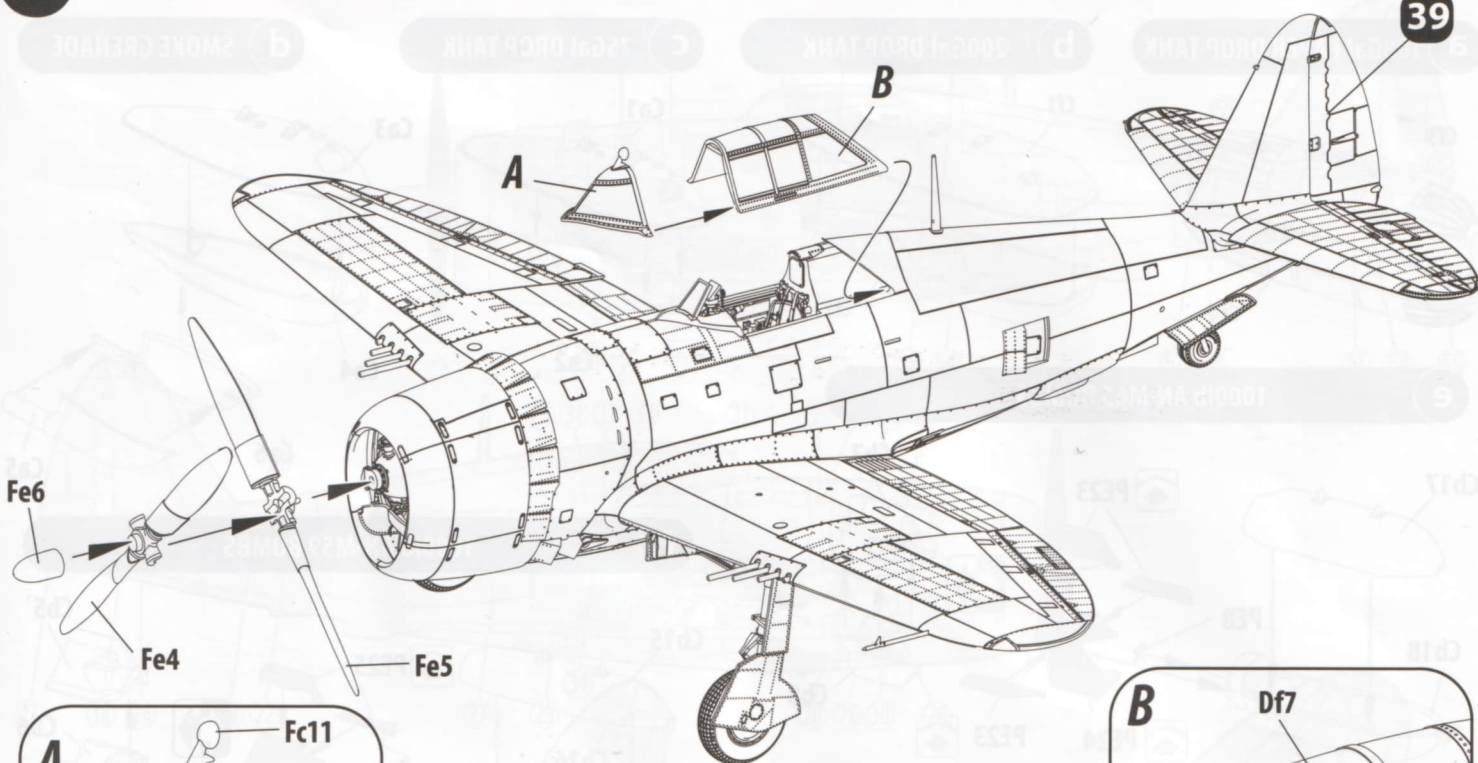


OPEN HATCHES VARIANT

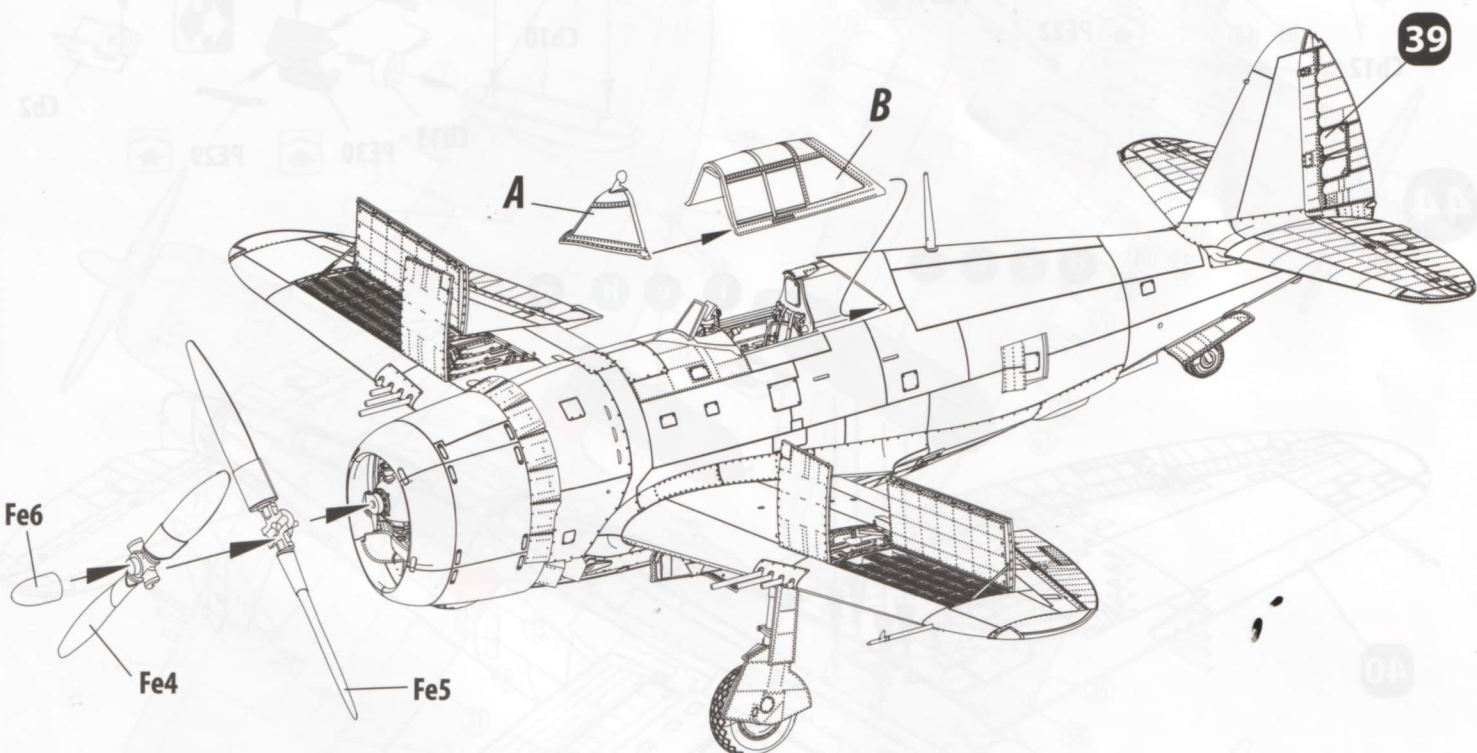


a 108Gal PAPER DROP TANK

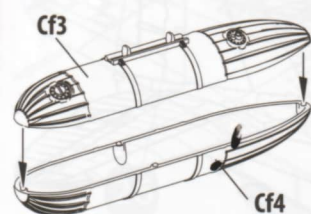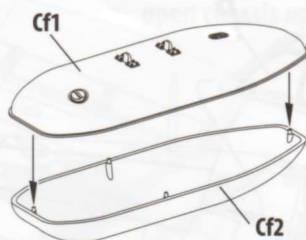**b) 200Gal DROP TANK**



C 75Gal DROP TANK

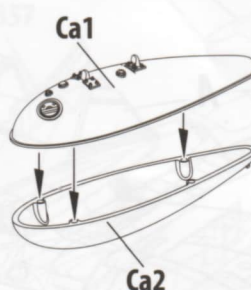


d SMOKE GRENADE

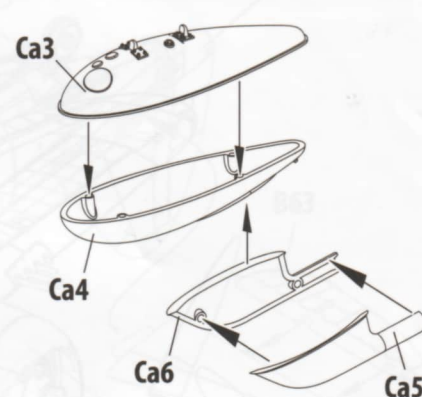


e 1000lb AN-M65 BOMBS

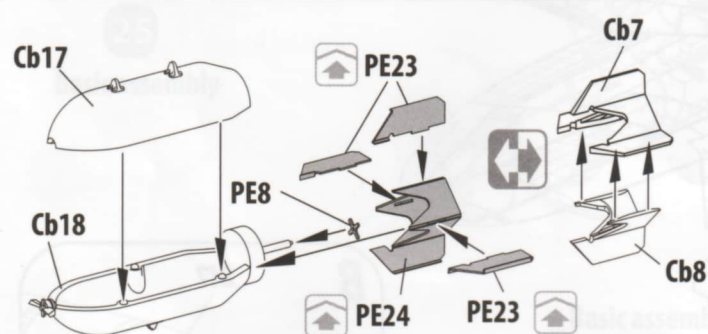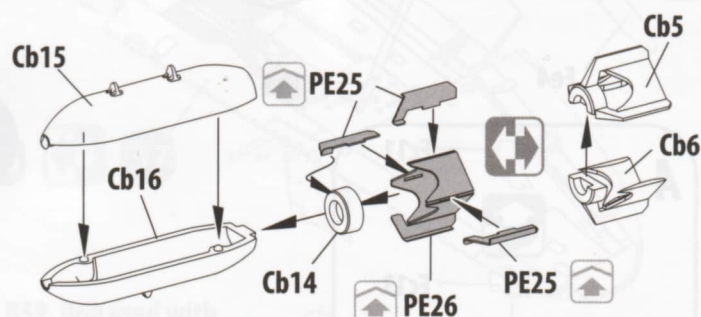 1000lb AN-M59 BOMBS


g) 250lb AN-M57 BOMBS

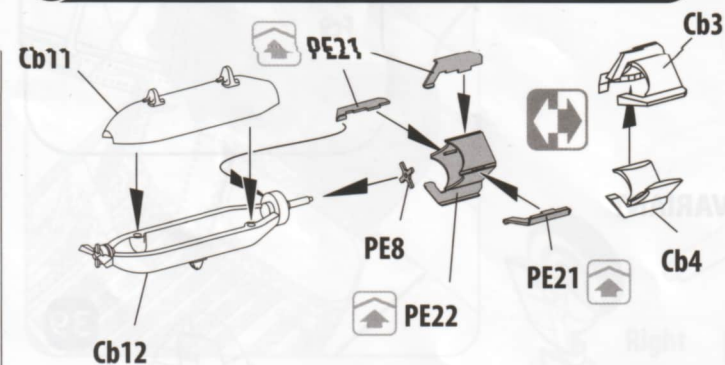


h 500lb AN-M58A1 BOMBS


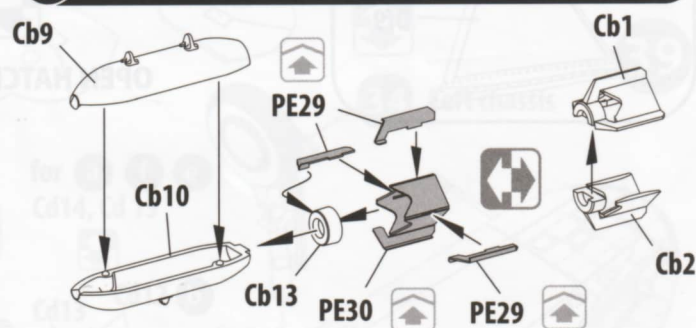


44


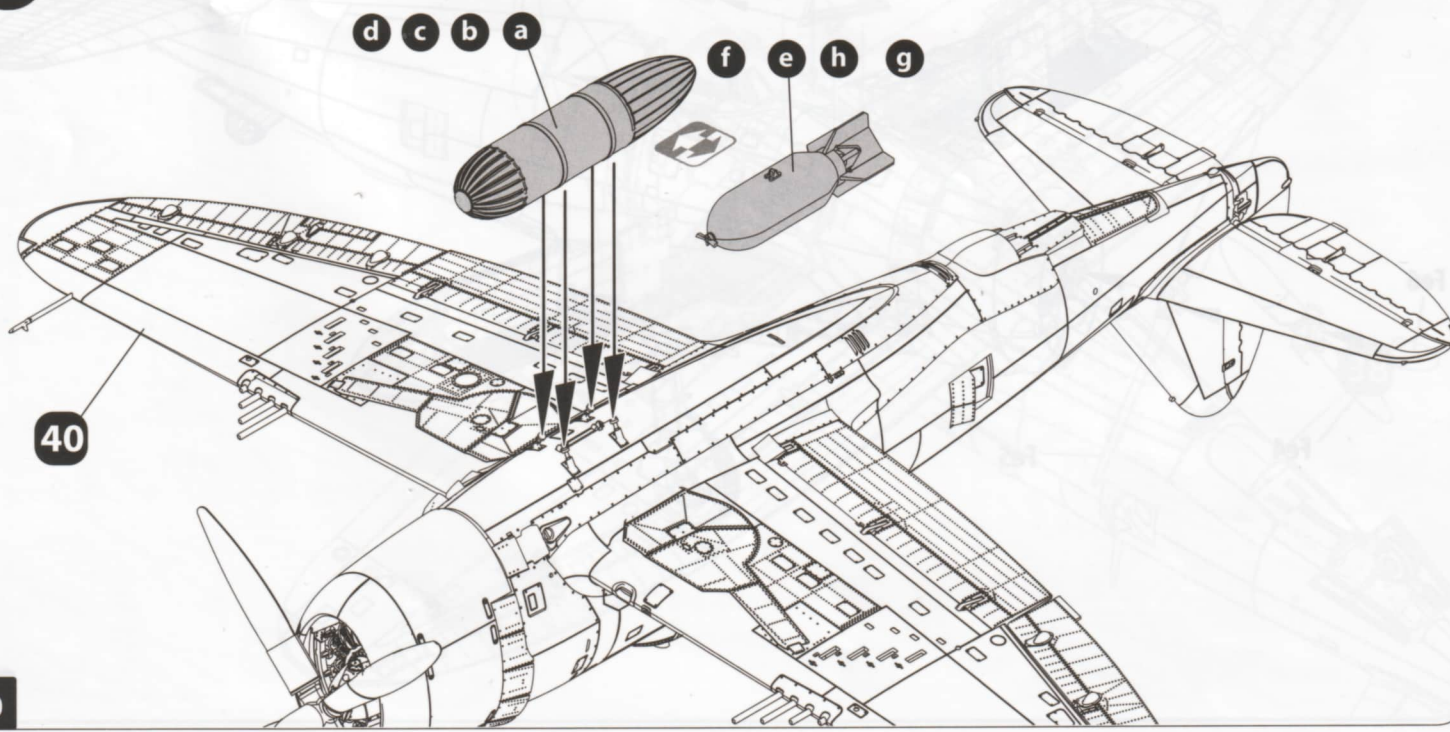


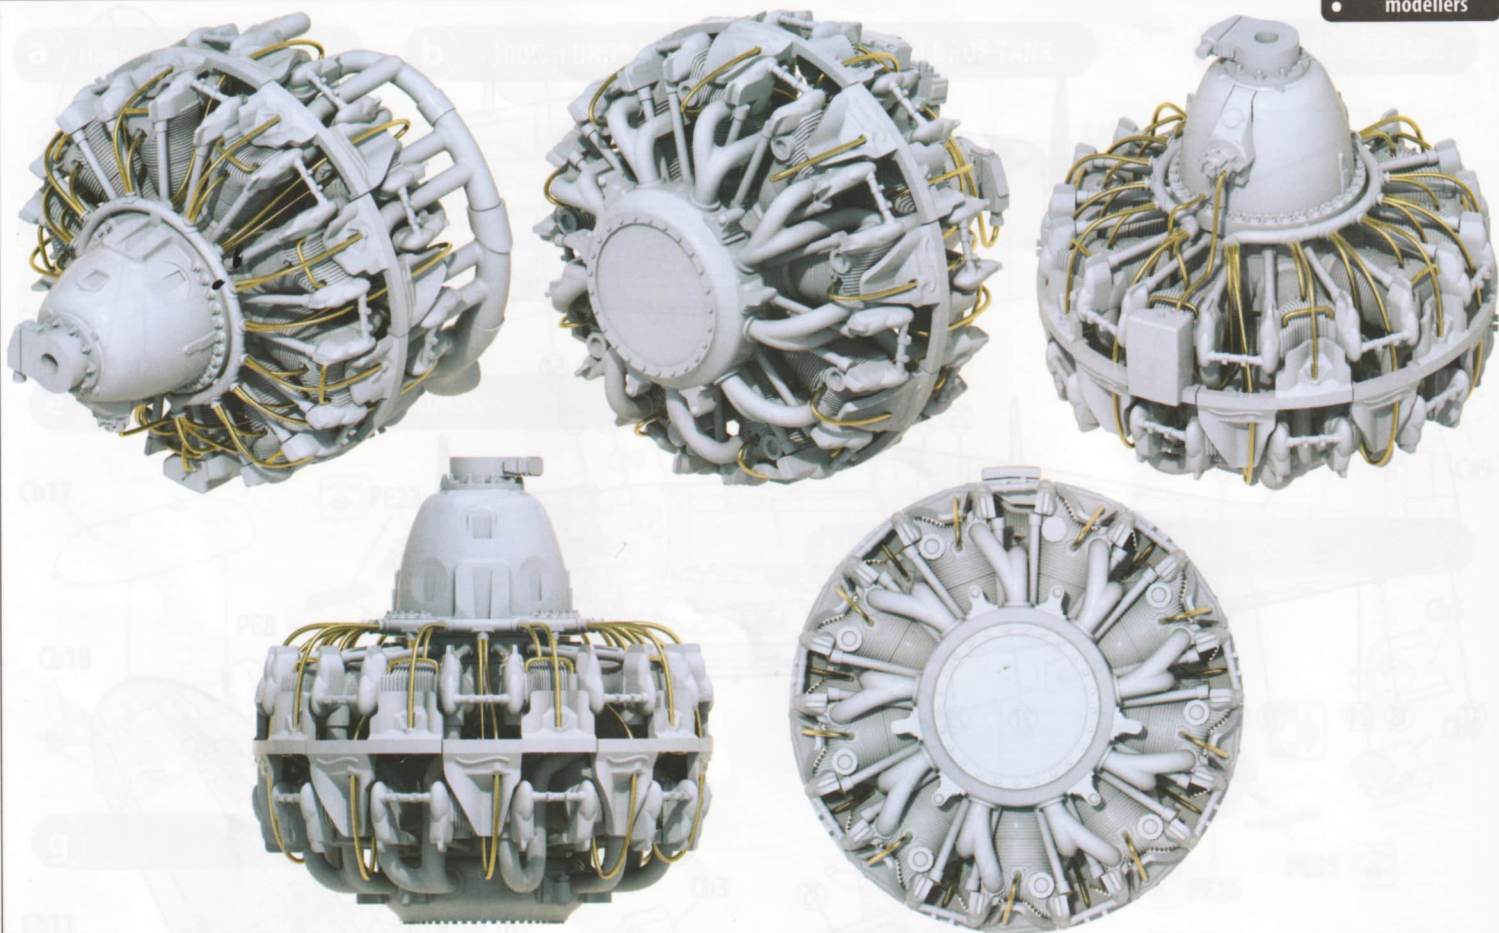

Wiring Diagrams of left Wing

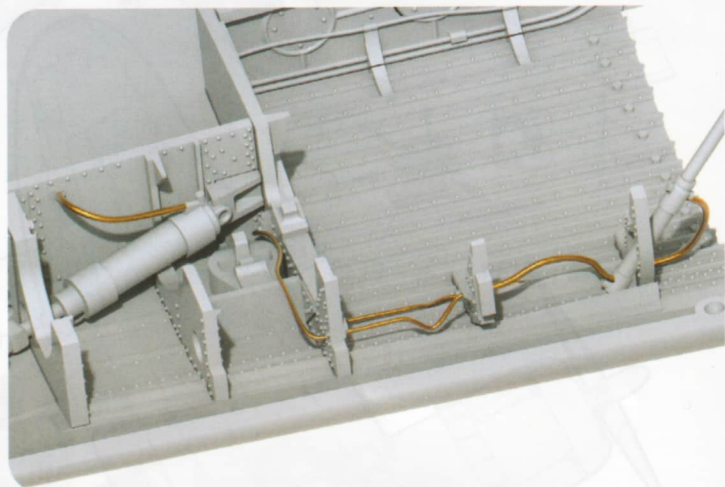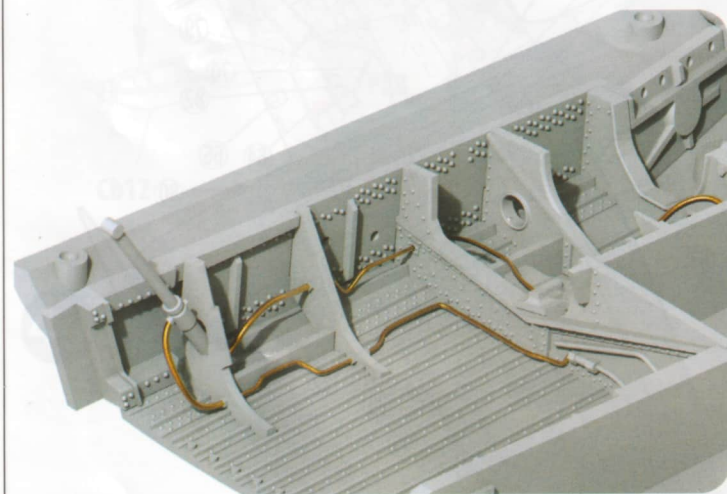

Wiring Diagrams of right Wing

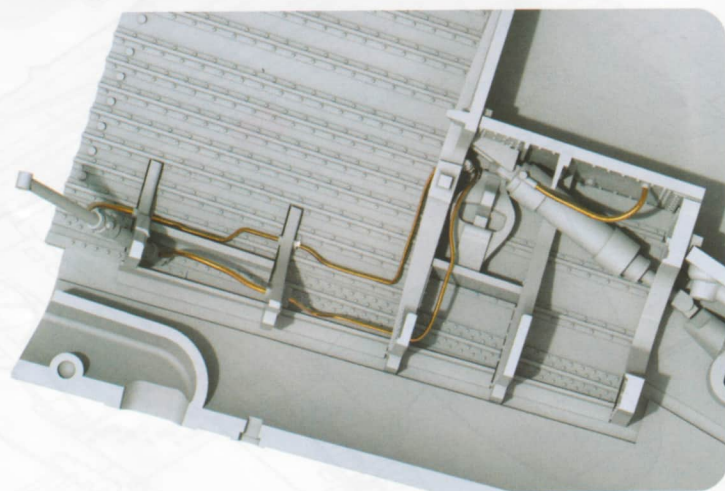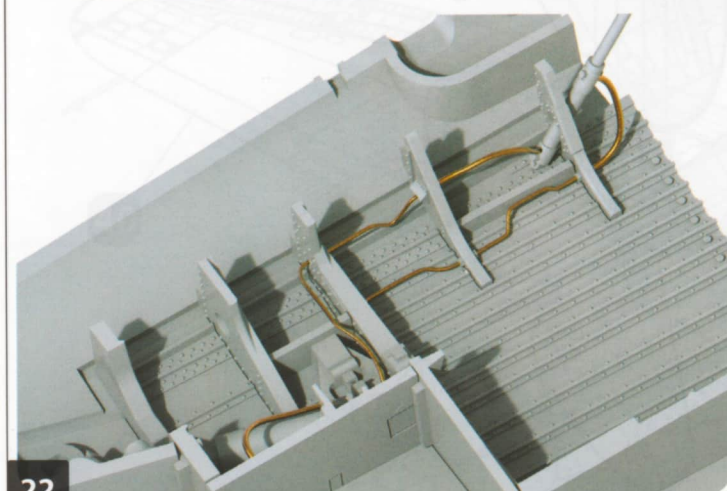

1 P-47D-10RE "MIKE IV" 42-75120 QP-F, 334th Fighter Squadron 4th Fighter Group "Debden Eagles" 8th Air Force, Winter 1943/44 flown by Maj. Winslow (Waclaw) M. "Mike" Sobanski




2 P-47D-10RE "HAWKEYE" 42-75125 LM-E, 62nd Fighter Squadron 56th Fighter Group "Zemkes Wolfpack" 8th Air Force Spring 1944 flown by Lt. Thaddeus S. Buszko



KOLACHA 2025
ZAWIERCIE

3

P-47D-10RE "Rozzie Geth/BOCHE BUSTER" 42-75207 LM-C, 62nd Fighter Squadron 56th Fighter Group "Zemkes Wolfpack", 8th Air Force Spring 1944 flown by Lt. Fred Christensen

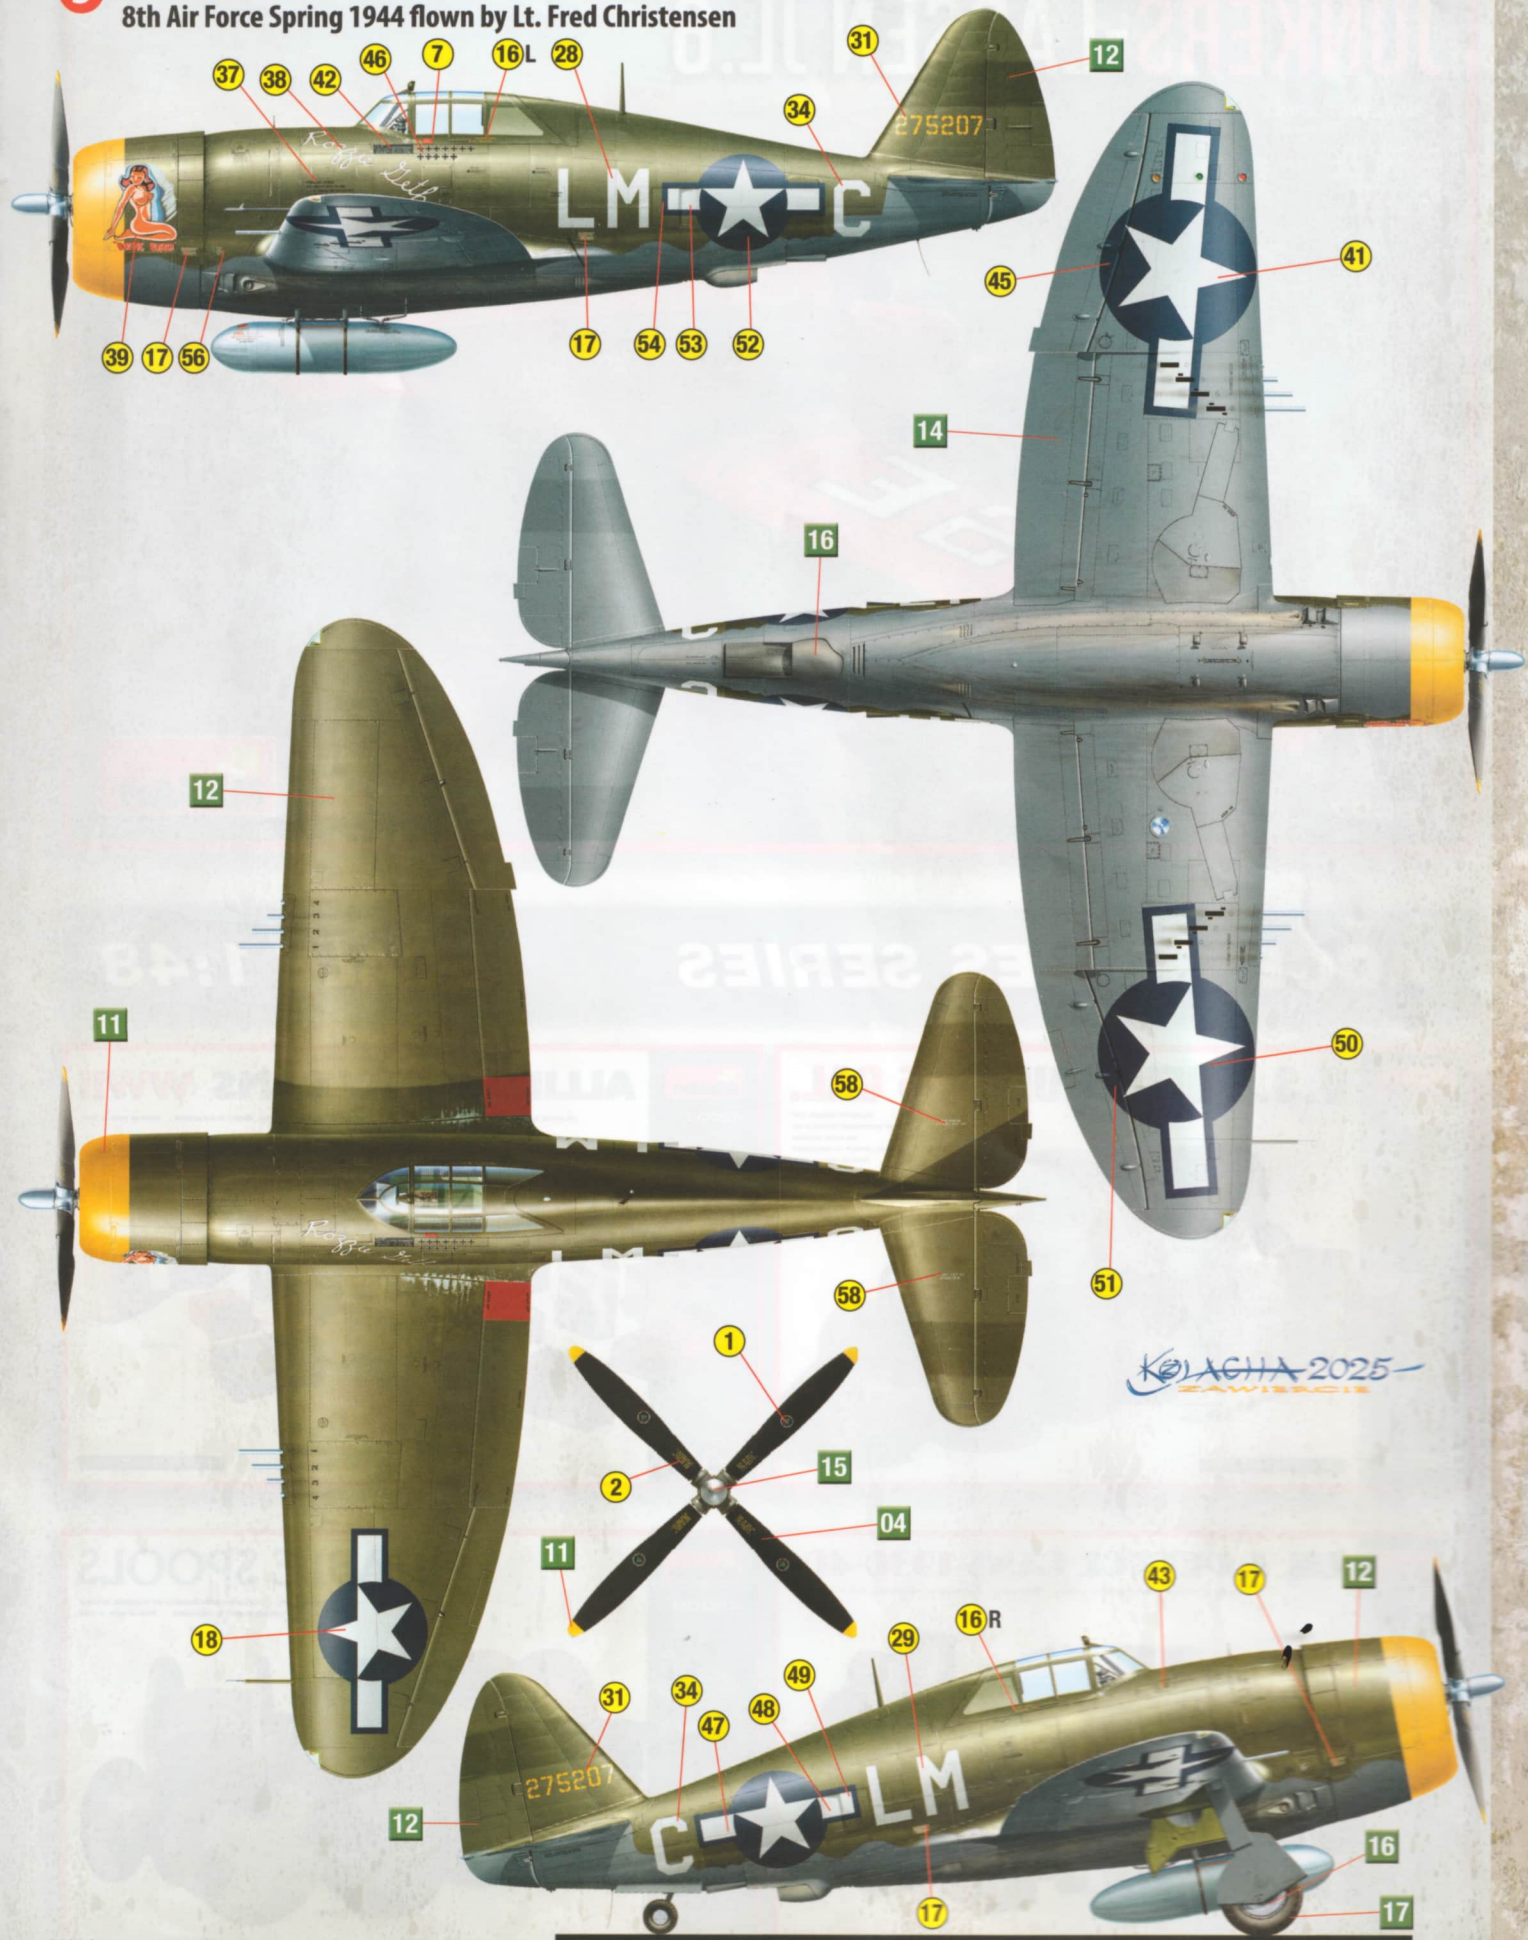

P-47D-10RE THUNDERBOLT RAZORBACK

250lb AN-M57 BOMBS



500lb AN-M58A1 BOMBS



1000lb AN-M59 BOMBS



1000lb AN-M65 BOMBS



108Gal PAPER DROP TANK



75Gal DROP TANK



200Gal DROP TANK



SMOKE GRENADE



COLOR CHART

No	Color	Vallejo	Mr. Color	AK RC	Mission Models	AMMO MIG	Tamiya	Color name
01		71.137	C-351	RC-262	MMP-059	ATOM-20074	XF-05	FS 34151 (Interior Green)
02		71.062	C-090	RC-020	MMM-008	ATOM-20165	XF-16	Aluminum
03		71.326	C-321	RC-018	MMP-039	ATOM-20141	XF-55	Yellow Grey
04		71.057	C-033	RC-001	MMP-047	ATOM-20163	XF-01	Black
05		71.043	C-027	RC-262	MMP-059	ATOM-20069	XF-04	Olive Drab
06		71.041	C-310	RC-035	MMP-033	ATOM-20057	XF-10	Brown
07		71.003	C-003	RC-006	MMP-003	ATOM-20029	XF-07	Red
08		71.107	C-352	RC-263	MMP-067	ATOM-20013	XF-07	FS 33481 Zinc Chromate Yellow
09		71.109	C-072	RC-297	MMP-071	ATOM-20136	XF-18	FS 35164 Intermediate Blue
10		71.081	C-524	RC-028	MMP-025	ATOM-20070	XF-49	Light Olive Drab
11		71.078	C-004	RC-007	MMP-041	ATOM-20018	XF-03	Yellow
12		71.016	C-012	RC-259	MMP-091	ATOM-20069	XF-62	FS 23070 Dark Olive Drab
13		71.001	C-062	RC-004	MMP-001	ATOM-20000	XF-02	White
14		71.274	C-013	RC-261	MMP-114	ATOM-20145	XF-20	FS 36122 Neutral Grey
15		71.072	C-028	AK-476	MMM-002	ATOM-20166	XF-56	Steel
16		71.046	C-603	RC-210	MMP-102	ATOM-20124	XF-19	Light Grey
17		71.251	C-137	RC-022	MMP-040	ATOM-20159	XF-85	Tire Black