


ADVANCED KIT

AIRPLANES SERIES

P-47M THUNDERBOLT


48032

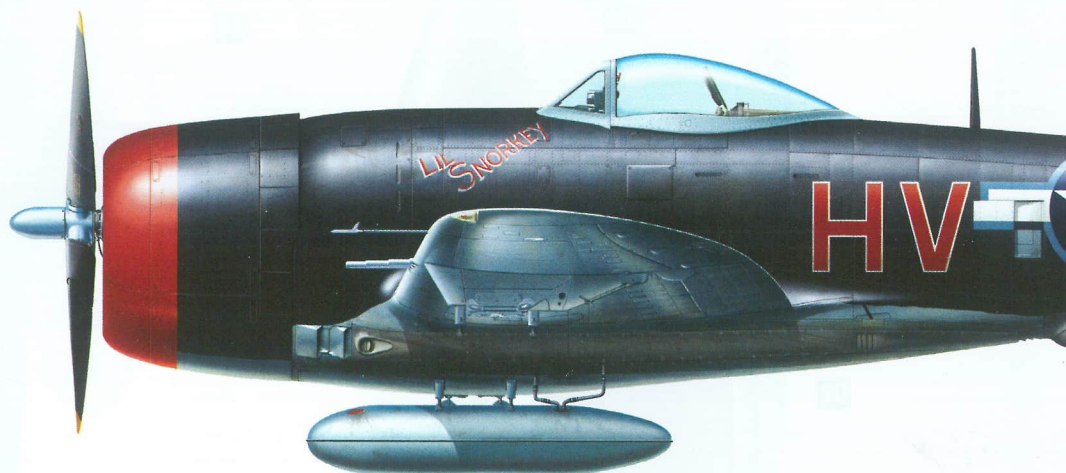

**SCALE
1:48**

GENERAL INSTRUCTION

- HIGHLY DETAILED PLASTIC MODEL KIT
- PHOTO-ETCHED PARTS INCLUDED
- CLEAR PLASTIC PARTS INCLUDED
- HATCHES CAN BE ASSEMBLED IN OPEN OR CLOSED POSITION
- 3 TYPES OF WHEELS INCLUDED
- ENGINE & COMBAT COMPARTMENT ACCURATELY REPRESENTED IN THE MODEL
- DECAL SHEET FOR 3 VARIANTS

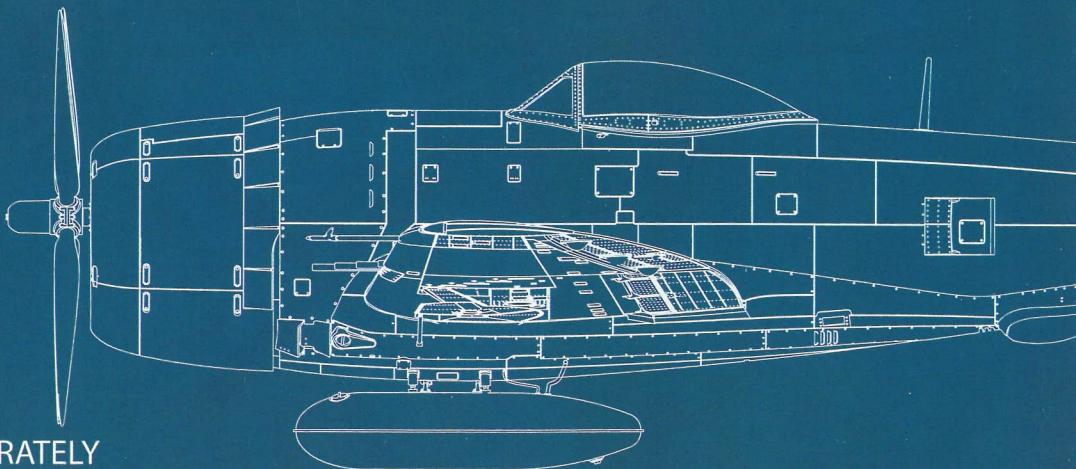


UWAGA
Przy stosowaniu kleju i farb wszystkie prace należy wykonywać w przewiewnym miejscu z dala od źródeł ognia.
Oddziel części od wlewków nożem lub innym ciętciem narzędzie. Oczyszcz lampę błyskową i wytnij punkty pilnikiem igłowym i papier ścierny. Złóż modele zgodnie z schemat montażu.
Dla ułatwienia montażu każda część jest oznaczona numerem.
Po złożeniu zestawu mogą pozostać niewykorzystane części.

УВАГА
При використанні клею та фарб всі роботи проводити подалі від джерел вогню у приміщенні, що добре провітрюється.
Деталі відокремлювати від літників ножем або іншим ріжучим інструментом. Зачистити облой і місця зрізу за допомогою надфілю та наждачного паперу. Будівання моделі виконувати згідно зі схемою. Для зручності побудови кожна деталь позначена номером.
Після складання можуть залишитися невикористані деталі.


CAUTION
When you use glue or paint, do not use near open flame, and use in well ventilated room. When you take parts off from the runner frame, use modeling scissors or cutter.
See the bottom of this column for the meaning of symbols.
Extra details can remain after assembling of the kit.

PARTS


A

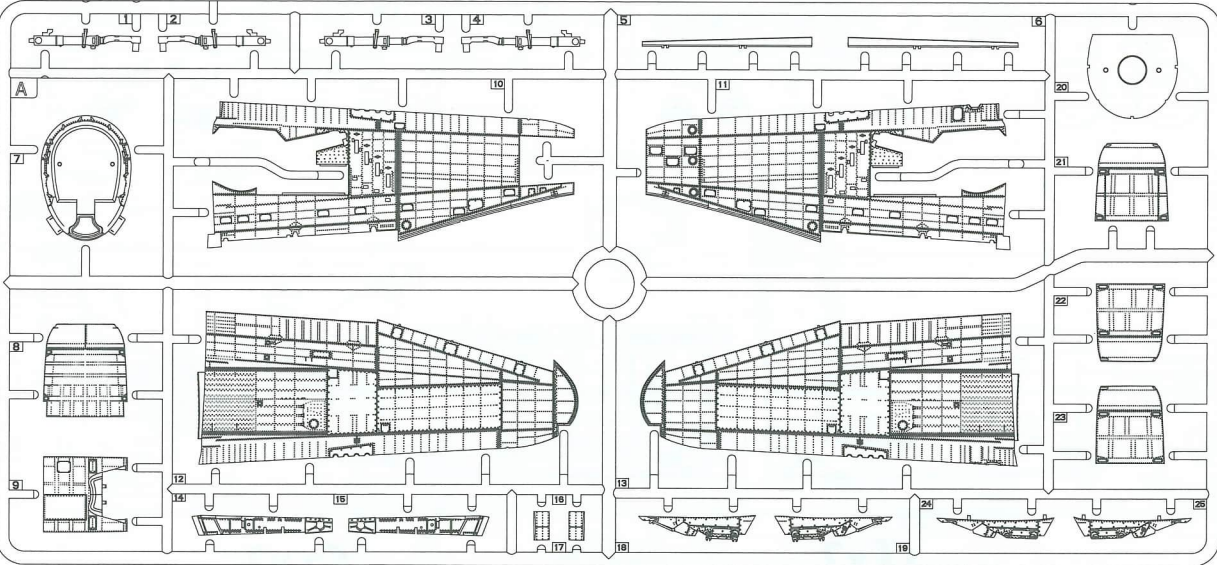


B

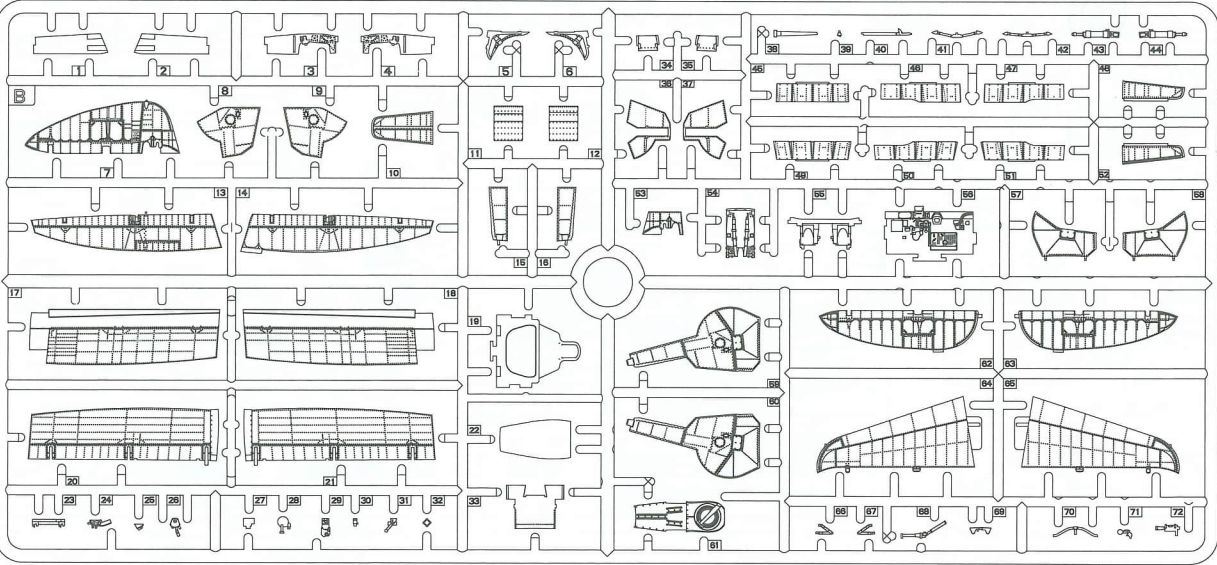


E

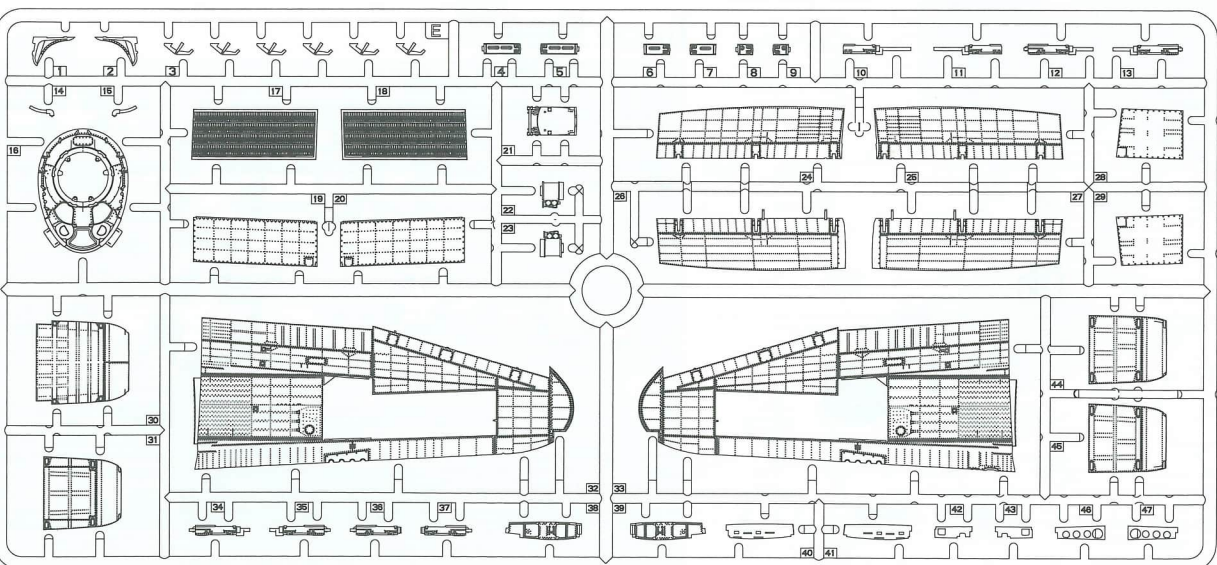

G

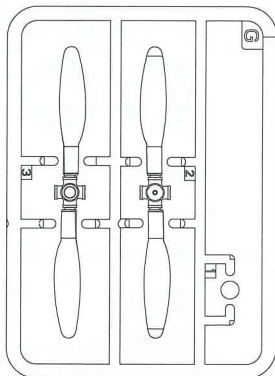


Gb

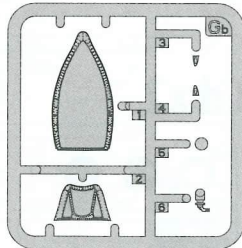


Clear Parts

Dc Clear Parts

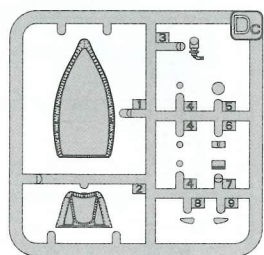

PE M-220

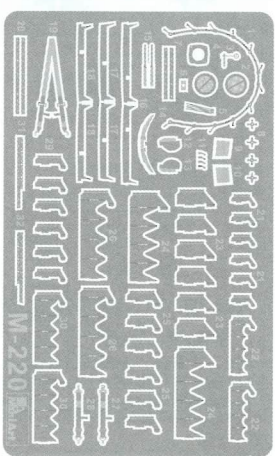



POWTÓRZ DWA RAZY
MAKE 2PCS
2 TEILE FERTIGEN
EFFECTUER 2 PIECES
FARE DUE PEZZI
TEE 2 KPL
GÖR 2 ST
КІЛЬКІСТЬ РАЗІВ



NIE UŻYWAJ KLEJU
DO NOT CEMENT
NICHT KLEBEN
NE PAS COLLER
NON INCOLLARE
ELIMAA
LIMMAEI
НЕ КЛЕІТИ



OPCJE
OPTIONAL
NACH BELIEBEN
FACULTATIF
FACOLTATIVO
VALINNANVARAINEN
VALBAR
ВАРІАНТИ



ZROBIĆ DZIURĘ
OPEN HOLE
ÖFFNEN
FAIRE UN TROU
FORO APERTO
AVAA REIKA
ÖPPNÄHALET
ЗРОБИТИ ОТВІР















ODCIAĆ
REMOVE
ENTFERNEN
RETIRER
SEPARARE
POISTA
AVLAGSNA
ВІДРІЗАТИ




ZGINAĆ
BEND
BITTE BIEGEN
PLIER S'IL VOUS PLAÎT
PIEGARE
TAITA
BOCKA
ВИГНУТИ



ZRÓB TO SAM
SCRATCHBUILD
AM MEISTEN ZU MACHEN
FAIRE LE PLUS
RENDITI
TEE ITSE
GÖR DIG SJÄLV
ЗРОБИТИ САМОМУ

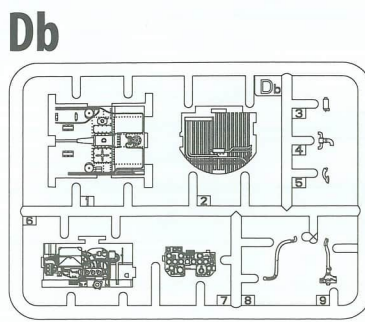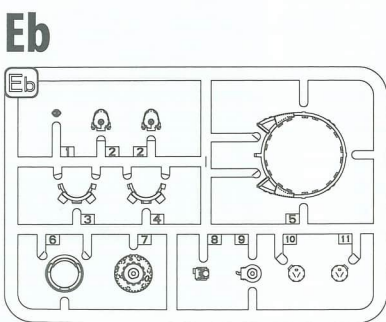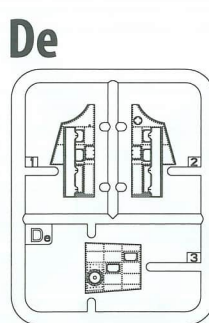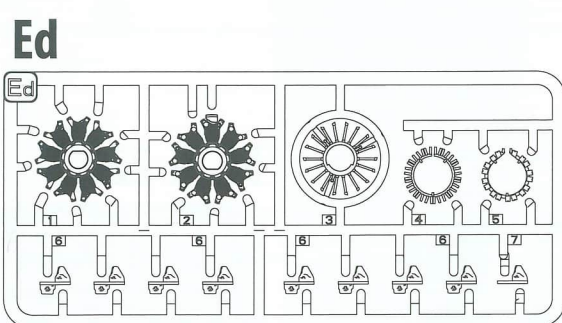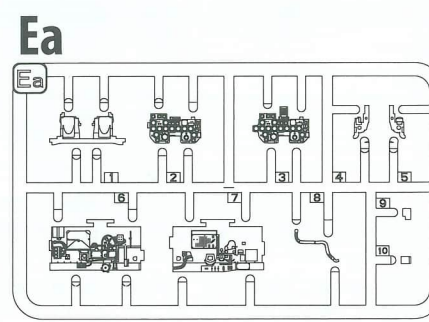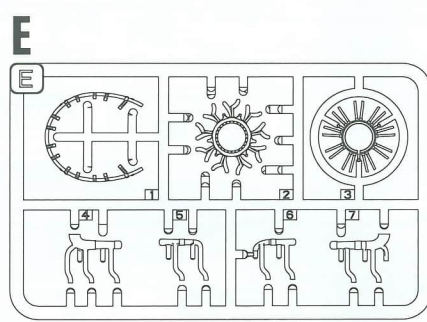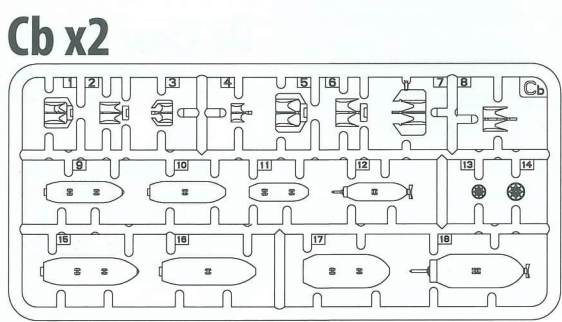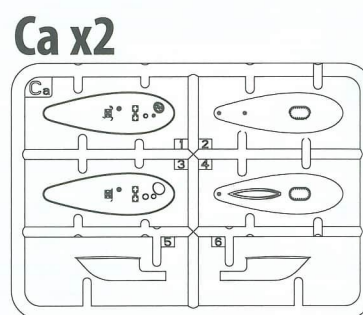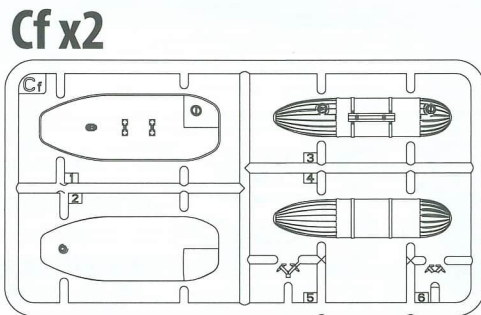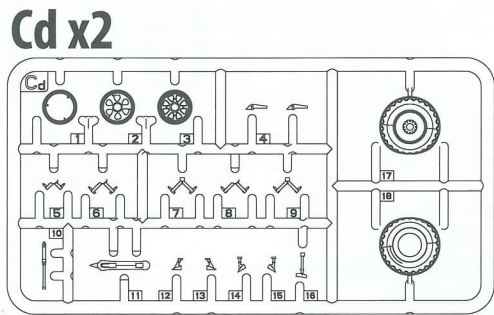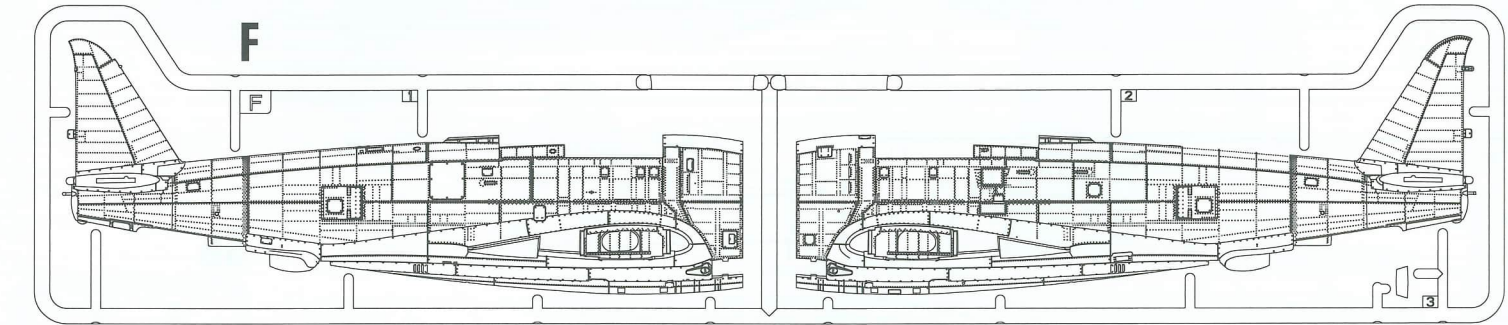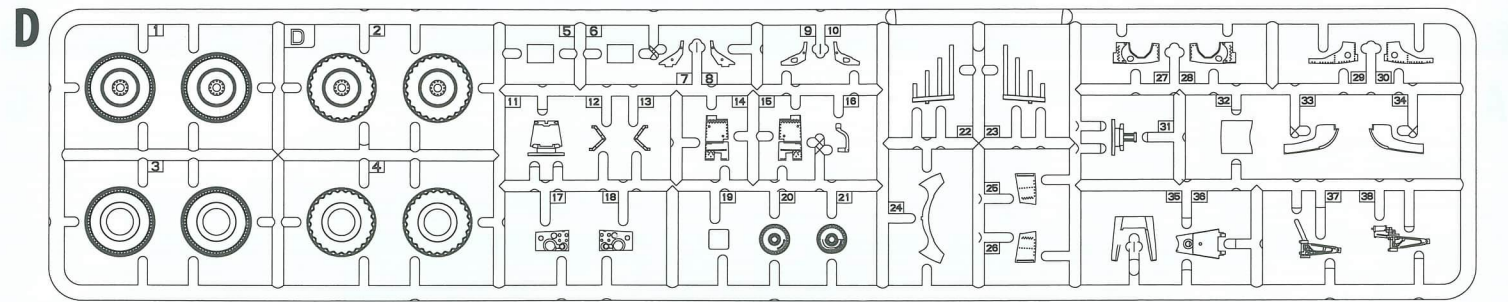

Decal Sheet

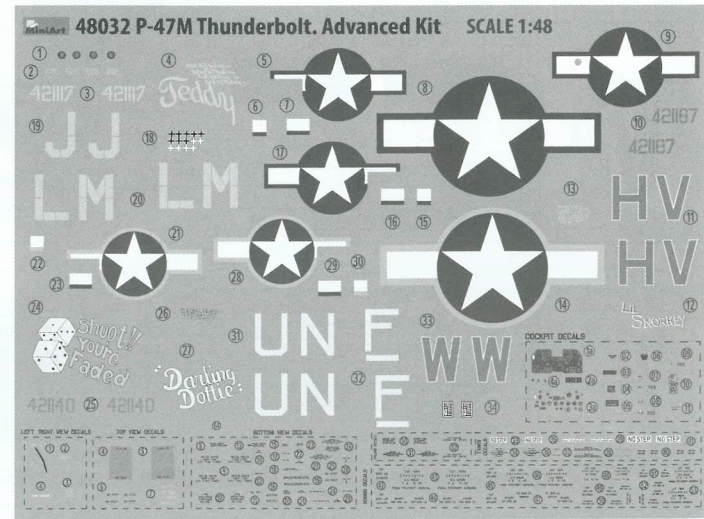

Basic Assembly


[illegible]

COCKPIT DECALS


COCKPIT DECALS

A


5

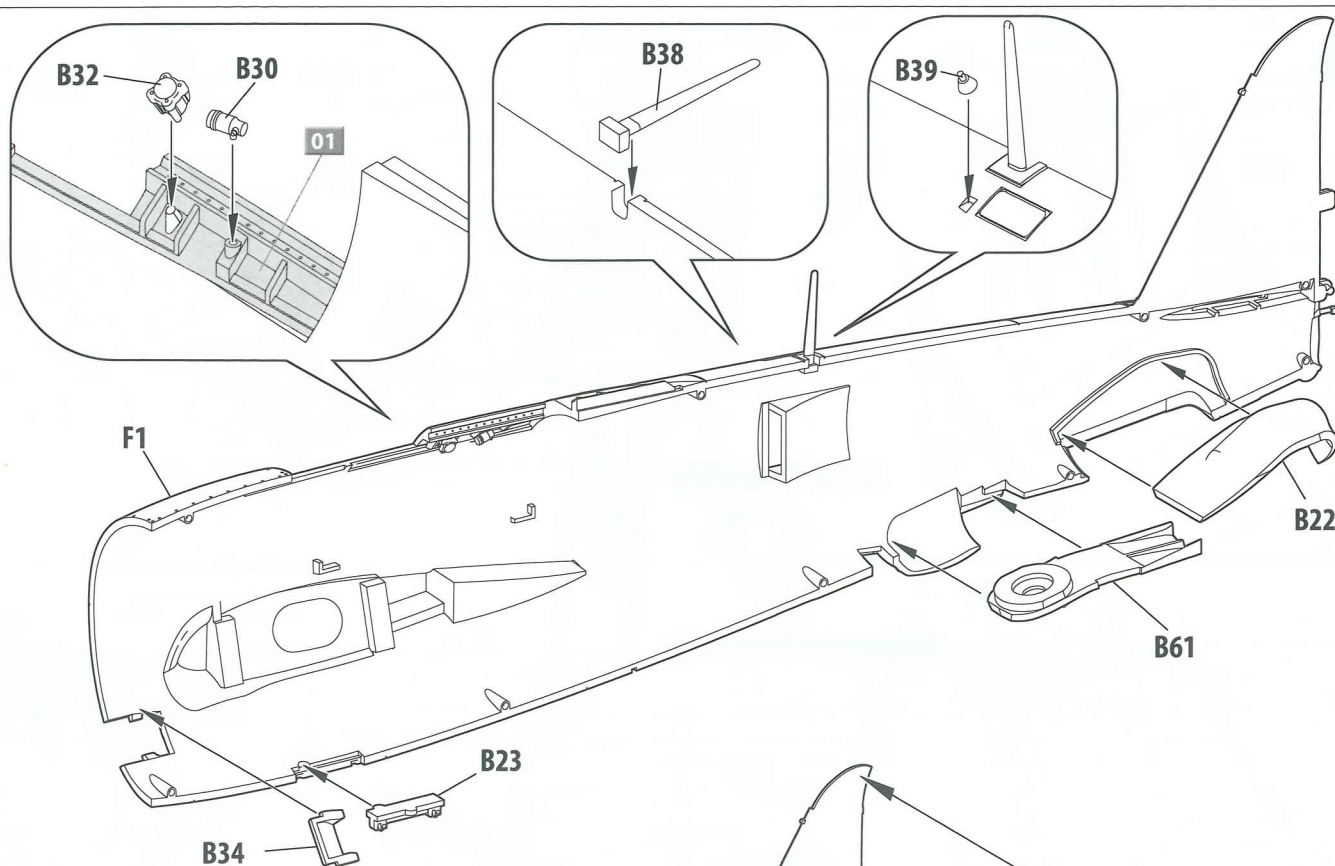











6

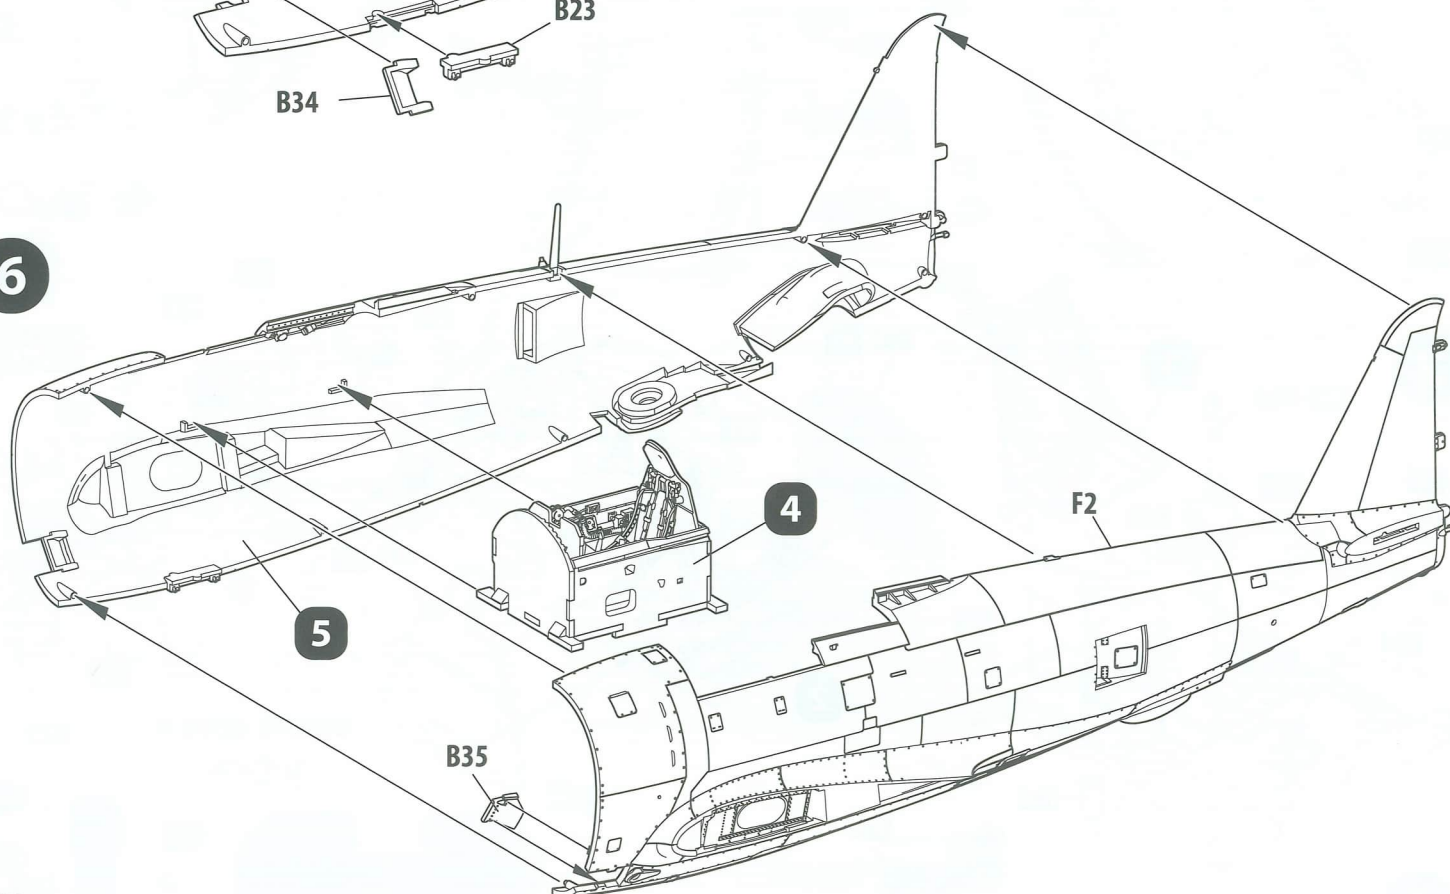


7

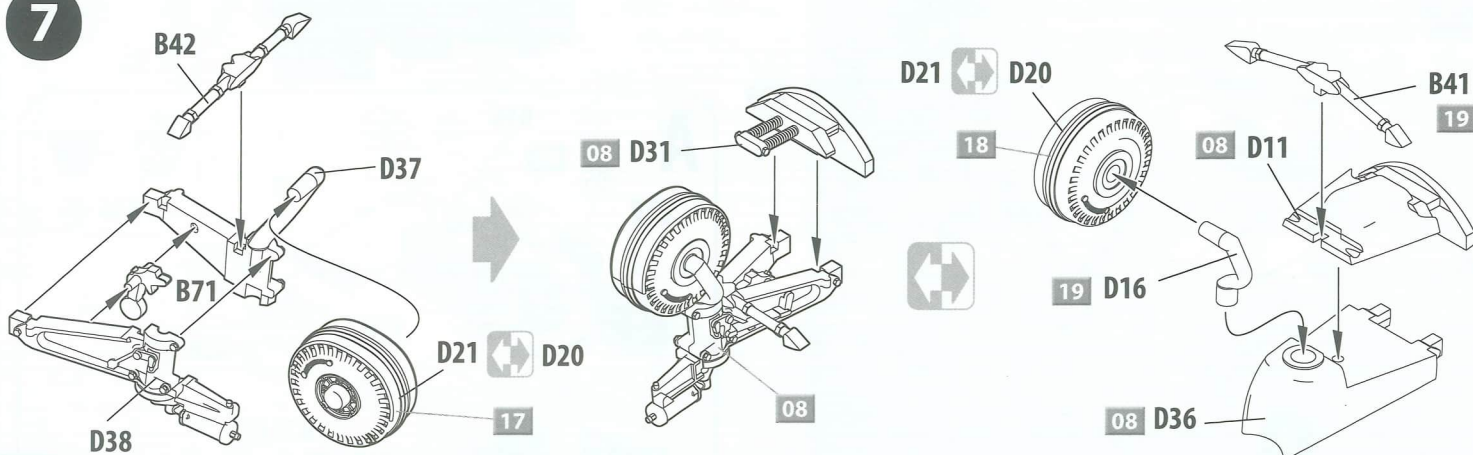


8

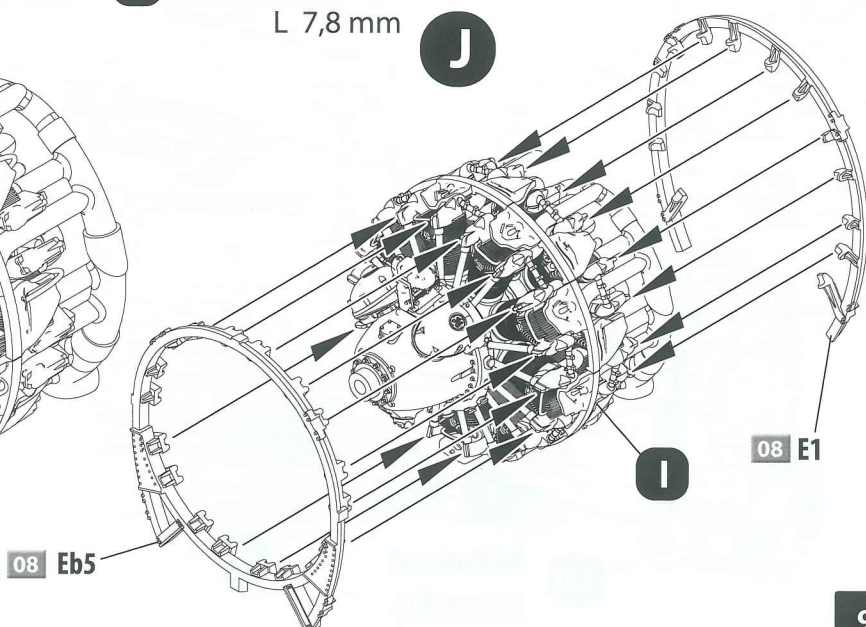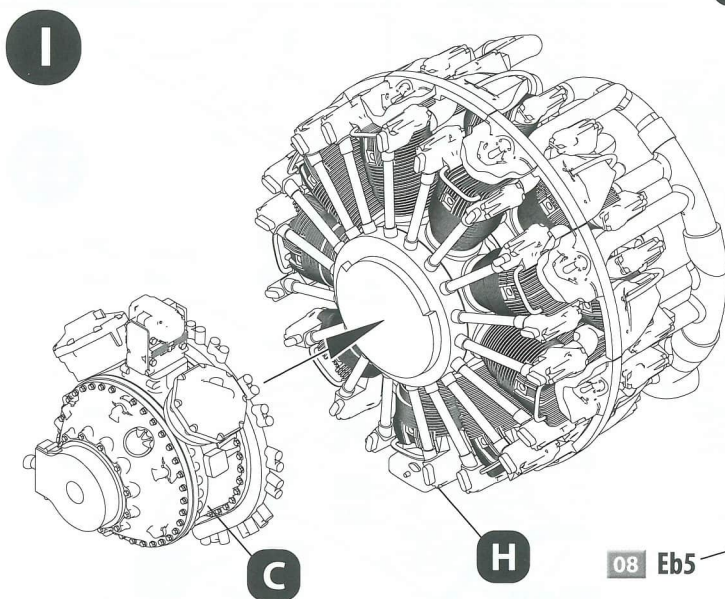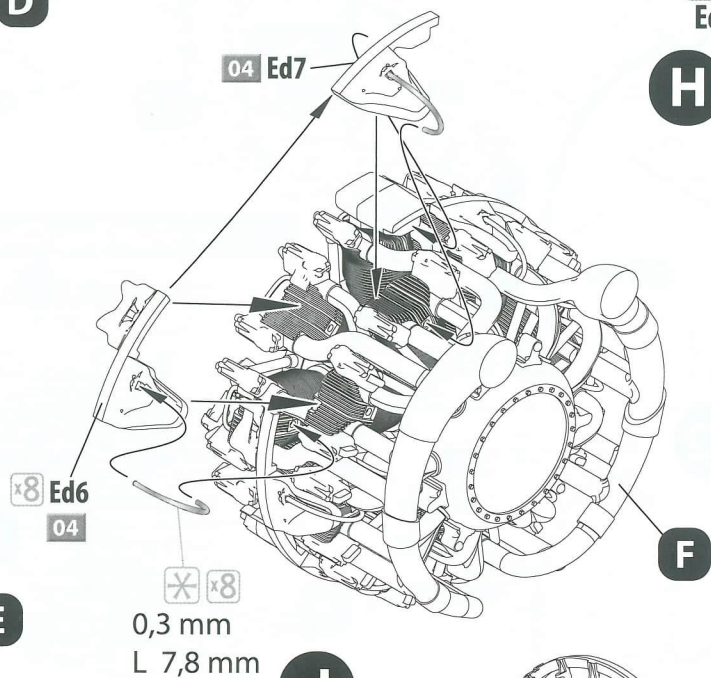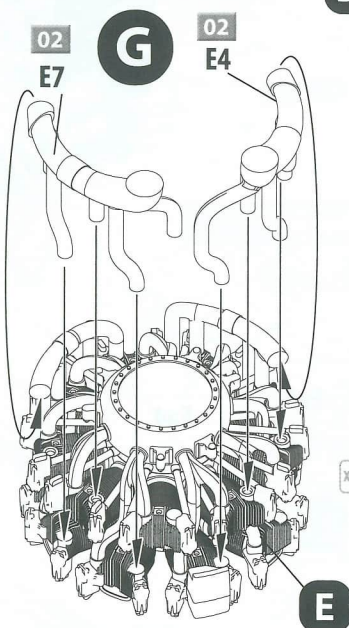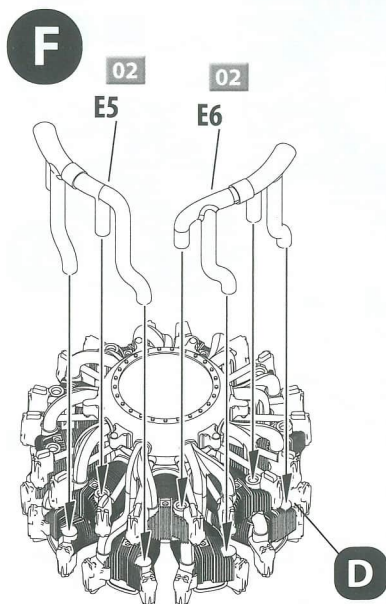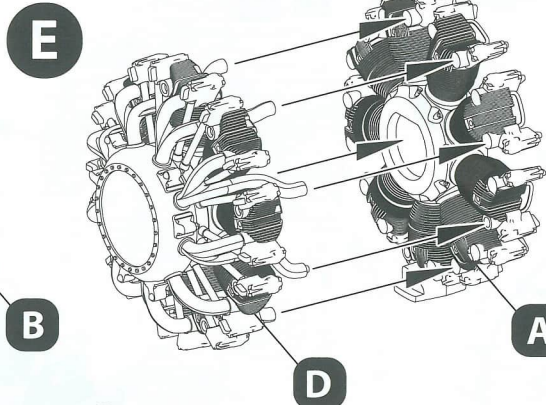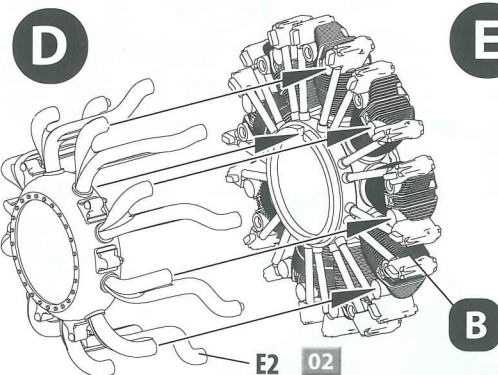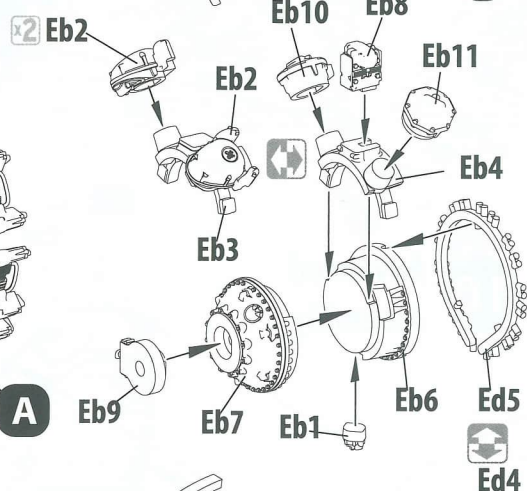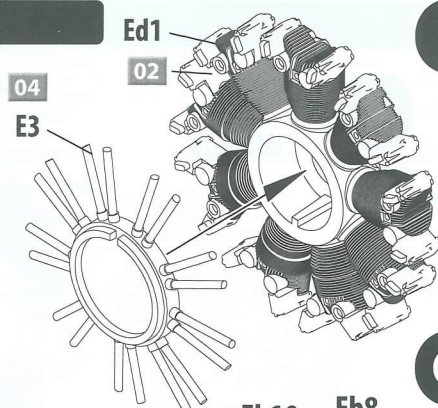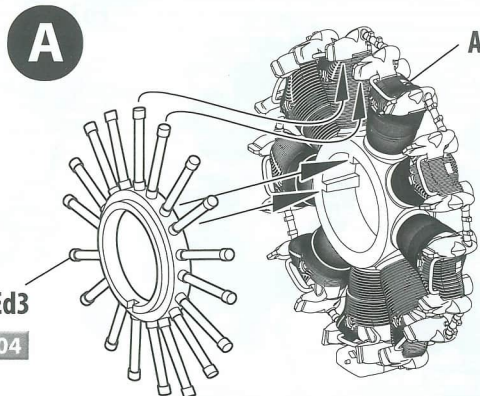

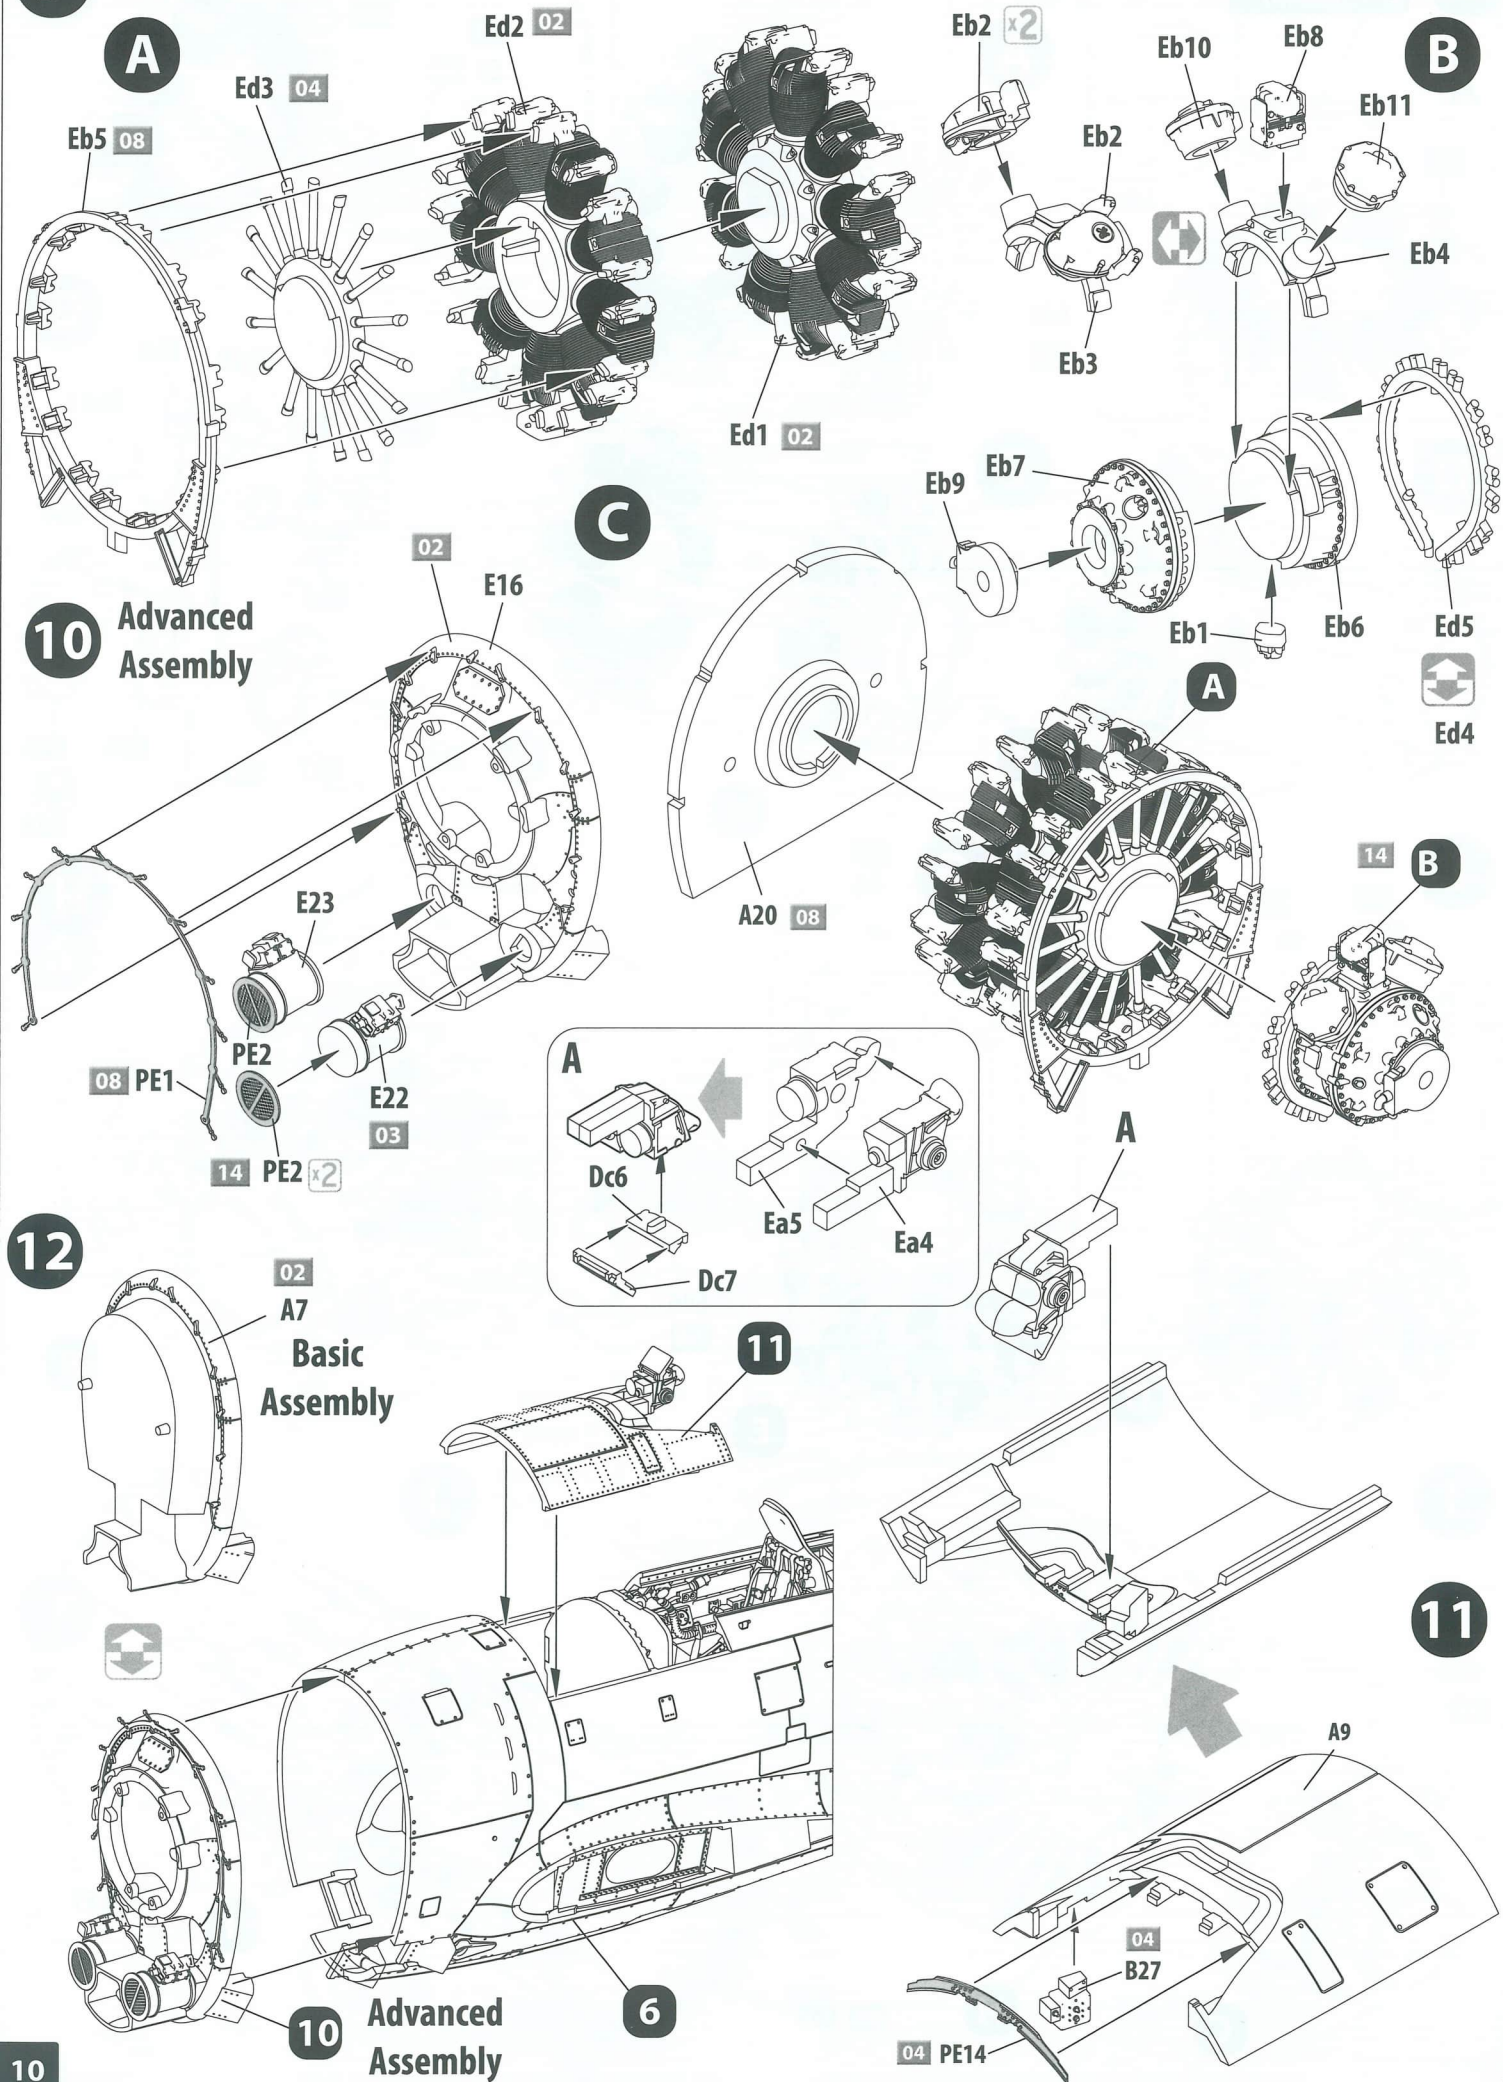


13

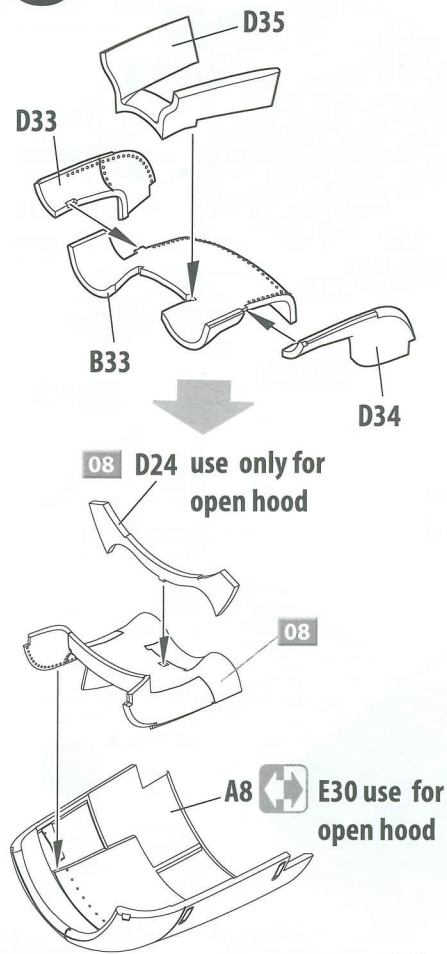


15


Advanced Assembly (Open hood variant)

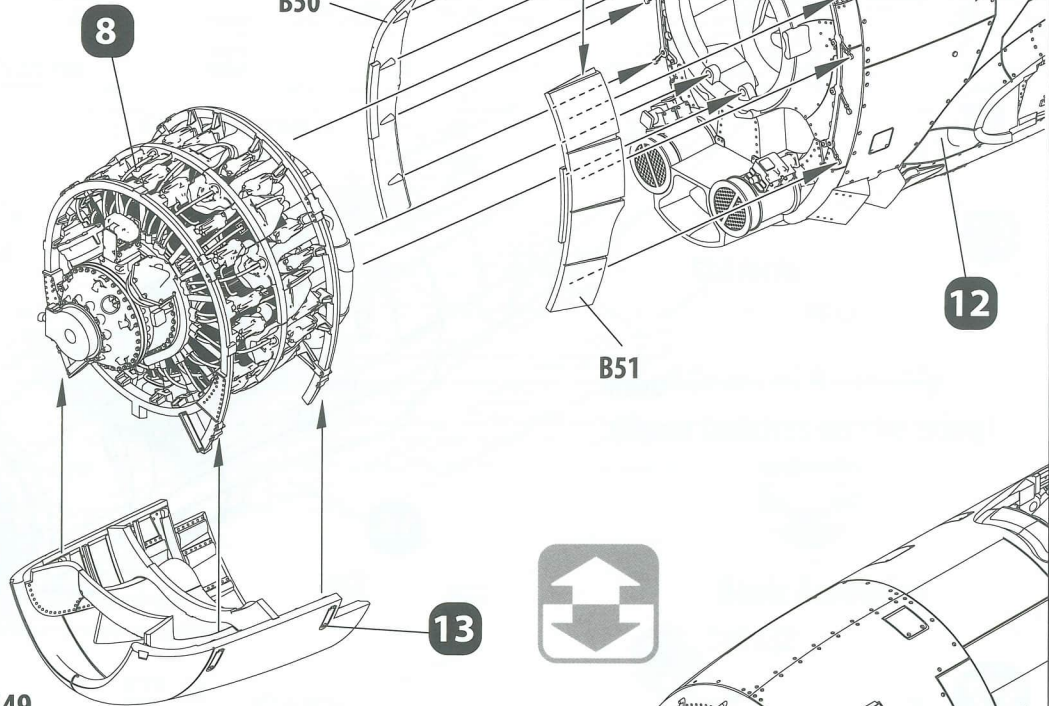


14



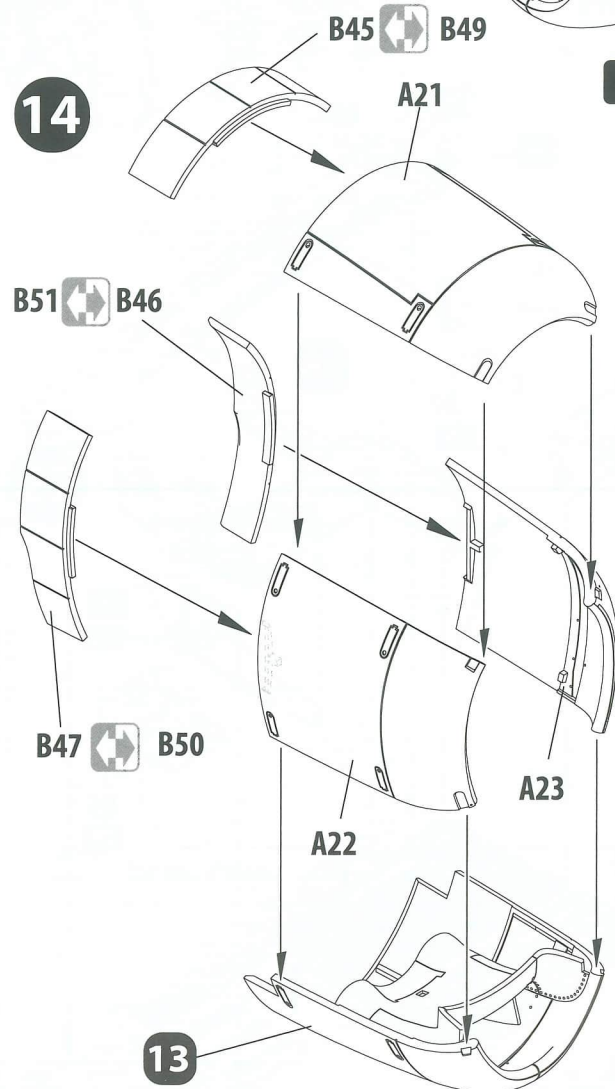


Closed hood variant
Advanced Assembly

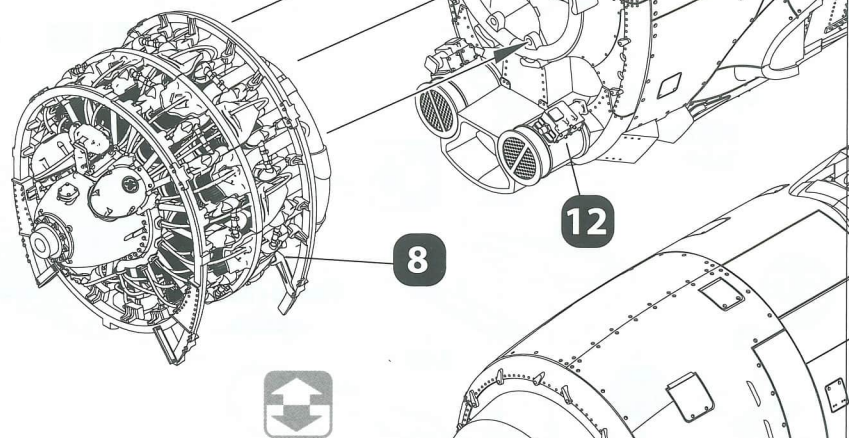

Basic Assembly

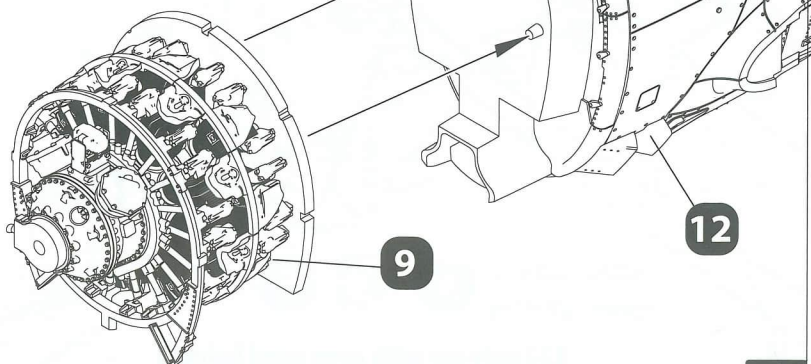


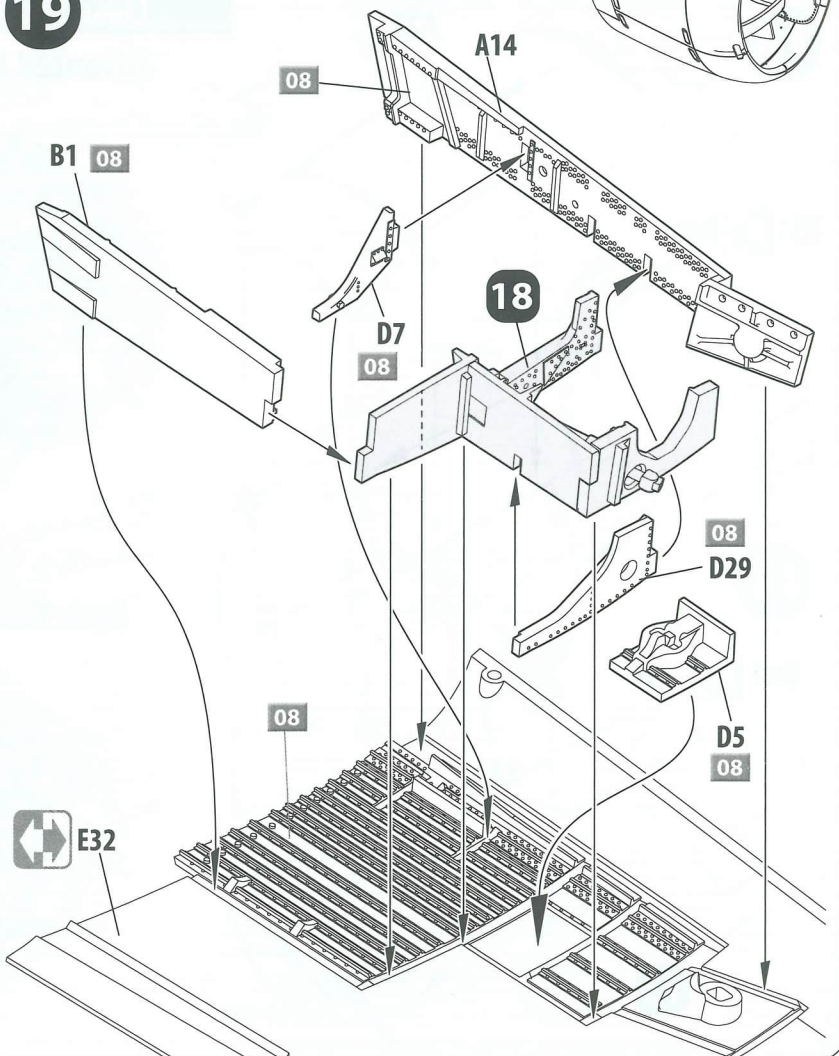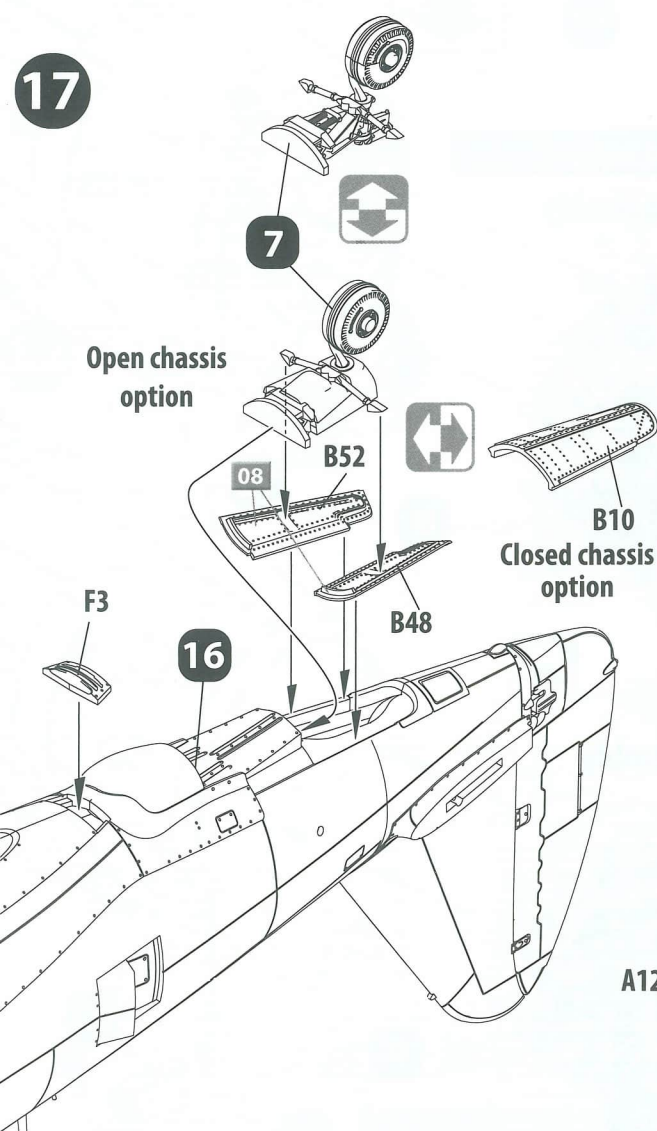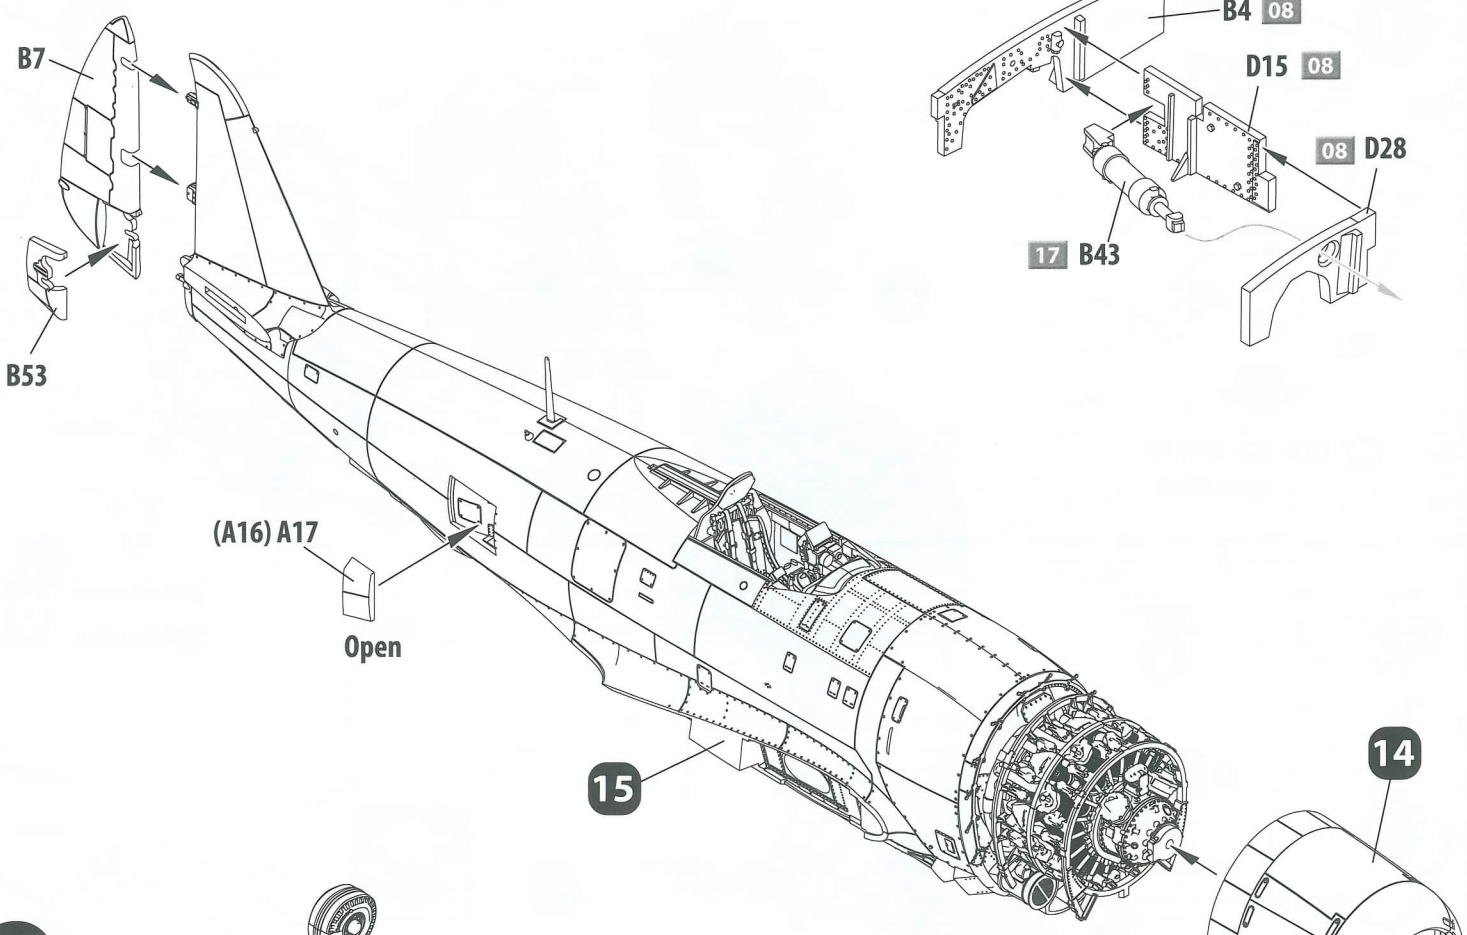

E32 only use with open wind hatches


20

Use only for open hatch on the wind

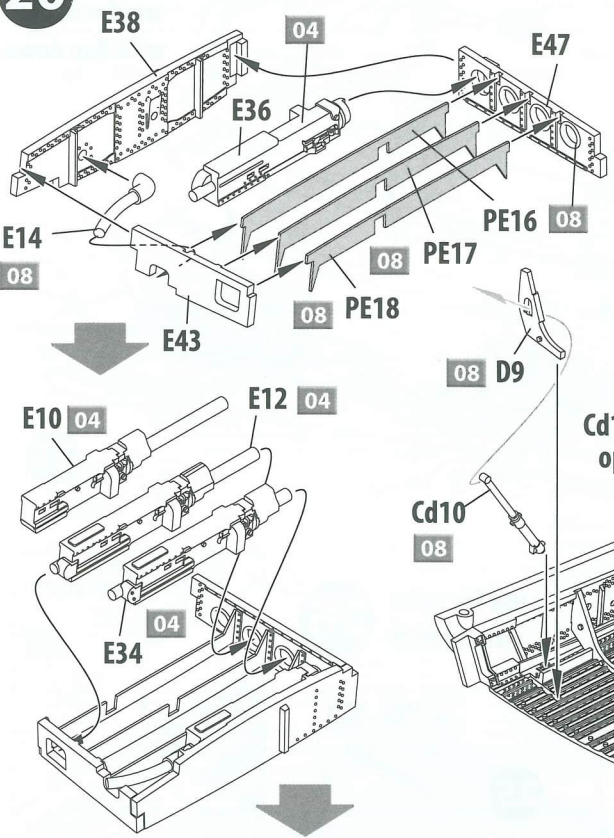

The parts E17 use only for open hatch on the wind


21

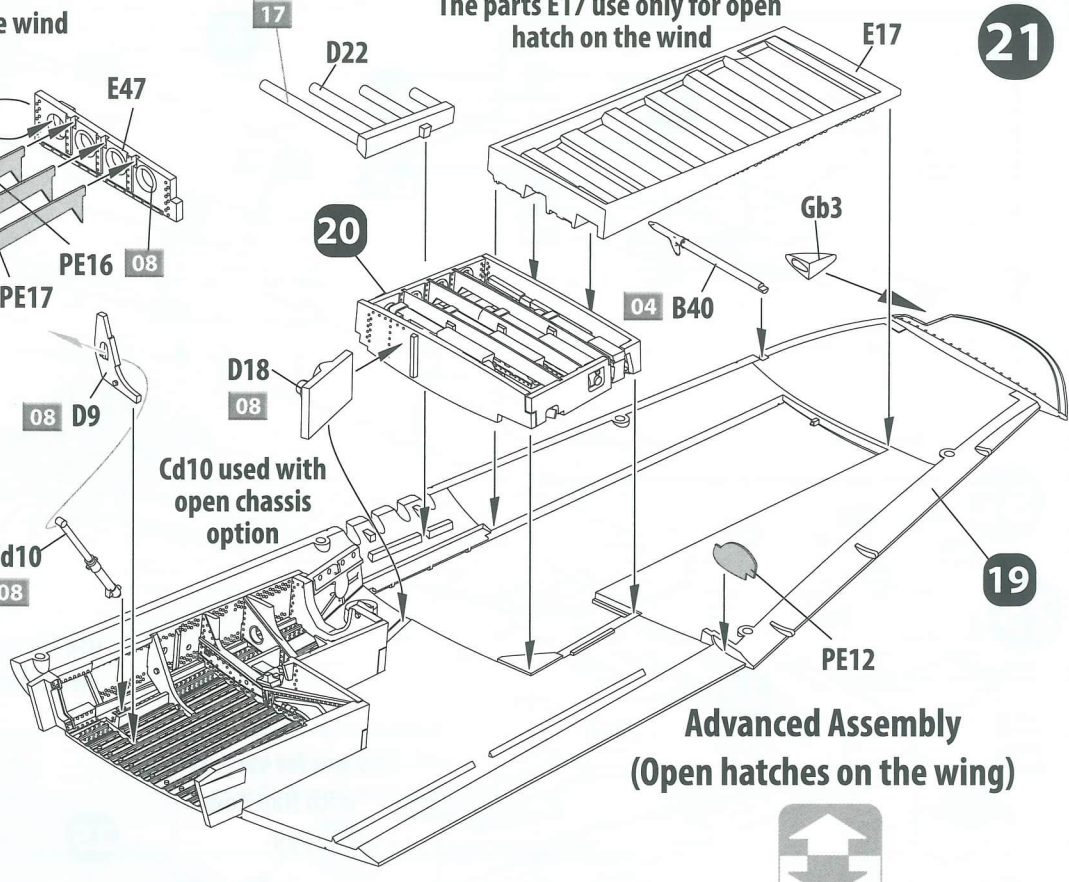


Advanced Assembly
(Open hatches on the wing)



Basic Assembly

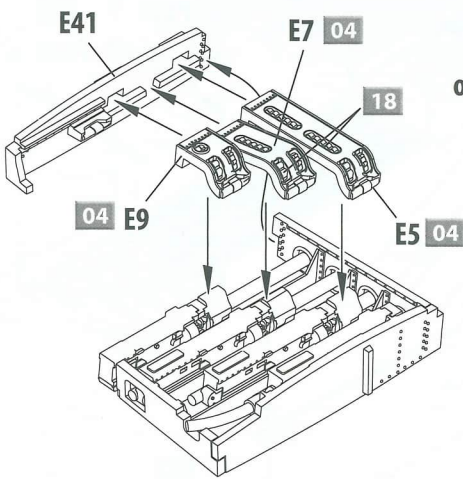


Cd10 used with open chassis option

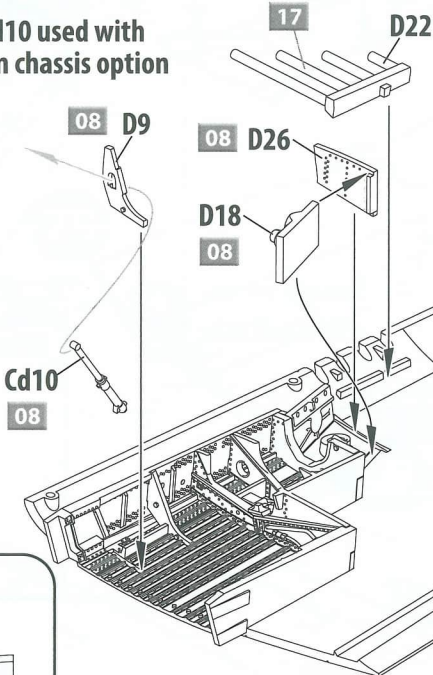


B40 04

23

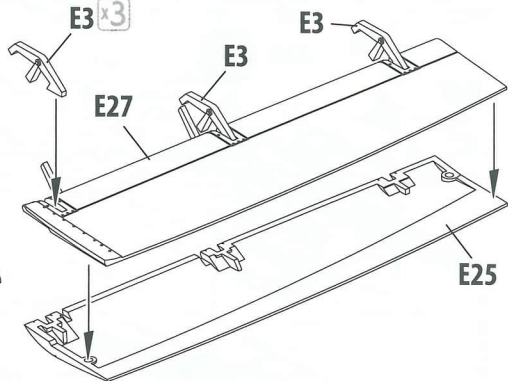


A

use for variant with flap down

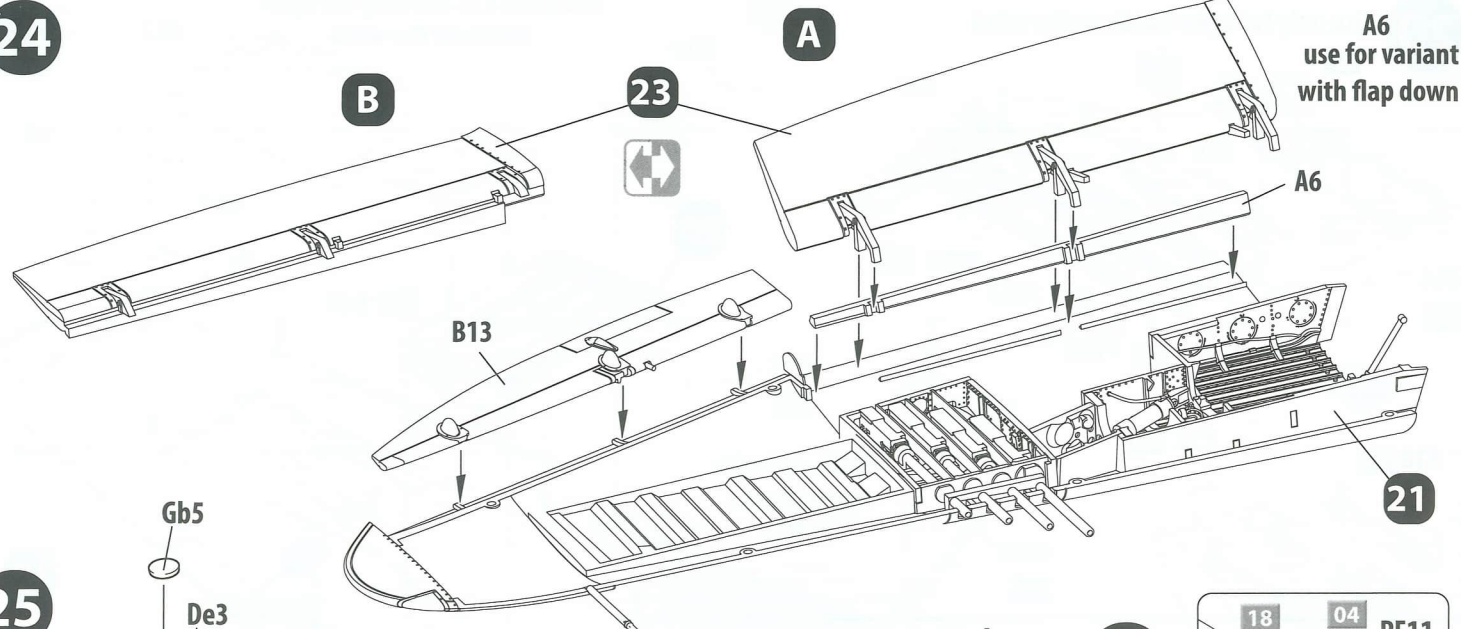


A6
use for variant
with flap down

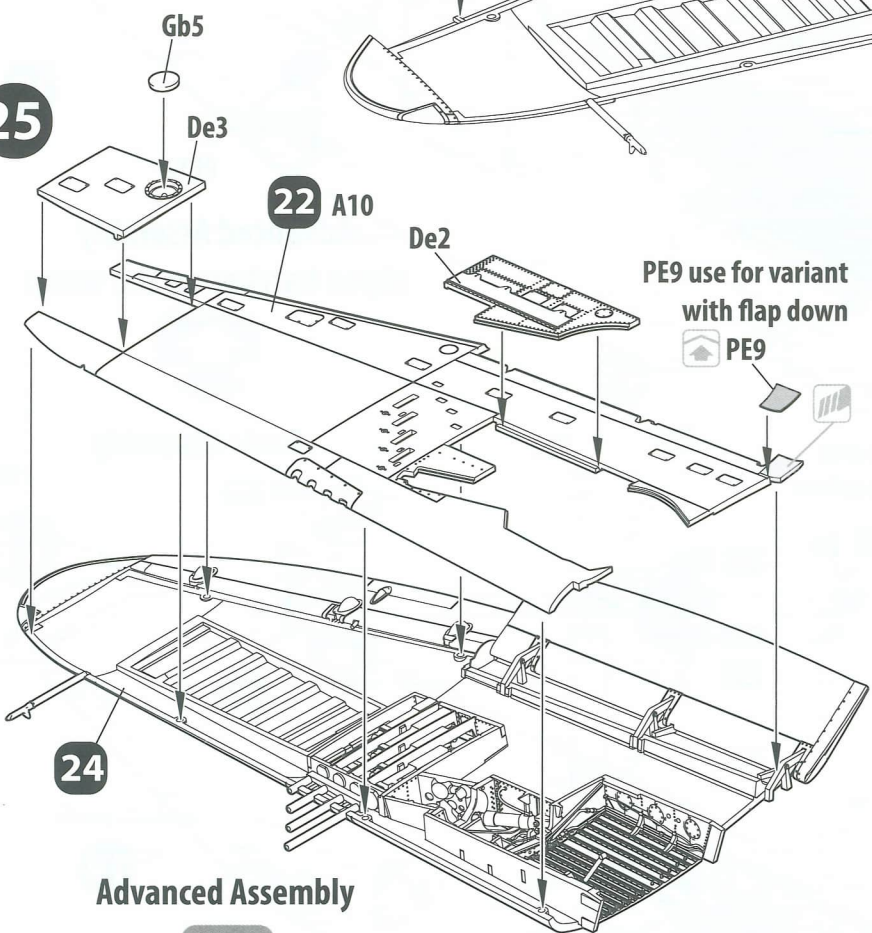


Advanced Assembly





Basic Assembly

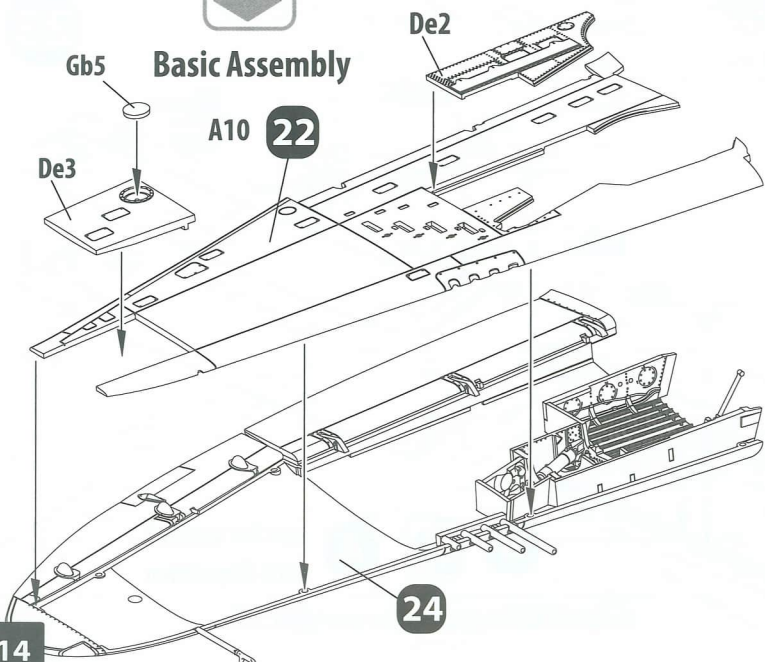

use for open
wind hatch

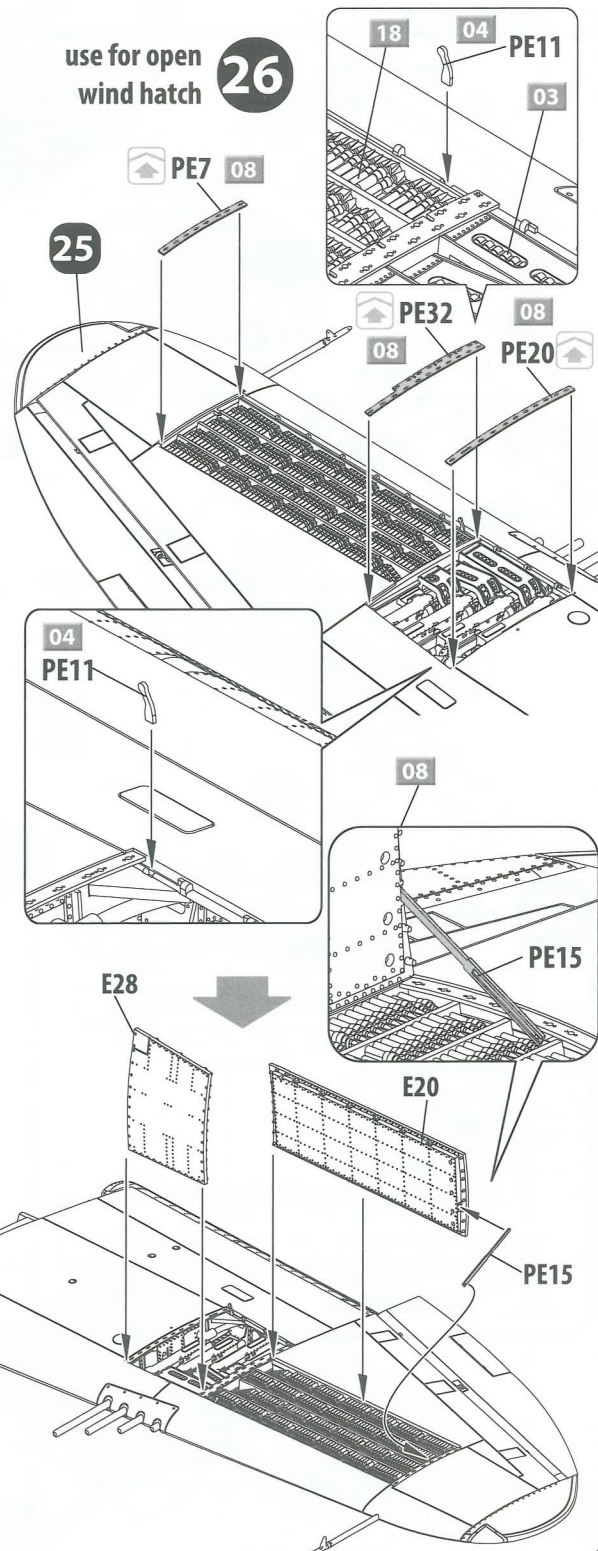


27

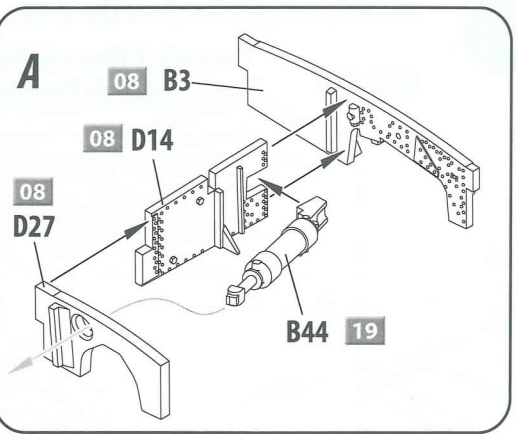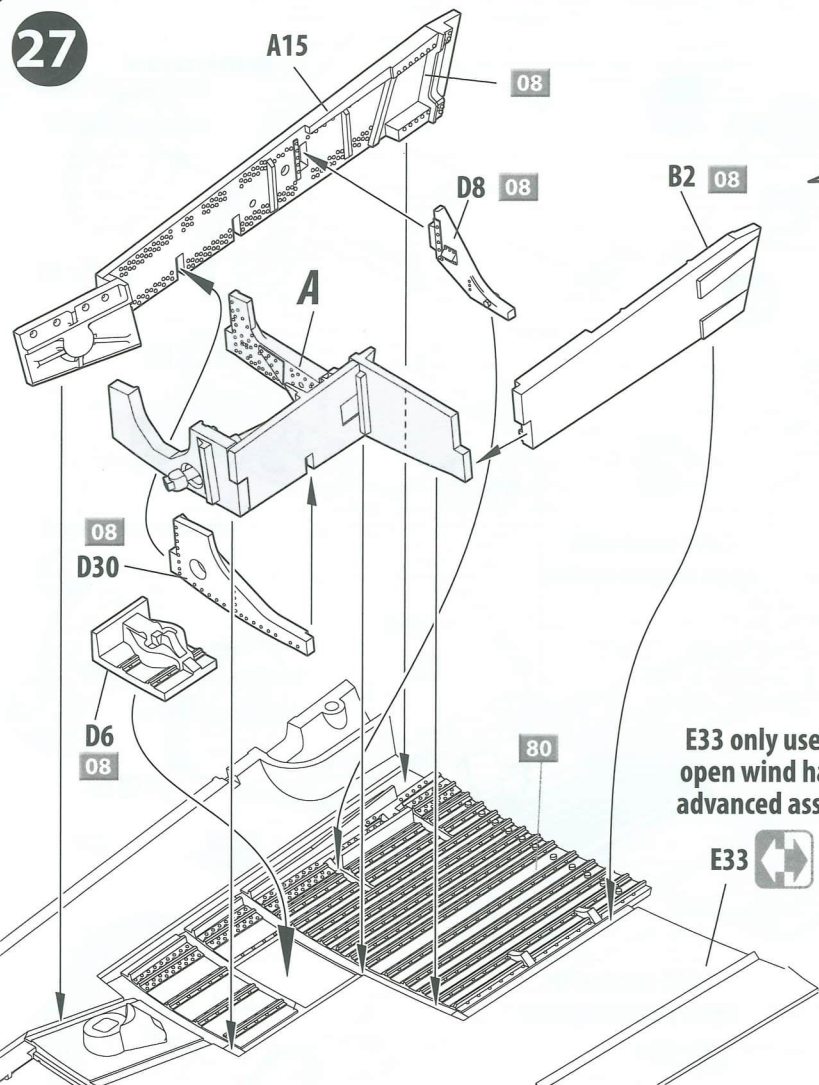




Use only for open hatch on the wind

28

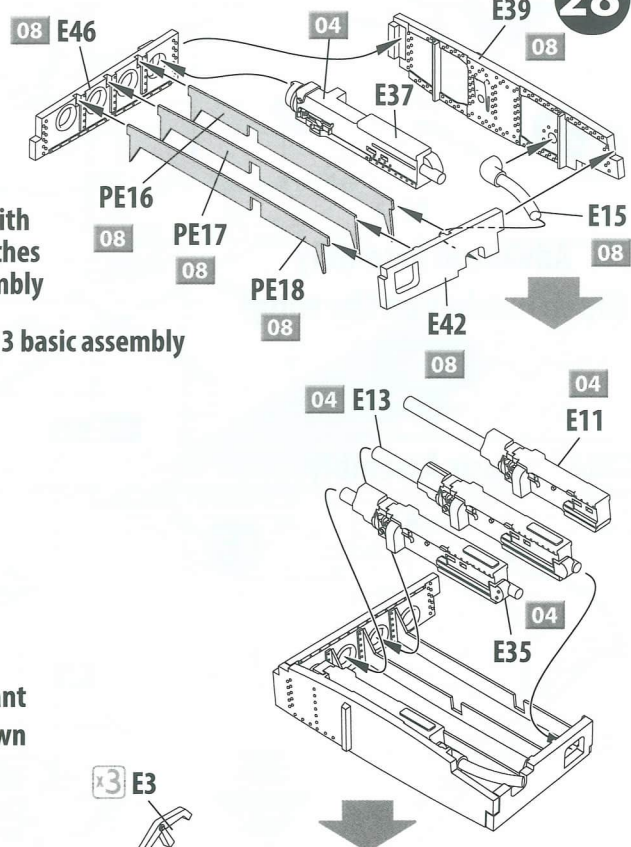


29

B **A** use for variant with flap down

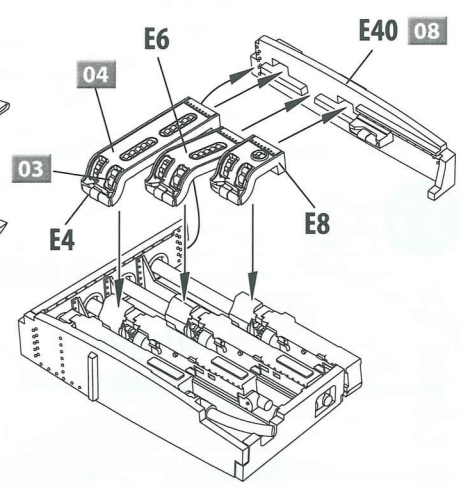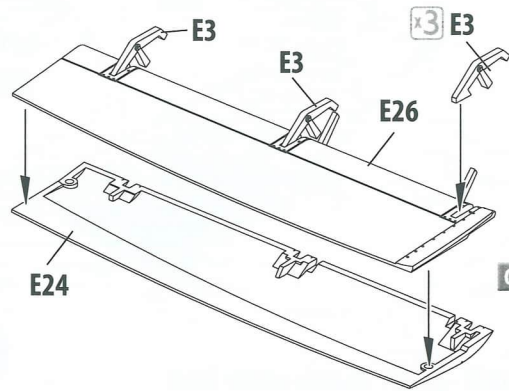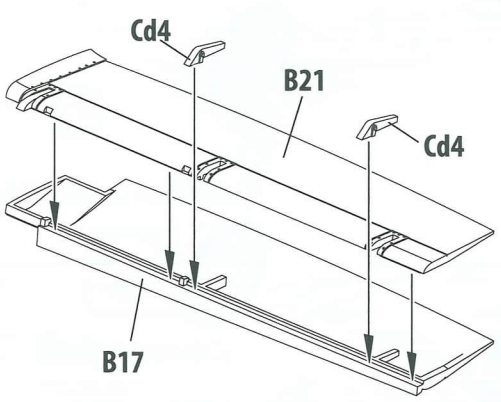


30

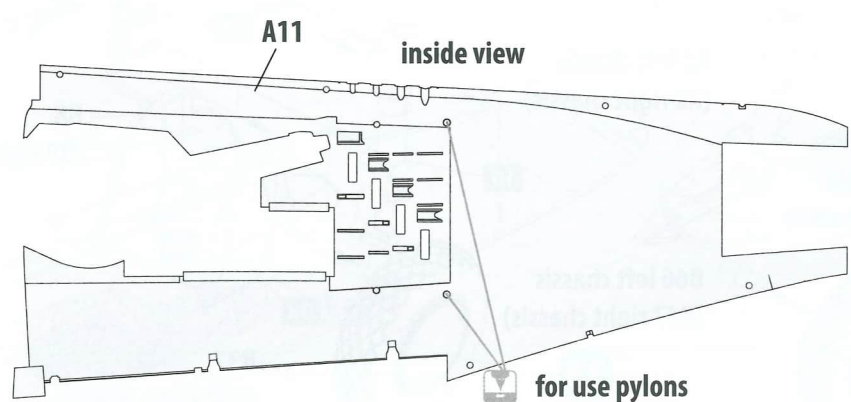

31


Use only for open hatch on the wind

The parts E18 use only for open hatch on the wind

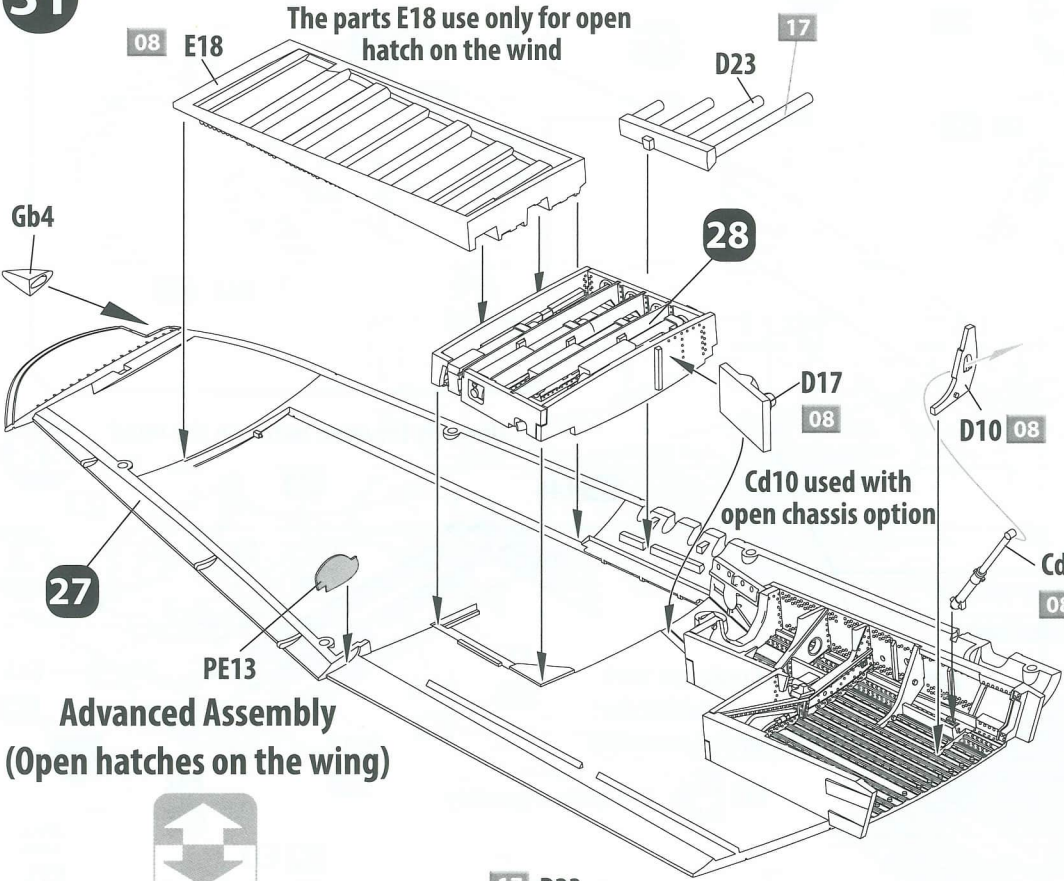


32


chassis normal

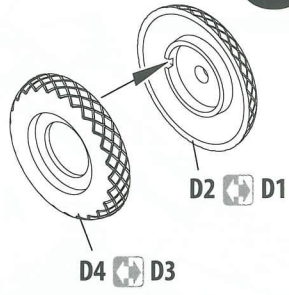

chassis under load

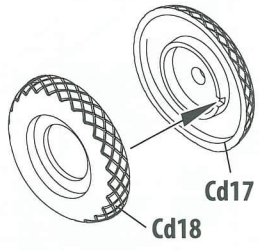

Basic Assembly

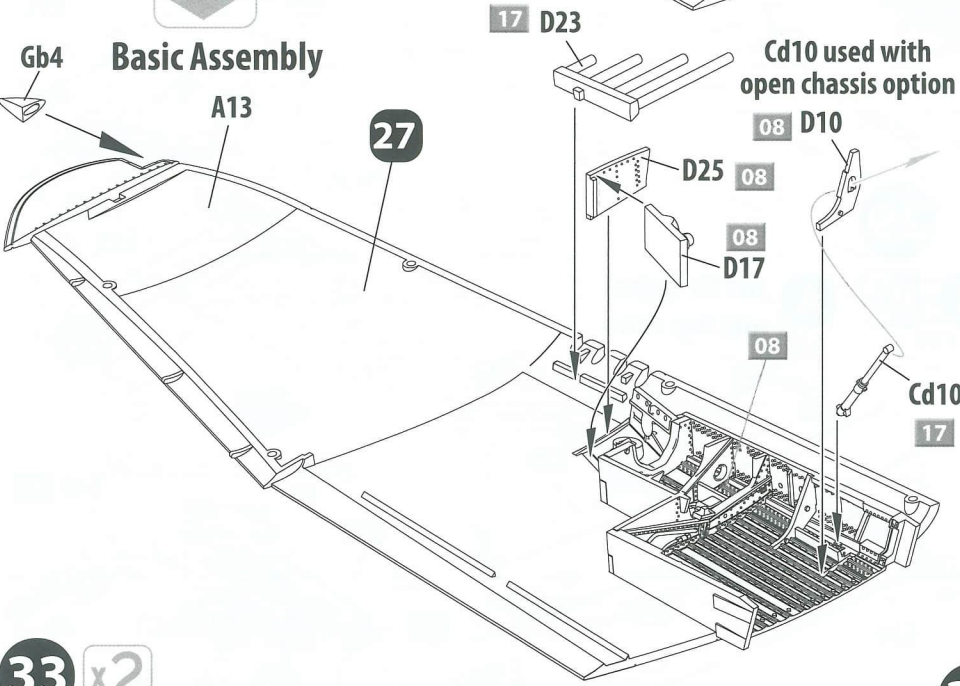


33 x2


chassis normal




chassis under load

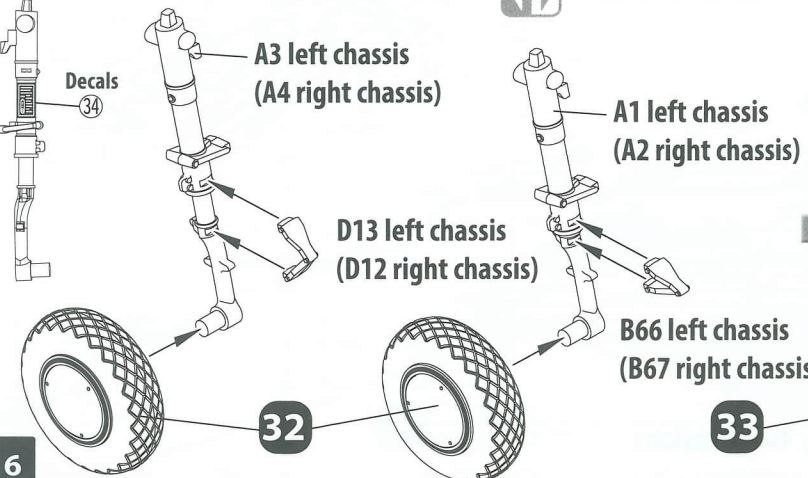

34 x2

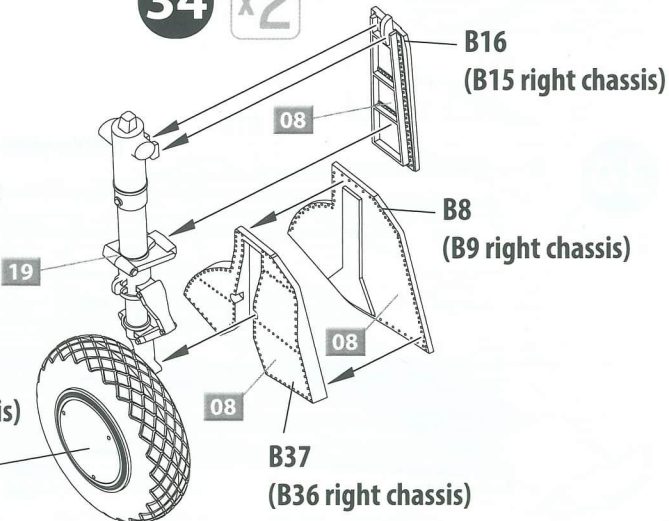


use for variant
with flap down


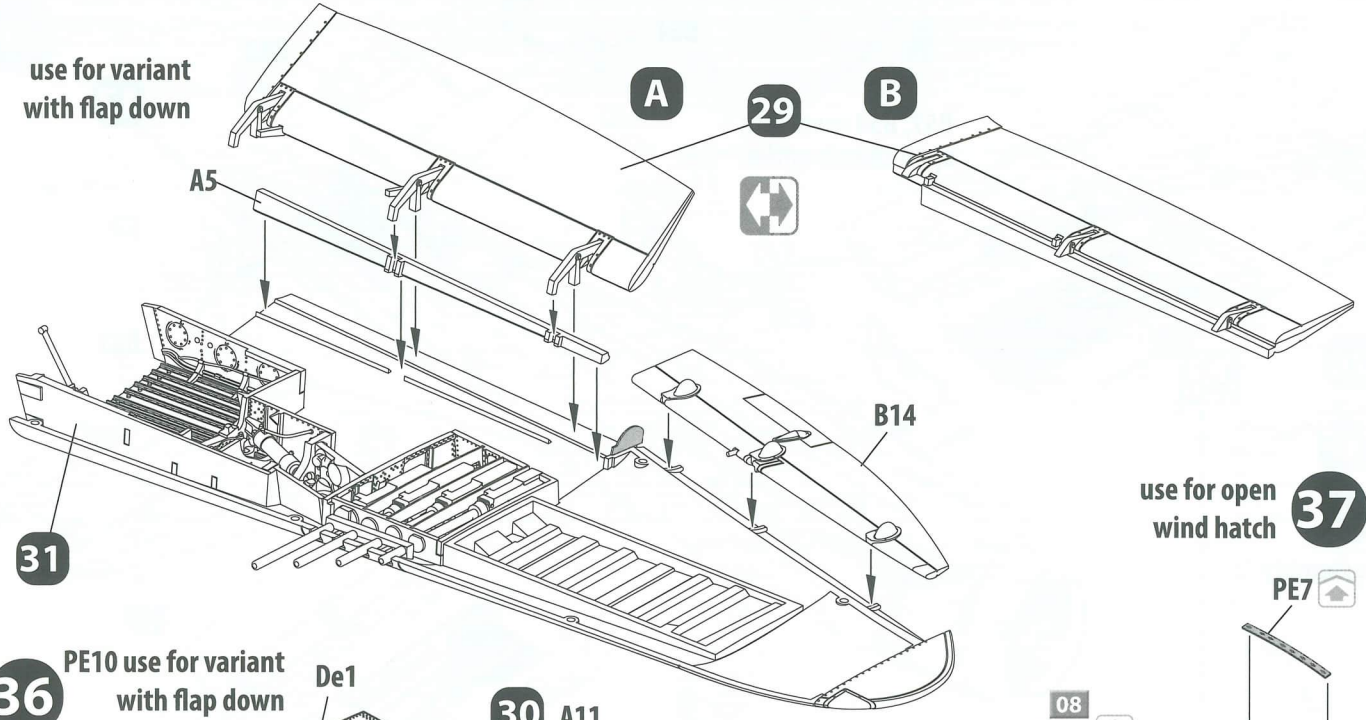


use for open
wind hatch

37

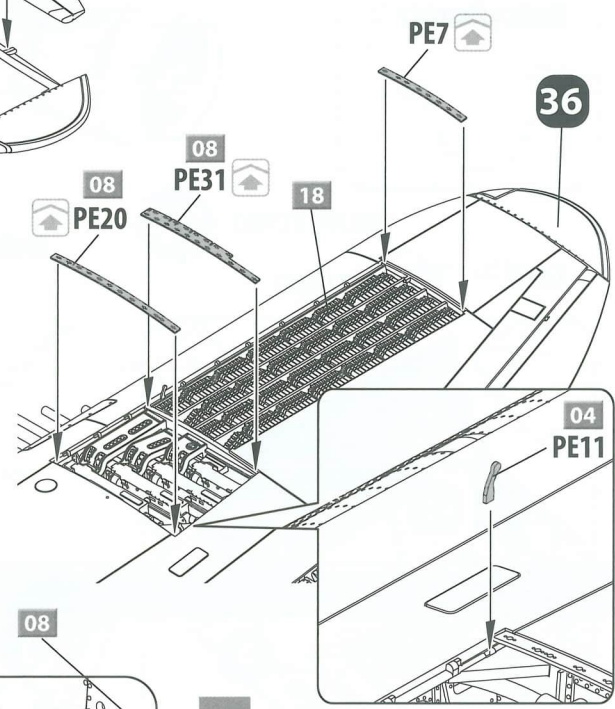



36 PE10 use for variant
with flap down

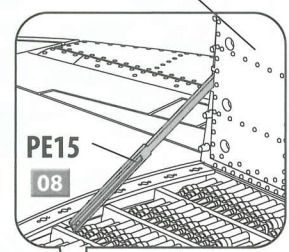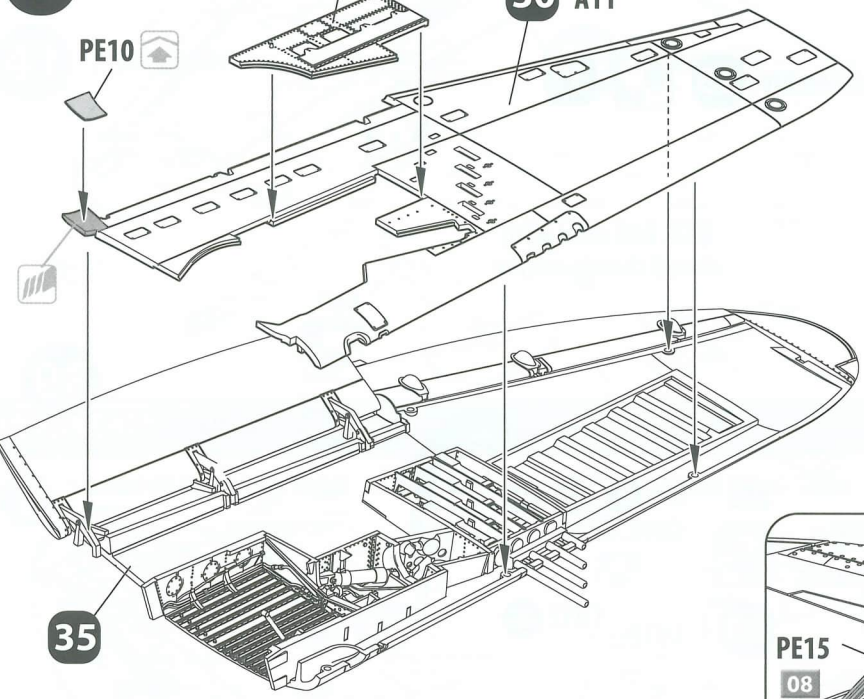


Advanced Assembly




Basic Assembly

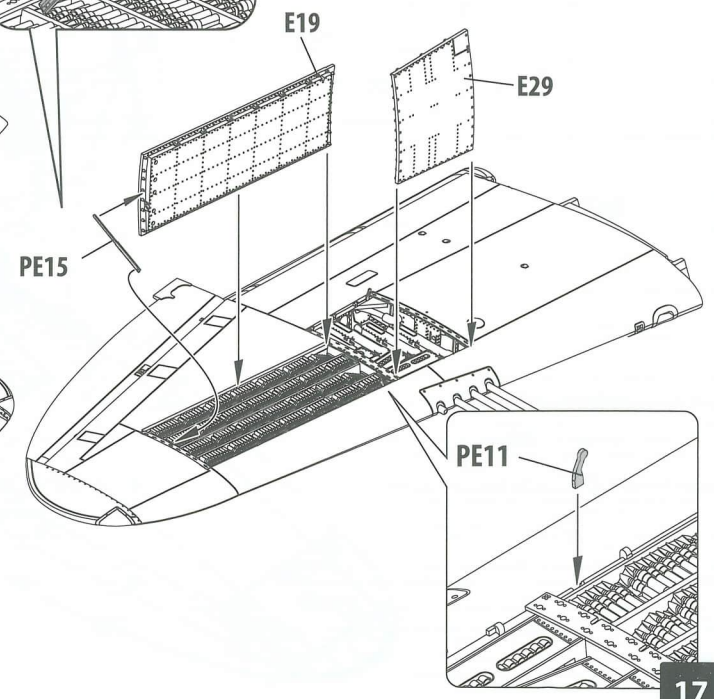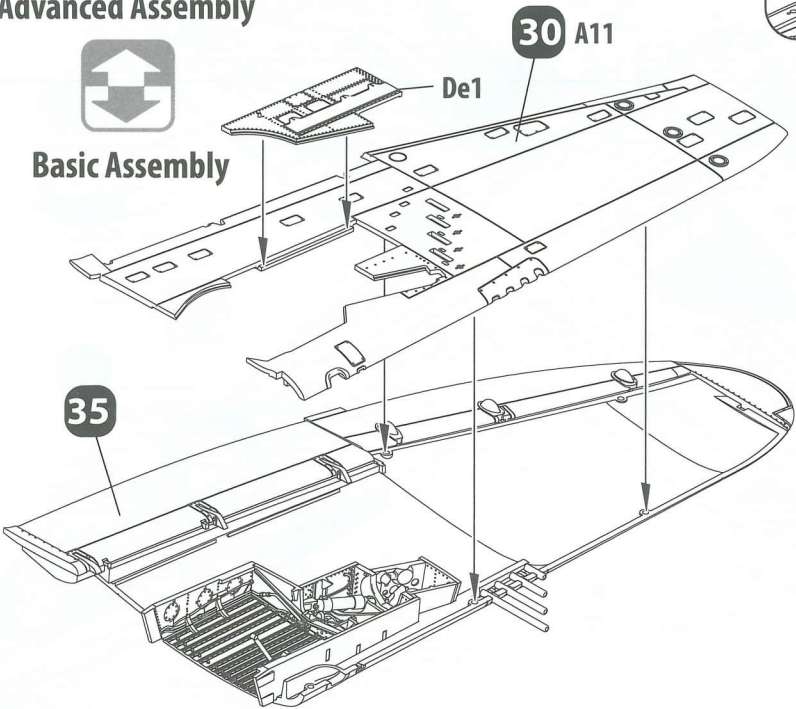




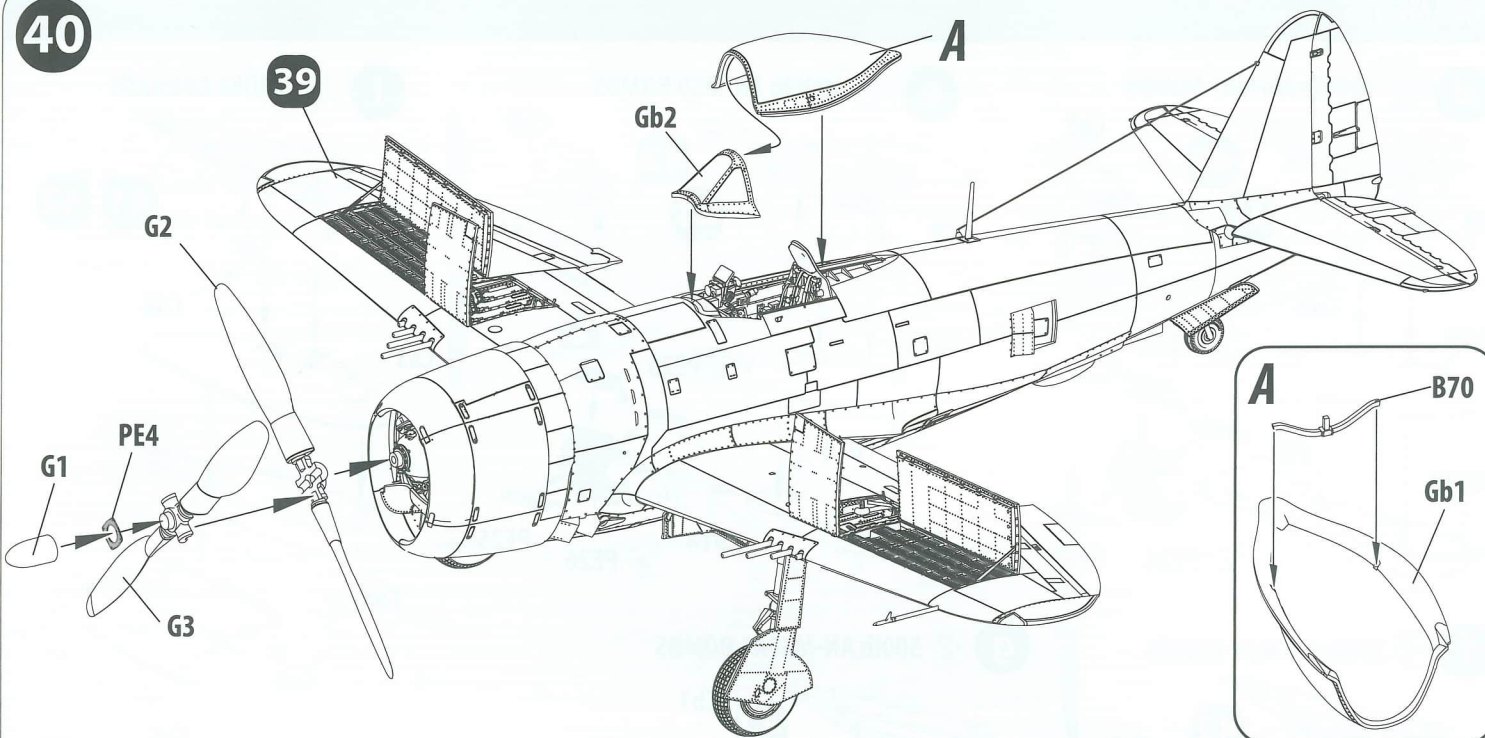


41 PYLON RIGHT

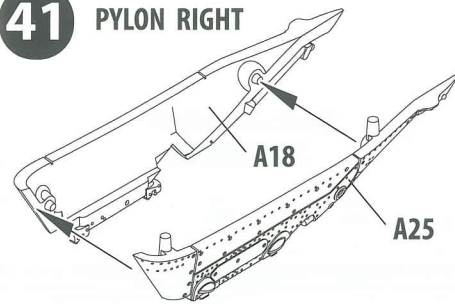

42 PYLON LEFT


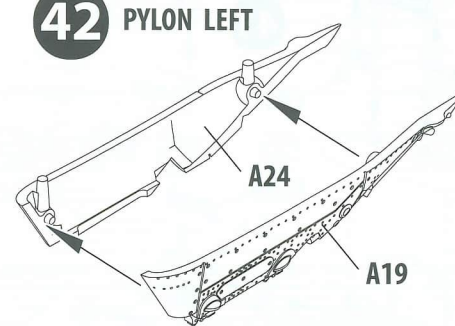


43 EMPTY PYLONS


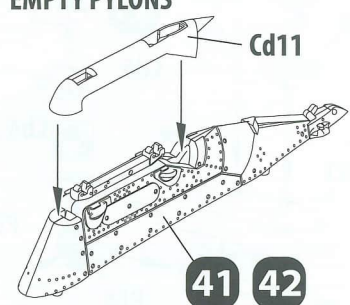


ARMAMENTS


a 108Gal PAPER DROP TANK

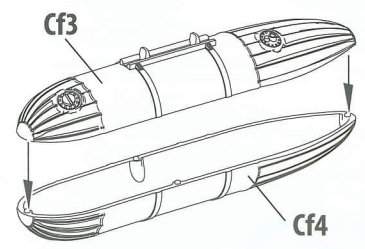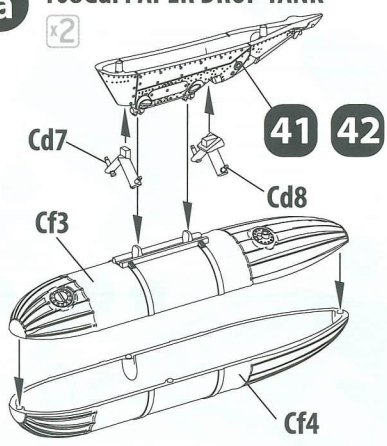


b 200Gal DROP TANK

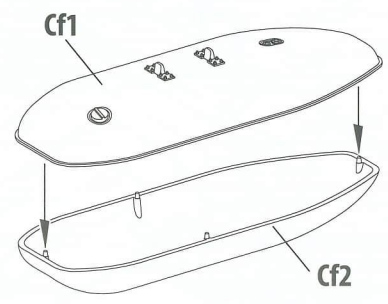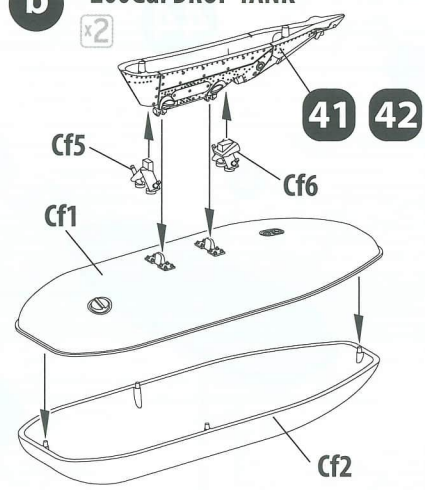


c x2 75Gal DROP TANK

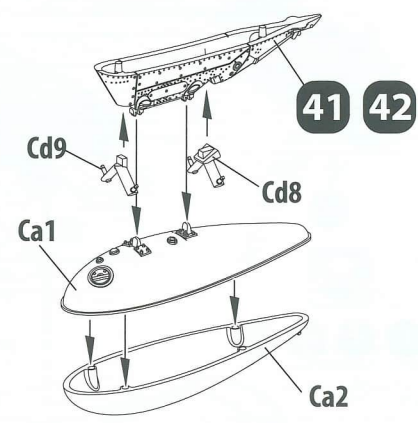


d x2 1000lb AN-M65 BOMBS

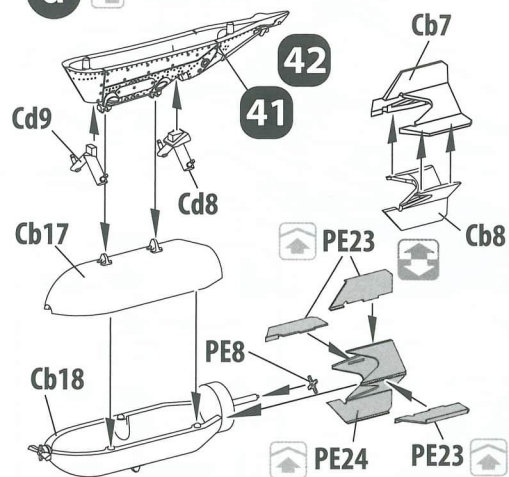


e x2 1000lb AN-M59 BOMBS

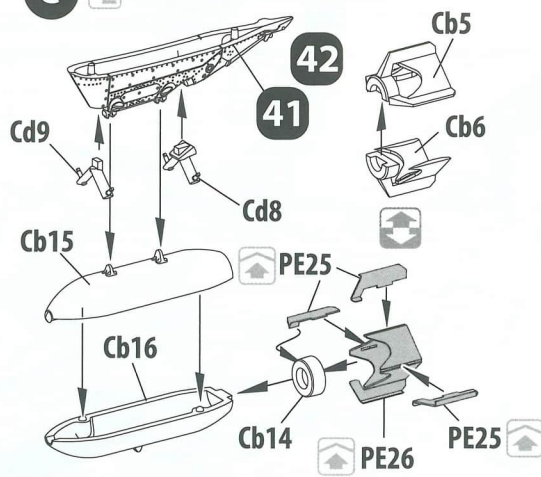


i x2 SMOKE GRENADE

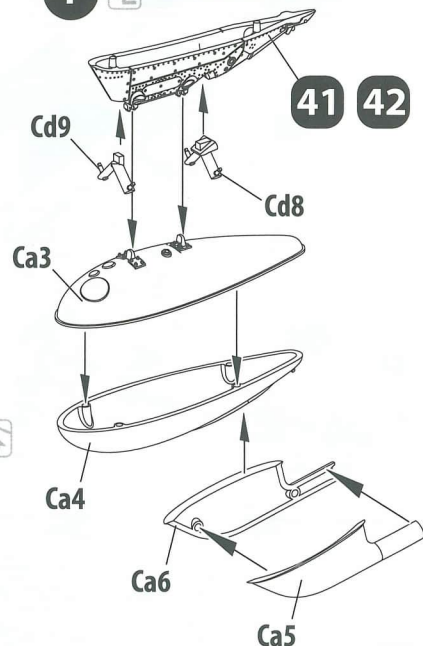



f x2 250lb AN-M57 BOMBS

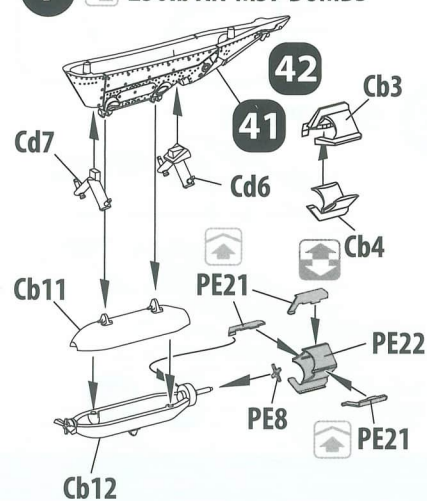


g x2 500lb AN-M58A1 BOMBS

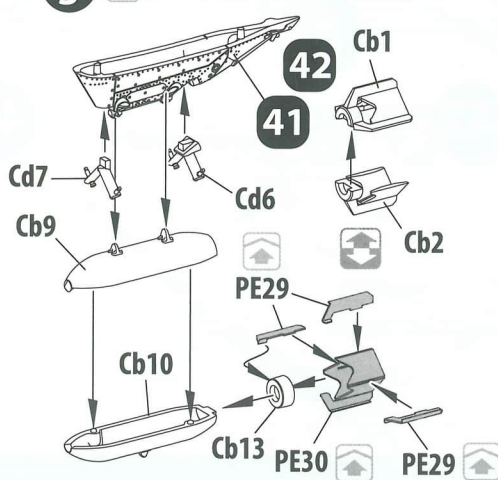


without pylons

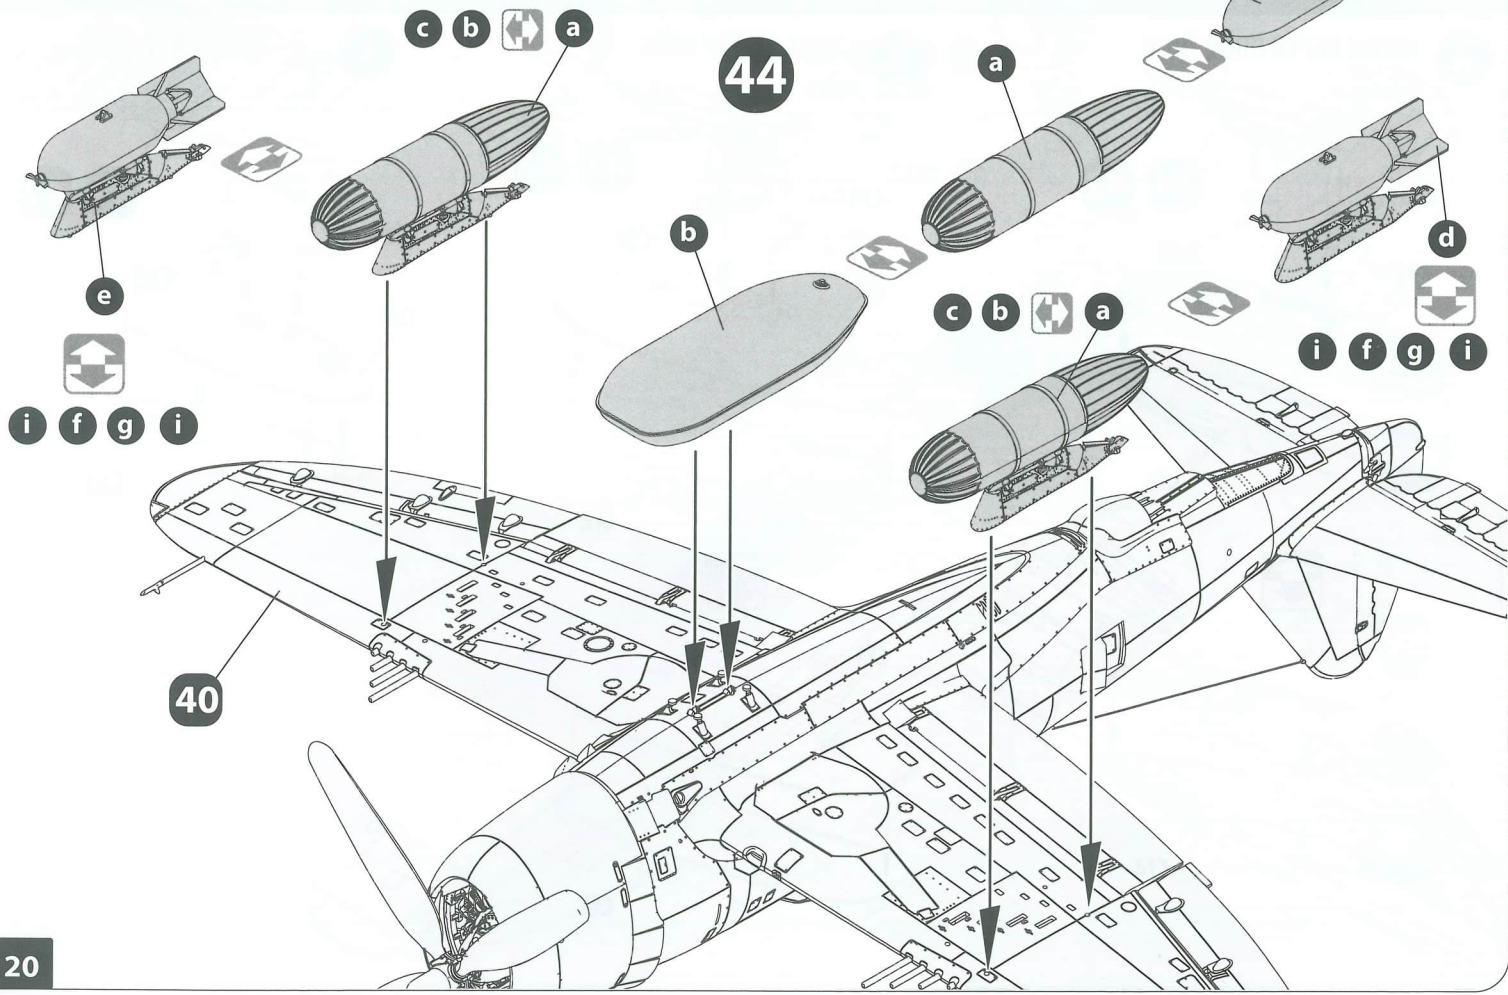


- 1** Thunderbolt P-47M 44-21187 "Li'l-Snorkey" HV-W
61st Fighting Squadron 56th Fighting Group, 8th Air Force,
Spring 1945, Flown Lt. Robert W. Hoeflein

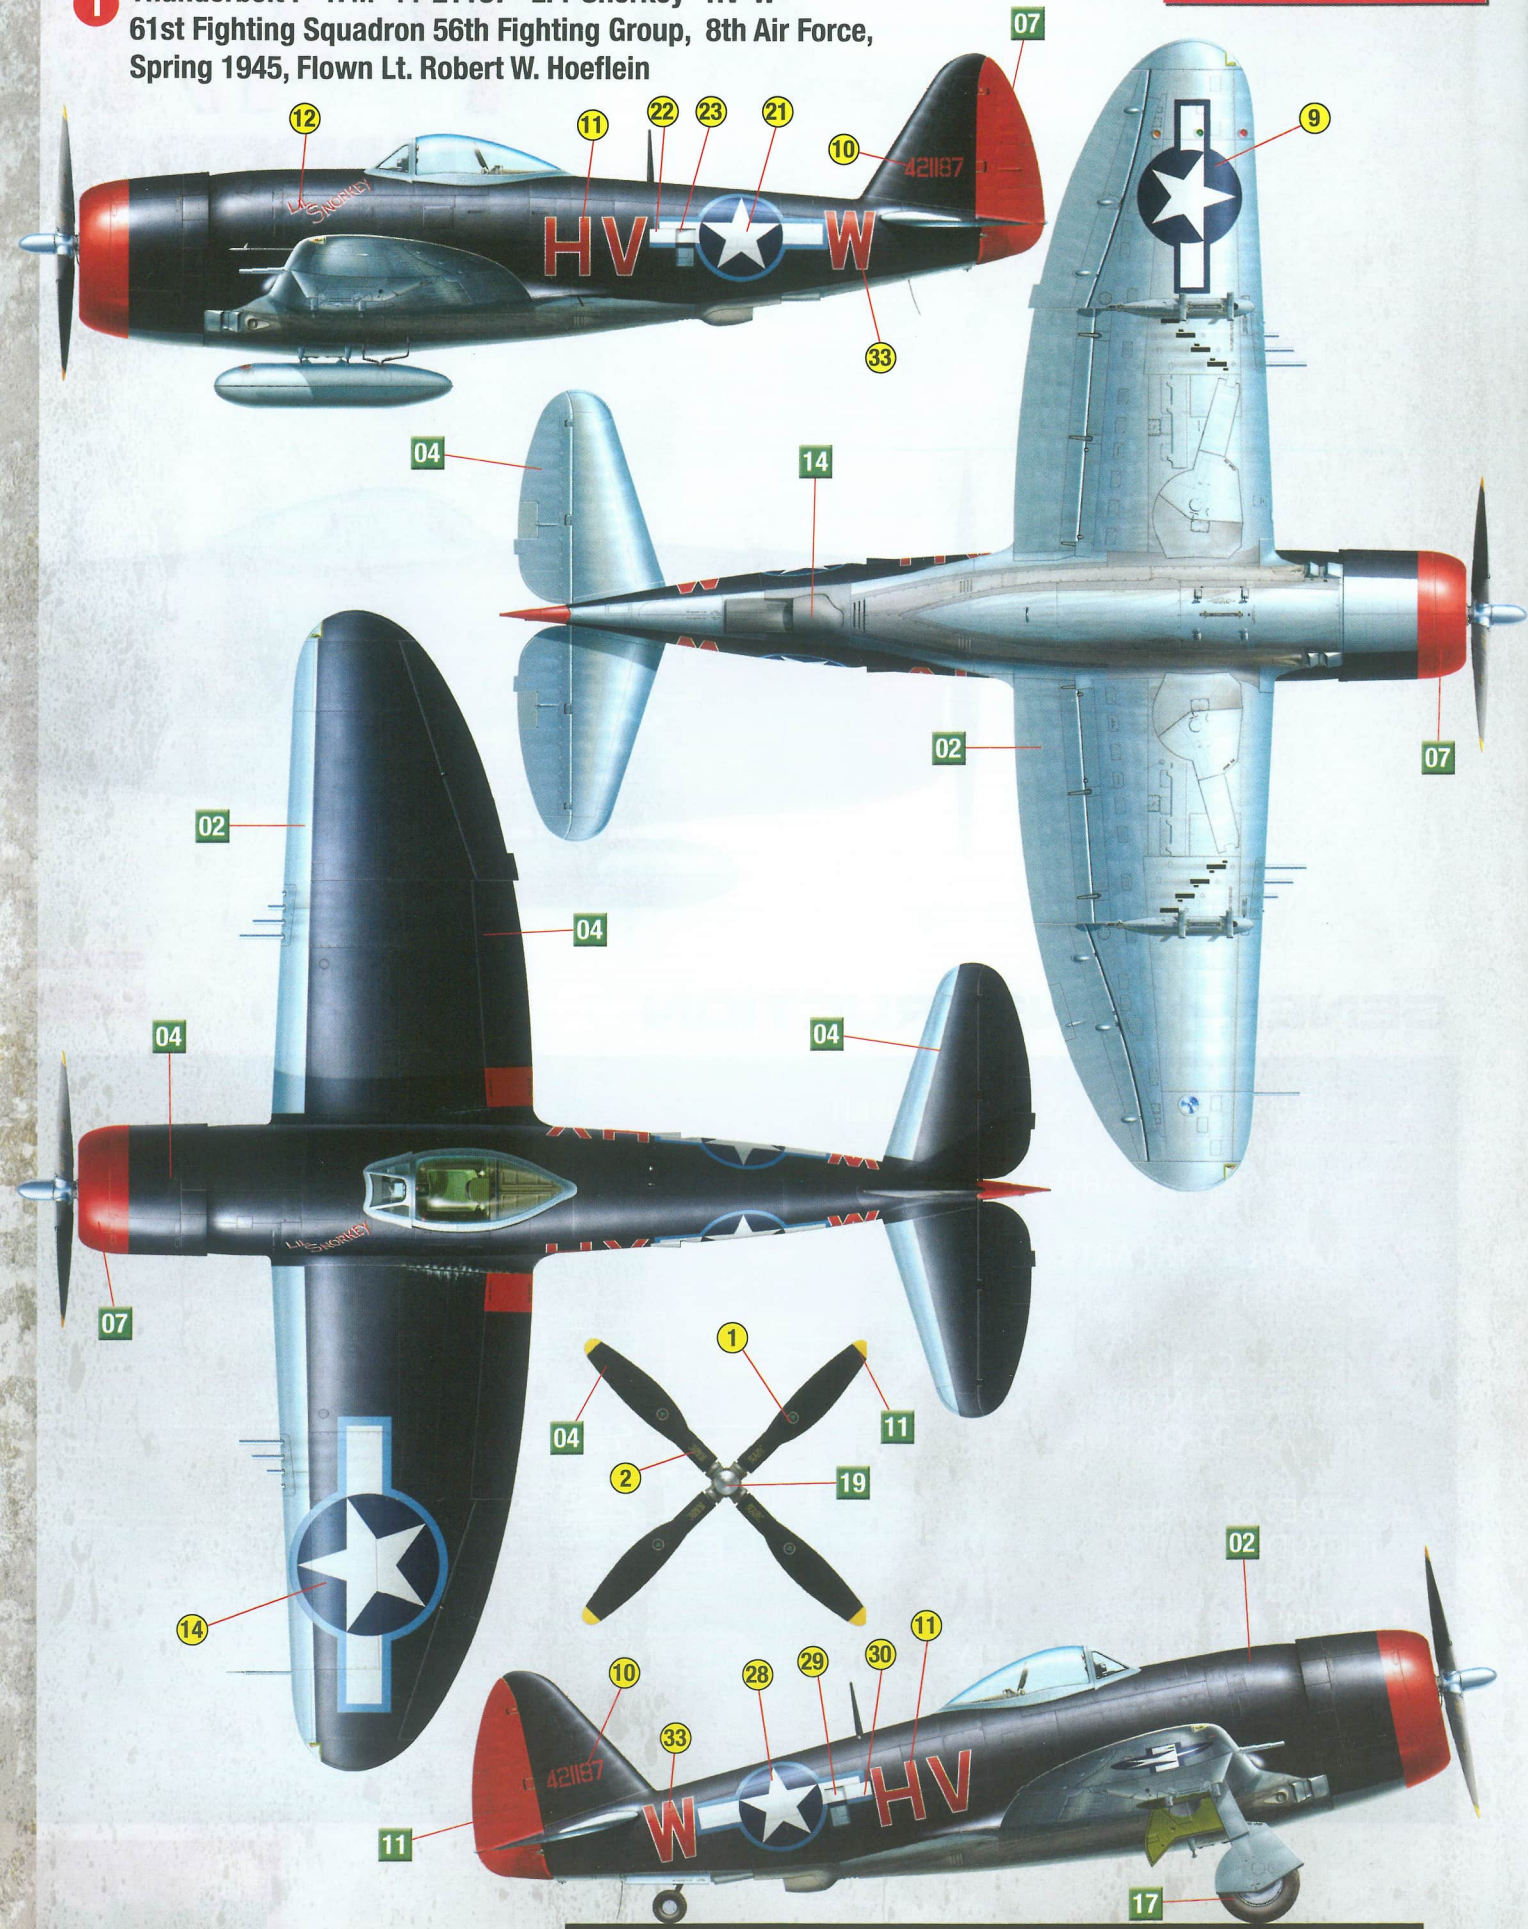

2 Thunderbolt P-47M 44-21117 "Teddy" LM-J
62nd Fighting Squadron 56th Fighting Group, 8th Air Force,
Spring 1945, Flown Maj. Michael Jackson

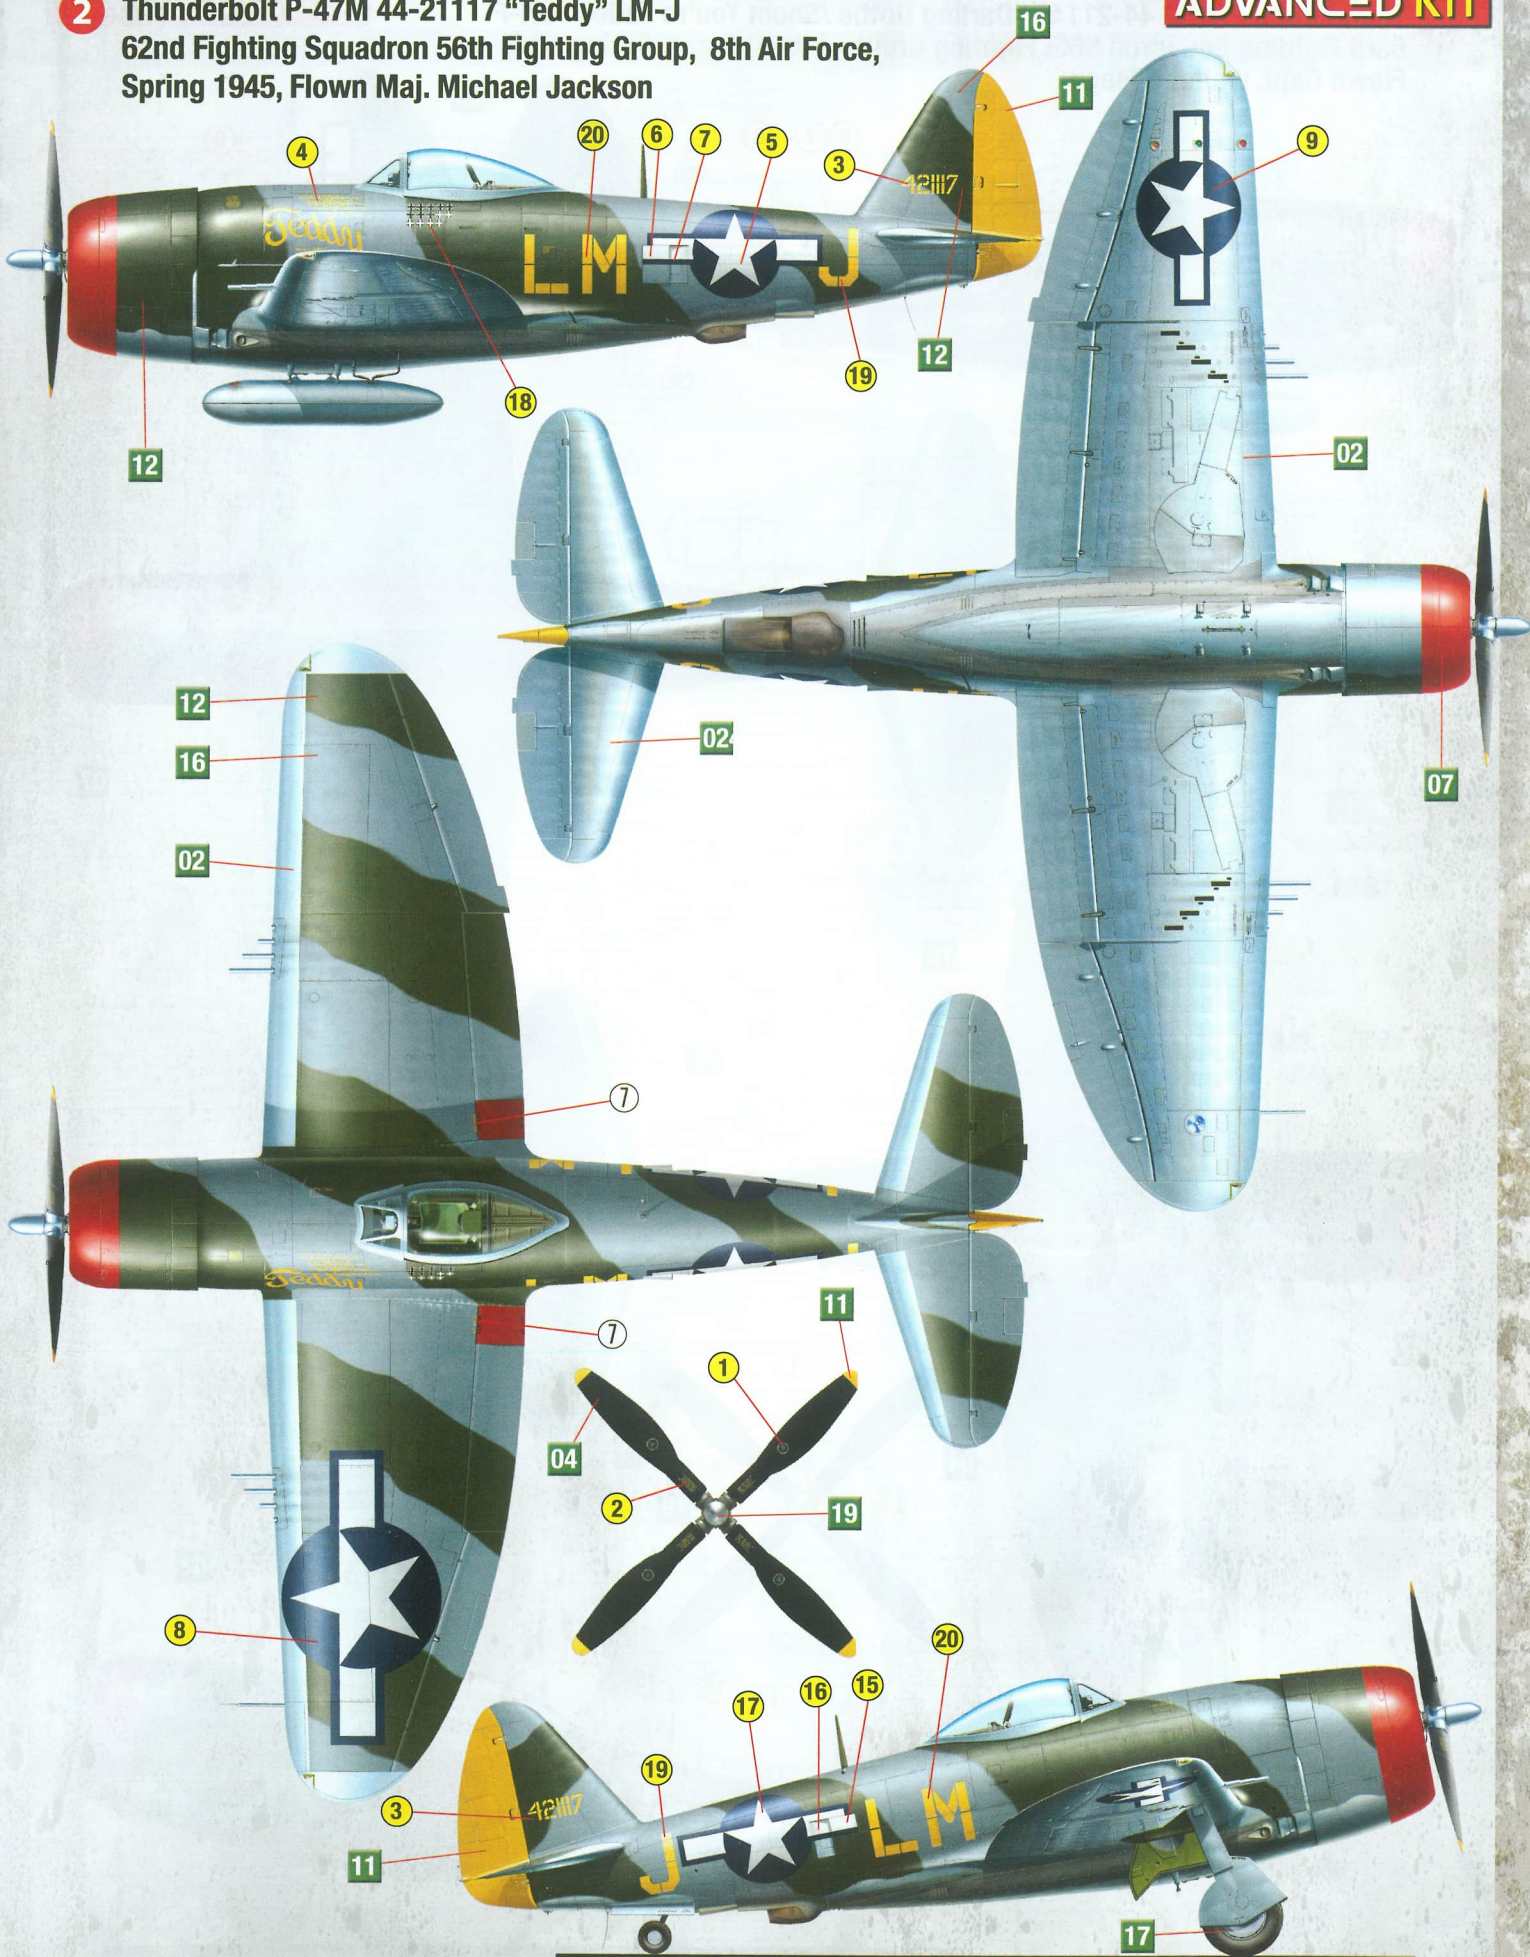

3 Thunderbolt P-47M 44-21140 "Darling Dottie /Shoot You're Faded" UN-F
63rd Fighting Squadron 56th Fighting Group, 8th Air Force, Spring 1945
Flown Capt. Walter L Flagg

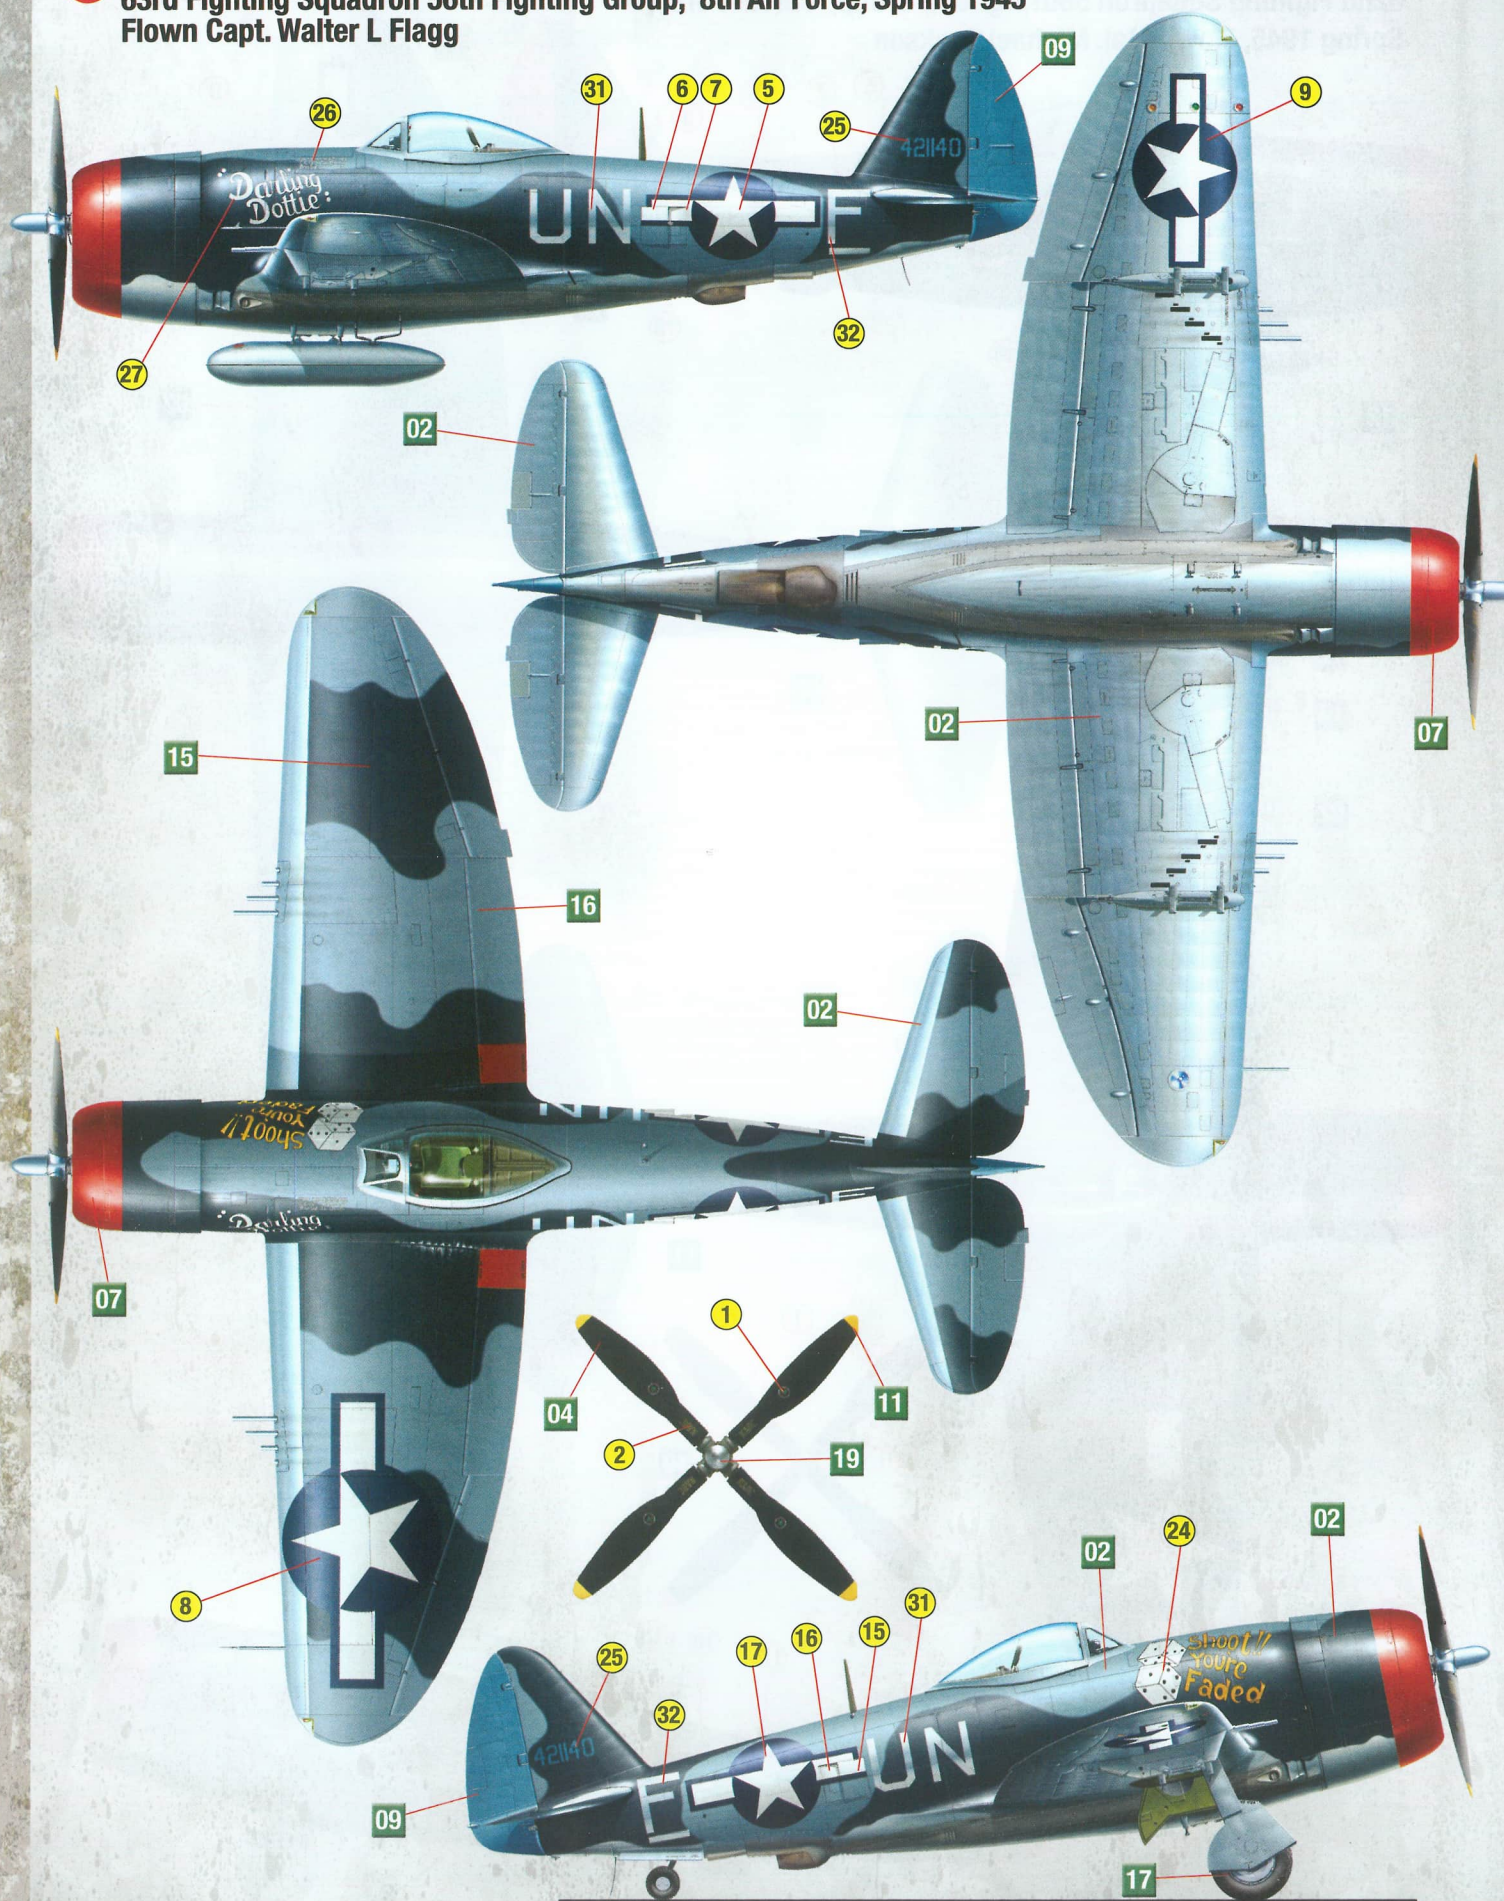

Miniart: 48032

ARMAMENT

ADVANCED KIT

250lb AN-M57 BOMBS



500lb AN-M58A1 BOMBS



1000lb AN-M59 BOMBS




1000lb AN-M65 BOMBS



108Gal PAPER DROP TANK




75Gal DROP TANK

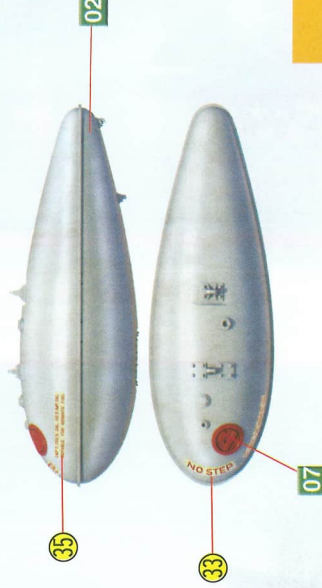

200Gal DROP TANK




SMOKE GRENADE


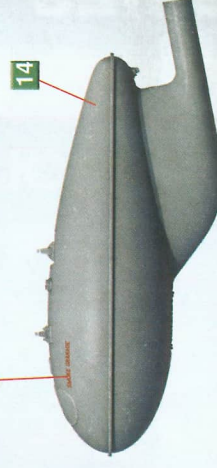


COLOR CHART

No	Color	Vallejo	Mr. Color	AK RC	Mission Models	AMMO MIG	Tamiya	Color name
01		71.137	C-351	RC-262	MMP-059	A.MIG-0220	XF-05	FS 34151 Interior Green
02		71.062	C-090	RC-020	MMM-008	A.MIG-0194	XF-16	Aluminum
03		71.326	C-321	RC-018	MMP-039	A.MIG-0057	XF-55	Yellow Grey
04		71.057	C-033	RC-001	MMP-047	A.MIG-0046	XF-01	Black
05		71.043	C-027	RC-262	MMP-059	A.MIG-0237	XF-04	Olive Drab
06		71.041	C-310	RC-035	MMP-033	A.MIG-0076	XF-10	Brown
07		71.003	C-003	RC-006	MMP-003	A.MIG-0049	XF-07	Red
08		71.107	C-352	RC-263	MMP-067	A.MIG-0221	XF-07	FS 33481 Zinc Chromate Yellow
09		71.109	C-072	RC-297	MMP-071	A.MIG-0062	XF-08	FS 35164 Intermediate Blue
10		71.325	C-518	RC-304	MMP-052	A.MIG-0240	XF-62	FS 34086 (ANA 613) Green Drab
11		71.078	C-004	RC-007	MMP-041	A.MIG-0125	XF-03	Yellow
12		71.016	C-012	RC-259	MMP-091	A.MIG-0237	XF-62	FS 23070 Dark Olive Drab
13		71.001	C-062	RC-004	MMP-001	A.MIG-0050	XF-02	White
14		71.124	C-302	RC-261	MMP-114	A.MIG-0238	XF-20	FS 36122 Neutral Gray
15		71.046	C-603	RC-210	MMP-102	A.MIG-0238	XF-67	FS 34092 Medium Green
16		71.251	C-137	RC-022	MMP-040	A.MIG-0033	XF-19	Light Grey
17		71.067	C-219	AK-460	MMM-009	A.MIG-0197	XF-85	Tire Black
18		71.072	C-028	AK-476	MMM-002	A.MIG-0191	XF-12	Brass
19							XF-56	Steel

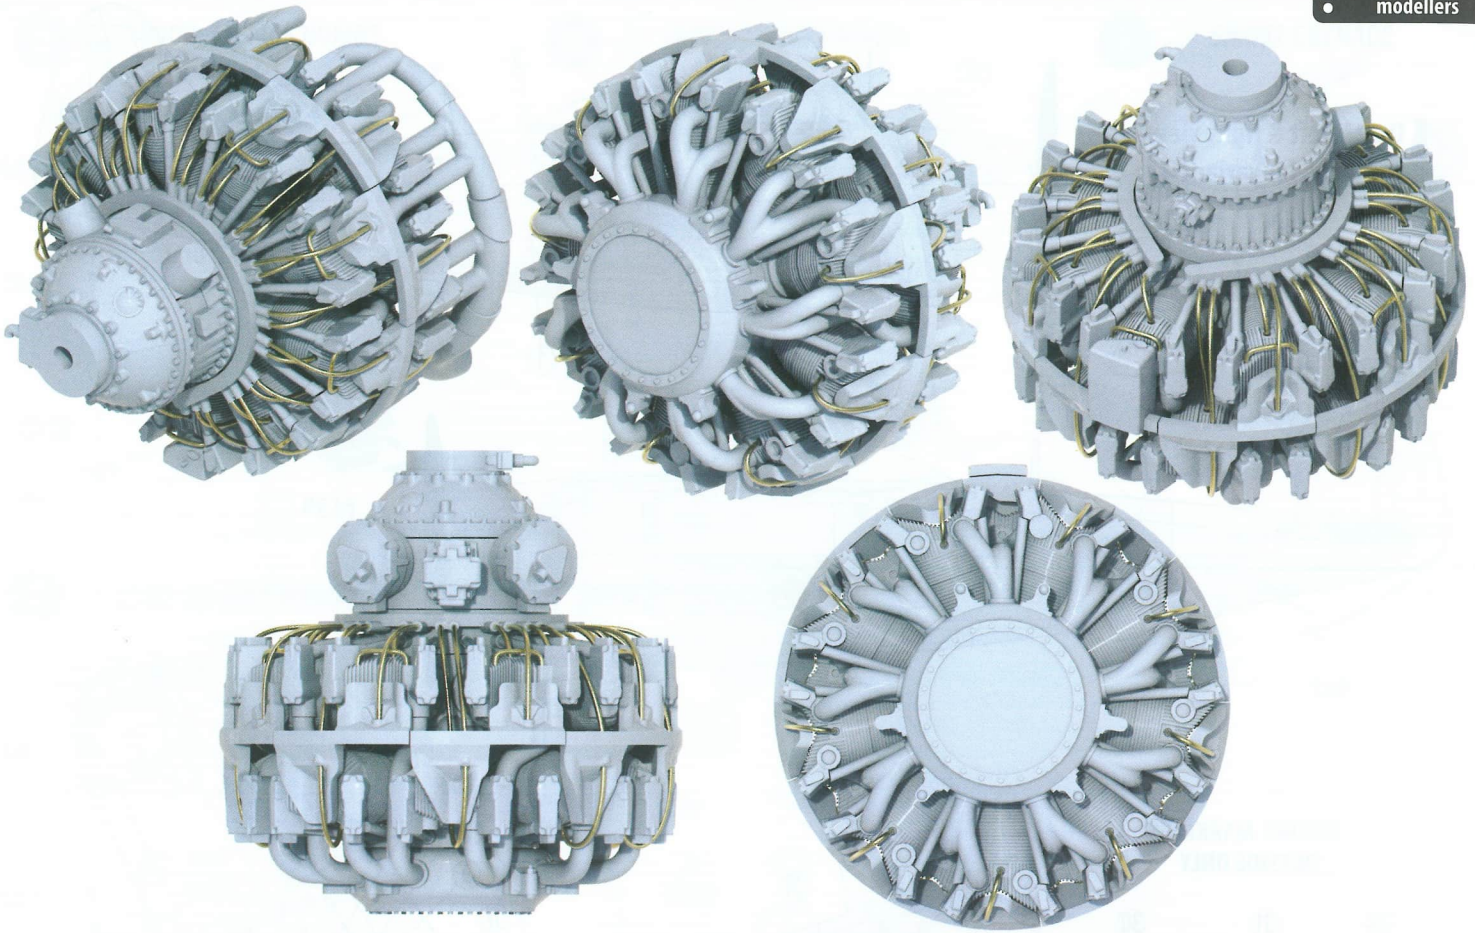

Wiring Diagrams of left Wing

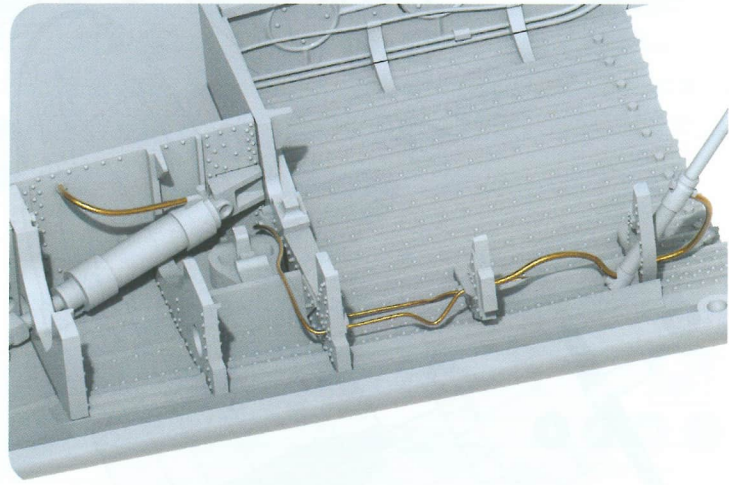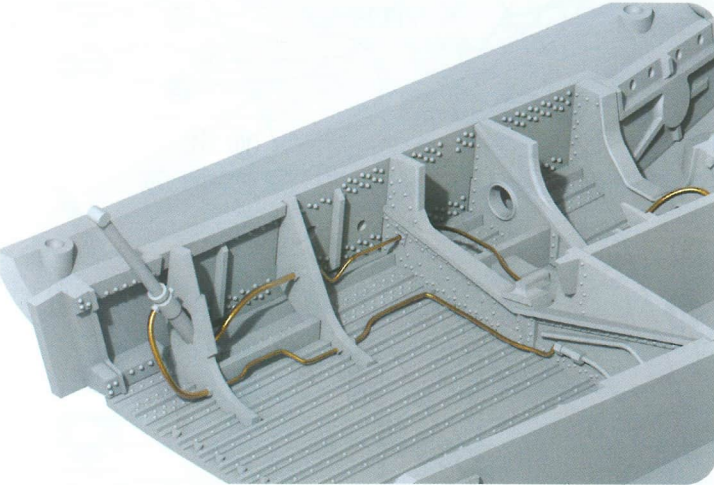

Wiring Diagrams of right Wing

