

Soviet Tu-2 Bomber



EASY ASSEMBLY AUTHENTIC KIT



cyanocrilate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲





repair
填补

The way to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:

- 一 把相关的印花从水贴纸上剪下, 放入40°C左右的温水中浸10秒。
- 二 然后将印花放在干净的布上。
- 三 拿上印花纸版, 手指蘸水将印花移到适当的位置。
- 四 用软干布轻压印花直至水干, 气泡消失。

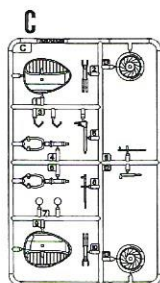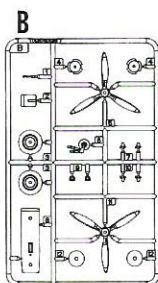



《上部机身》

Top fuselage

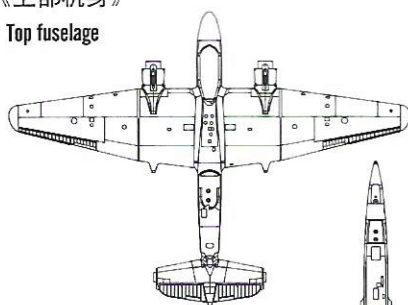

《下部机身》

Lower fuselage

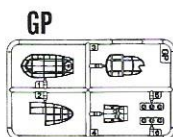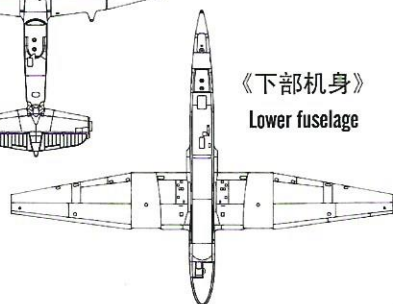

《水贴》

Decal



部品图
Parts

A1



A2



1
STEP

《上部机身》



Top fuselage

C9
对侧C1
Opposite C1


对侧GP5
Opposite GP5
GP6

《下部机身》



Lower fuselage

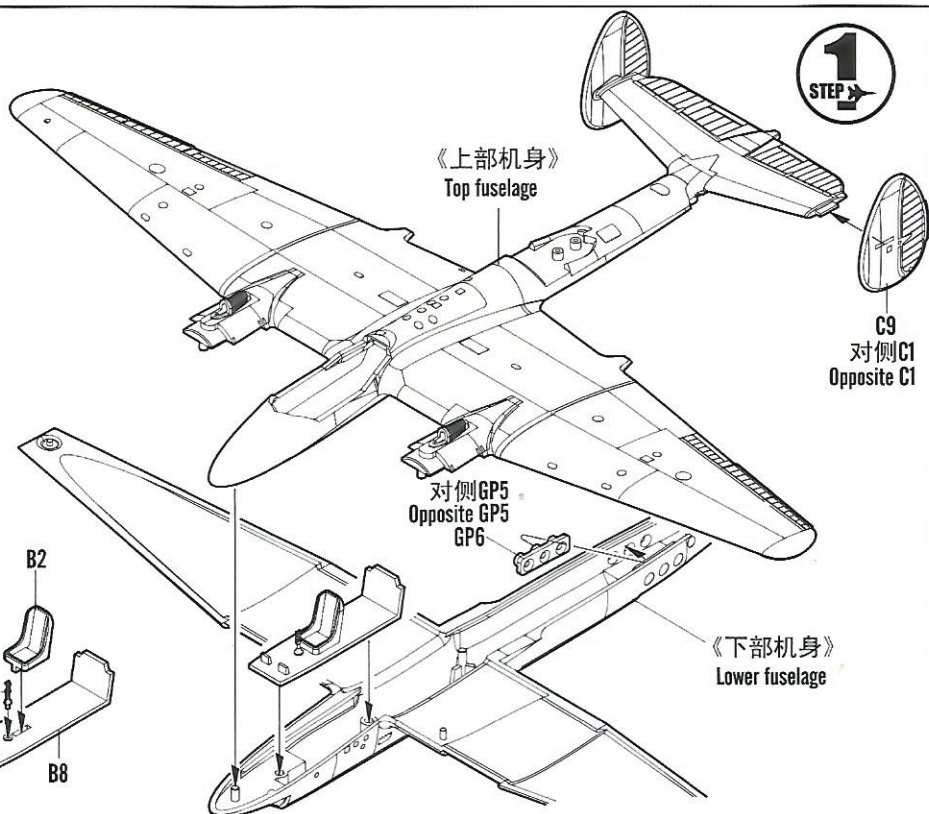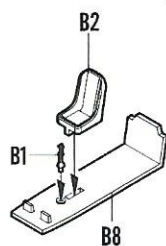

2
STEP


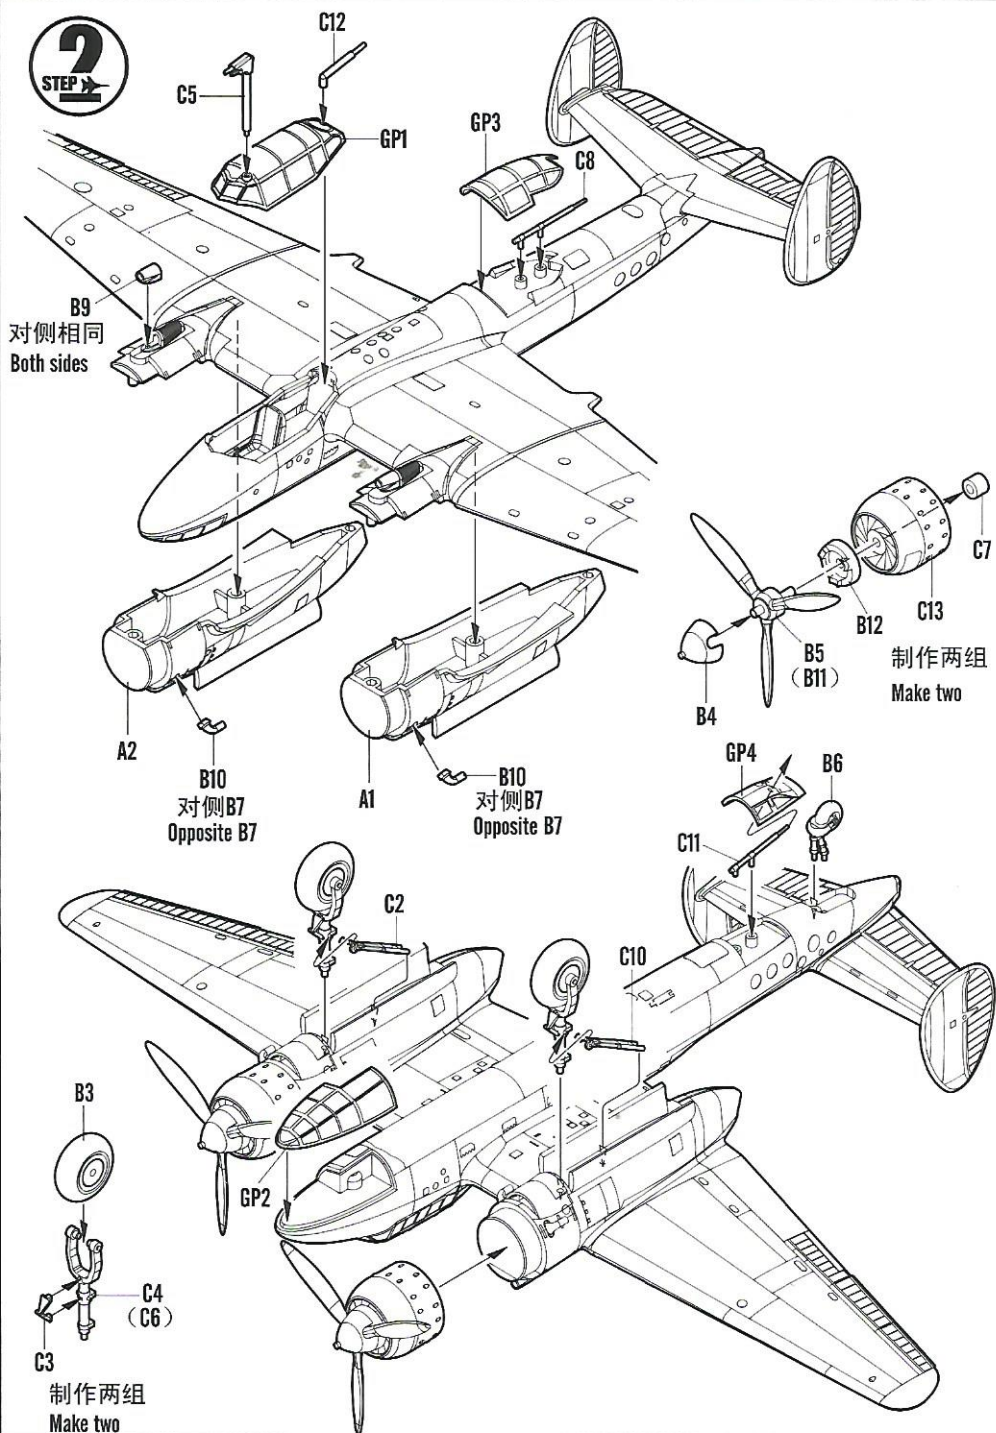


A

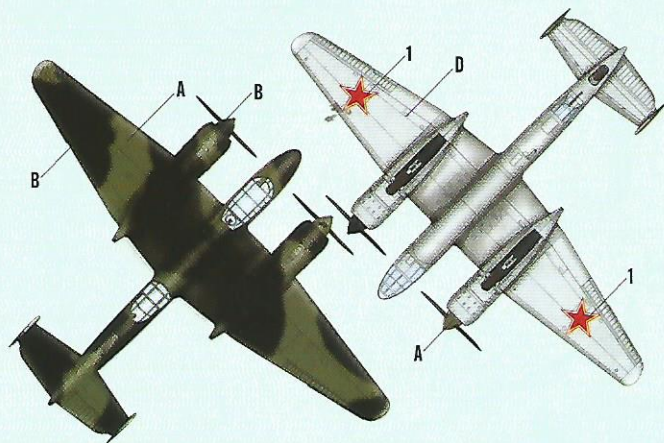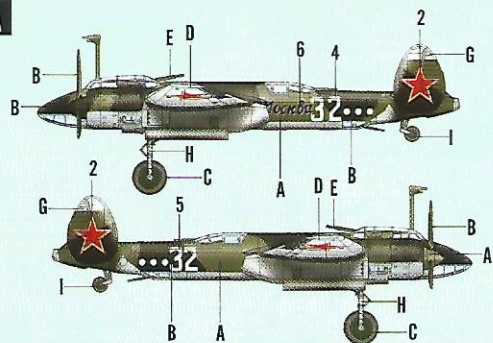

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A 暗绿色 RLM 71 Dark Green	H 64 17	--	--	--	--
B 灰色 Engine Gray	H 30 301	866	--	XF24	--
C 胎黑色 Tire Black	H 77 137	--	--	--	--
D 浅灰蓝 Light Blue	H 74	--	--	--	--
E 黑铁色 Metal Black	H 18 28	864	1402	--	--

B

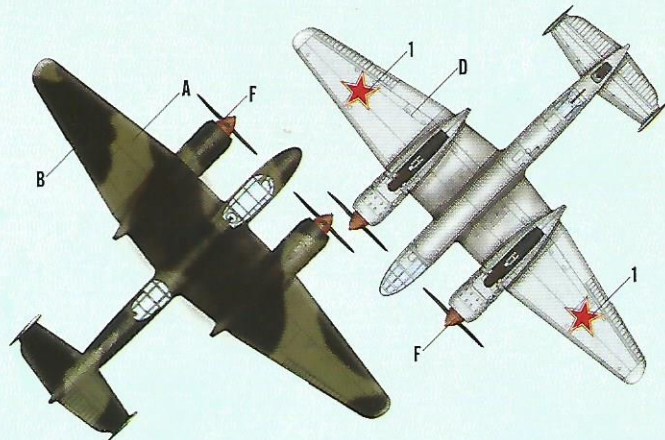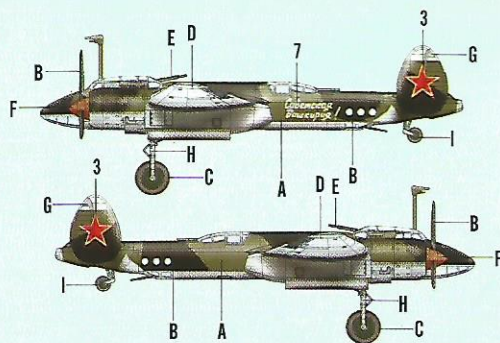

Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
F 红色 Red	H 3 3	908	1503	X7	19
G 白色 White Insignia	H 31 316	991	1745	X2	22
H 银色 Silver	H 8 8	997	1546	X11	11
I 薄松叶色 Light Green	H 31 319	--	1713	--	117

※ Some paints may not be available in your country. Please check your local hobby shop for substitute