


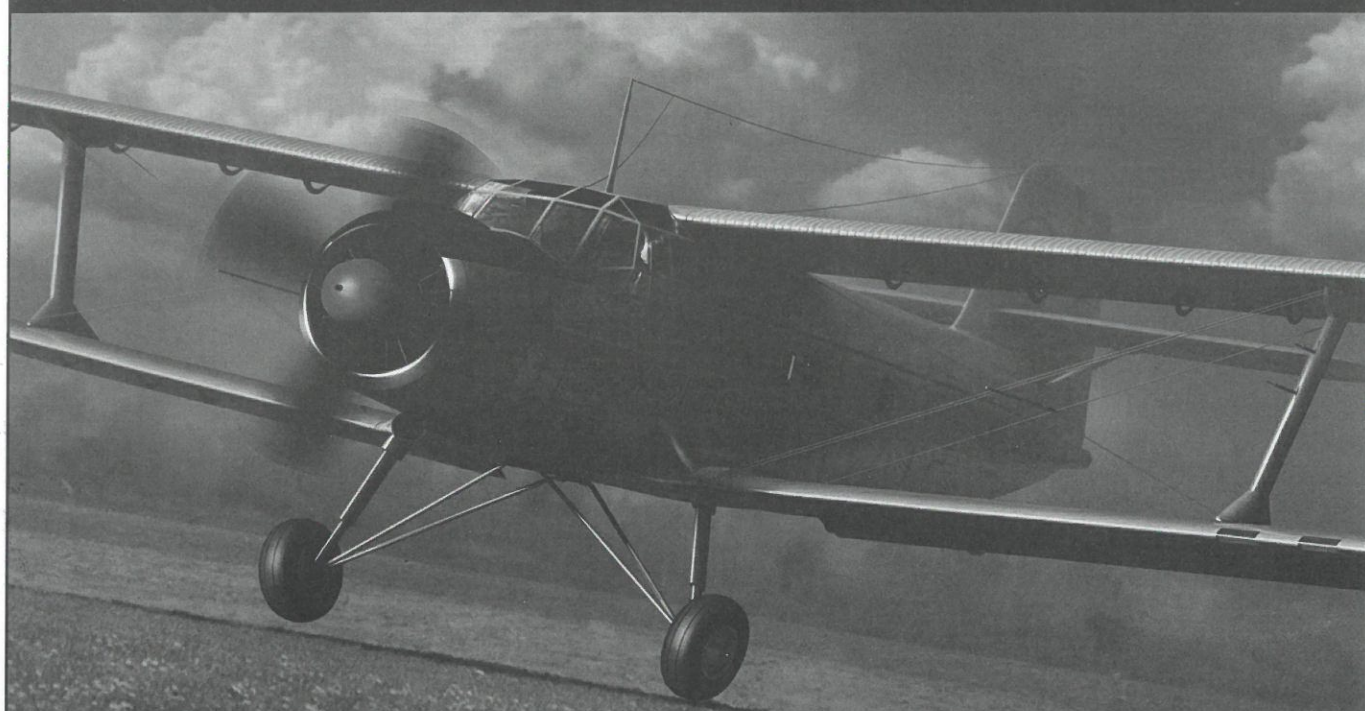

Antonov AN-2M Colt

アントノフ An-2M コルト 俄罗斯AN-2M“小马”运输机

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
专用模型胶水, 专用模型油漆, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 软布, 砂纸, 瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- * 用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴上水贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍而引起意外。



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲



repair
填补












The method to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.

水贴纸的使用方法:

- 一. 把相关的印花从水贴上剪下, 放入40℃左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。

部品图 Parts

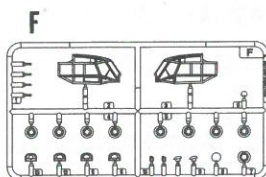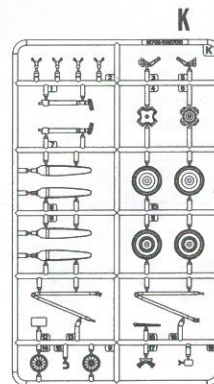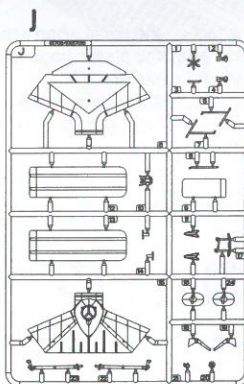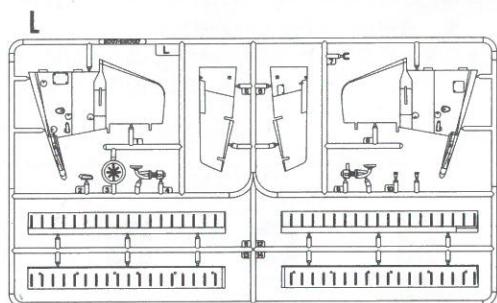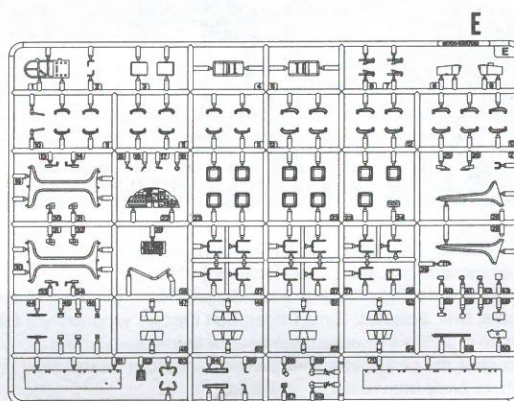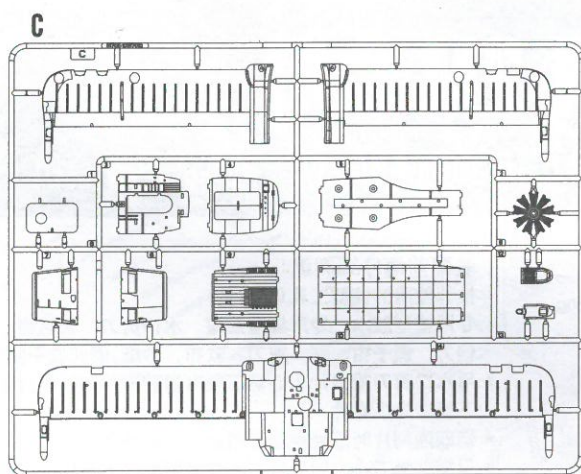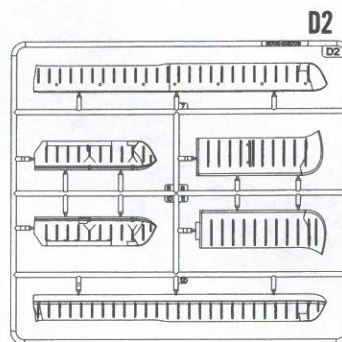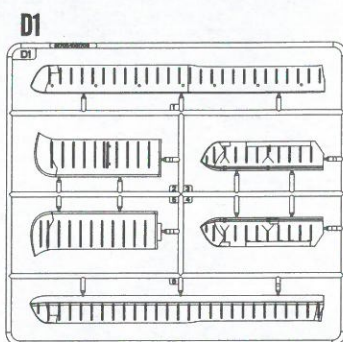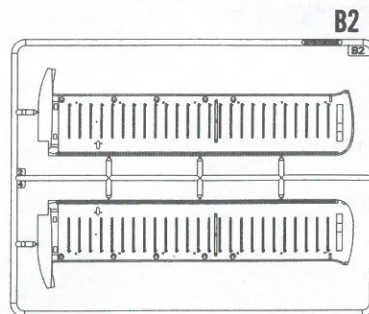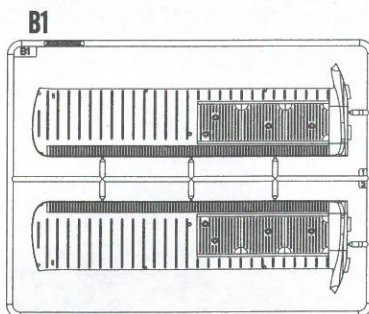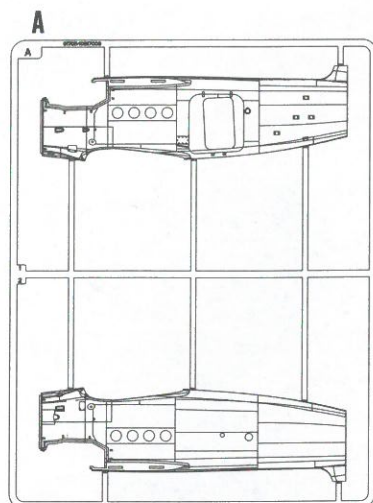

《水贴》
Decal





不用的部件: E57 J1 J2 J3 J4 J9 J11 J12
Unused parts J13 J14 J16 J18 J19 J20
J21 J22 J23 J24 L10

1
STEP










制作两组
Make two

《左侧座椅》
Left seat

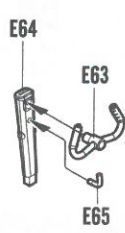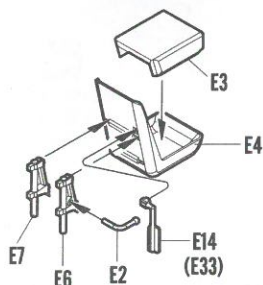


制作两组
Make two


《右侧座椅》
Right seat

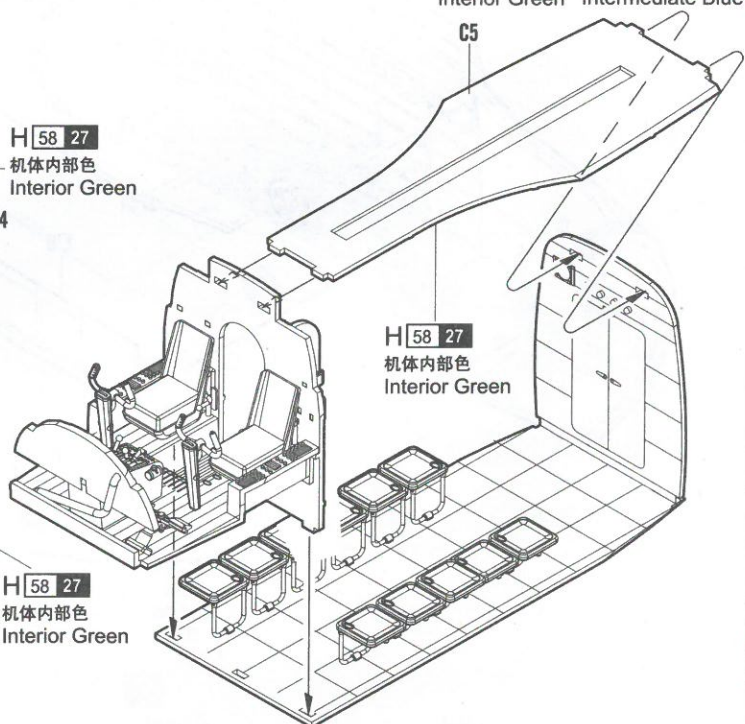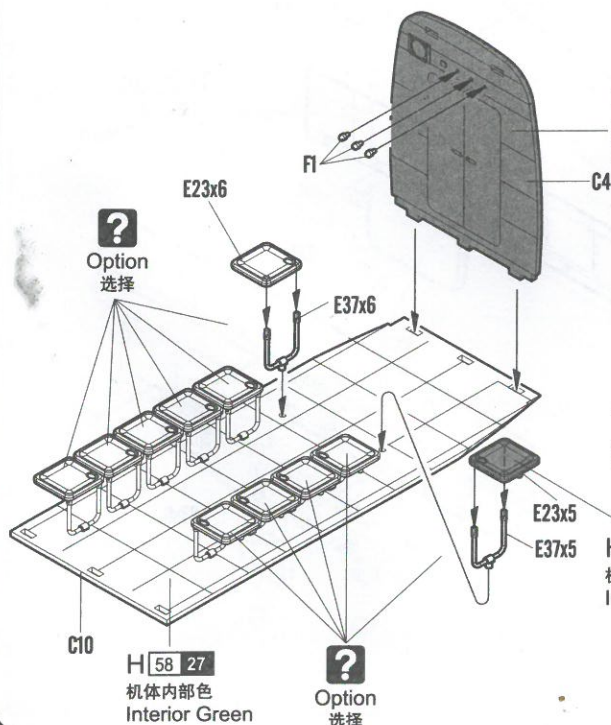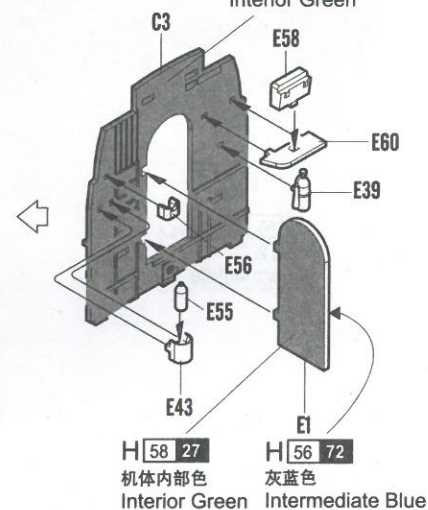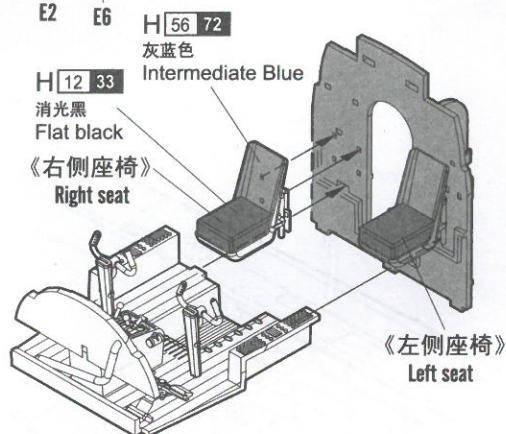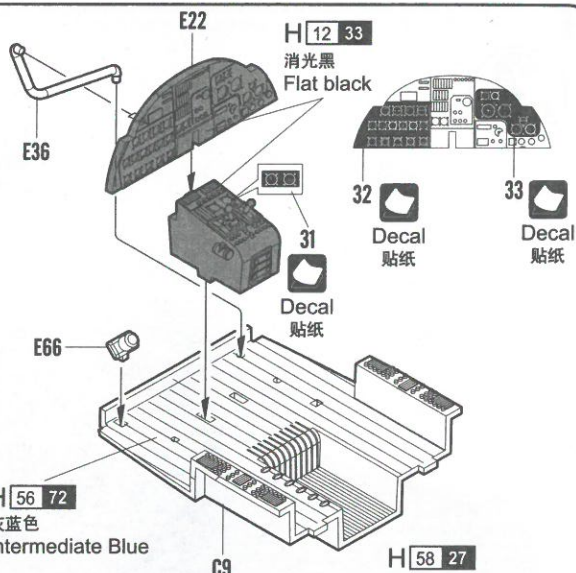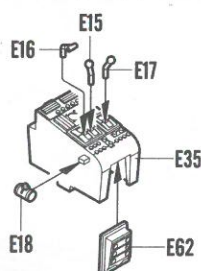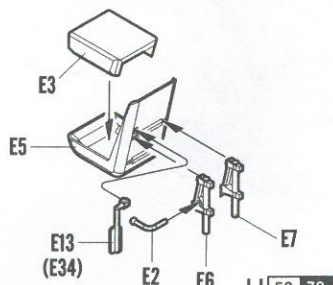

2
STEP

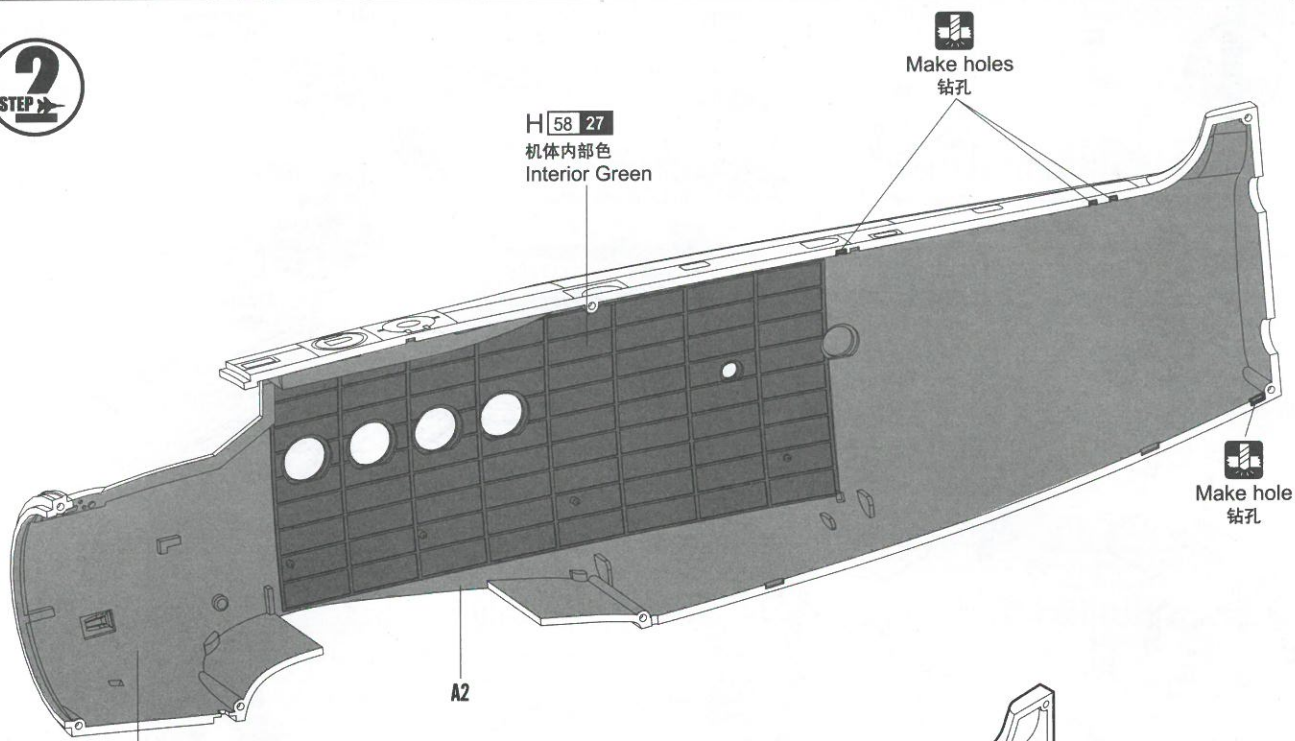

H 56 72
灰蓝色
Intermediate Blue

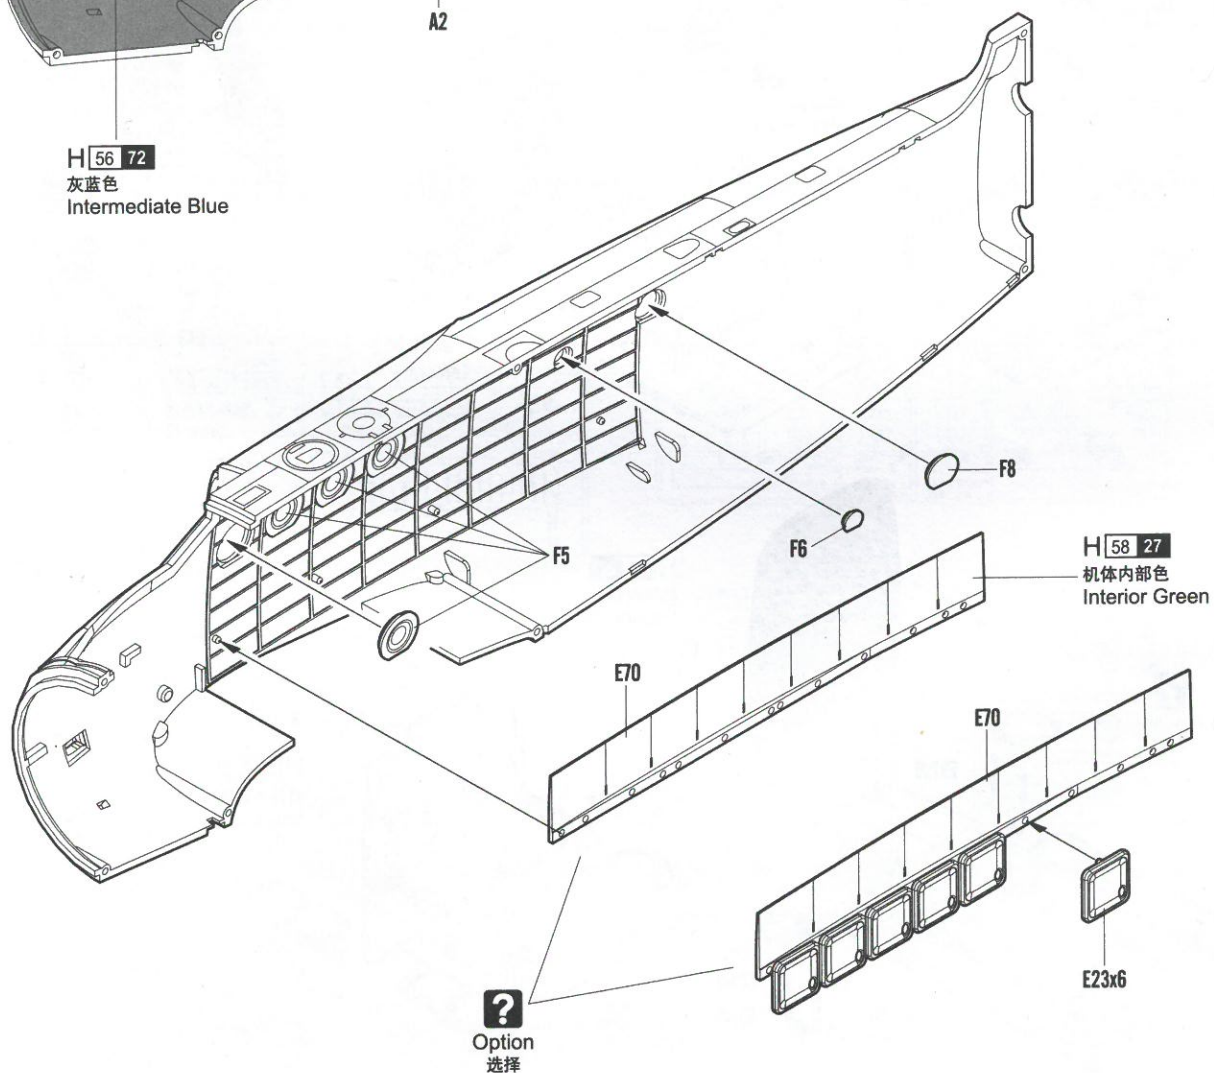


3
STEP



Make holes
钻孔




Make hole
钻孔

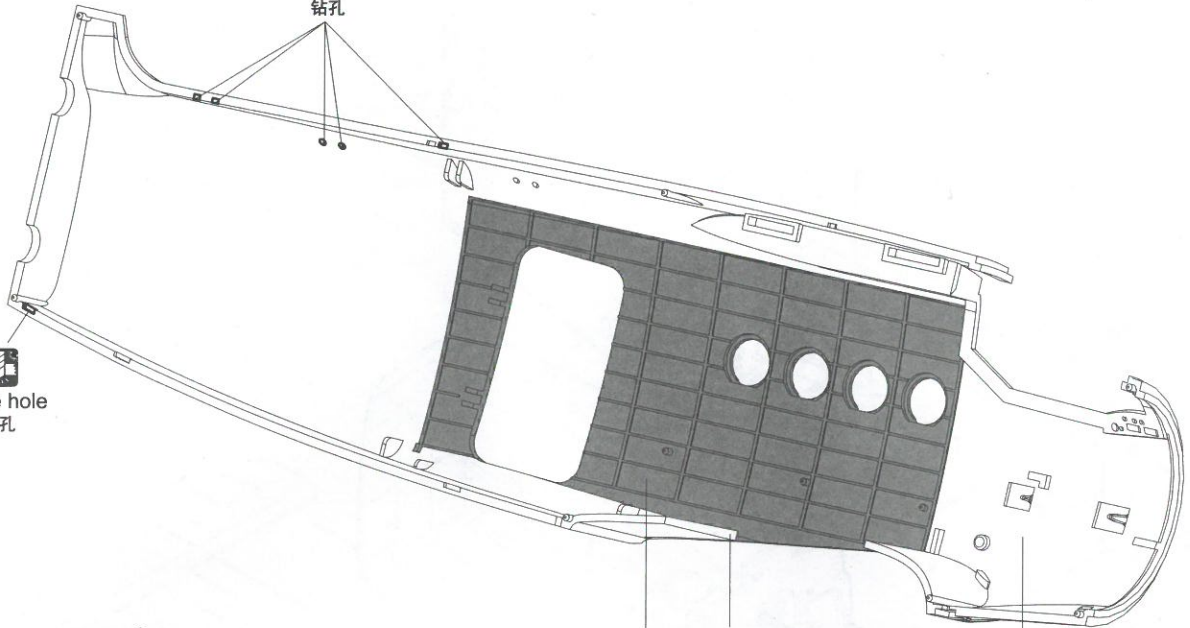


H 58 27
机体内部色
Interior Green

H 56 72
灰蓝色
Intermediate Blue

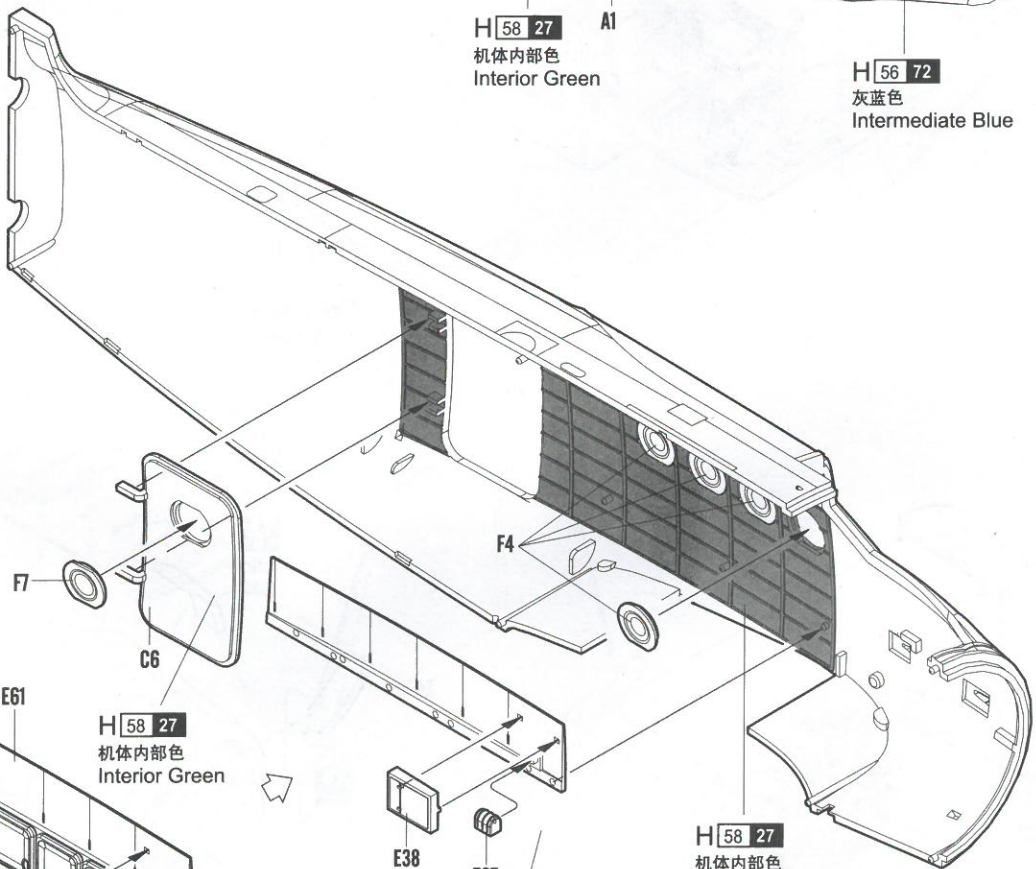


H 58 27
机体内部色
Interior Green

H 58 27
机体内部色
Interior Green

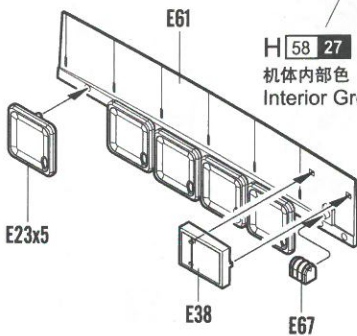


?
Option
选择

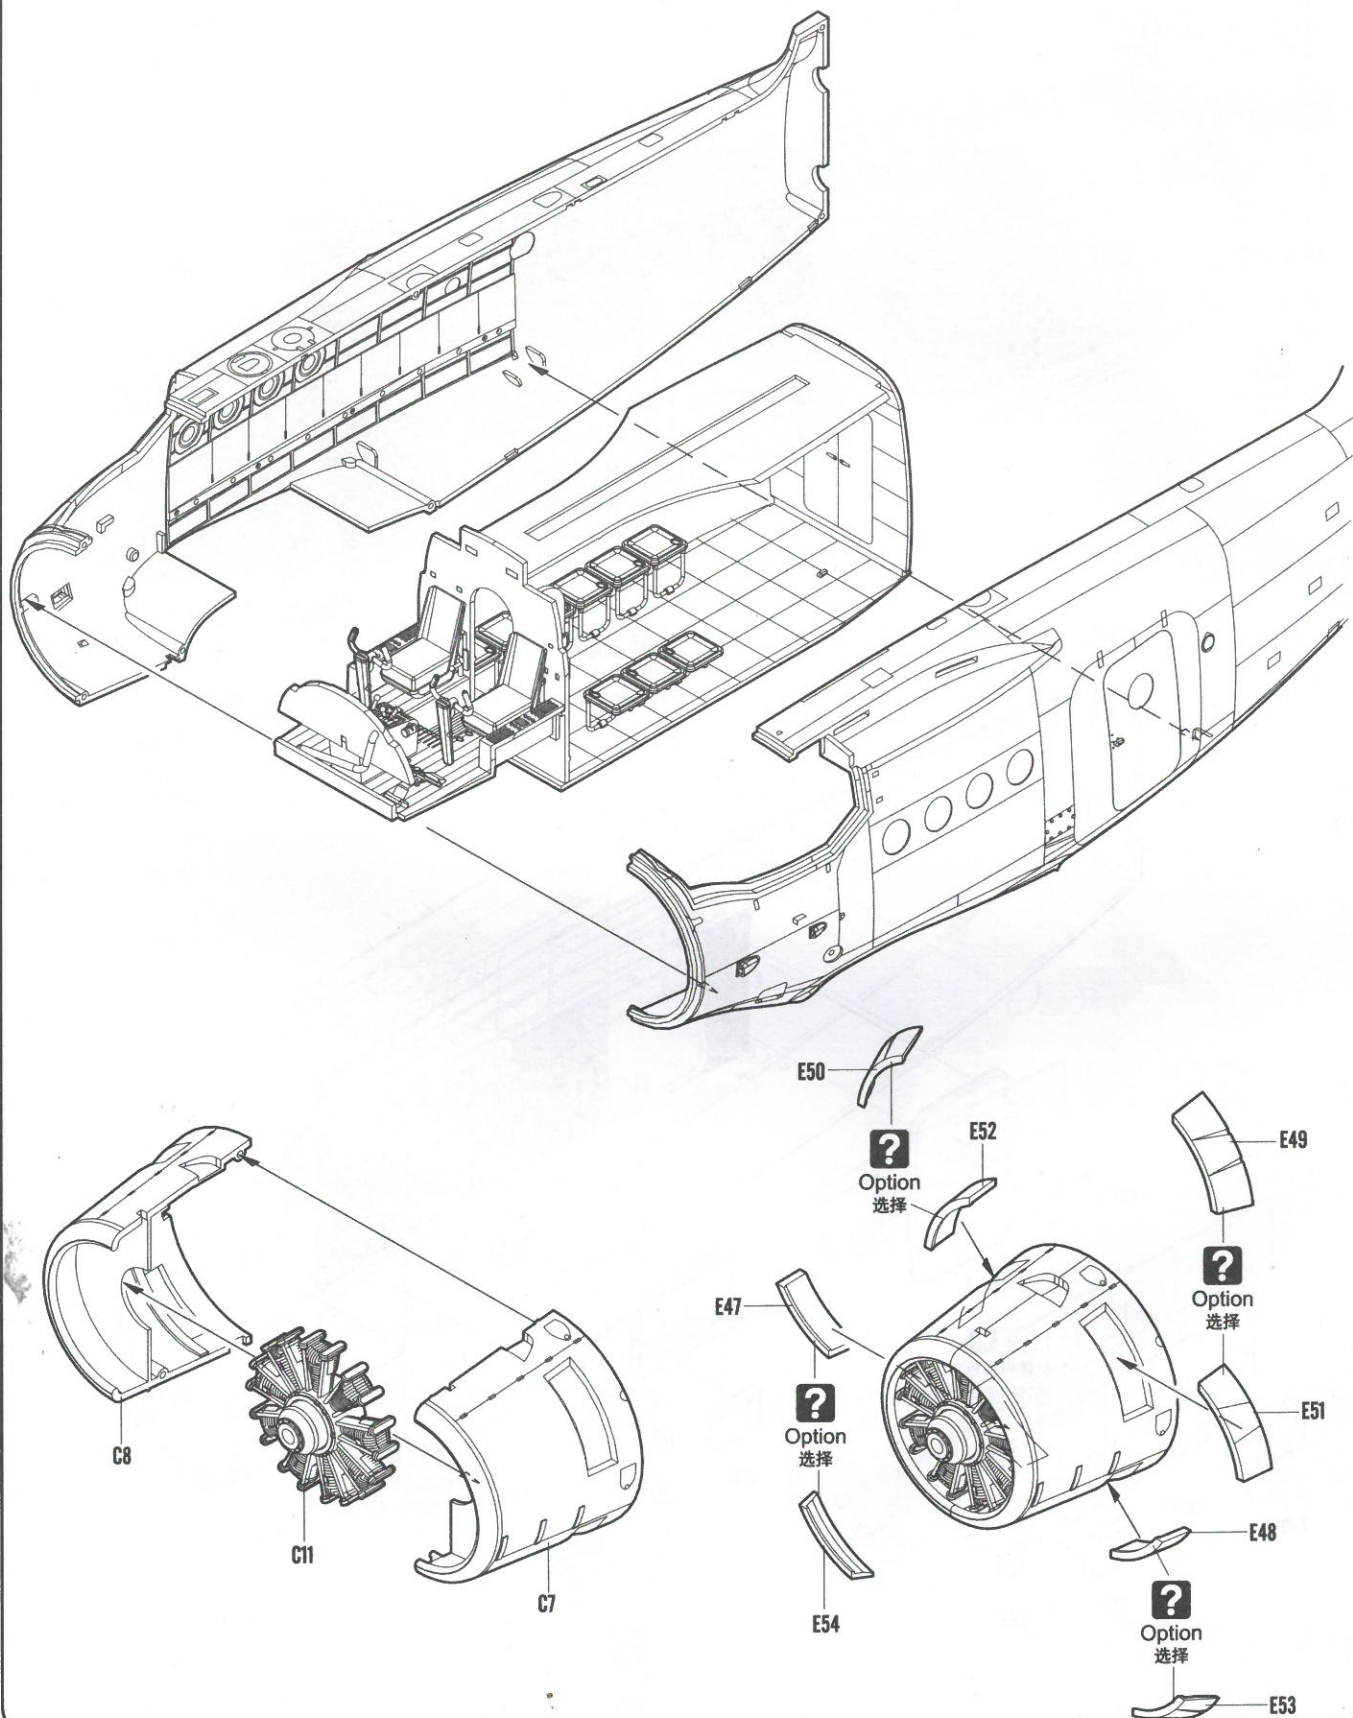


5
STEP


《左侧水平尾翼》
Left horizontal stabilizer

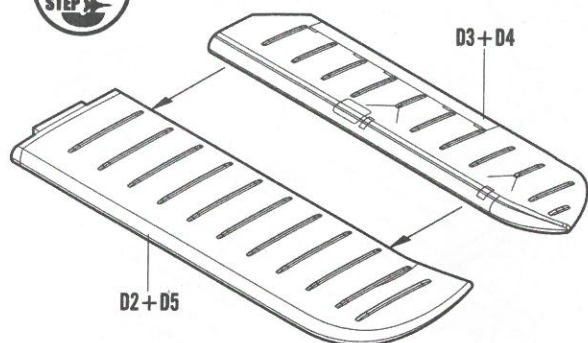




《右侧水平尾翼》
Right horizontal stabilizer


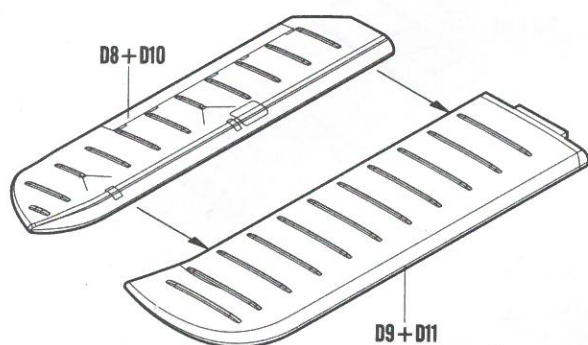


《右侧水平尾翼》
Right horizontal stabilizer

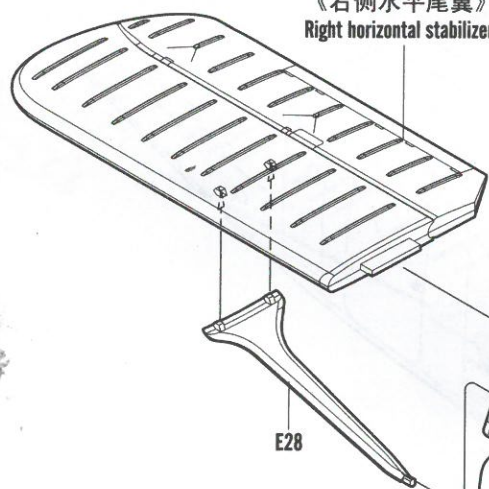


《左侧水平尾翼》
Left horizontal stabilizer

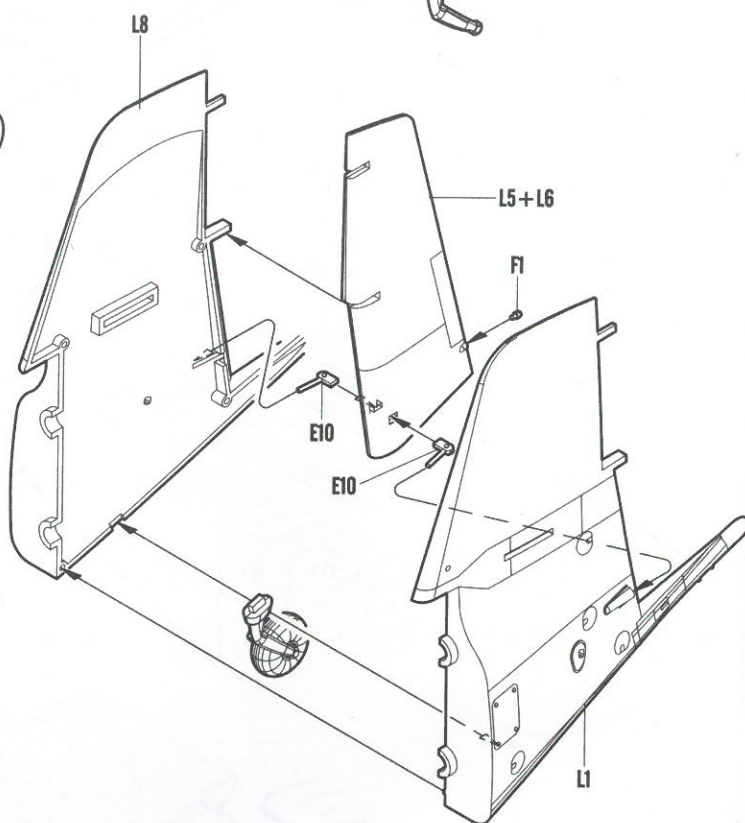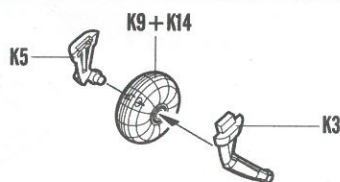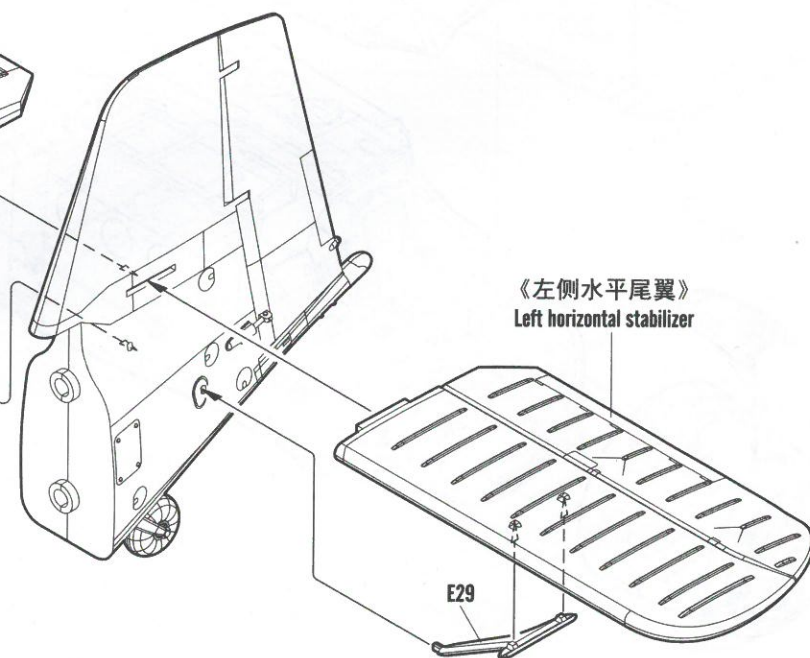


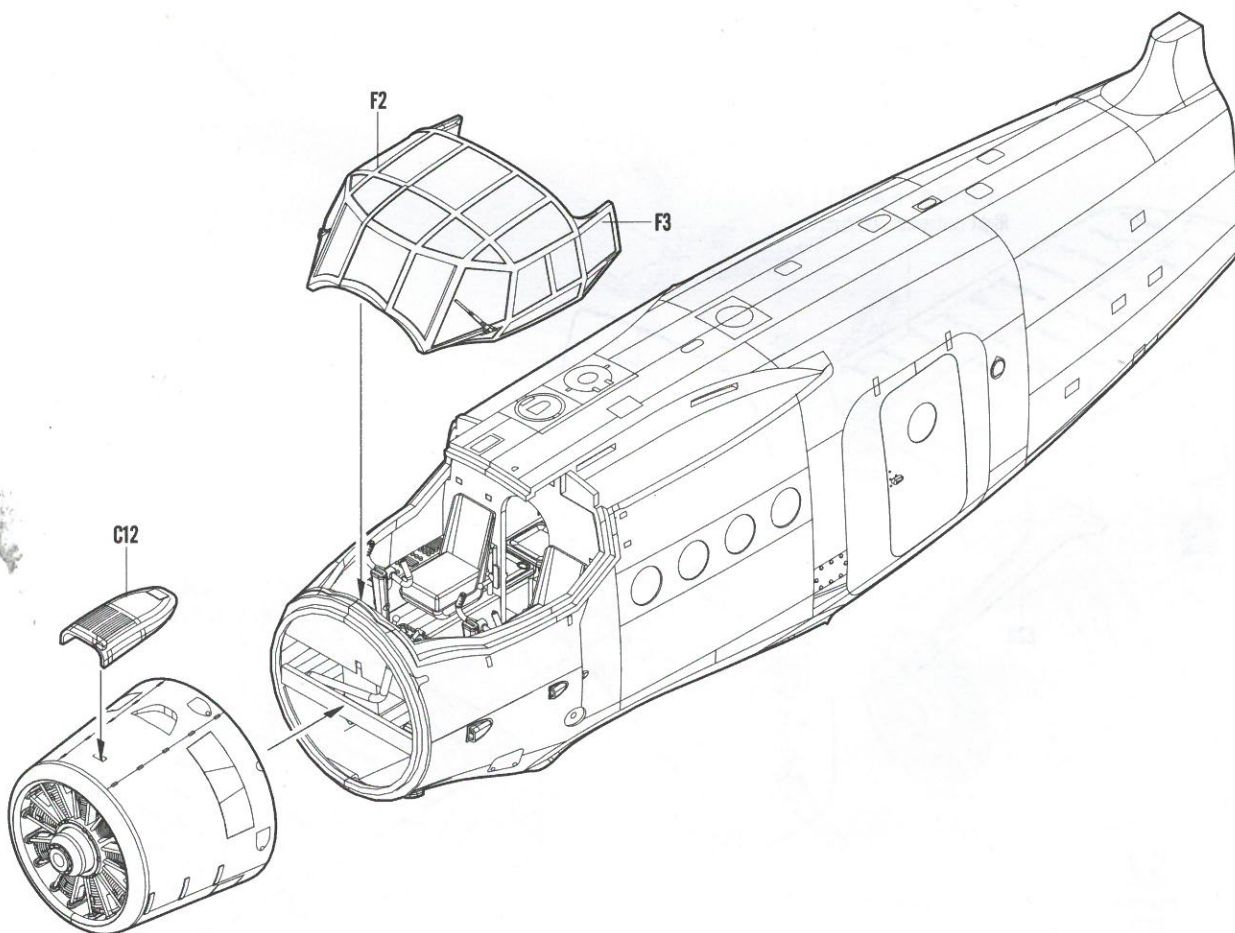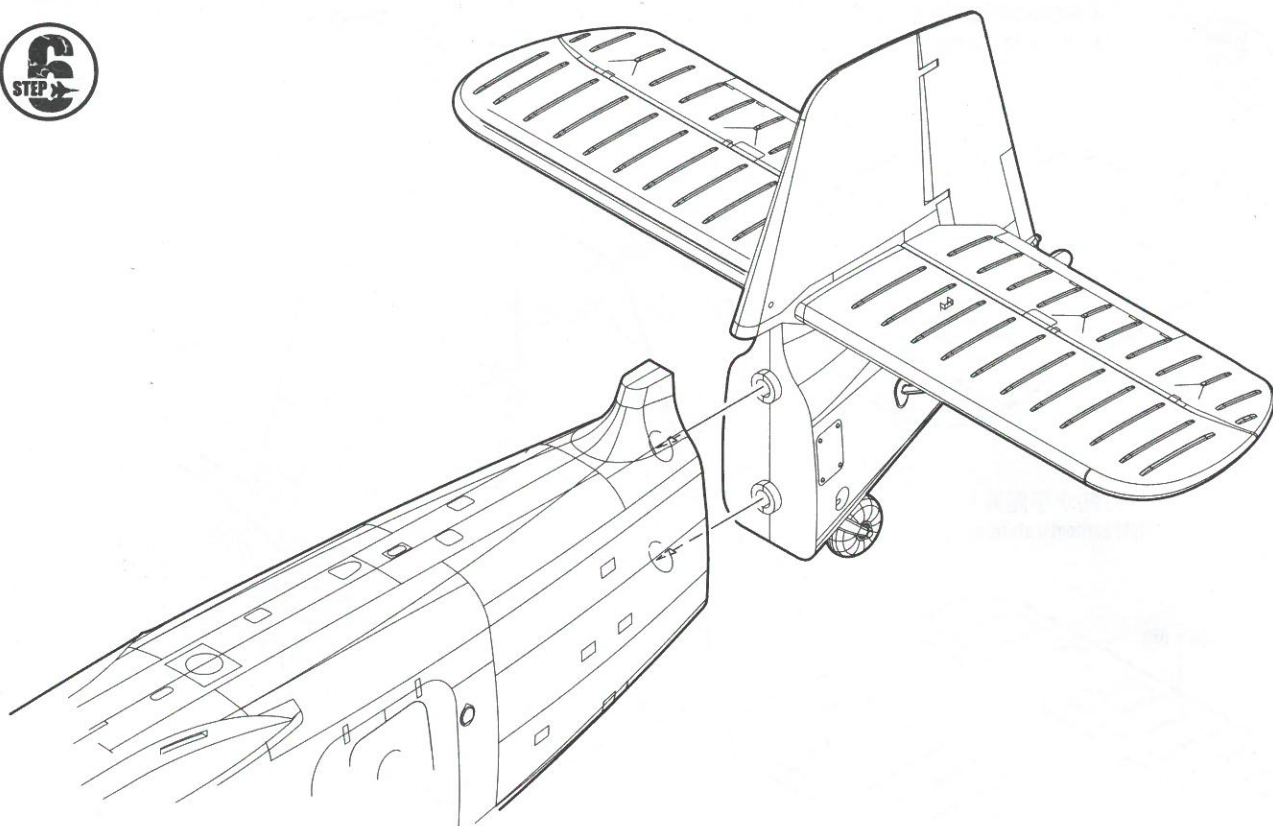

7
STEP


《下部机翼》
Lower wing

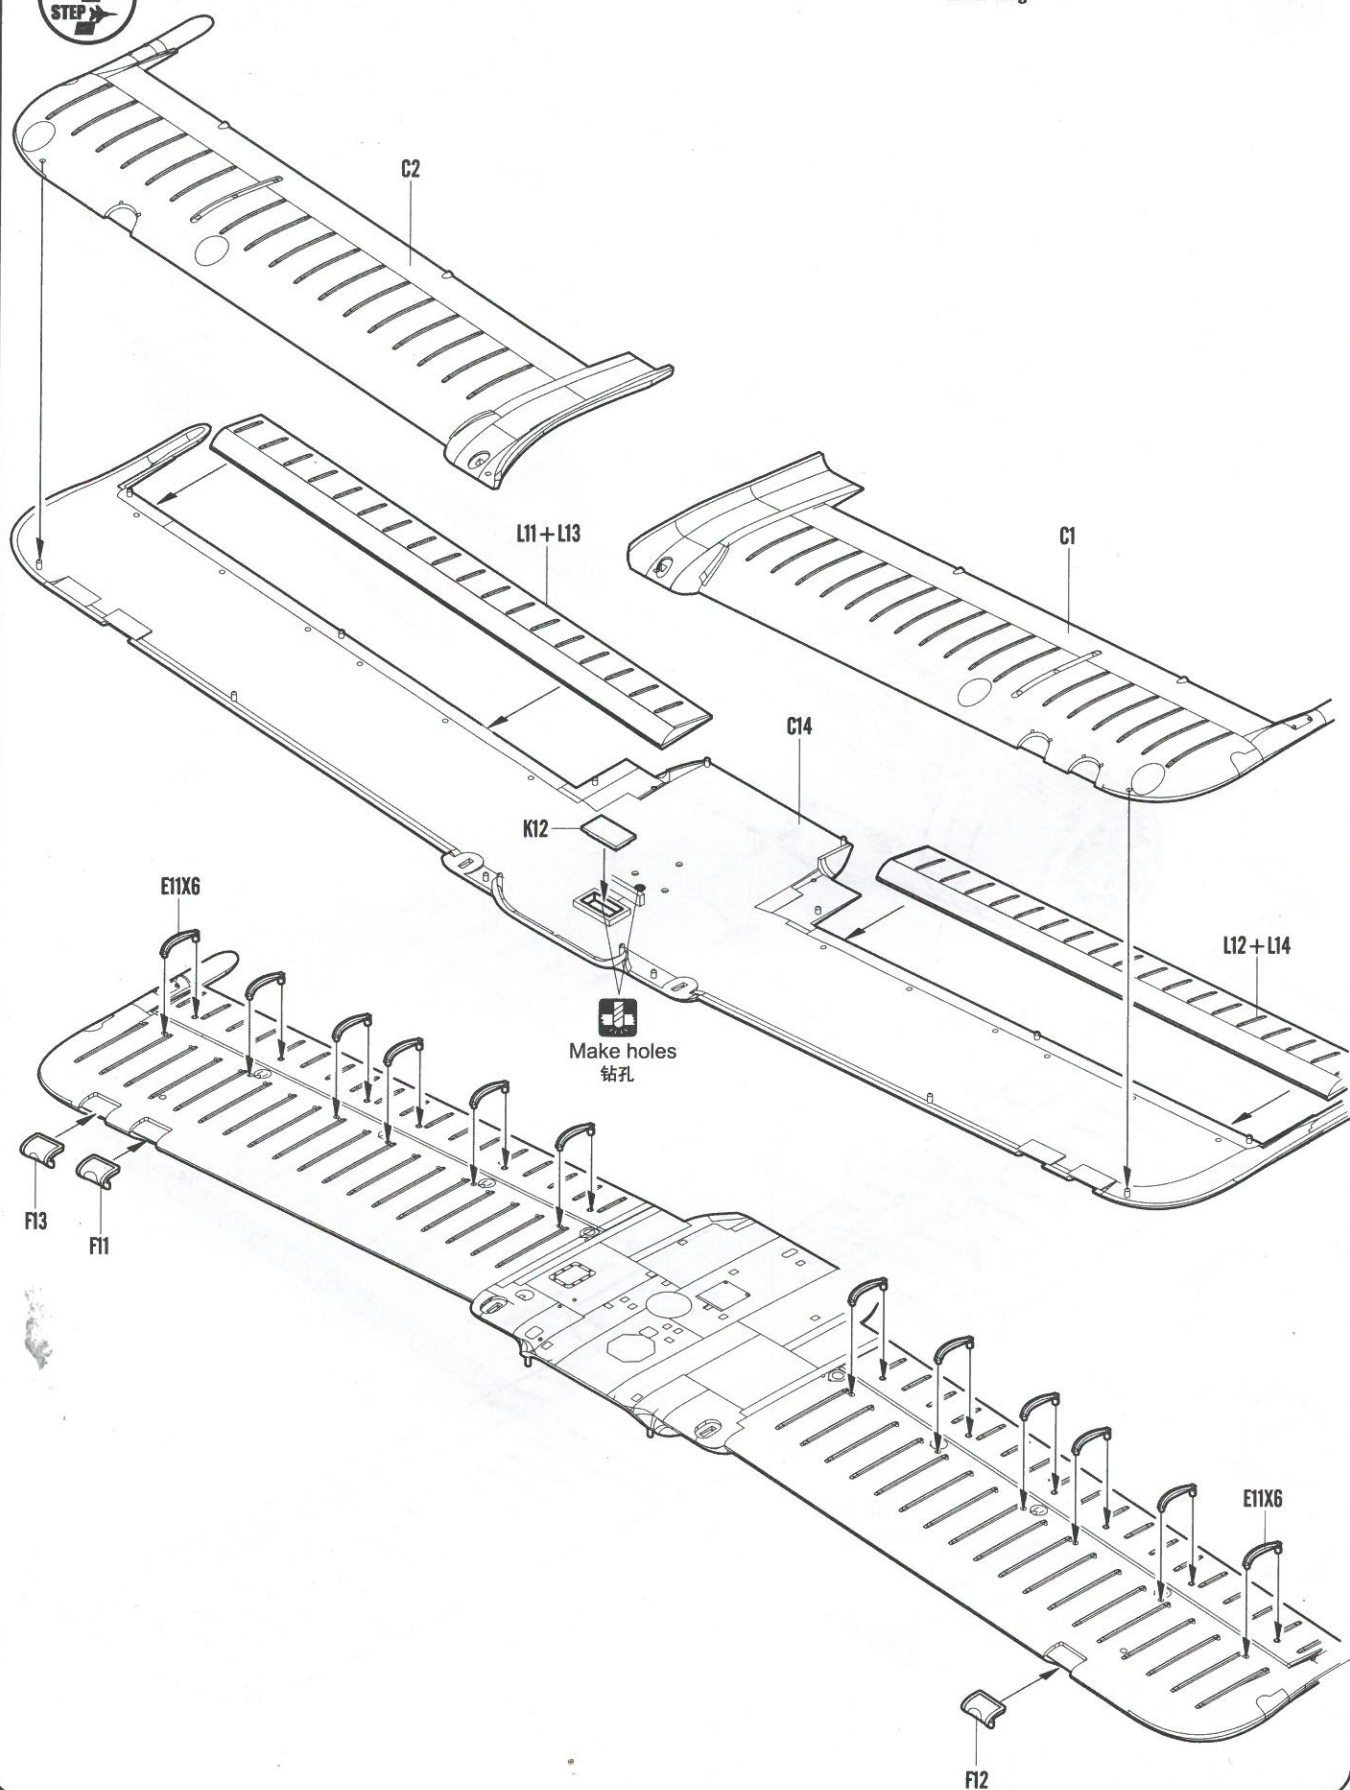

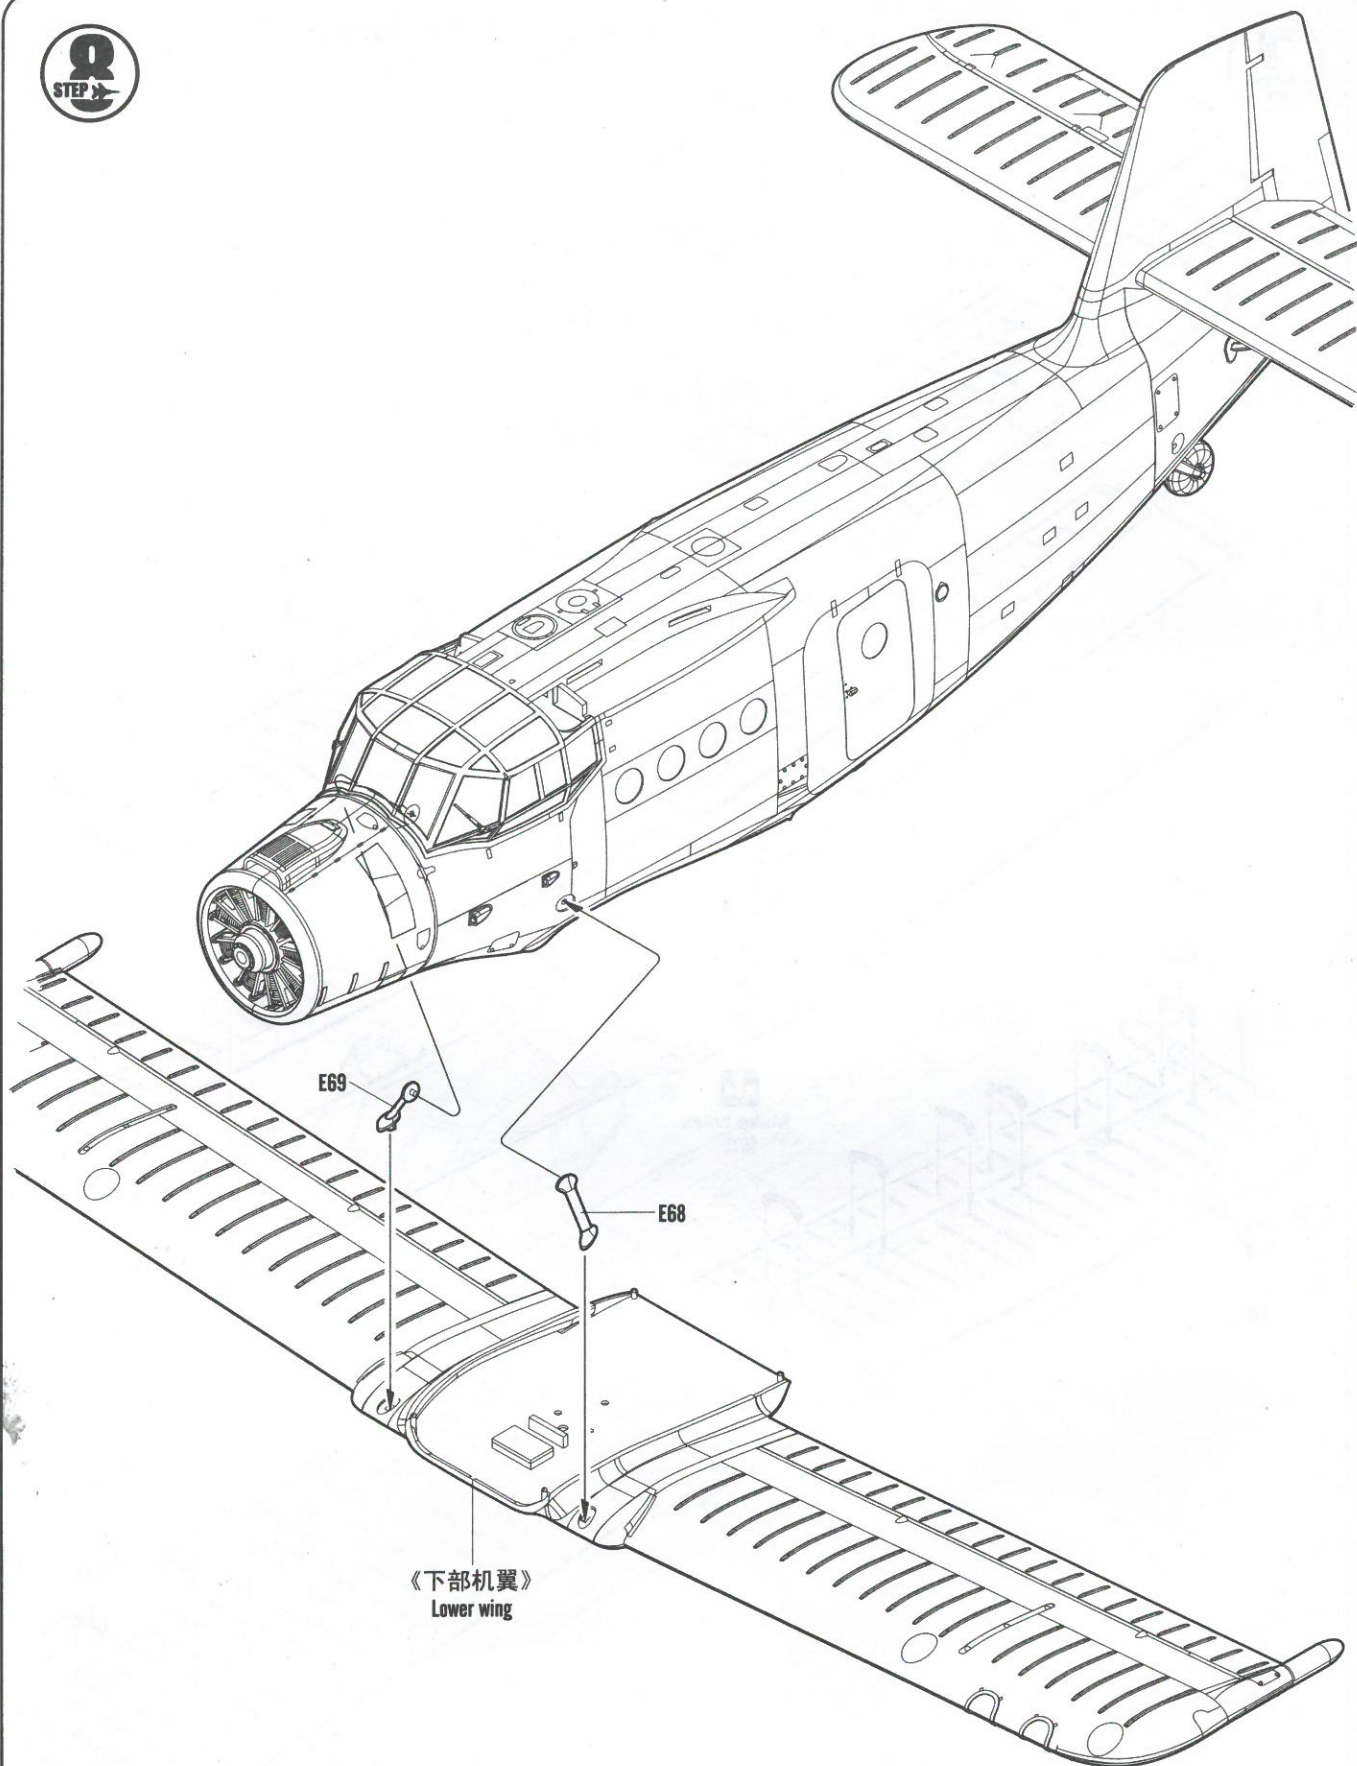






《左侧机翼》
Left wing

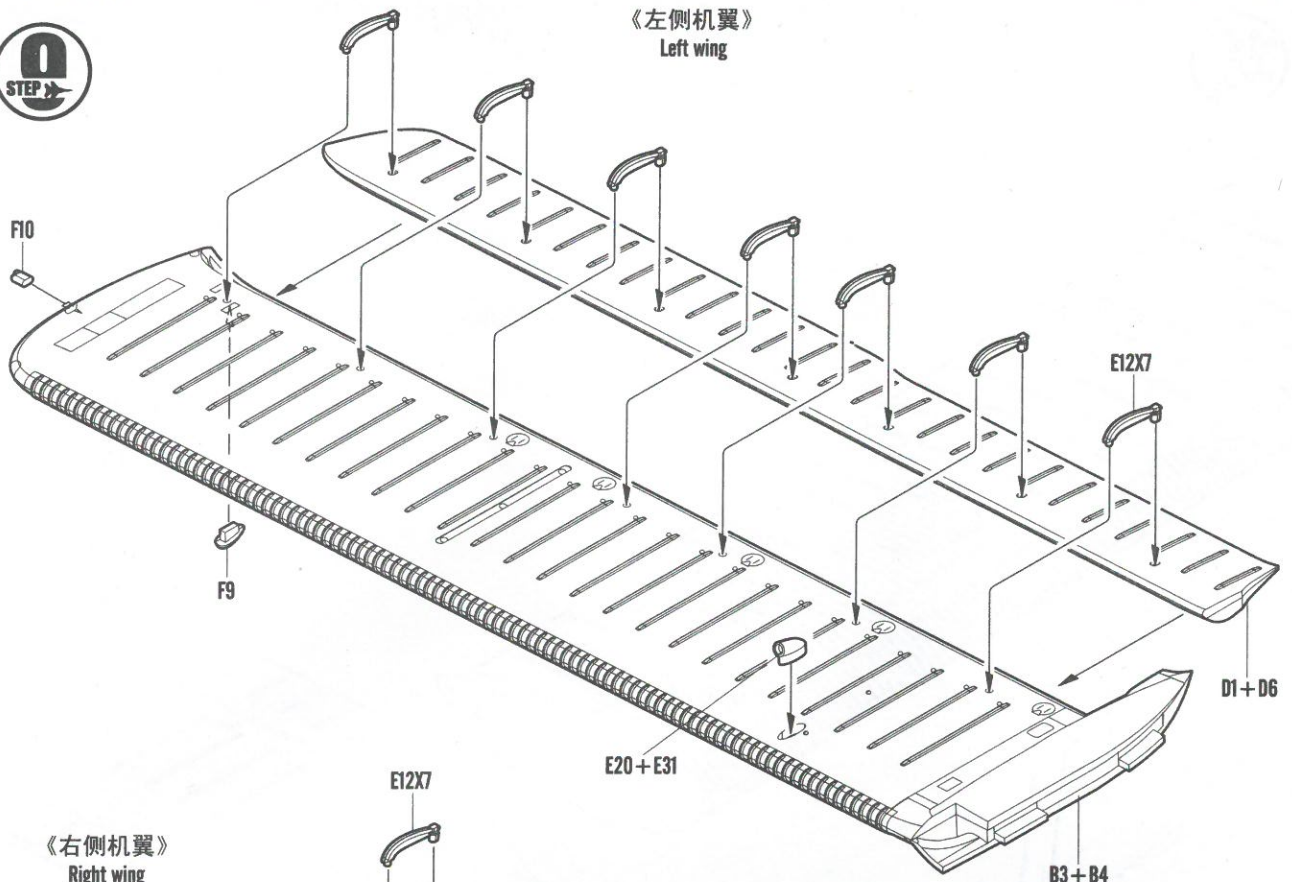

《右侧机翼》
Right wing

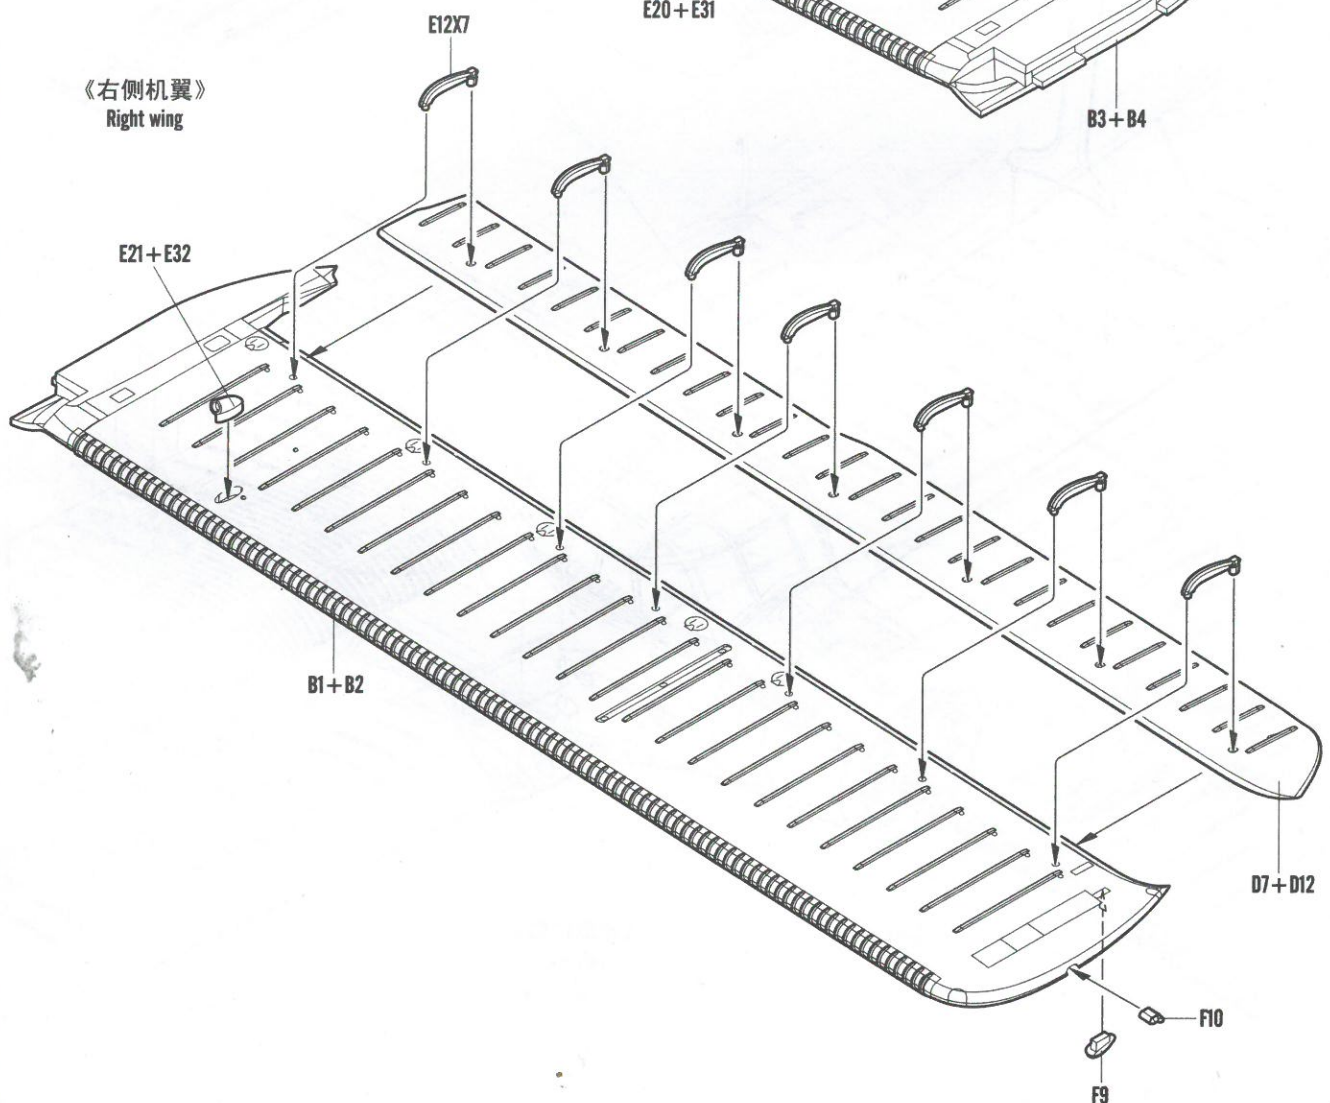


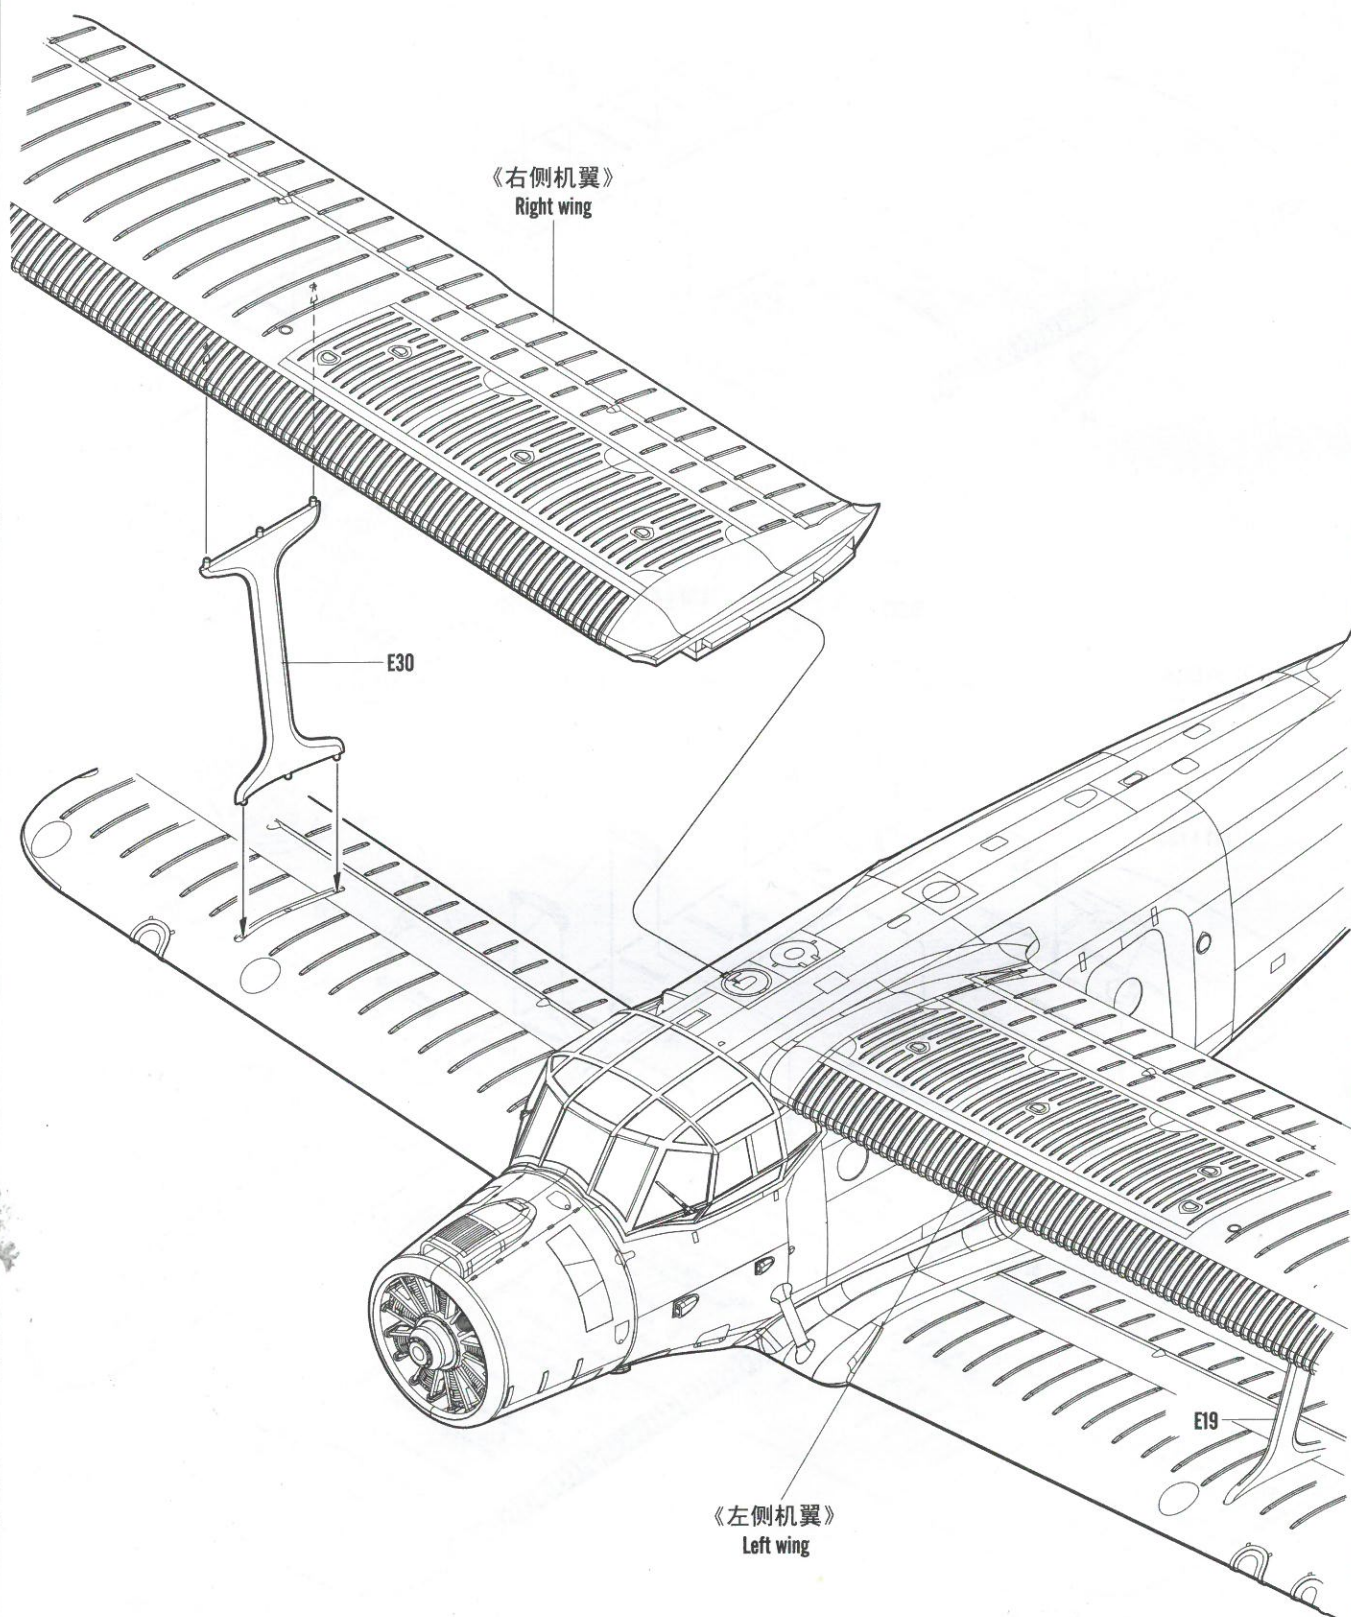

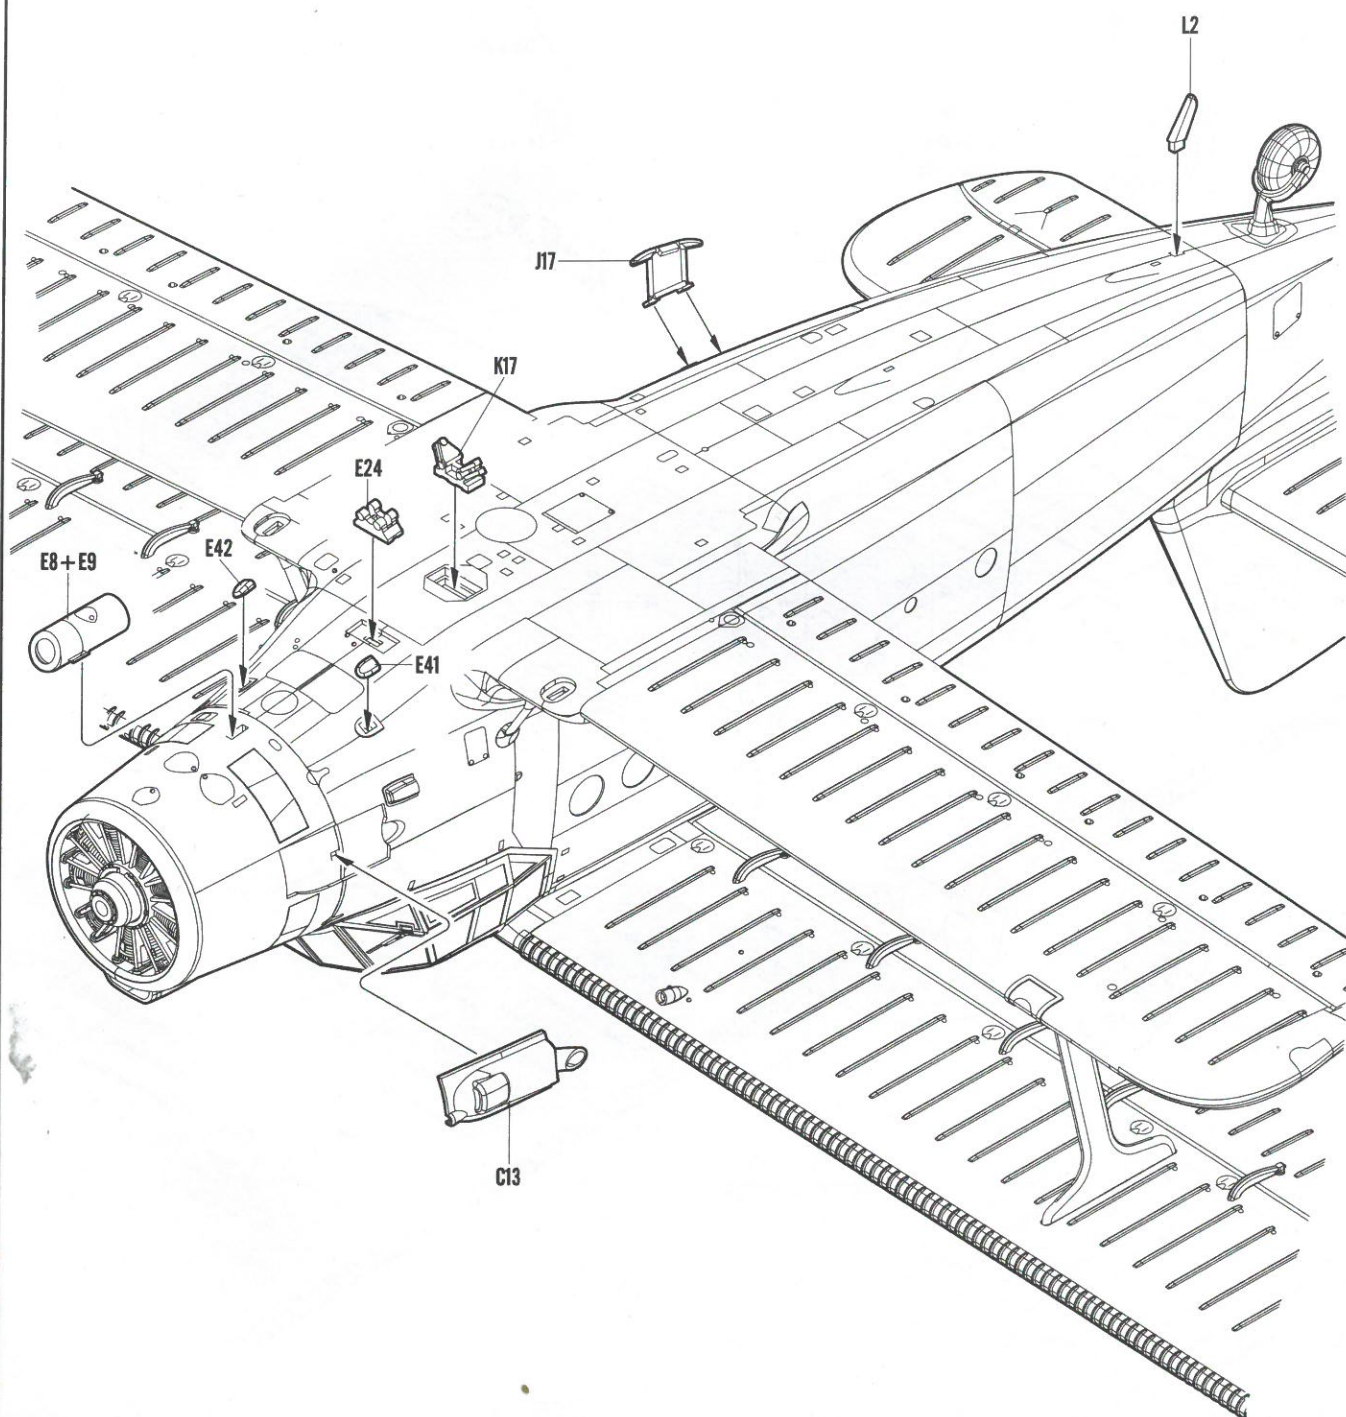


12
STEP

《左侧起落架》
Left undercarriage

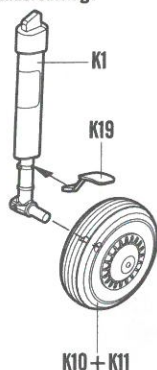

《右侧起落架》
Right undercarriage

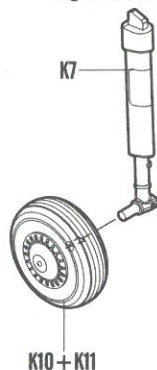

《左侧起落架》
Left undercarriage




对侧K18
Opposite K18
K13


?
Option
选择



L3

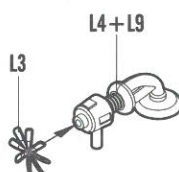




《右侧起落架》
Right undercarriage

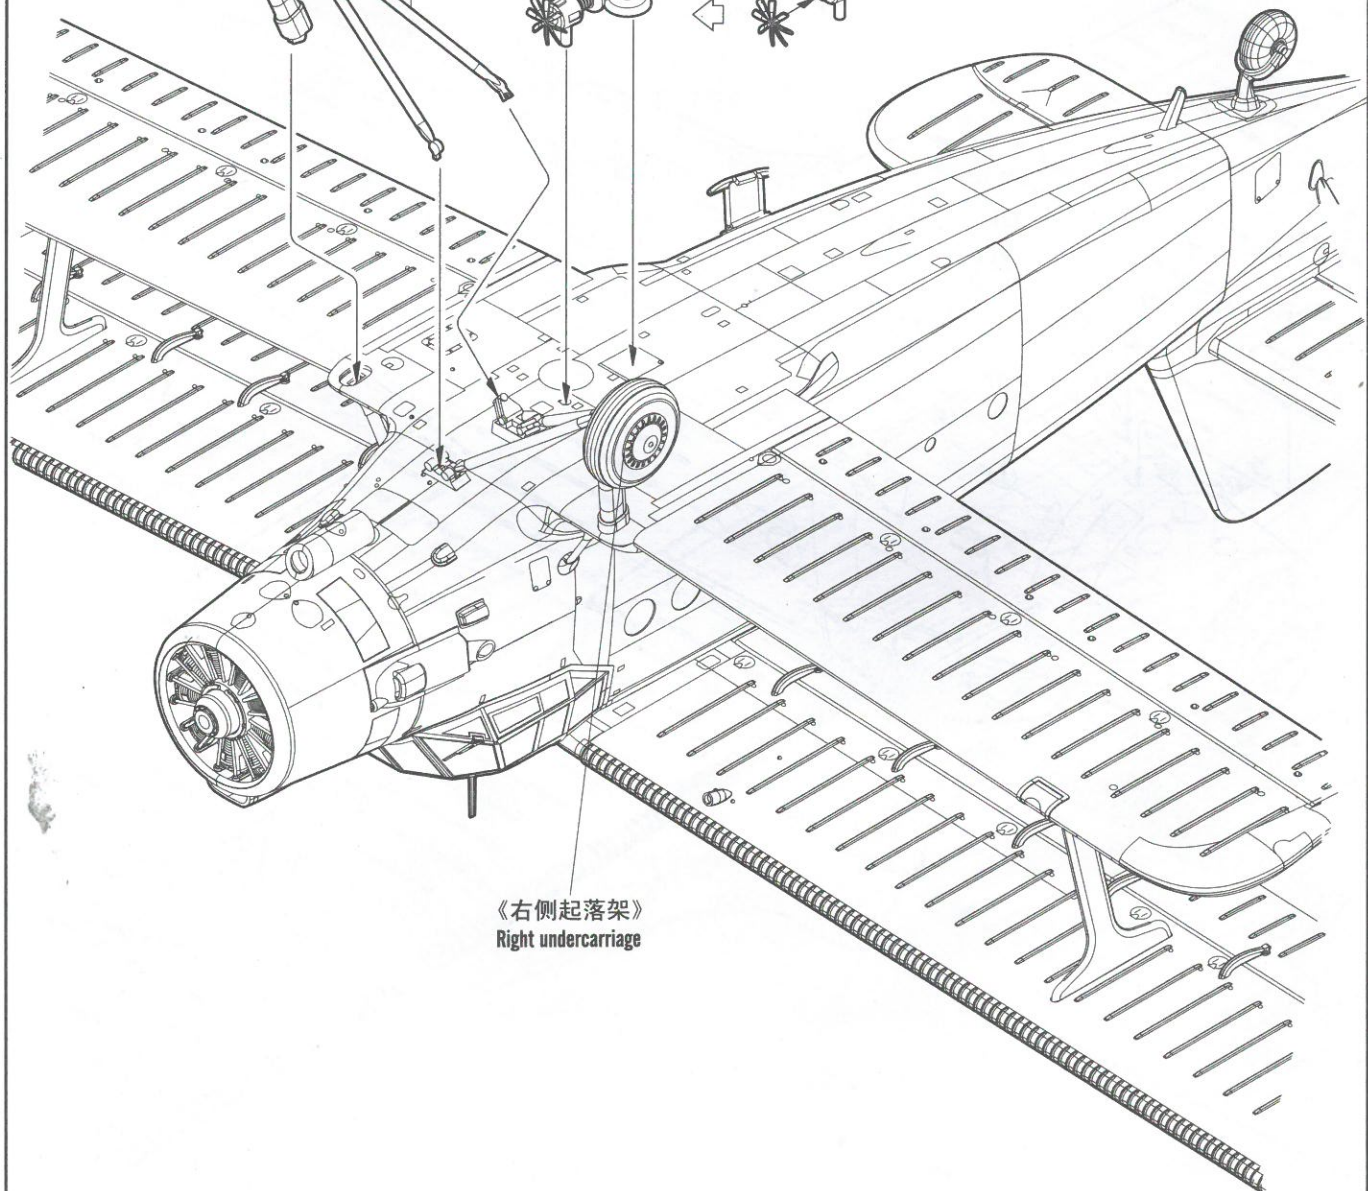

12
STEP

《左侧起落架》
Left undercarriage


《右侧起落架》
Right undercarriage

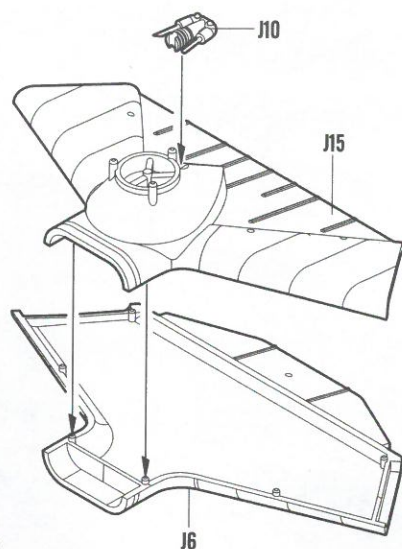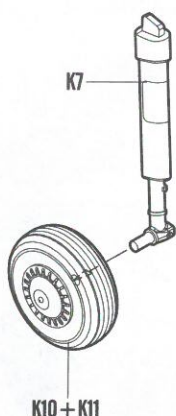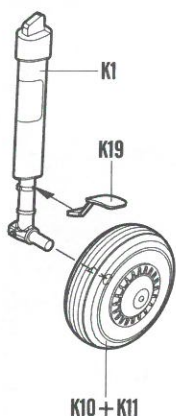

《左侧起落架》
Left undercarriage

对侧K18
Opposite K18
K13




?
Option
选择

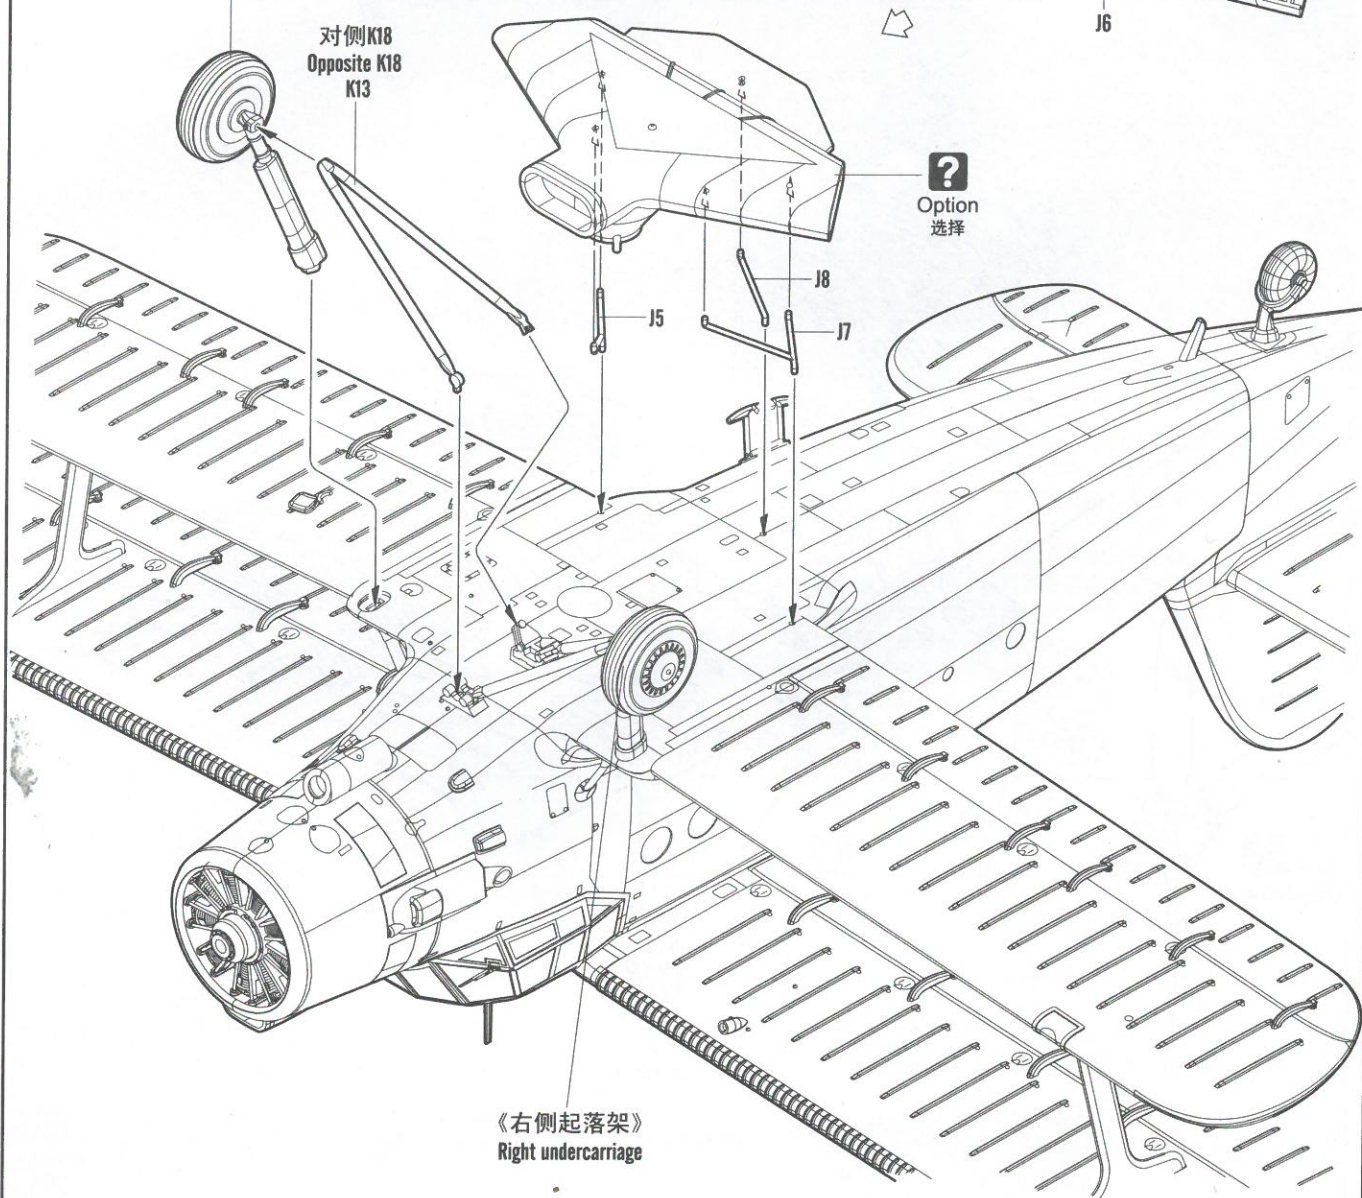

《右侧起落架》
Right undercarriage

1A
STEP

《螺旋桨》
Propeller

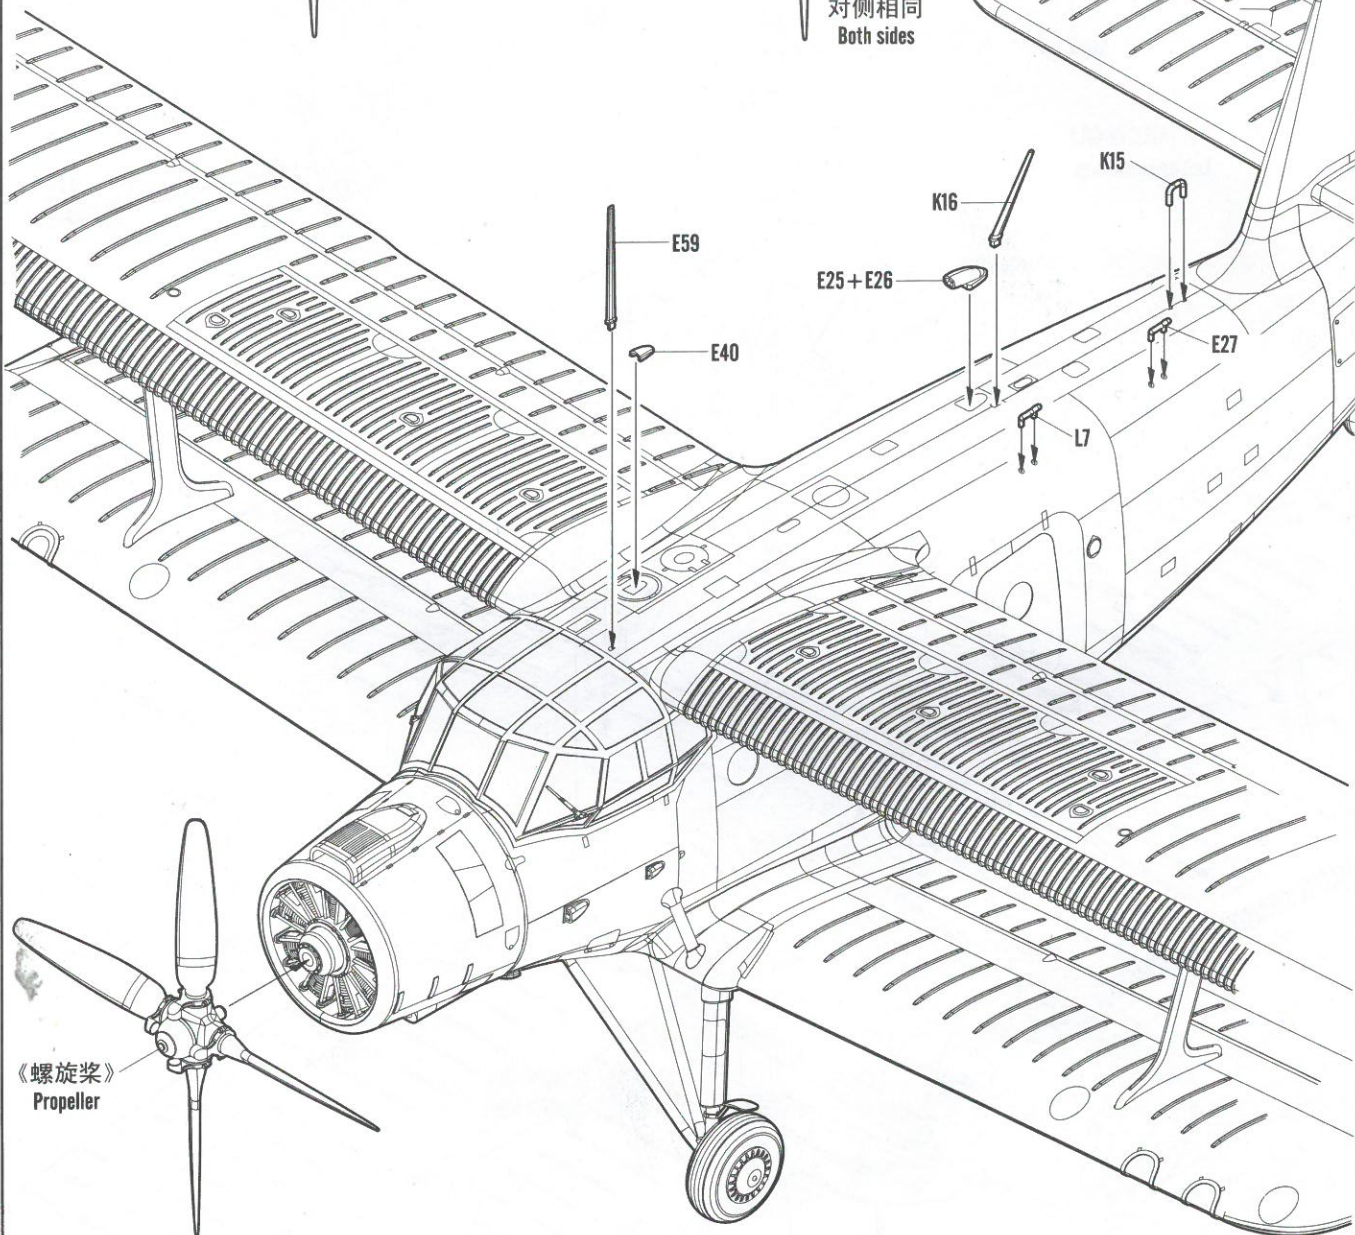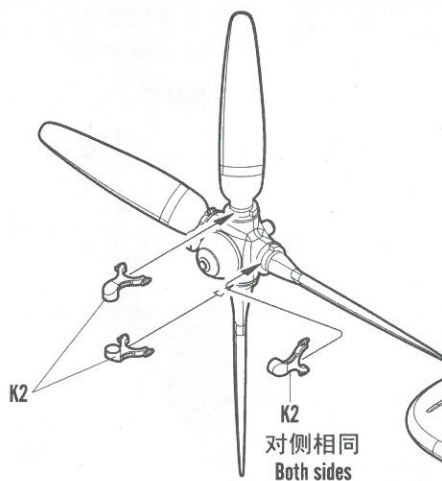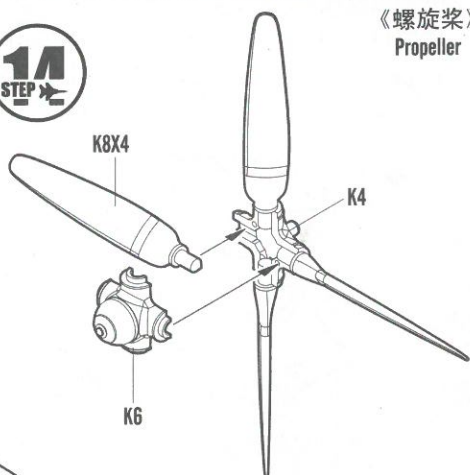

《螺旋桨》
Propeller