


Landkreuzer P1000 Ratte

Proto Type

& Panzer VIII Maus

2015/3001

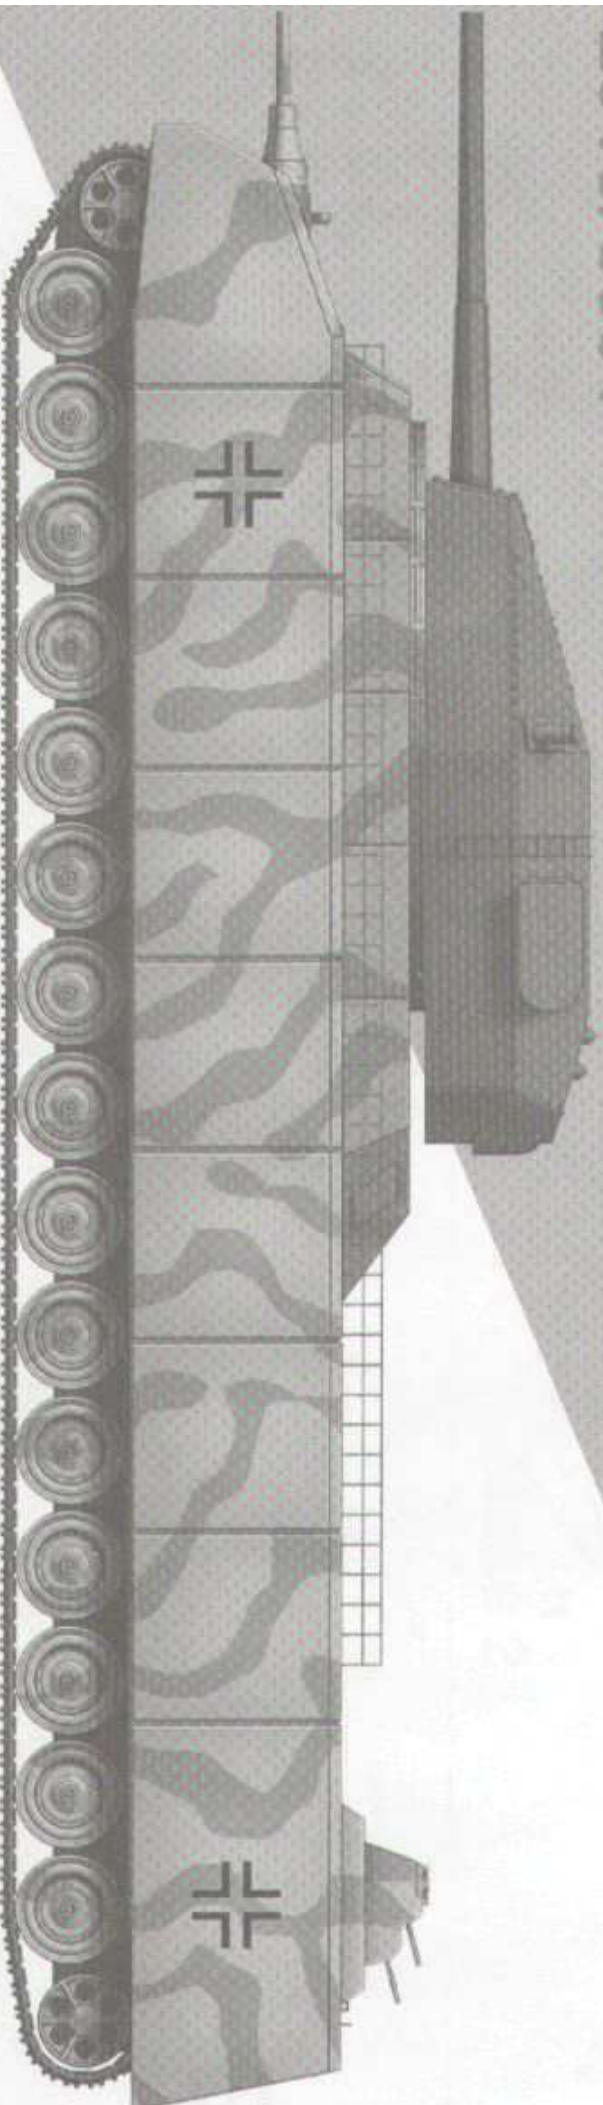

The Landkreuzer P. 1000 Ratte (lit.: Land Cruiser P. 1000 "Rat") was a design for a super-heavy tank for use by Nazi Germany during World War II. It was designed in 1942 by Krupp with the approval of Adolf Hitler, but the project was canceled by Albert Speer in early 1943 and no tank was ever completed. At 1,000 metric tons, the P-1000 would have been over five times as heavy as the Panzer VIII Maus, the heaviest tank ever built.



02-3001

READ BEFORE ASSEMBLY

CAUTION

- Read carefully and fully understand the instructions before commencing assembly. A supervising adult should also read the instructions if a child assembles the model.
- When assembling this kit, tools including knives used. Extra care should be taken to avoid personal injury.
- Keep out of reach of small children. Children must not be allowed to suck any part, or pull vinyl bag over their heads.




Do Not Cement



Instant Glue for Metal

APPLYING DECALS


1. Clean the model surface with a wet cloth.
2. Cut out each decal design from sheet, and dip it in tepid water for 15-20 sec.
3. Hold the backing sheet edge and slide decal onto the model.
4. Move decal into position by wetting decal with finger.
5. Press decal gently down with a soft cloth until excess water and air bubbles are gone.

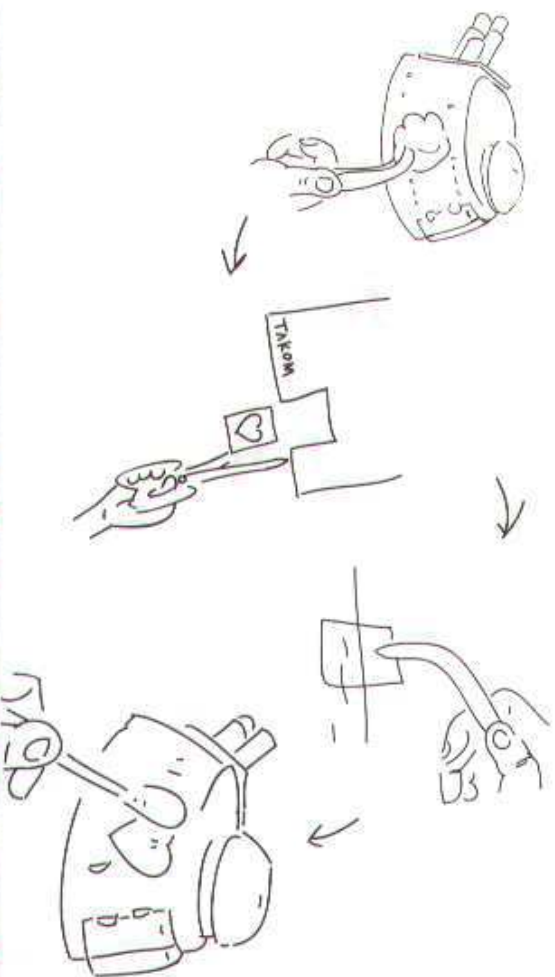

PAINTS REQUIRED

Color info and profiles by Mig Jimenez


REMOVING PE

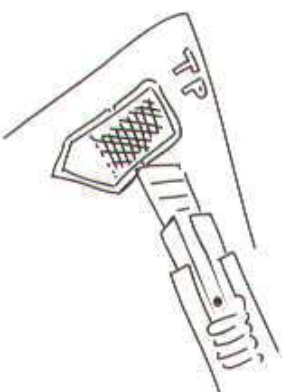

Be careful not to hurt when removing PE parts.




Secure using instant glue (not included).

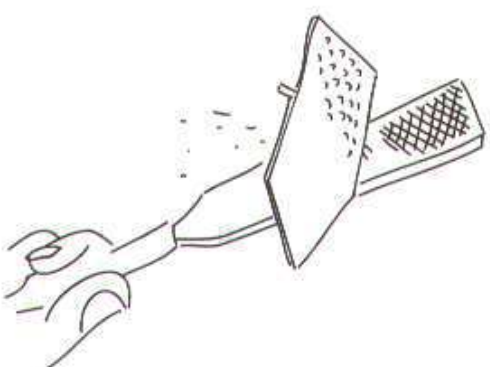


Finish using file.


PARTS

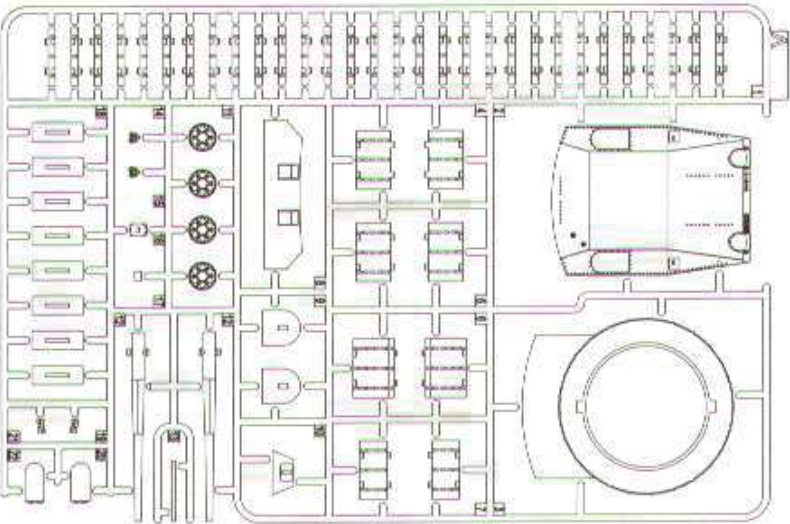

00-00090A

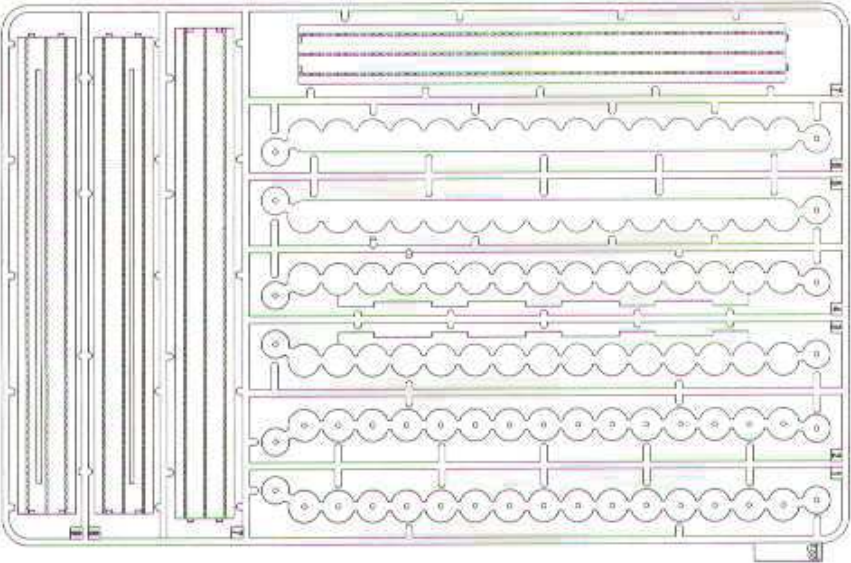


00-00091B

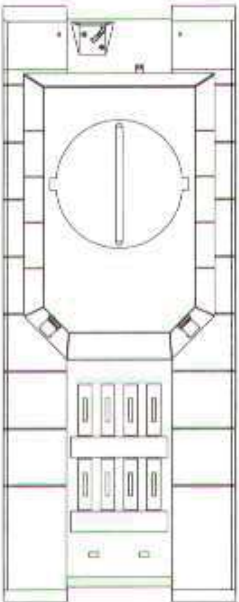


00-00089A

Upper Hull

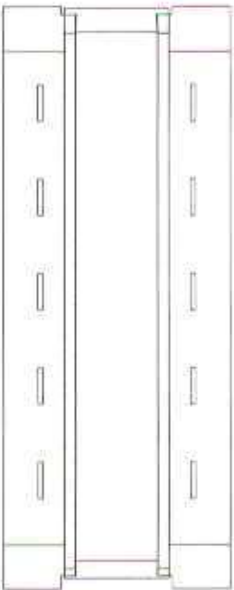


00-00089B

Lower Hull

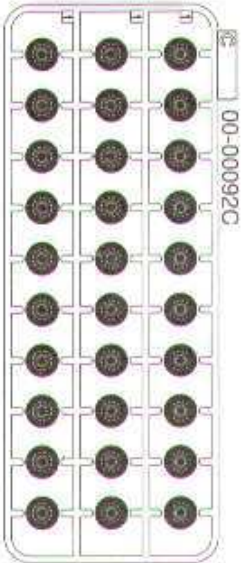


00-00092C

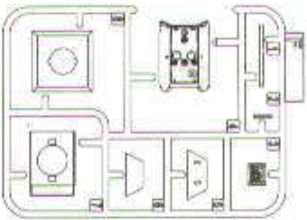


00-00092F

x2

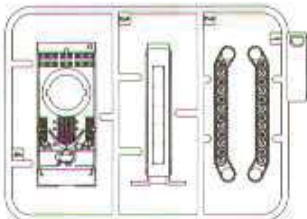

00-00092D

x2

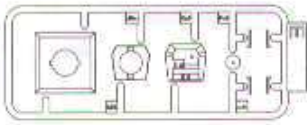

00-00092E

x4





PE 05-3001



Decal
04-3001


1

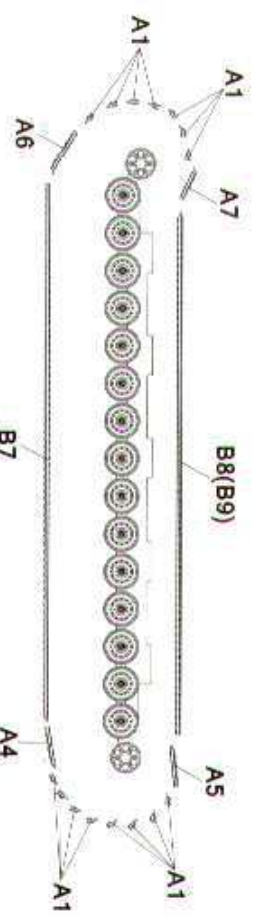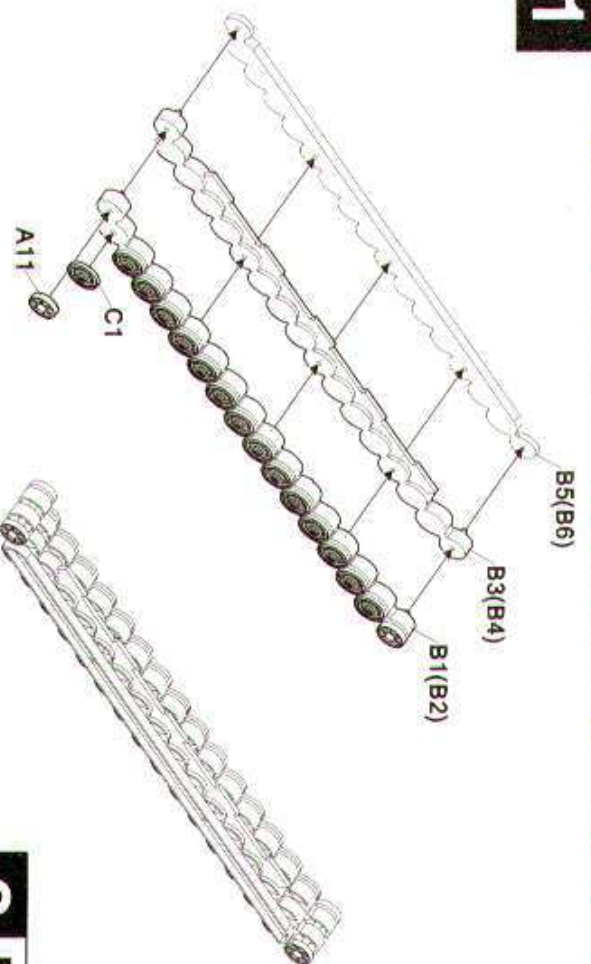



Make 2

2


B1+B3+B5+B8=Left Suspension B2+B4+B6+B9=Right Suspension

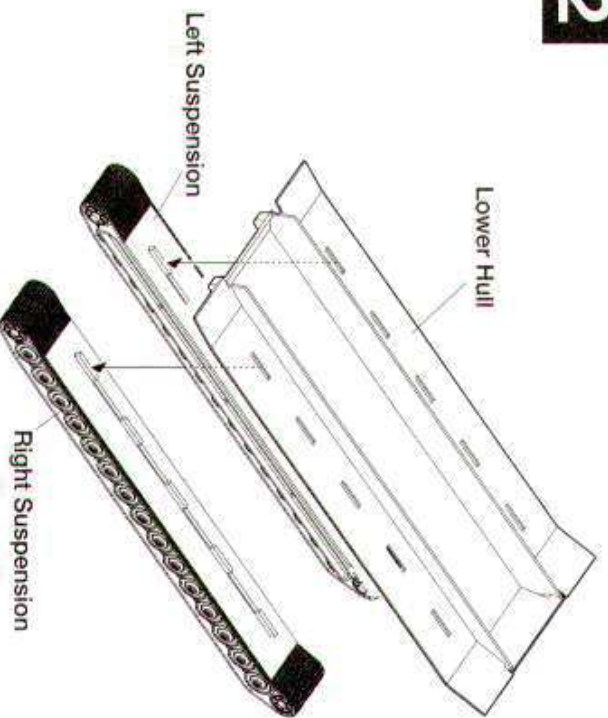


3 Make 2

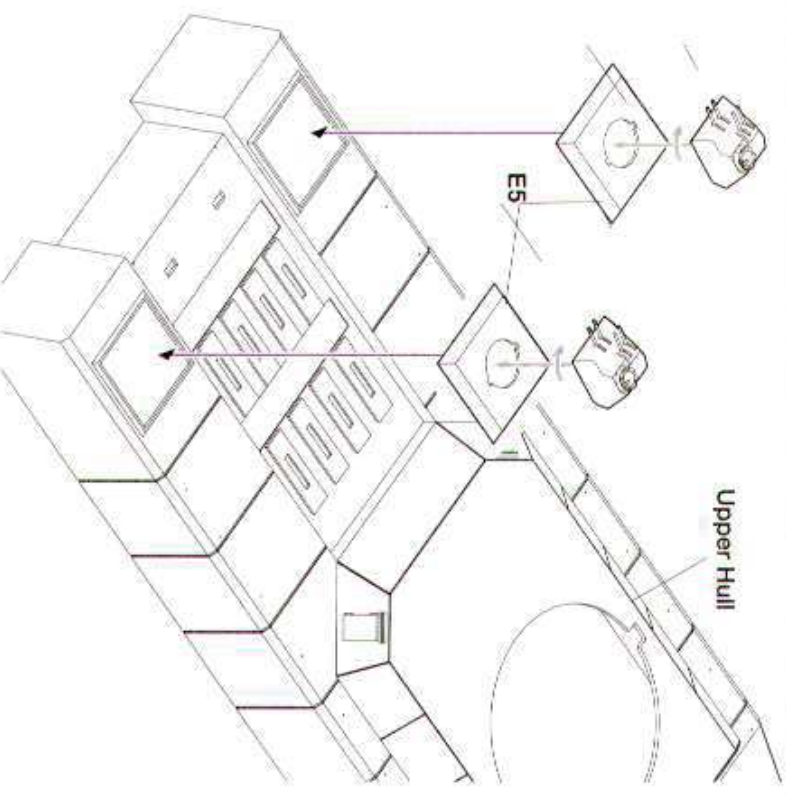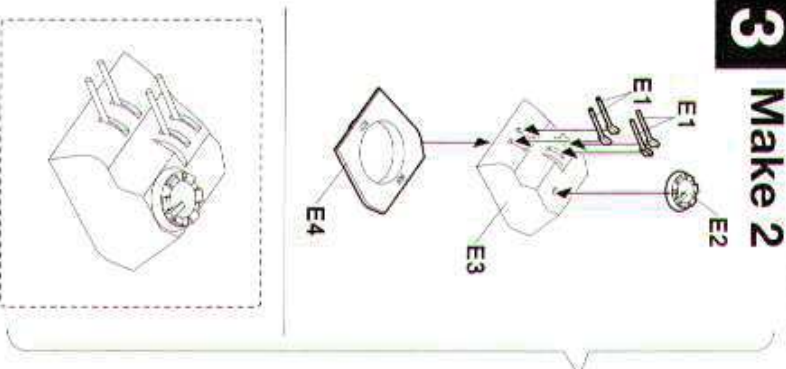


3

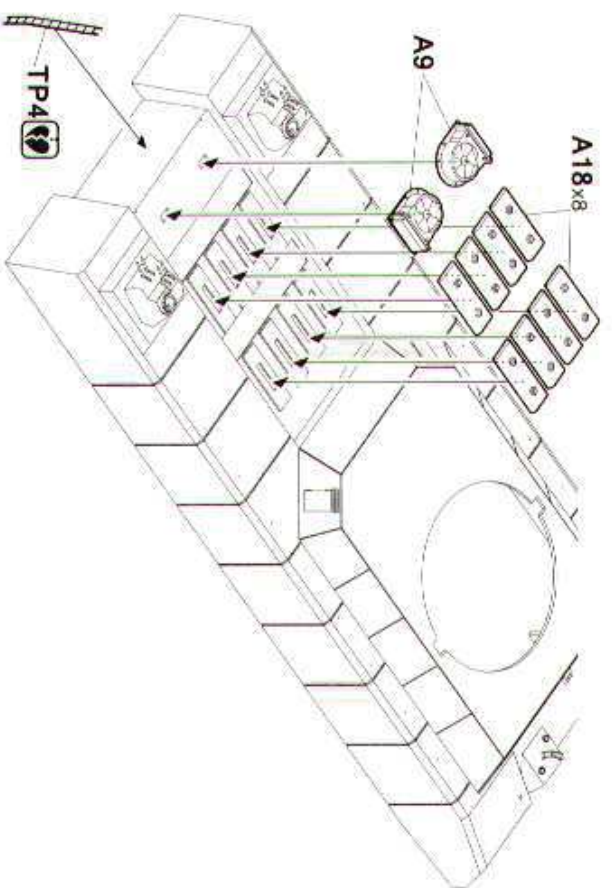


6

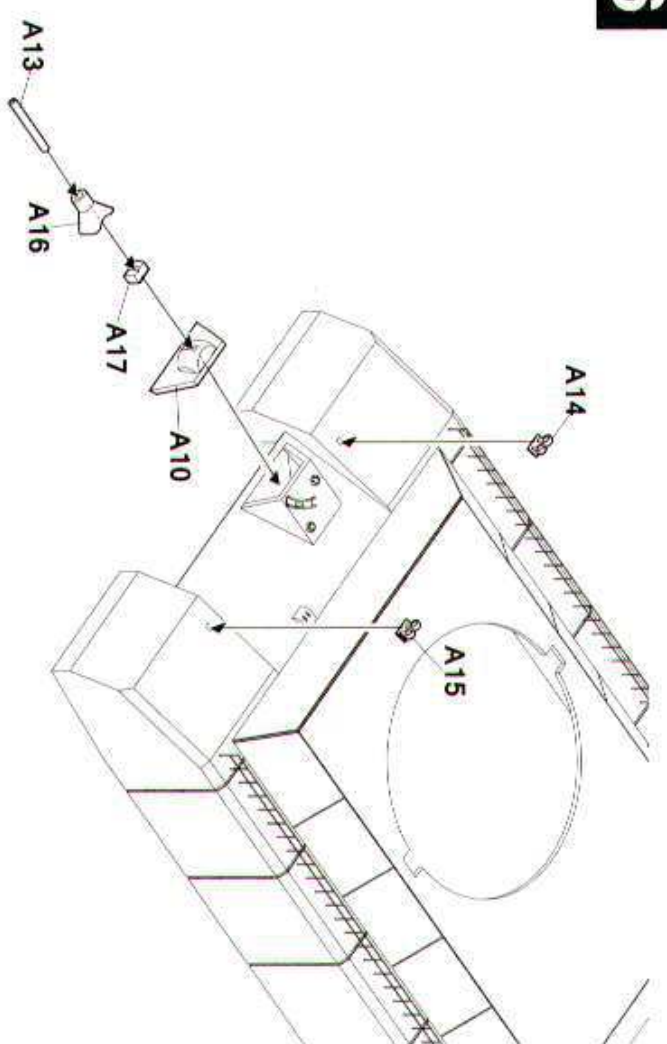


5

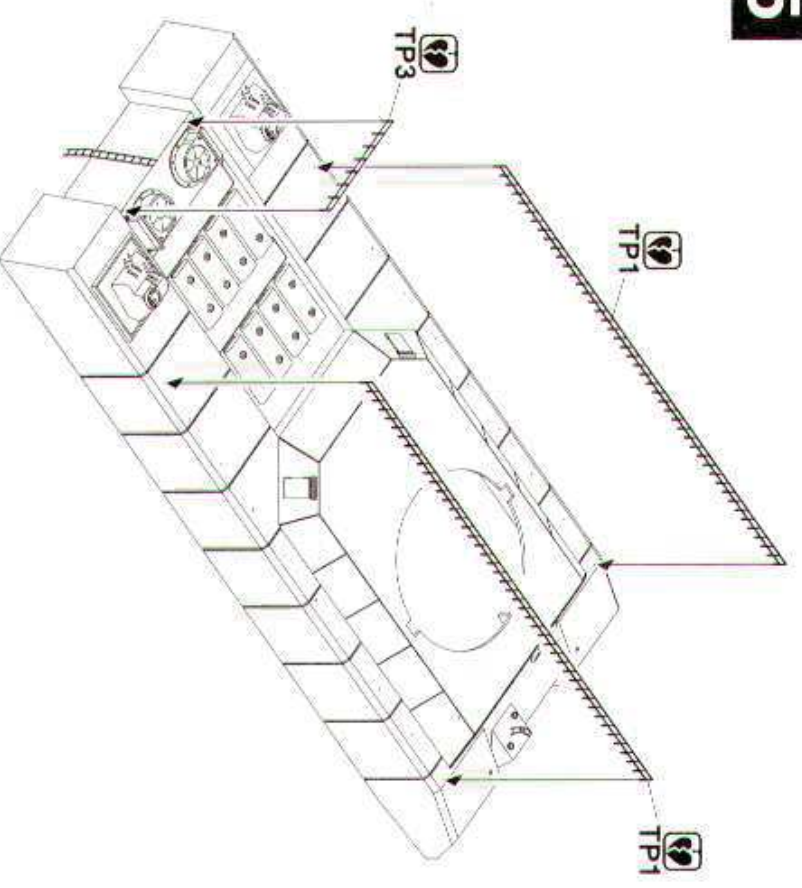


7

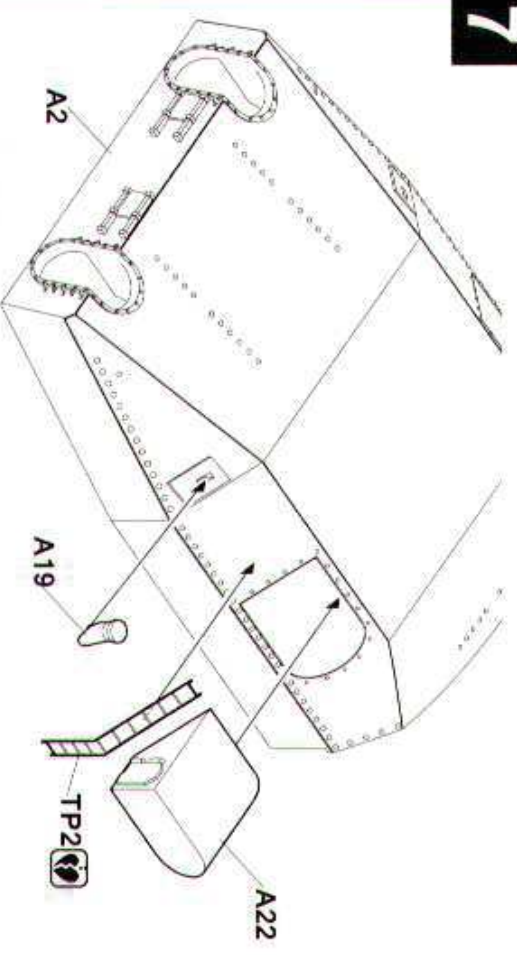


8

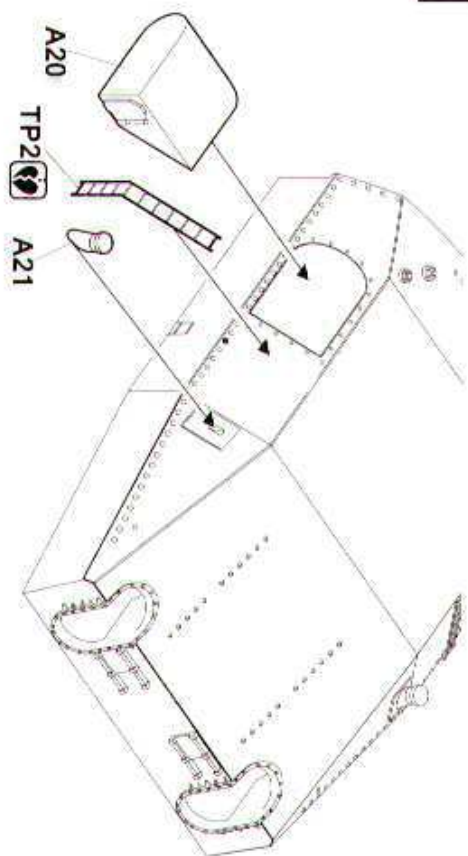


9

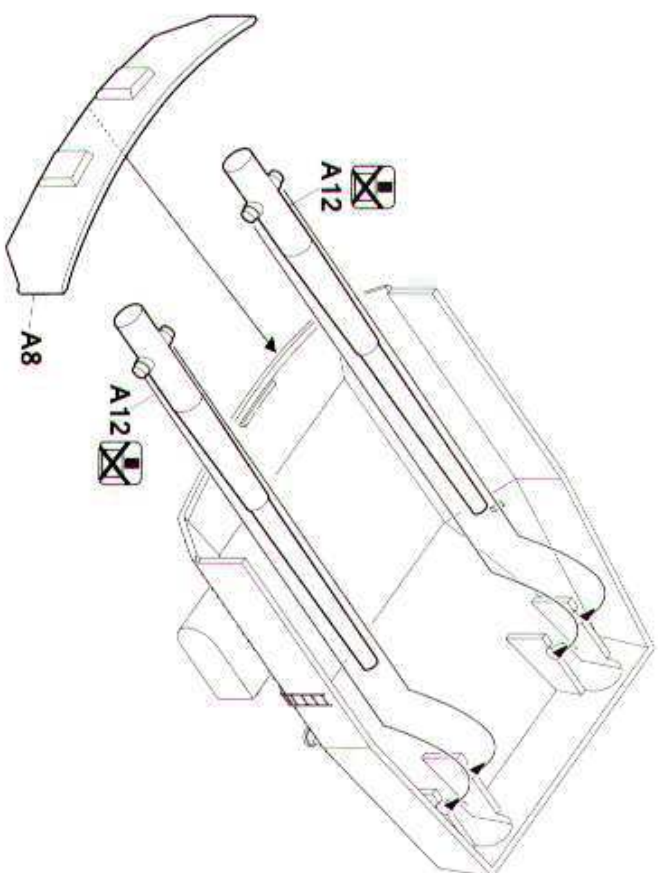


10

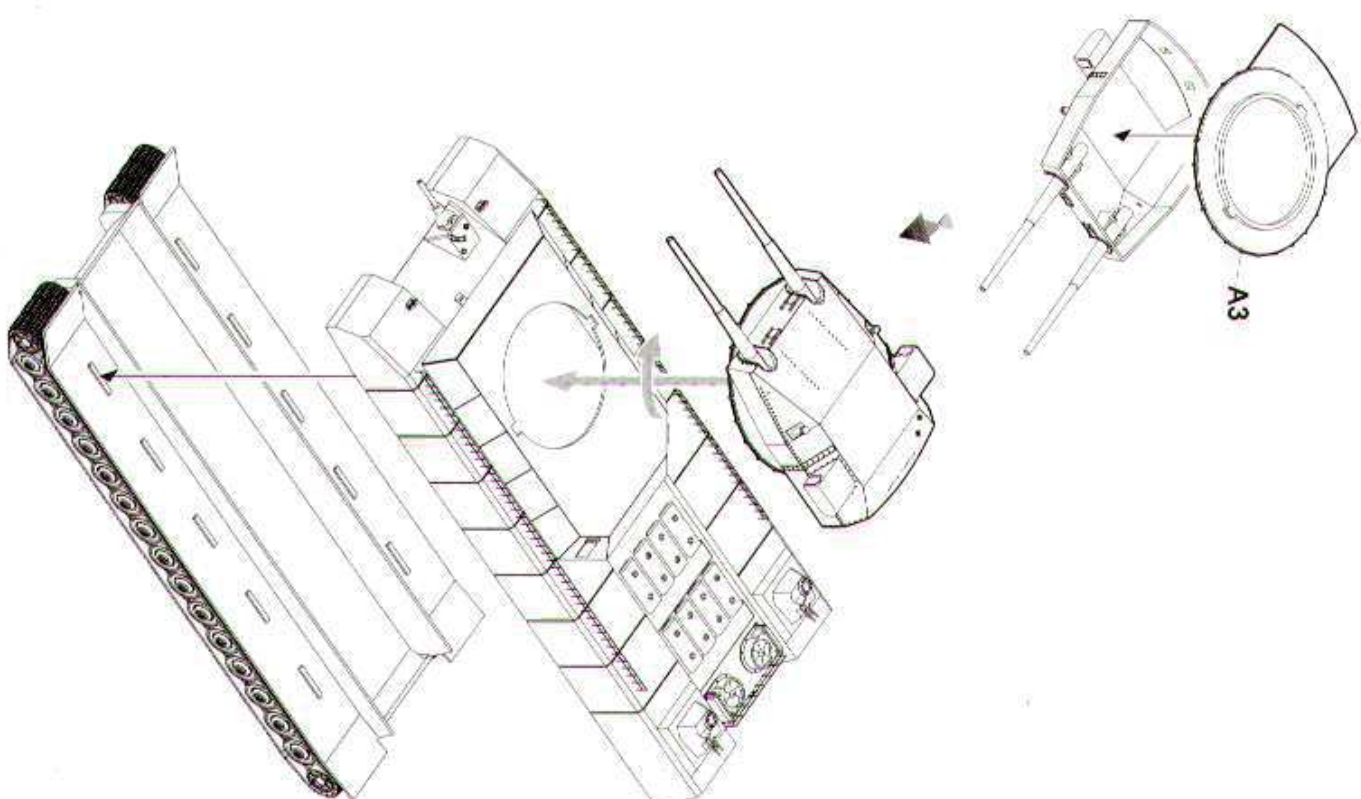


1

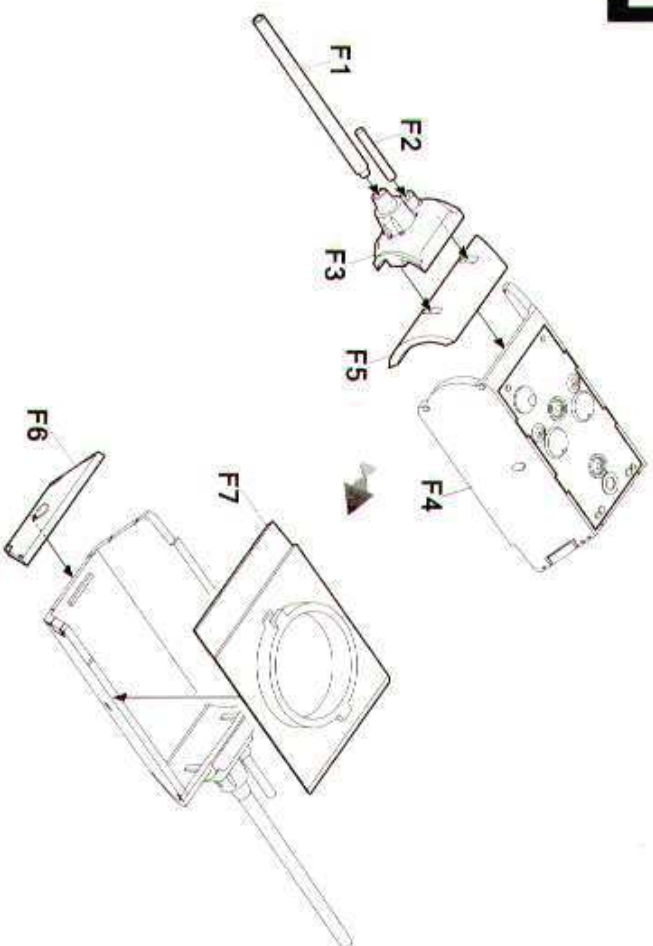

13

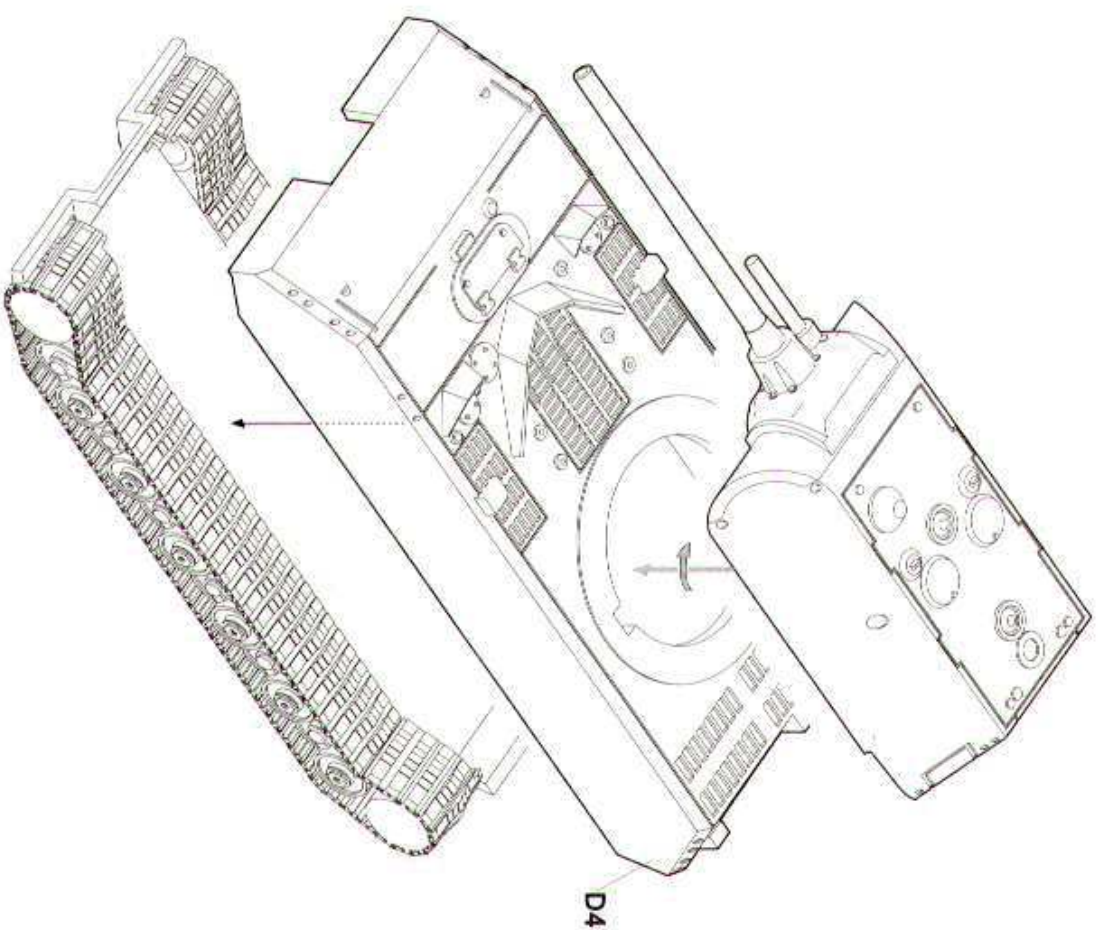

2

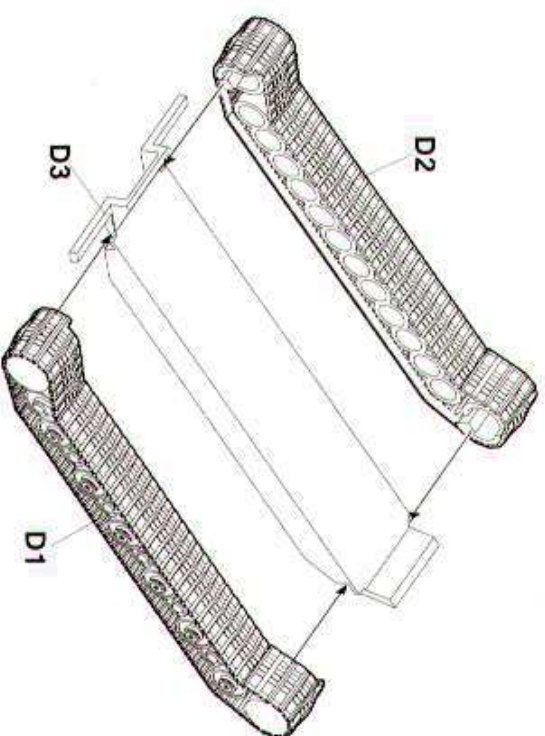

Painting and Marking Guide

A.MIG 004

Resedagrün

A.MIG 011


Dunkelgelb

A.MIG 014

Rotbraun

A.MIG 034

Rust Tracks

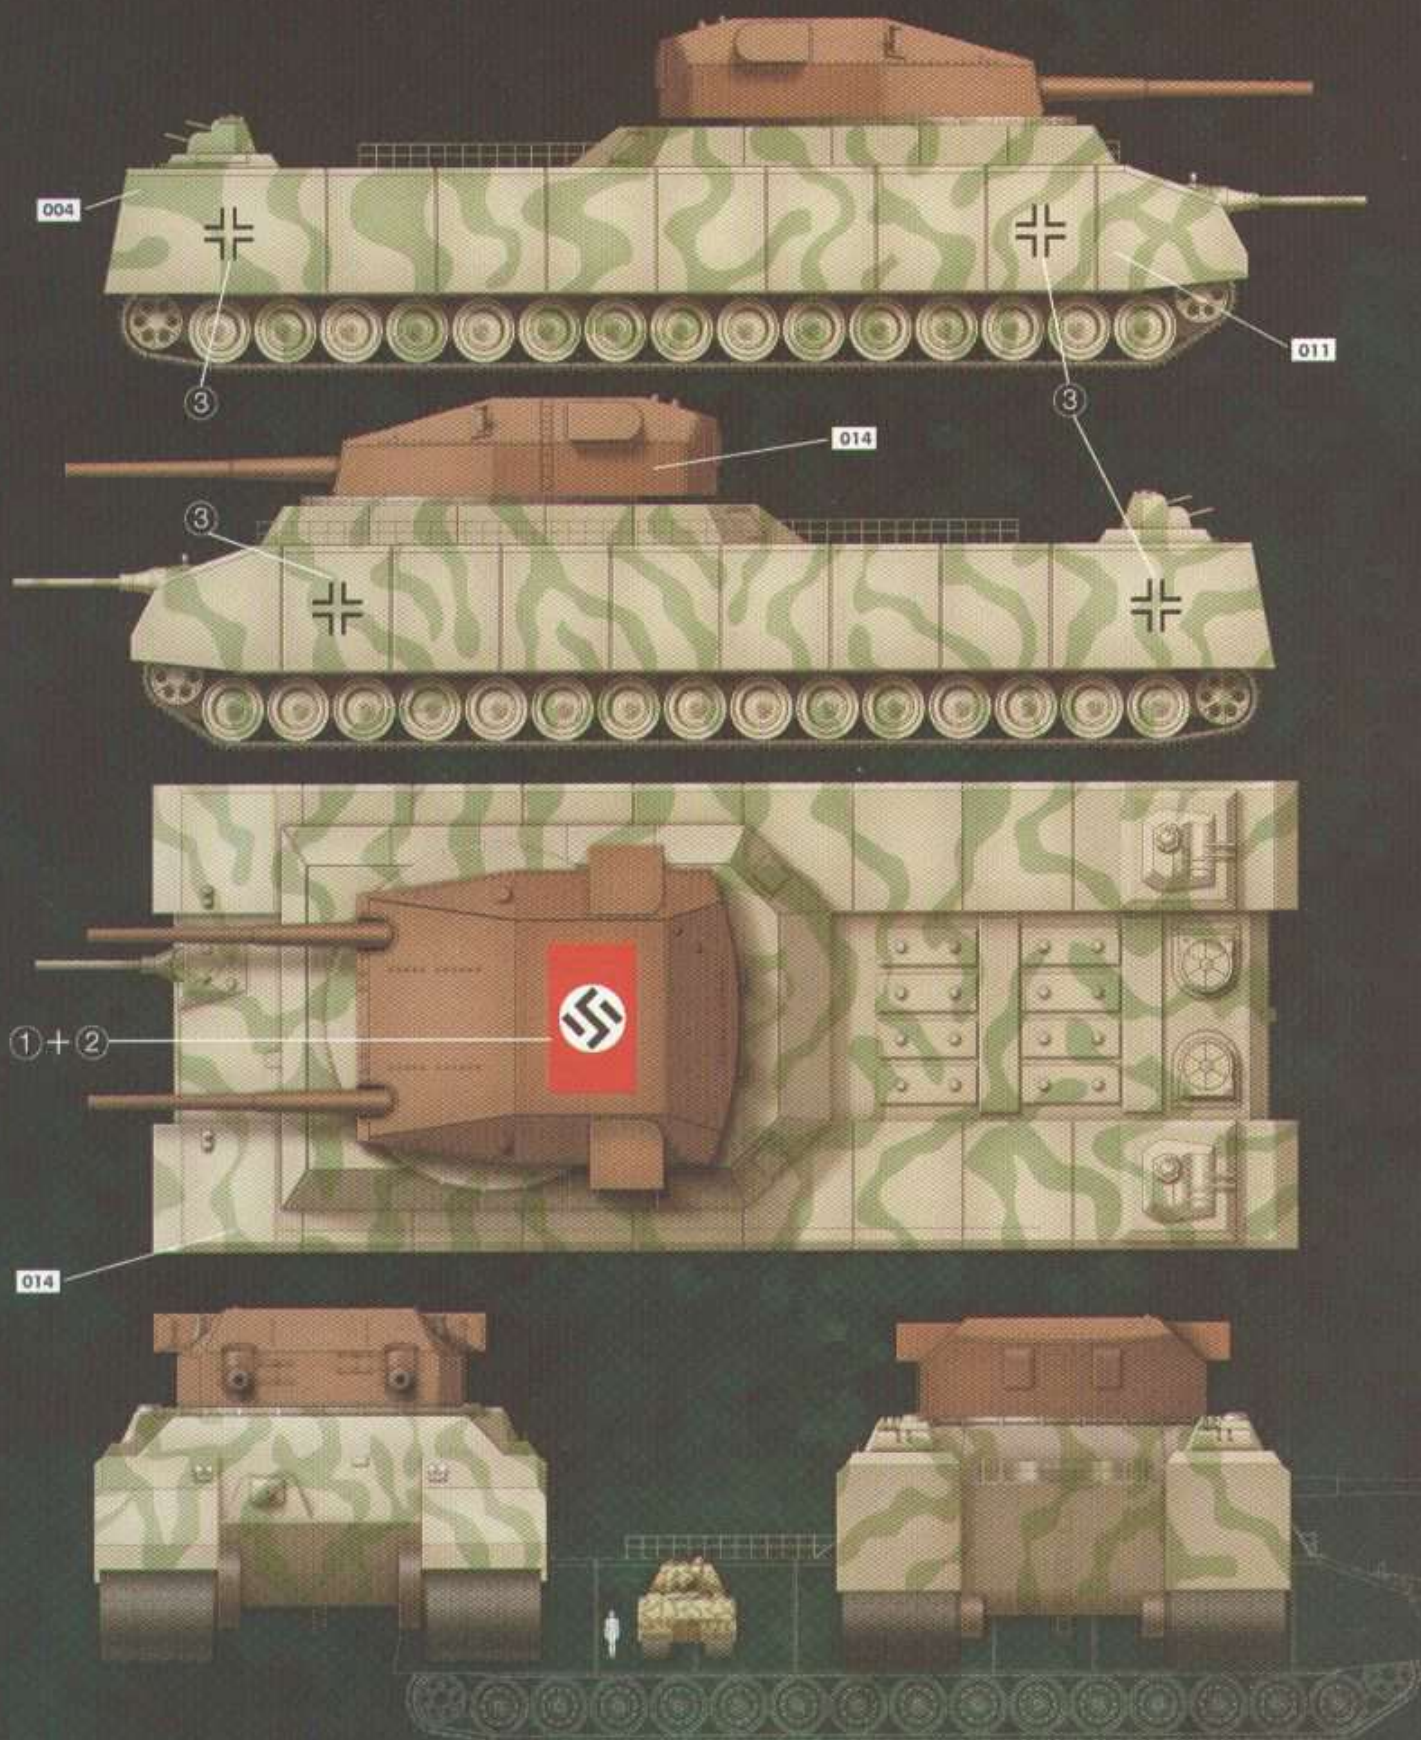

TAKOM

1/144 Landkreuzer P.1000 Ratte Prototype & Pz.Kpfw VIII Maus Ref. 3001

P.1000 & MAUS

Painting and Marking Guide

A.MIG 003

Resedagrün

A.MIG 002

Olivgrün

A.MIG 012


Dunkelgelb

A.MIG 046

Matt Black

A.MIG 034

Rust Tracks

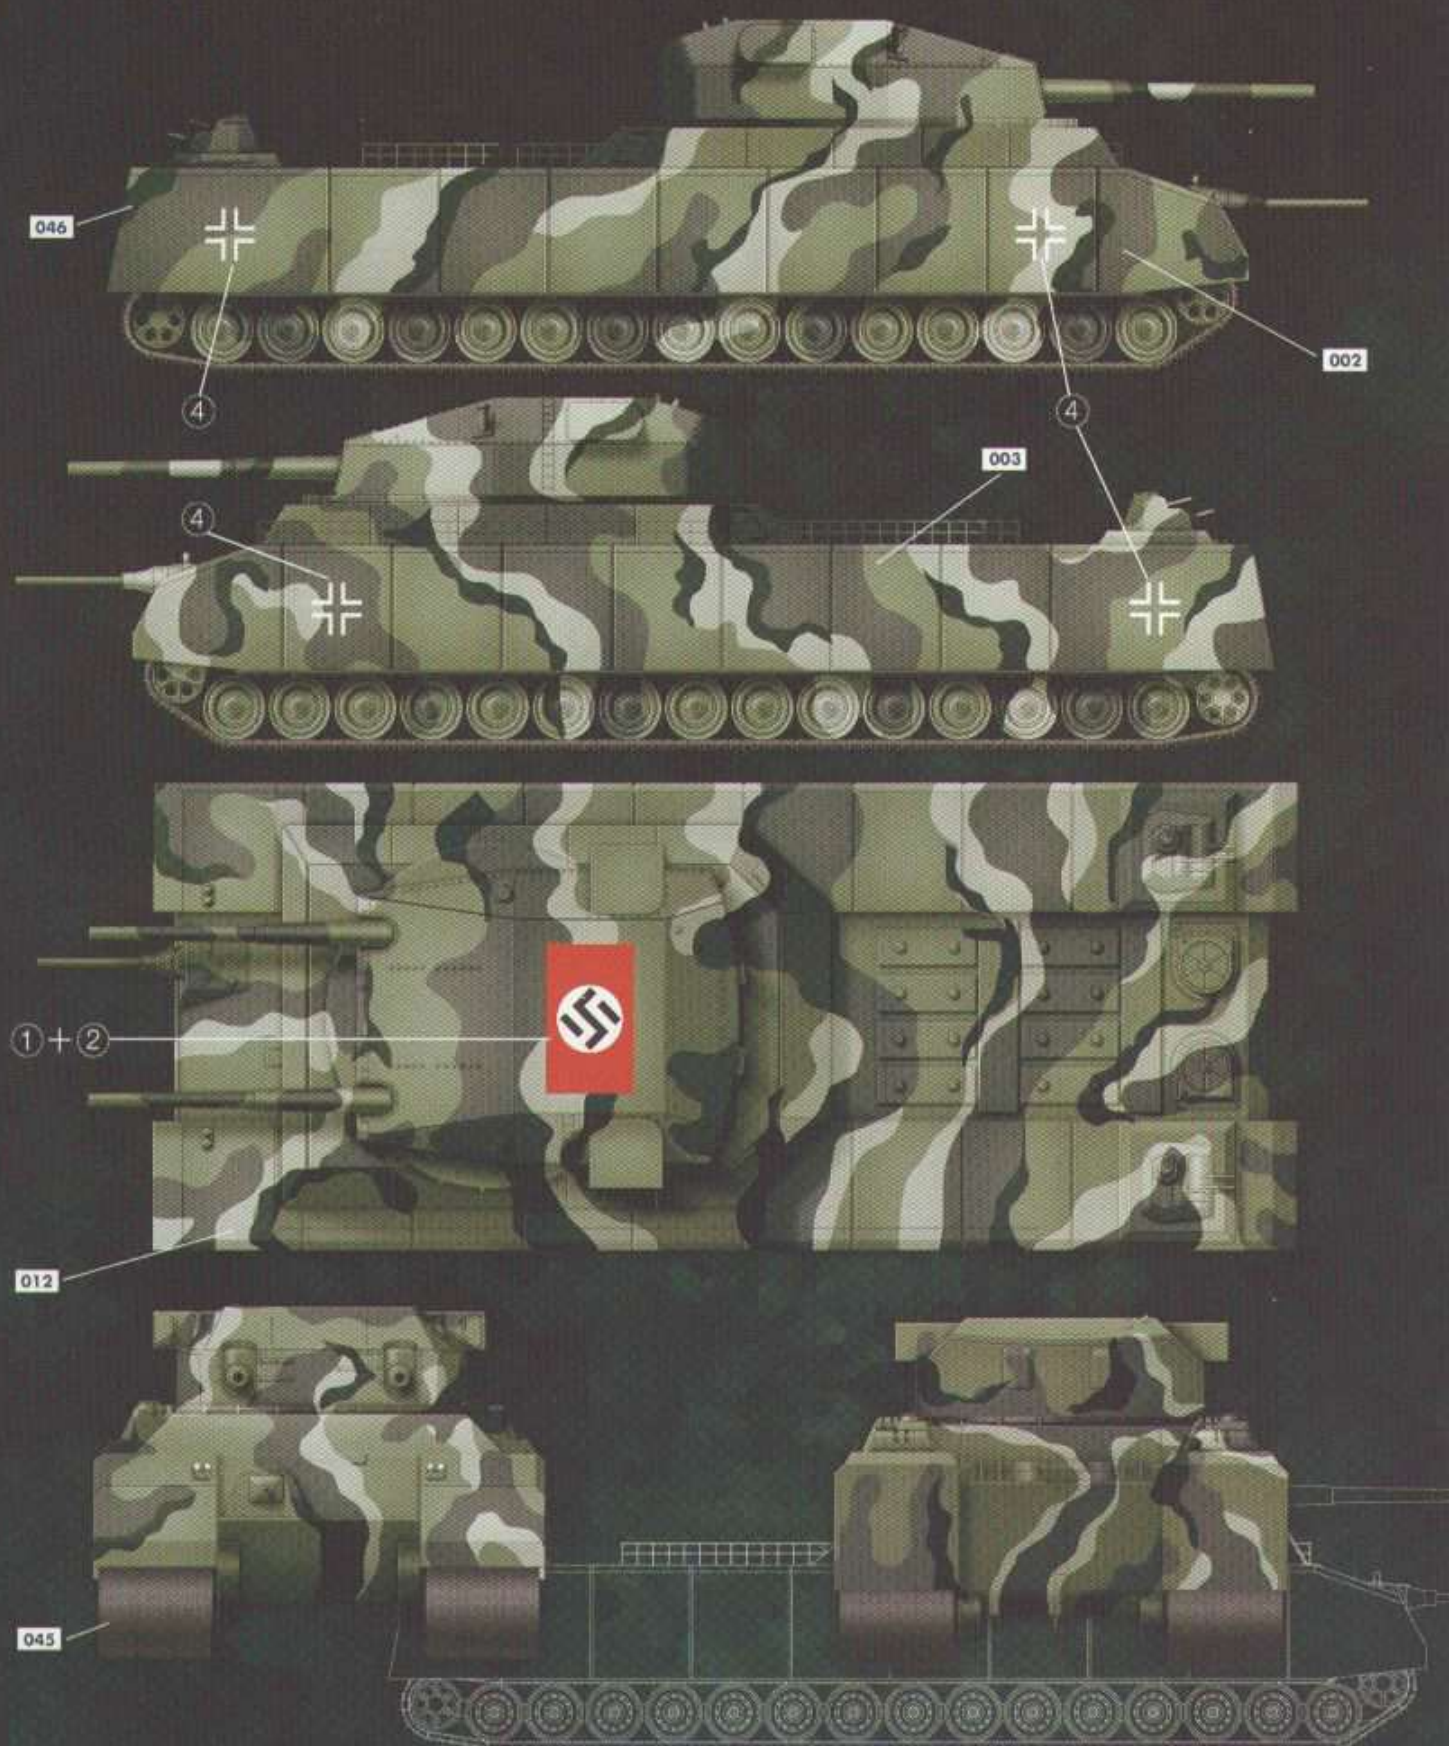
TAKOM

1/144 Landkreuzer P.1000 Ratte Prototype & Pz.Kpfw VIII Maus Ref. 3001

Painting and Marking Guide

A.MIG 003

Pale Gray

A.MIG 002

Olivgrün

A.MIG 011


Dunkelgelb

A.MIG 014

Rotbraun

A.MIG 034

Rust Tracks

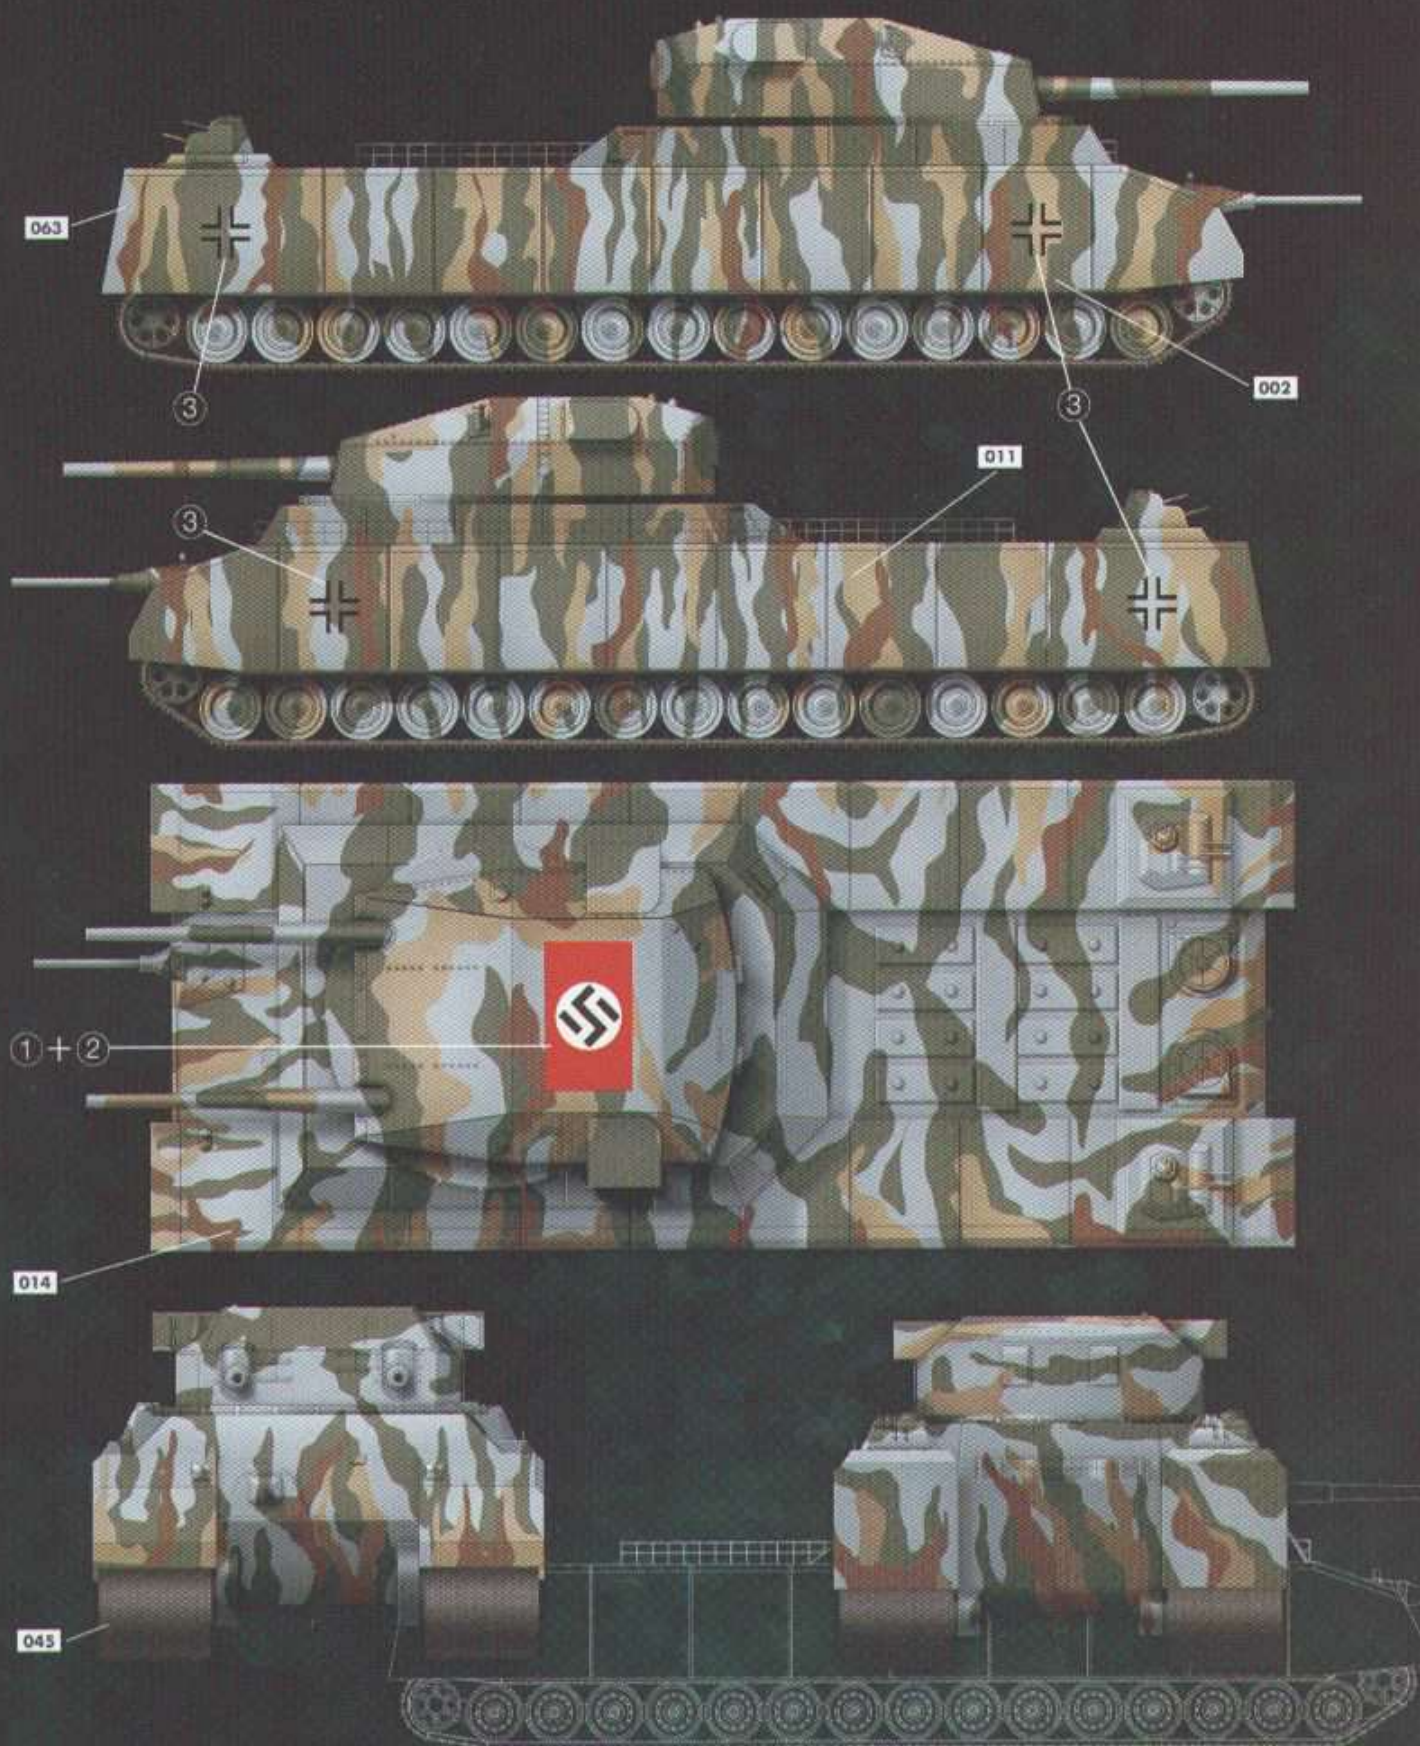

TAKOM

1/144 Landkreuzer P.1000 Ratte Prototype & Pz.Kpfw VIII Maus Ref. 3001

Painting and Marking Guide

A.MIG 004


Resedagrün

A.MIG 011

Dunkelgelb

A.MIG 034

Rust Tracks

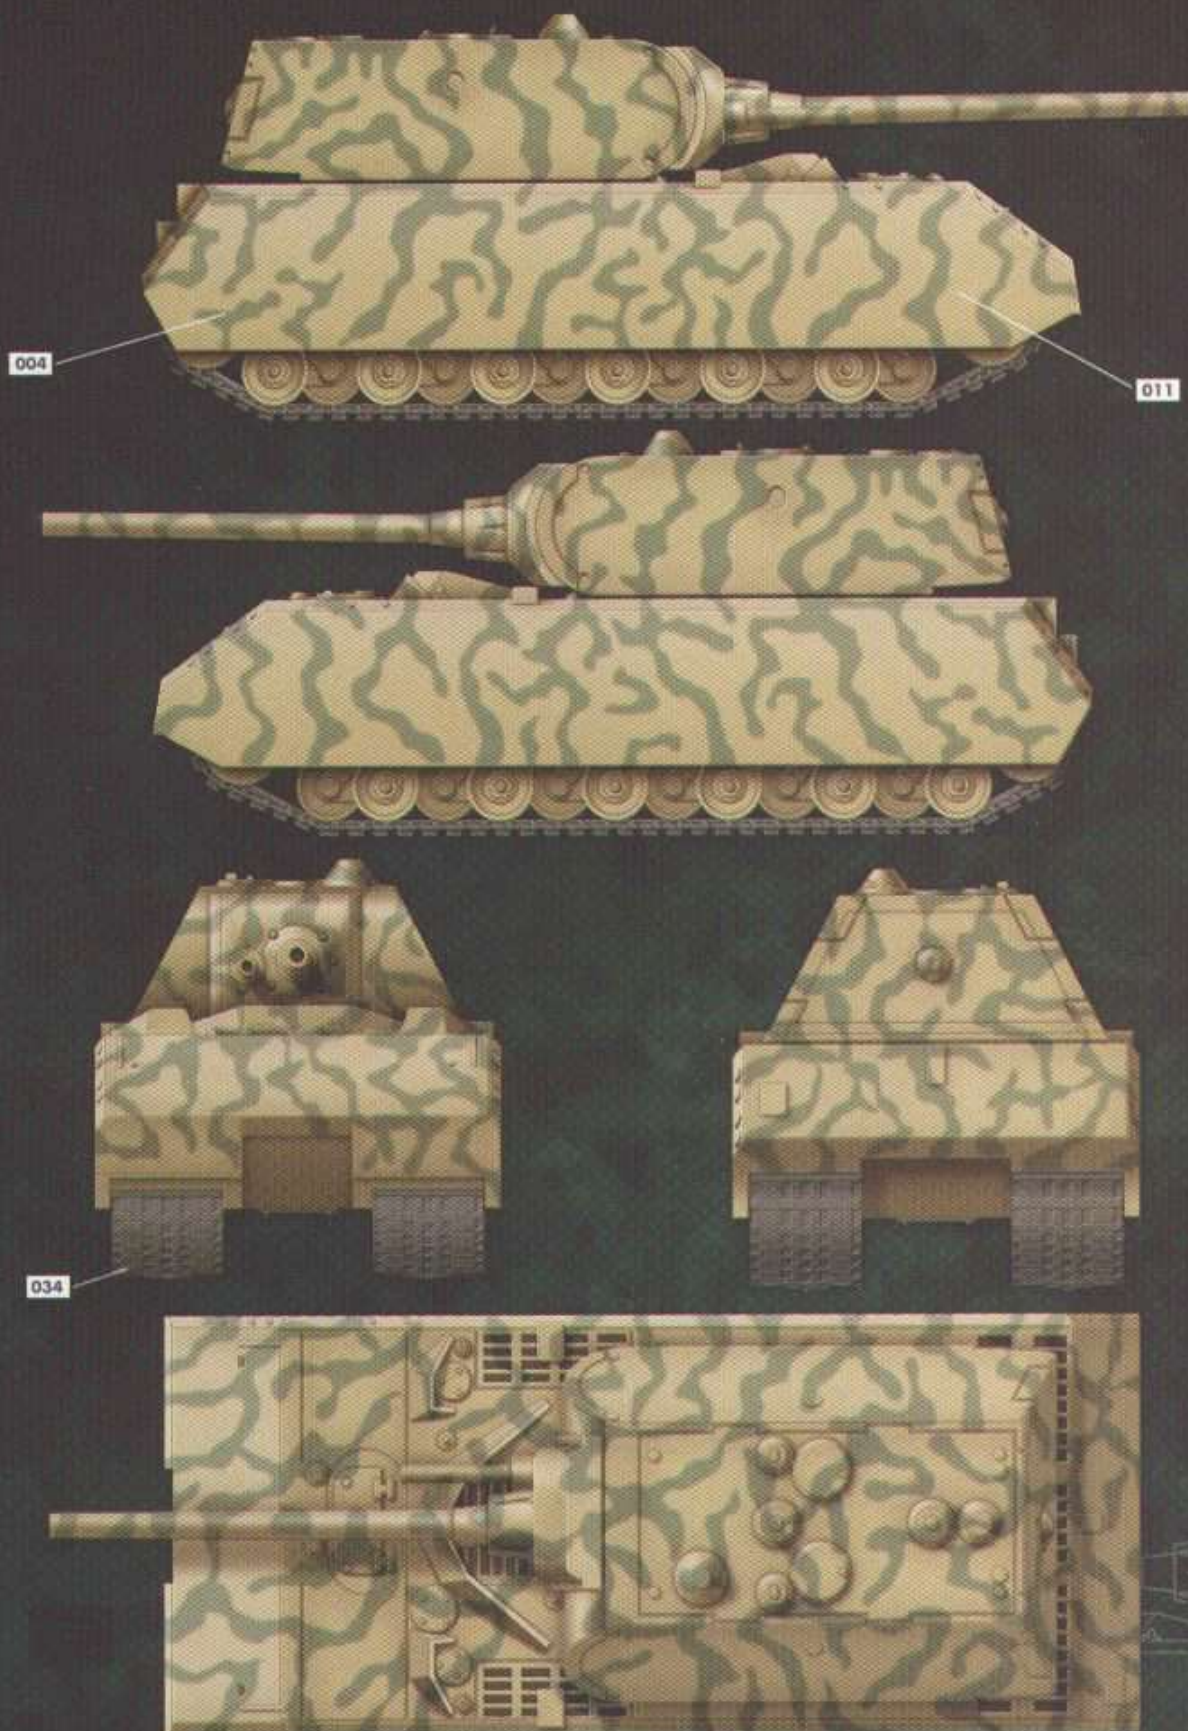

TAKOM

1/144 Landkreuzer P.1000 Ratte Prototype & Pz.Kpfw VIII Maus Ref. 3001

Painting and Marking Guide

A.MIG 002

Olivgrün

A.MIG 011


Dunkelgelb

A.MIG 015

Schokobraun

A.MIG 034

Rust Tracks

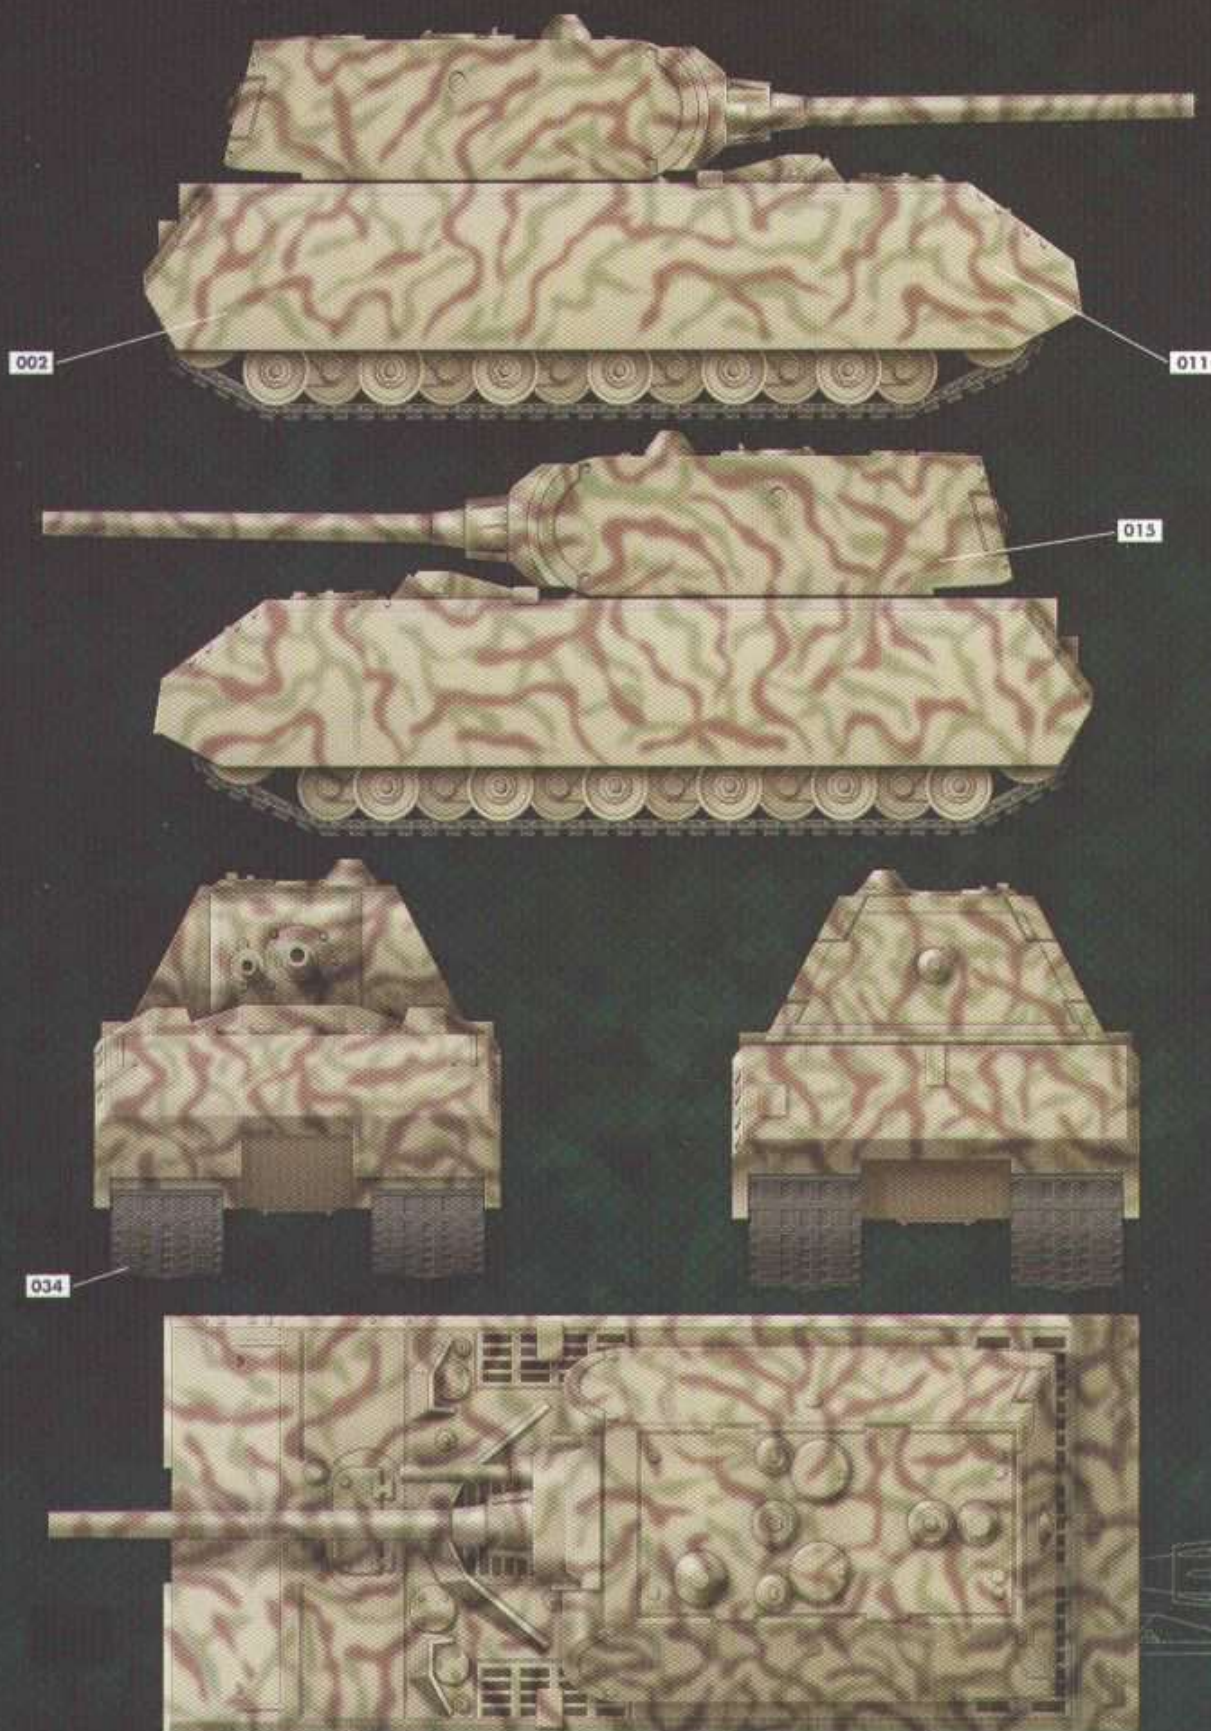

TAKOM

1/144 Landkreuzer P.1000 Ratte Prototype & Pz.Kpfw VIII Maus Ref. 3001