



Hungarian 39M CSABA Armored Car

ハンガリー 39M チャバ装甲車 匈牙利39M装甲车

PLEASE READ BEFORE OPERATION!

- * Tools recommended as below: (Not included)
Adhesives; Paints; Side Cutters; Sharp Edged Pliers; Modeling Knife; Modeling File; Nippers; Drill; Scissors; Sand Paper; Soft Cloth; Cyanoacrylate Glue.
- * Make sure to read this instruction listed below before assembling.
- * The kit contains the small parts, they can be dangerous if swallowed by mistake, so keep them away from reach of children.
- * Cut the all parts off carefully and remove the waste parts into the garbage can.
- * More caution and care should be needed for cutting and handling the photo etched parts.
- * Make attention that some parts should be attached the decal when assembled.
- * During assembling, please tear up and throw away the plastic bags, or may cause the dangerous if wearing over head by children's mistake.
- * When using the adhesives and paints, please do not use them in the closed room or near the fire, also must be very careful to protect your eyes, face and clothes.
- * Adult supervised when assembled by children under 14 years old.

装配前请仔细阅读:

- * 推荐使用的模型工具(请自备):
专用模型胶水, 专用模型油漆, 水口剪刀, 长咀钳, 刀片, 锉刀, 镊子钳, 钻, 剪刀, 软布, 砂纸, 瞬间快干胶等。
- * 用水口剪刀或刀片小心切下所有塑胶零件和蚀刻片零件, 不要遗失小零件。
- * 切取蚀刻片时应特别注意防止利边划伤手指。
- * 用模型锉刀小心锉平所有零件表面的注射浇口。
- * 用适量的强力快干胶水粘合蚀刻片零件和金属轴, 切忌过量, 否则可能导致可动零件被粘住。
- * 注意某些零件表面需在装配时同步贴水上水贴纸。
- * 制作时应远离幼儿并将包装袋及时收妥, 谨防小孩玩耍而引起意外。



cyanoacrylate glue
强力胶



weight
配重



make hole
钻孔



cut / remove
切除



option
选择



no cement
不涂胶水



decal
贴纸



bend
弯曲



repair
填补



The method to apply the decals

1. Cut off the decal from the decal paper and put it into the warm water 40°C for 10 seconds.
2. Take the decal from the water and put it on a piece of clean cloth.
3. Remove the decal slowly from the paper to the targeted location by a wet finger.
4. Use a piece of dry and soft cloth to press it gently on the decal until it getting dry and no bubble existing.


水贴纸的使用方法:

- 一. 把相关的印花从水贴上剪下, 放入40°C左右的温水中浸10秒。
- 二. 然后将印花放在干净的布上。
- 三. 拿上印花纸板, 手指蘸水将印花移到适当的位置。
- 四. 用软干布轻压印花直至水干, 气泡消失。


部品图 Parts

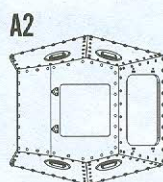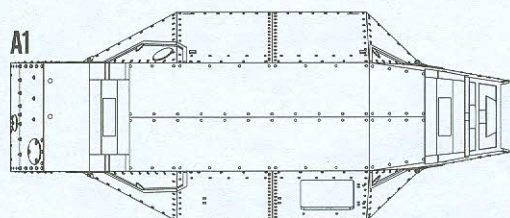


《轮胎I》
Tyre X4

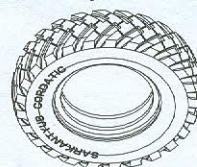


BX2

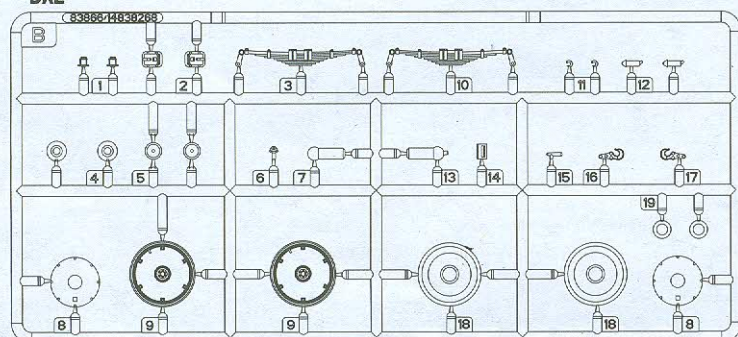

《水贴》A
Decal A

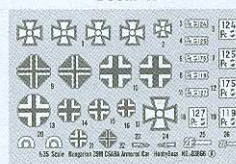


《轮胎II》
Tyre X4

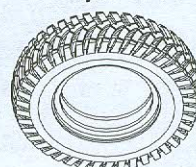


《水贴》B
Decal B




C

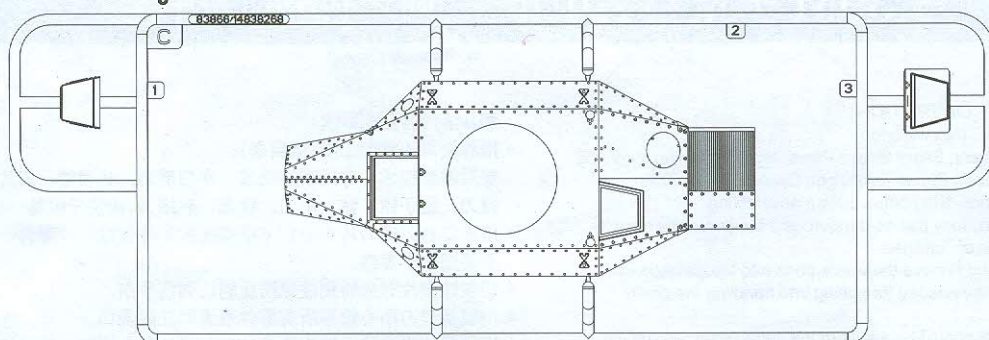


《蚀刻片A》
PE-A



D

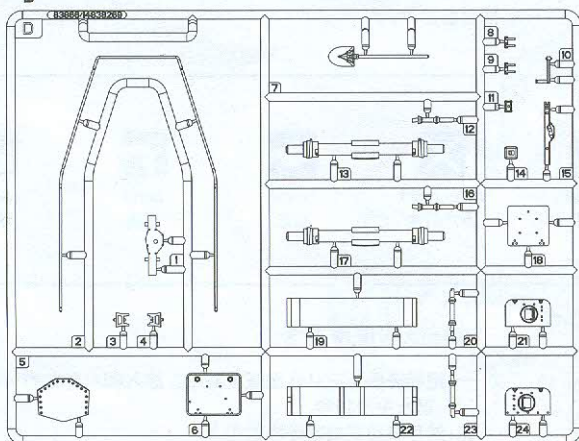

E

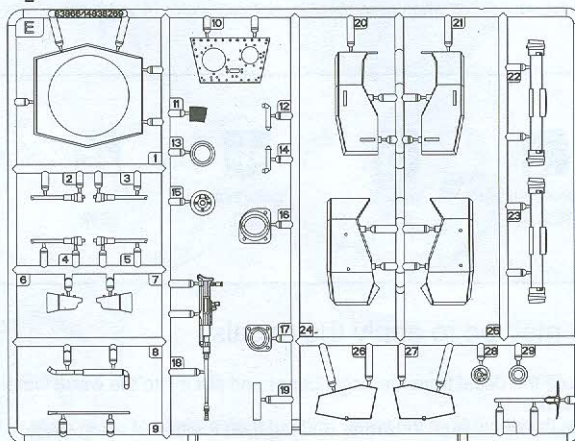

1
STEP

✗
No cement
不涂胶水

E10

E19

E28 + E29

E17

E16

✗
No cement
不涂胶水

E13 + E15

✗
No cement
不涂胶水

E18

E11

D9

PE-A5

D21

B6

B14

A2

D8

PE-A5

D24

B6

B14

D18

E1

《A-A》

2
STEP

C3

C1

B11x4


C2

B12x4


PE-A6
对侧相同
Both side

《B-B》


3
STEP

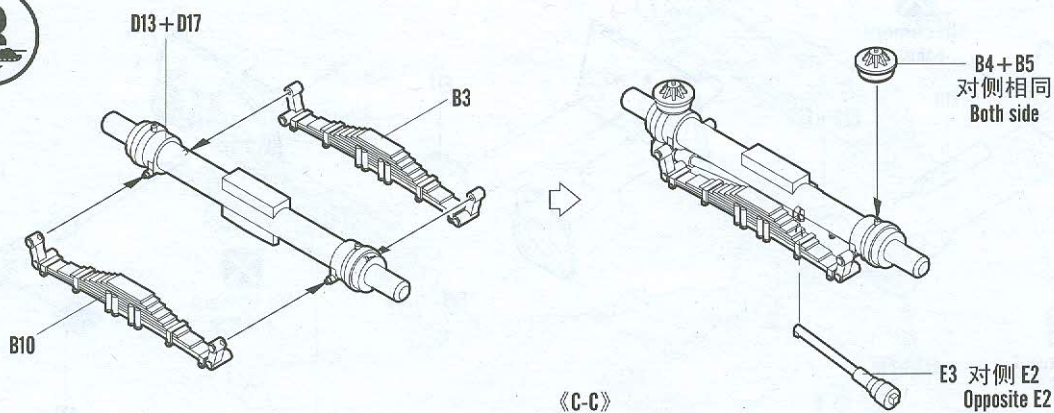


4
STEP

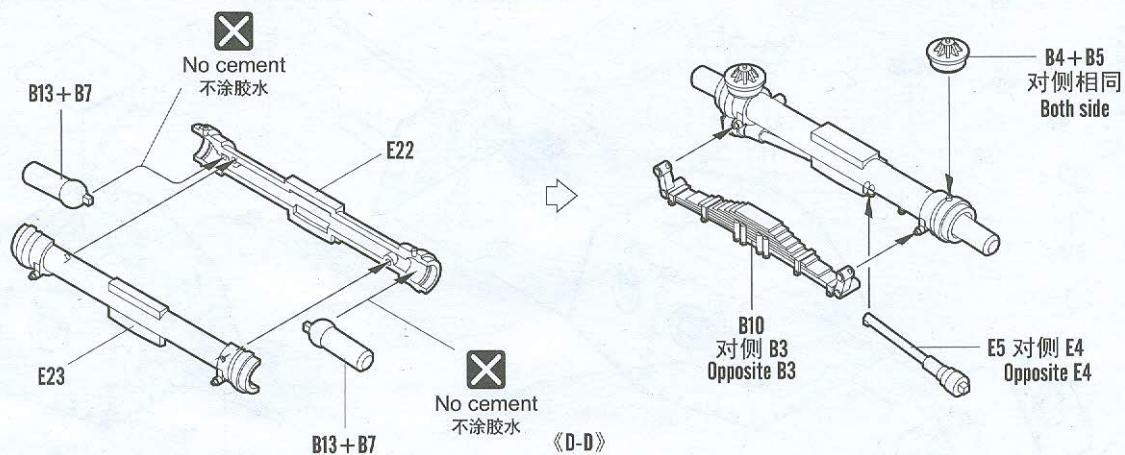

5
STEP



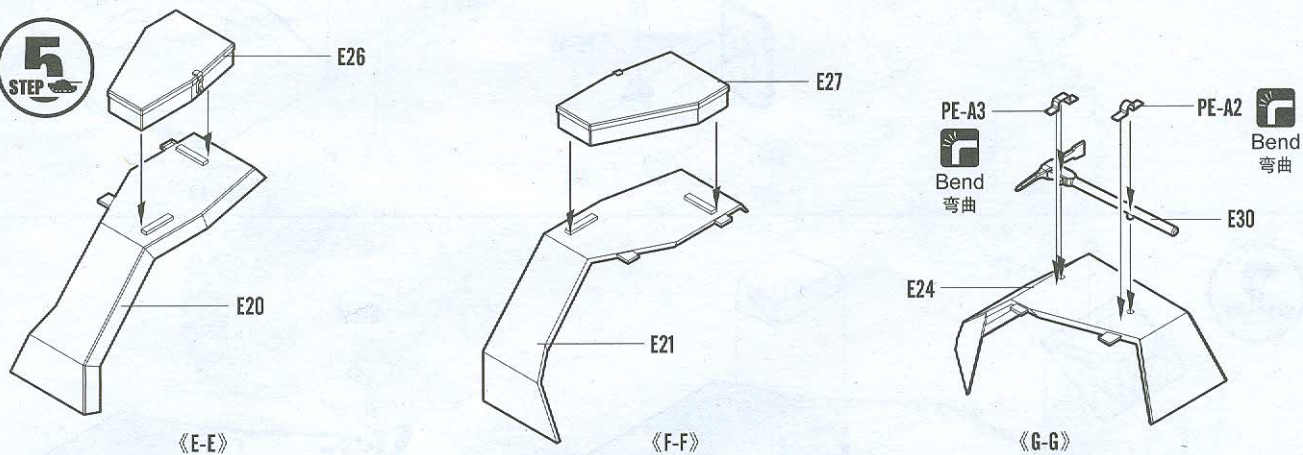



6
STEP

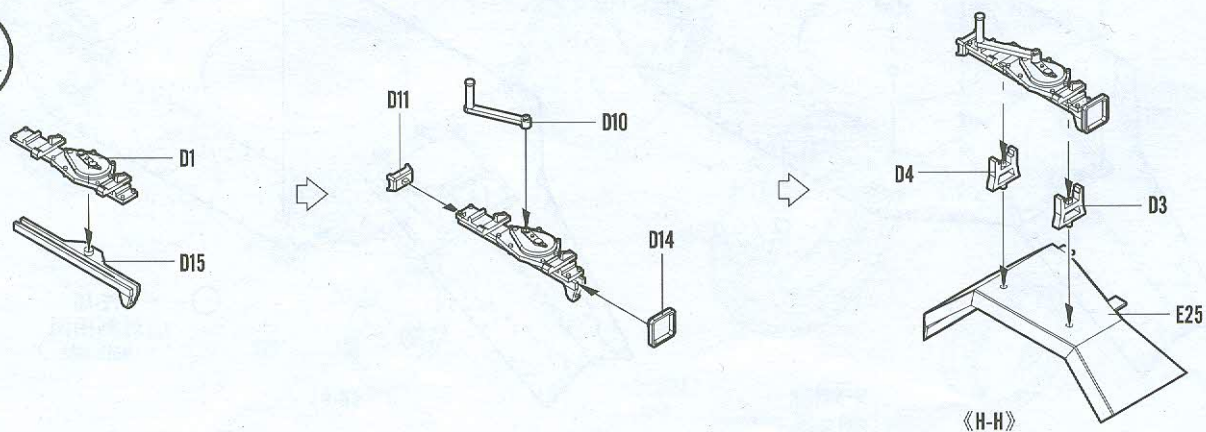




7
STEP

D19 + D22

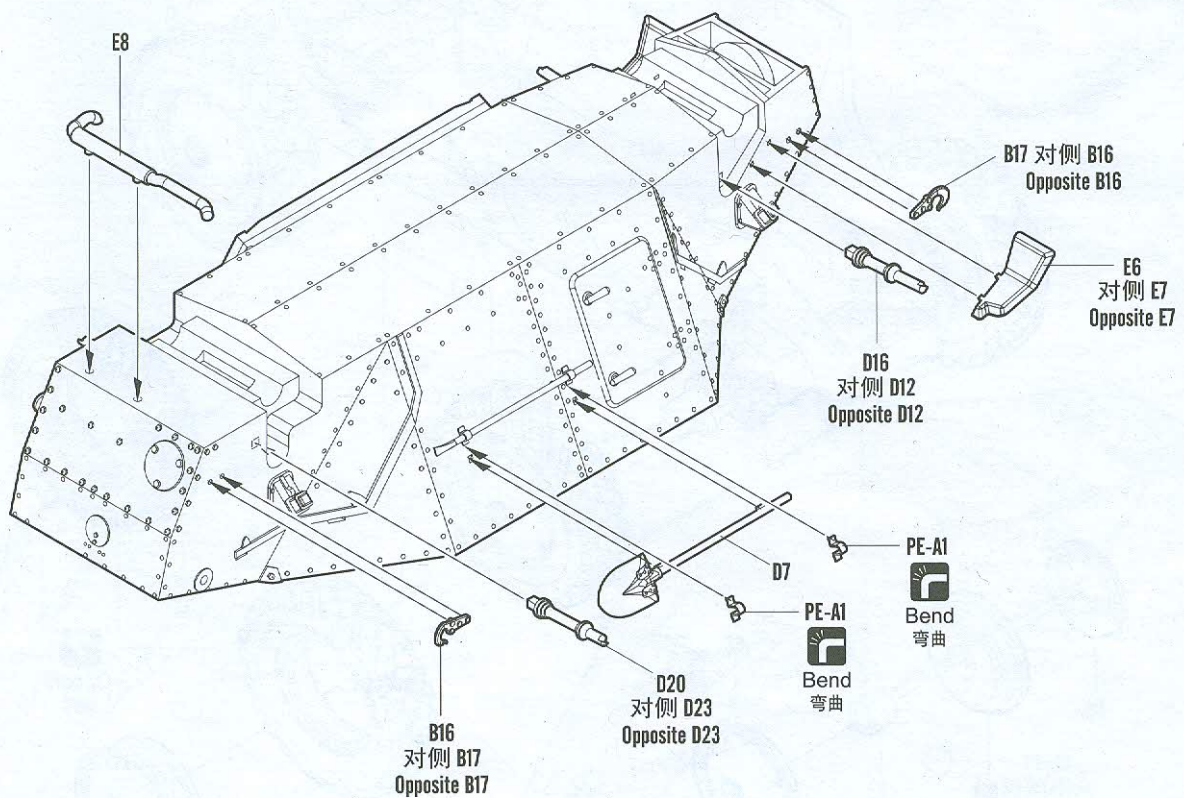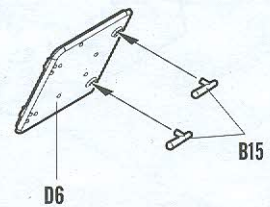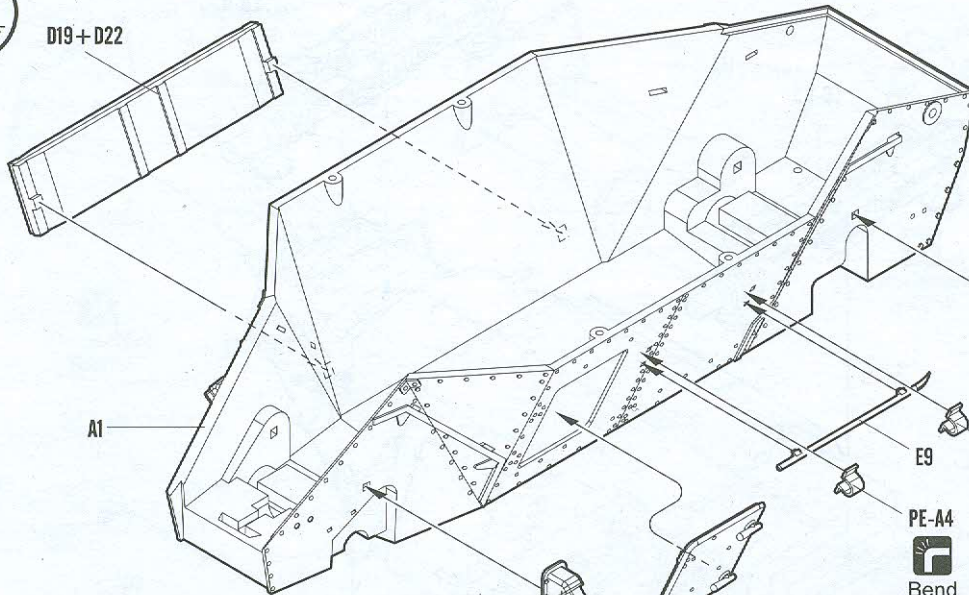






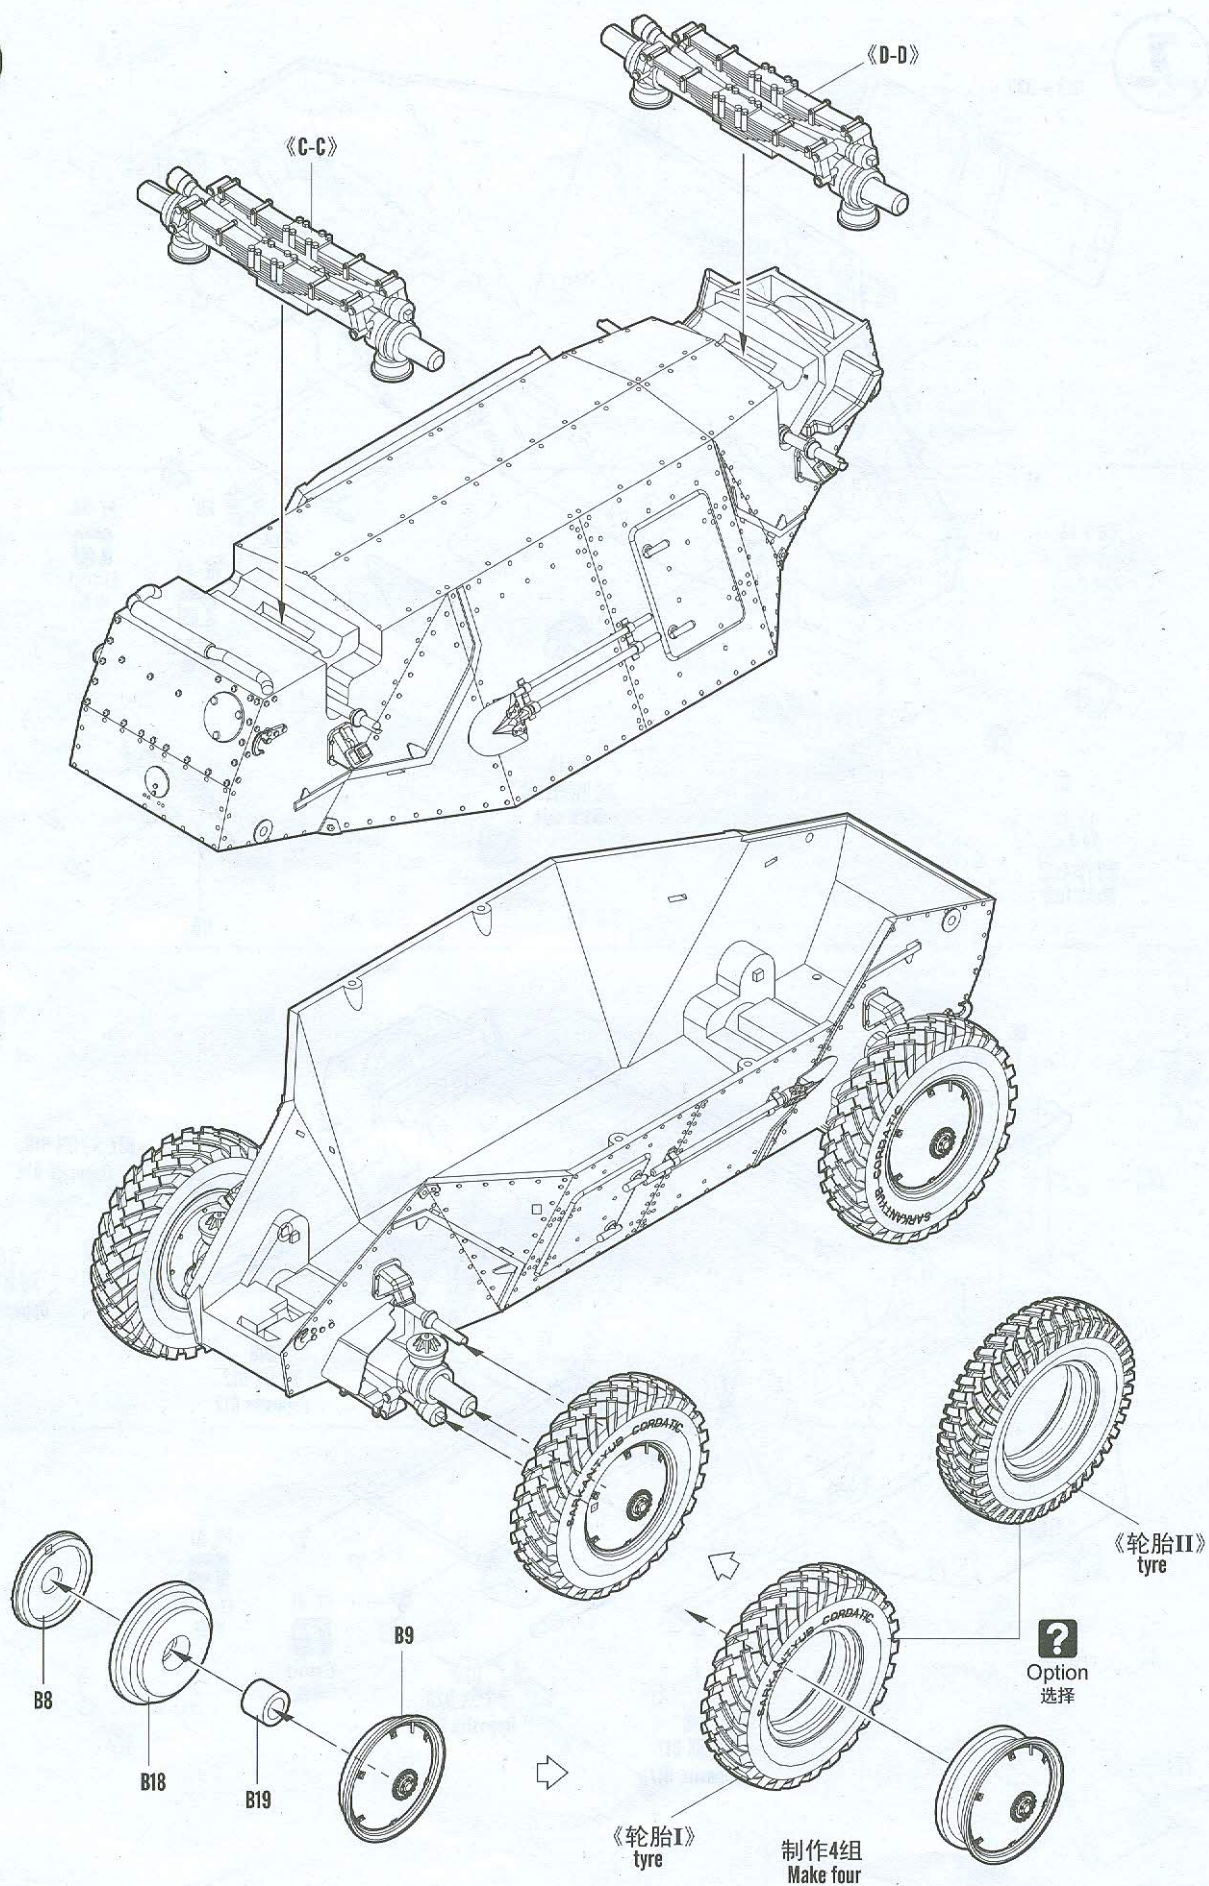


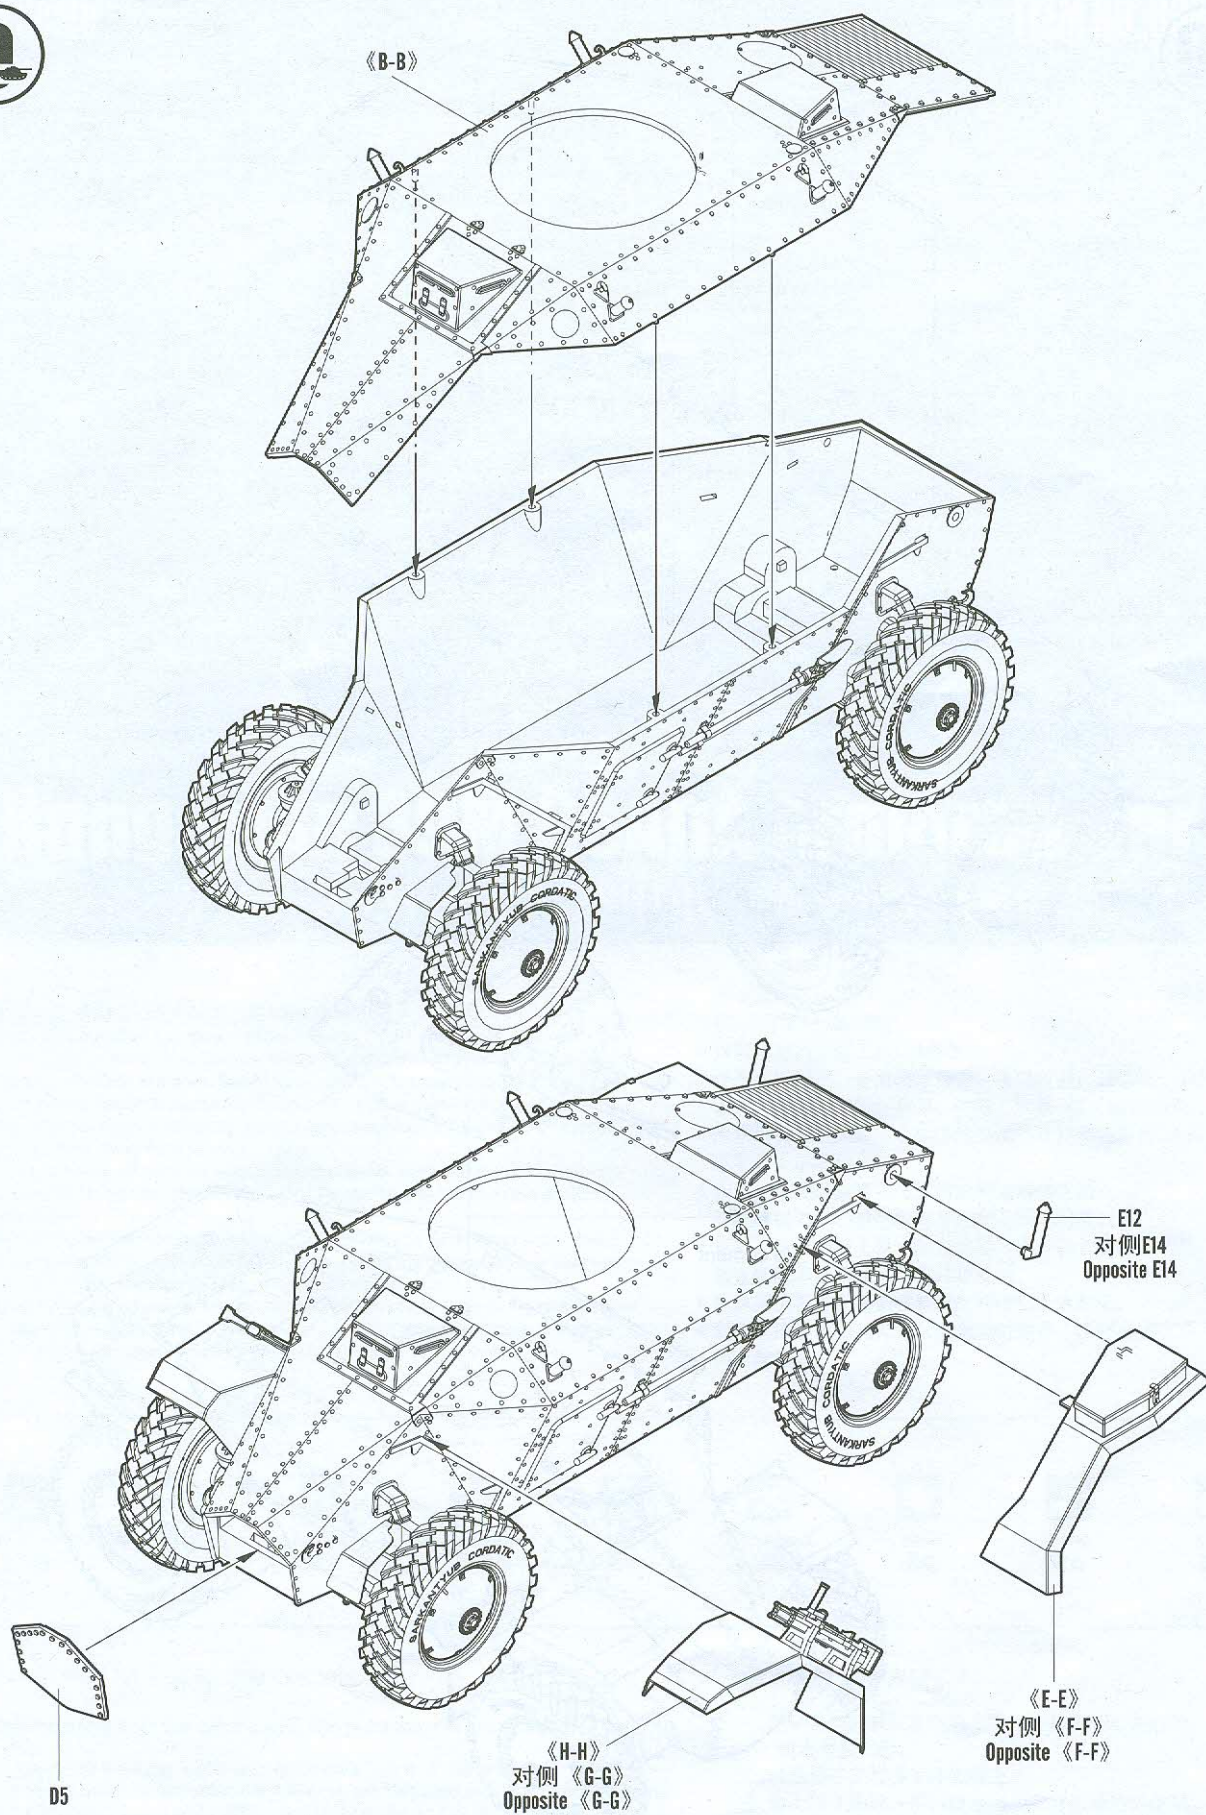

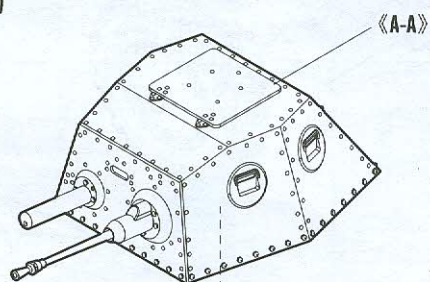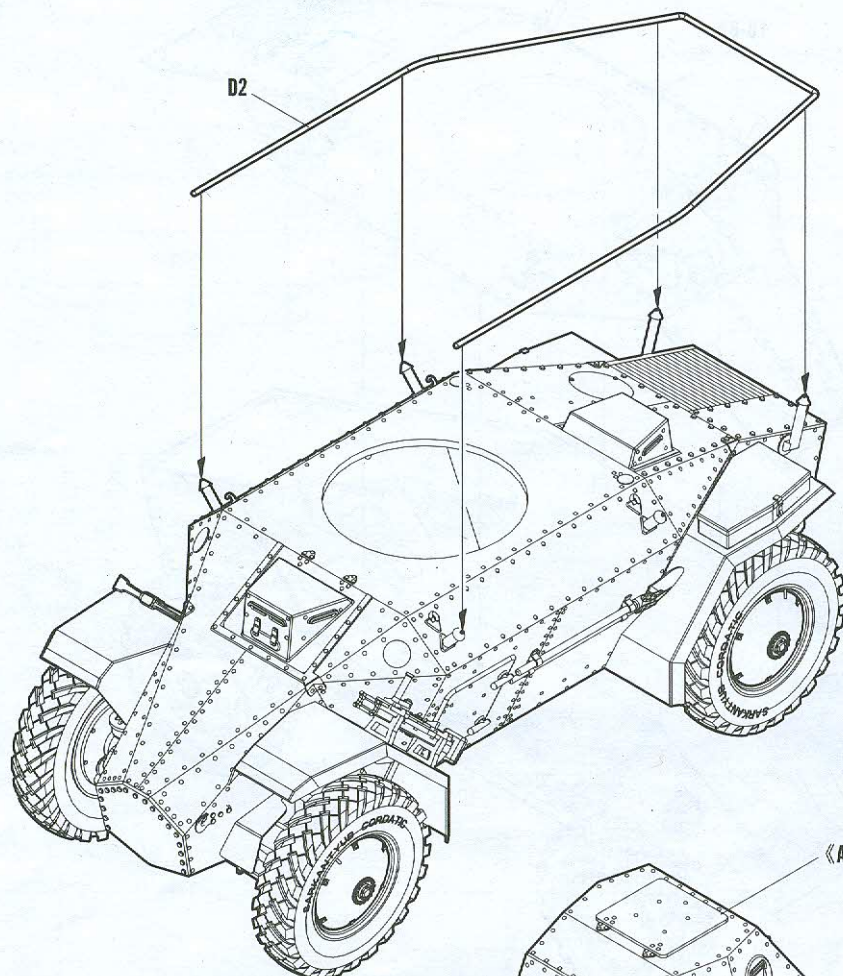





✗
No cement
不涂胶水

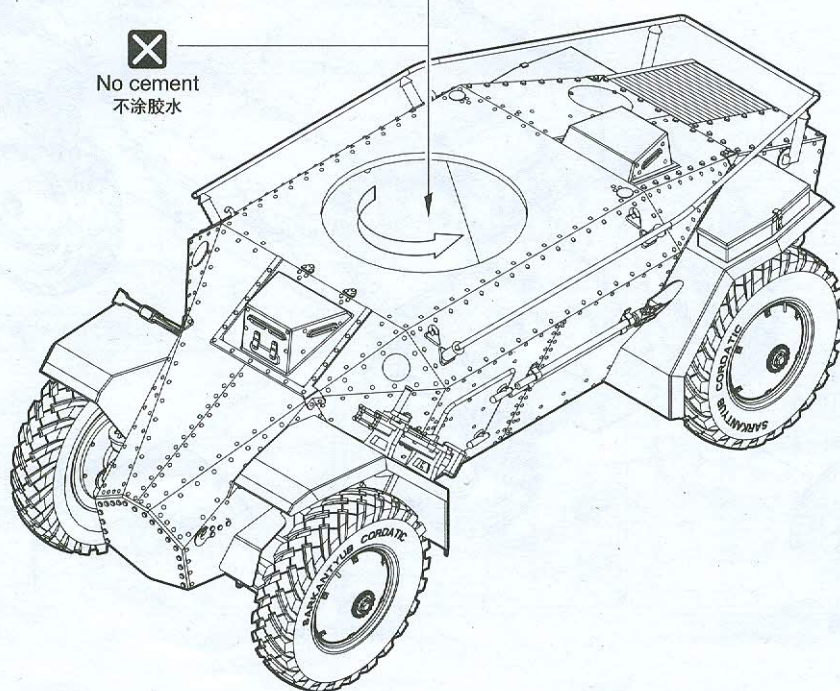

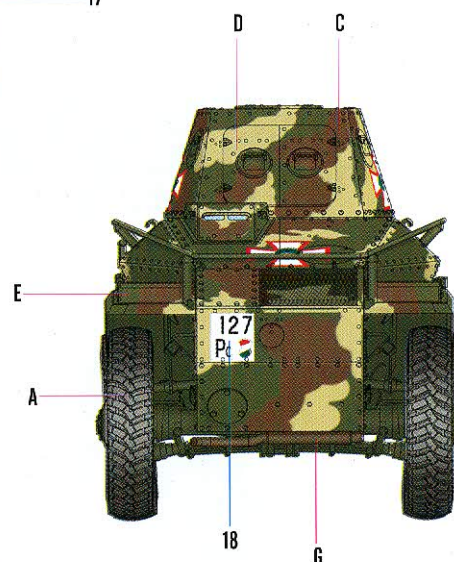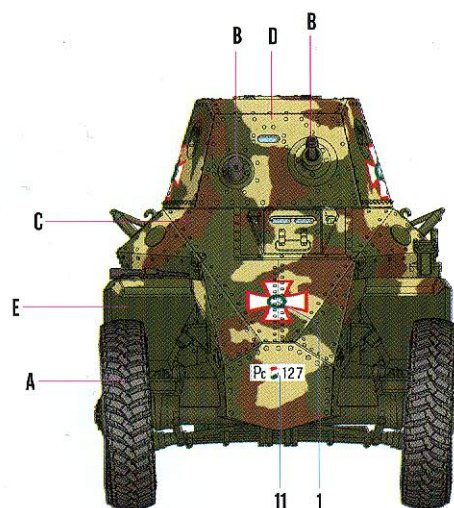
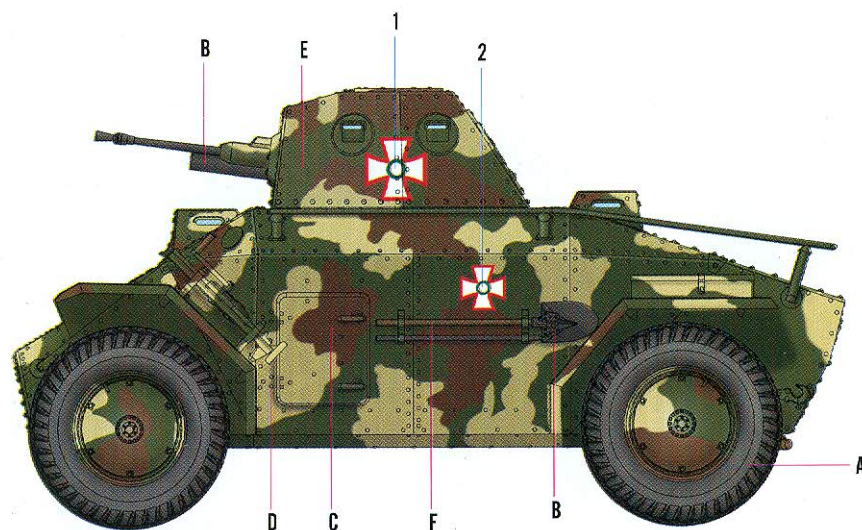
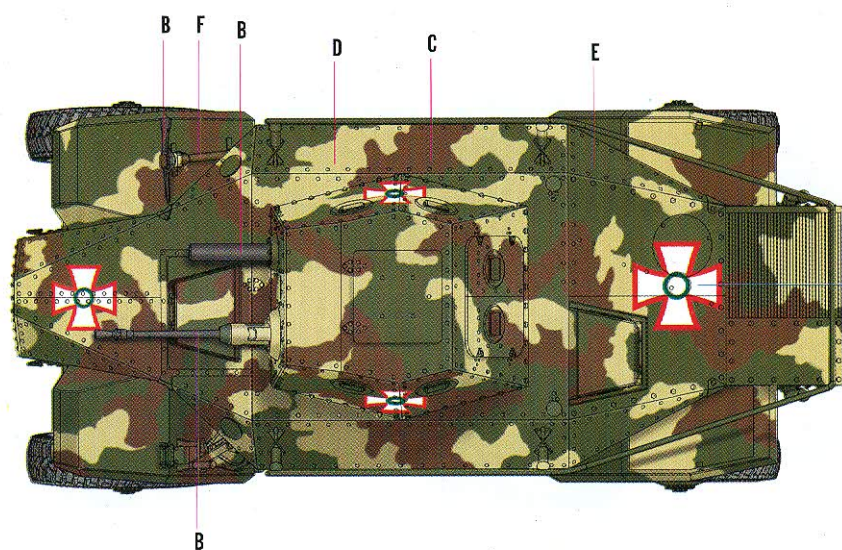
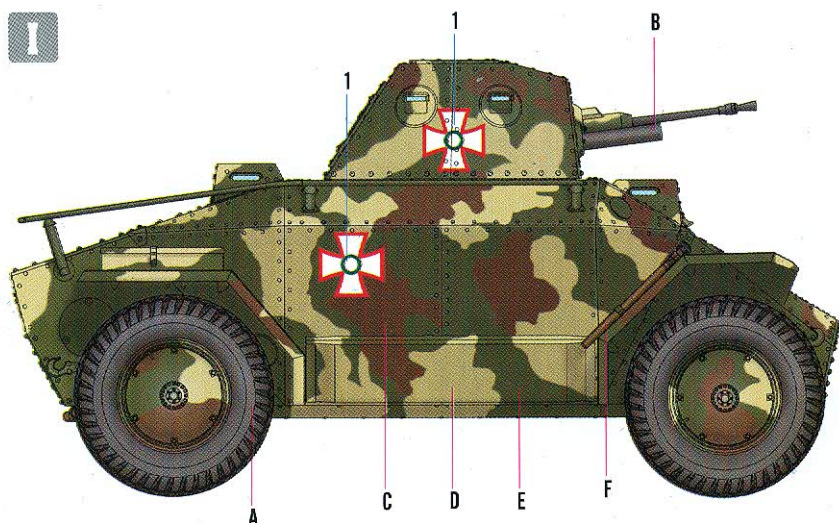


	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
A	胎黑色 Tire Black	H[77 137]	--	--	--	--
B	黑铁色 Steel	H[18 28]	864	1402	--	--
C	红棕色 Red Brown	H[47 41]	984	--	XF64	160





II

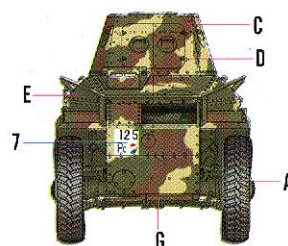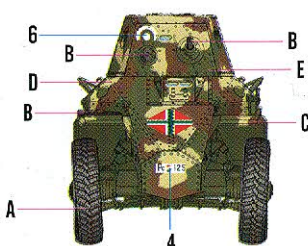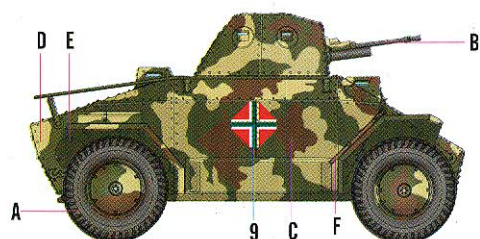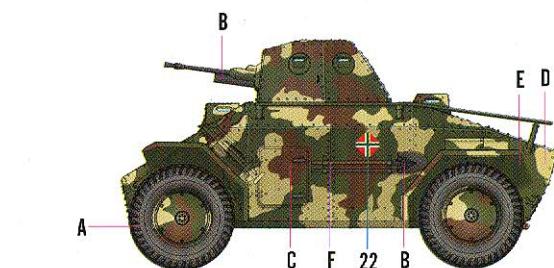

III

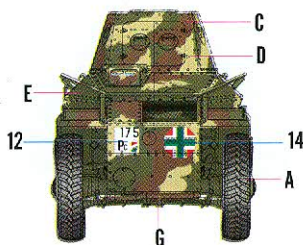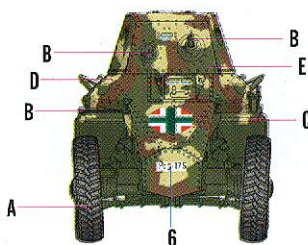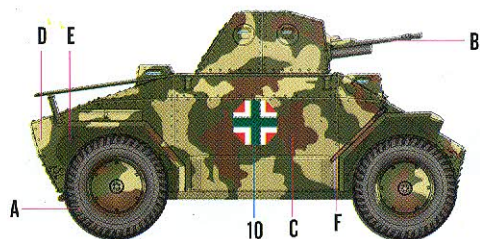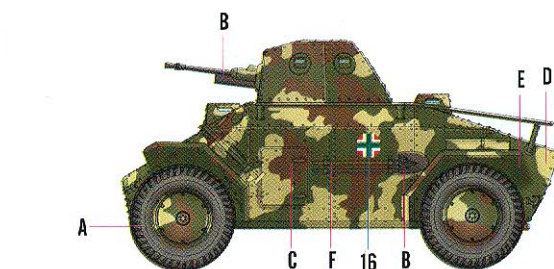

IV

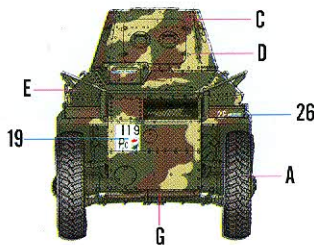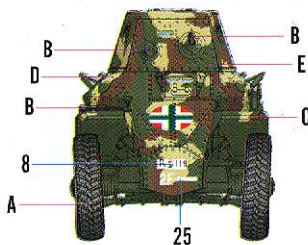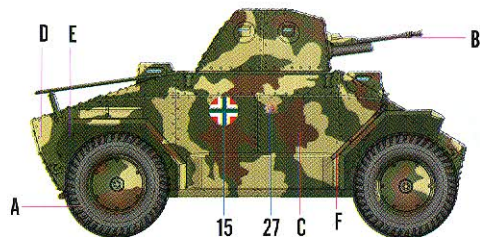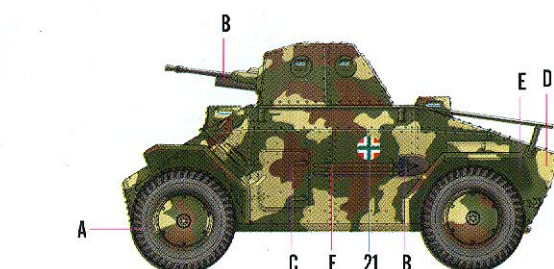

	Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
D	砂黄色 Sandy Yellow(Dark Yellow)	H 79 39	824	--	XF59	93
E	暗绿色 Dark Green	H 70	--	--	--	--
F	木棕色 Wood Brown	H 37 43	983	1701	--	186
G	烧铁色 Burnt Iron	H 76 61	863	1795	X10	53