
ITEM NO.:00398

M1131
Stryker Fire Support Vehicle

M1131 "斯崔克" 火力支援车

1:35 SCALE

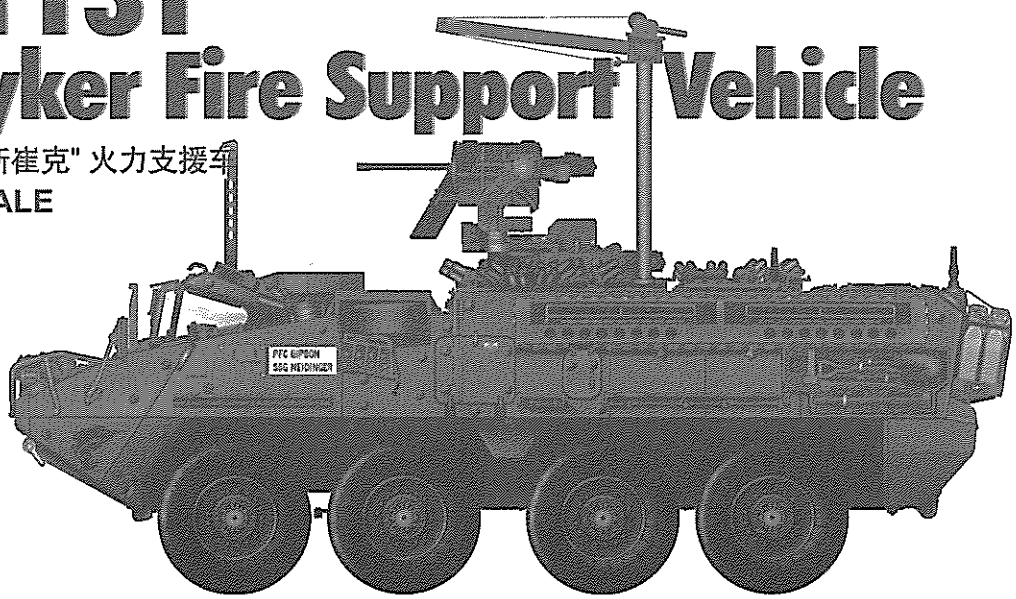

READ BEFORE ASSEMBLY:

- Study and understand these instructions thoroughly before beginning assembly
- When needed, remove photo-etch parts carefully using a modeling knife or photo etch sprue cutter, being careful not to damage or lose small parts.
- Take extra care in handling photo etch parts in order to avoid injury
- Apply instant cement sparingly to photo etch parts where instructed
- Tools recommended(not included in kit):Plastic and instant cements,sprue cutters,long nose pliers,,modeling knife, small files, tweezers, pin vise & scissors. Soft cloth and sandpaper will also assist in construction
- Glue and paint are not included in the kit. Use plastic cement and hobby paints only. Color guide for purchasing paint is included in the kit.

装配之前仔细阅读

- 小心用模型锉刀锉平所有零件表面的注射浇口。
- 小心用刀片切下蚀刻片零件，不要遗失小零件。
- 用强力快干胶水粘合蚀刻片零件和金属轴。过量的快干胶水使用可能导致可动零件会粘住，小心涂胶。
- 取蚀刻片时应特别注意安全，防止利边划伤手指。
- 某些零件表面需贴上水贴纸，请选择在装配的同时进行。
- 推荐模型工具(自备)：胶水，水口剪刀，长咀钳，刀片，锉刀，镊子，钳，钻，剪刀，瞬间快干胶。
- 软布同砂纸同时也应该是必备工具。
- 请使用塑料胶水和油漆，模型内不含。



cyanoacrylate glue
使用强力胶



weight
配重



make hole
钻孔



cut / remove
切除



bend
弯曲



file / sand
锉平



option
选择



no cement
不涂胶水



decal
贴纸

水贴纸的使用：


1.从水贴纸上剪下印花；
2.将印花放入温水中浸10秒，然后放在干净布上。
3.拿着印花纸板将印花移到模型上；
4.手指蘸水将印花移到适当的位置；
5.用软布轻压印花直至水干，汽泡消失。

DECAL APPLICATION:


1.Cut decals from sheet as needed
2. Dip the decal in warm water for about 10 seconds and then place on soft clean cloth.
3. Hold the decal backing sheet edge and gently slide the decal onto the model in its proper position.
4. While still wet,decal can be adjusted for better fit on model by dampening it gently with your finger.
5. When placed in the proper position,gently press decal down with a soft cloth until excess water and air bubbles are gone.
6. Allow decal to dry completely before handling model

部品图
Parts


AX2

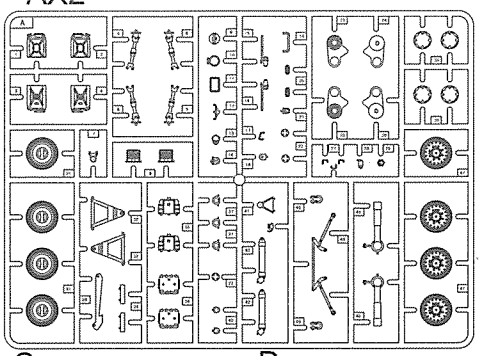


B

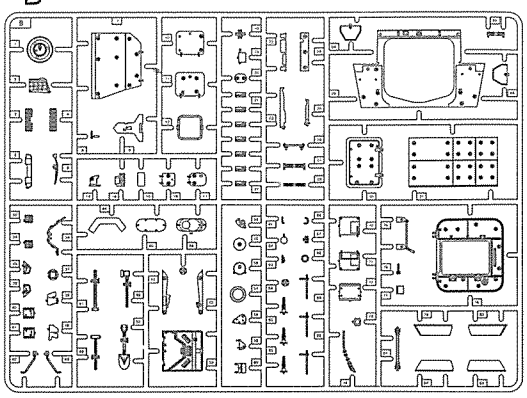


C

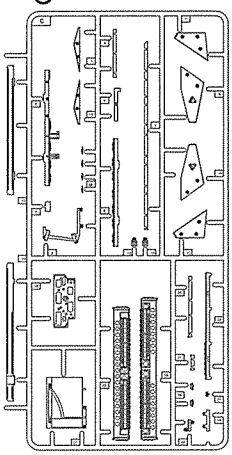


D

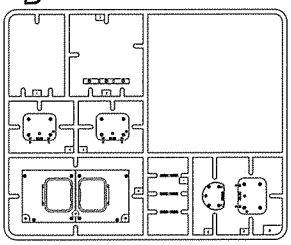

H

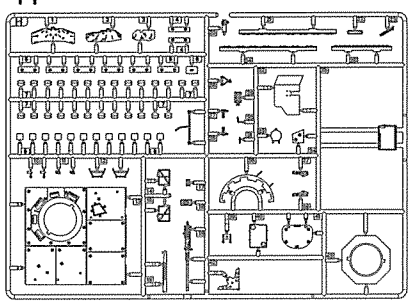


P

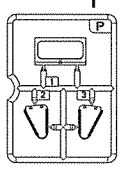


《蚀刻片》
Photo Etched Parts(PE)


A

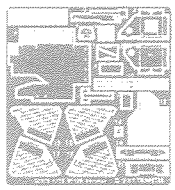


E

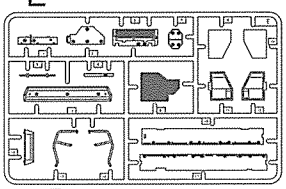


L

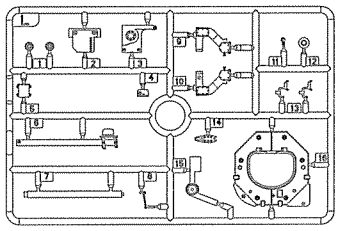


S

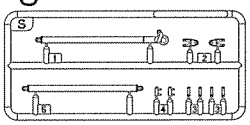


R

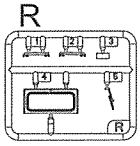

N




Figures（A）

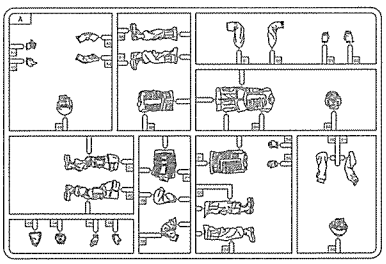


装备随个人喜好选择安装
Attach the military Stowages as you like


《车面》
Upper hull

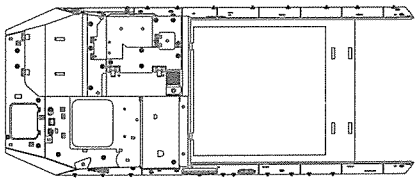


《车底》
Lower hull

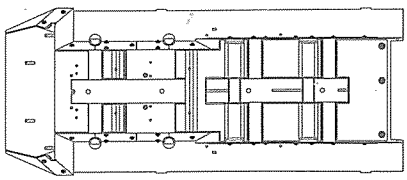

B

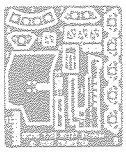

《轮胎》
Tyre ---- X8



铜丝 ∅0.3x90mm
Brass wire




《捆扎带》
Strapping




《水贴纸》
Decal




Gx2

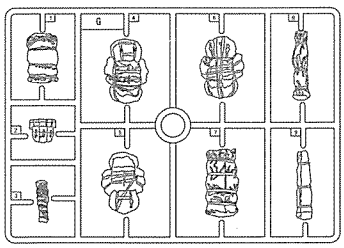


《遮盖纸》
Mask



《食品箱》
MRE ration packs

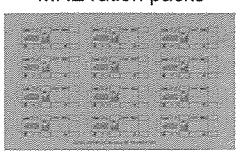


1

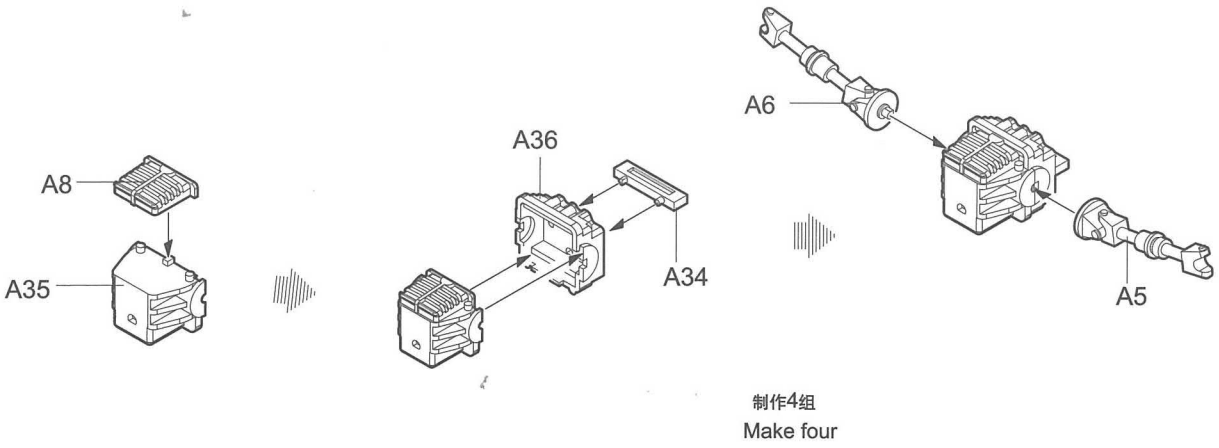


制作4组
Make four


2 车底组装
Lower hull assembly

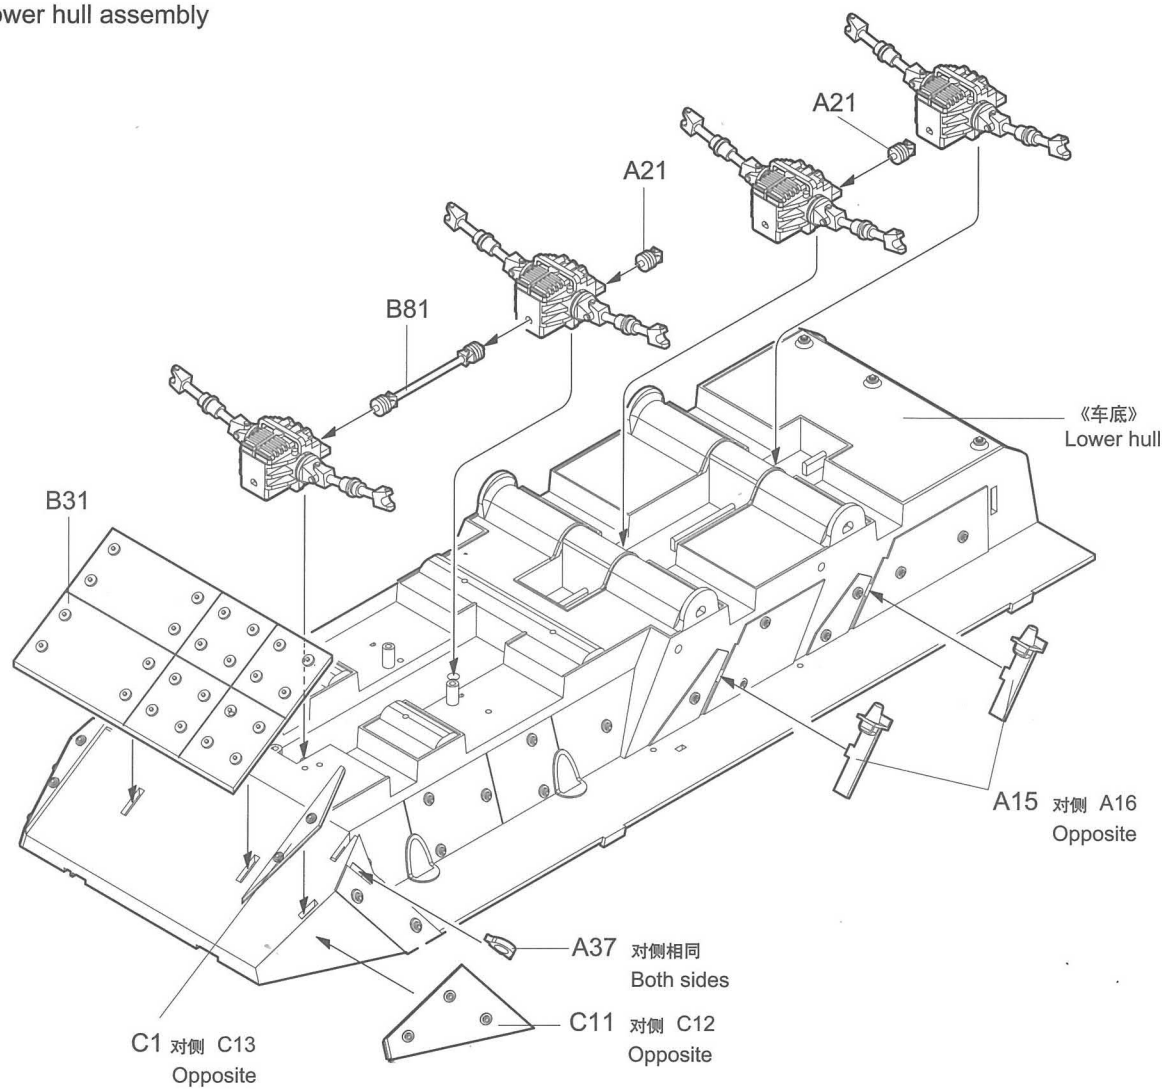


3 车底组装
Lower hull assembly

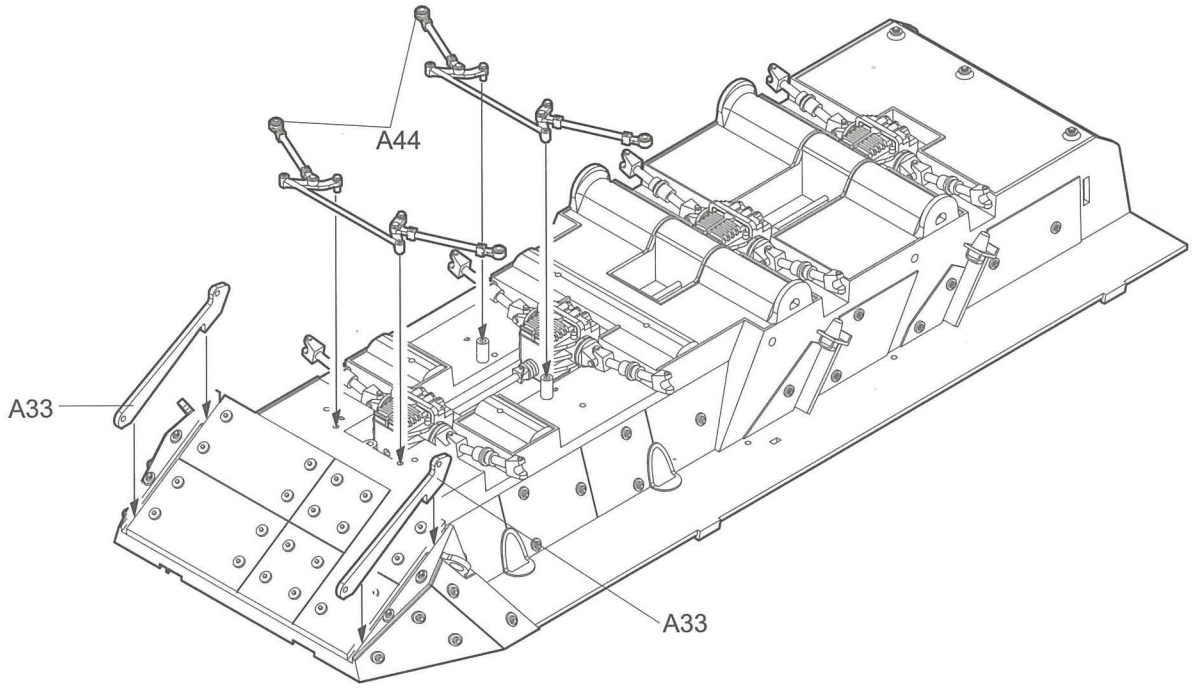


4 车底组装
Lower hull assembly

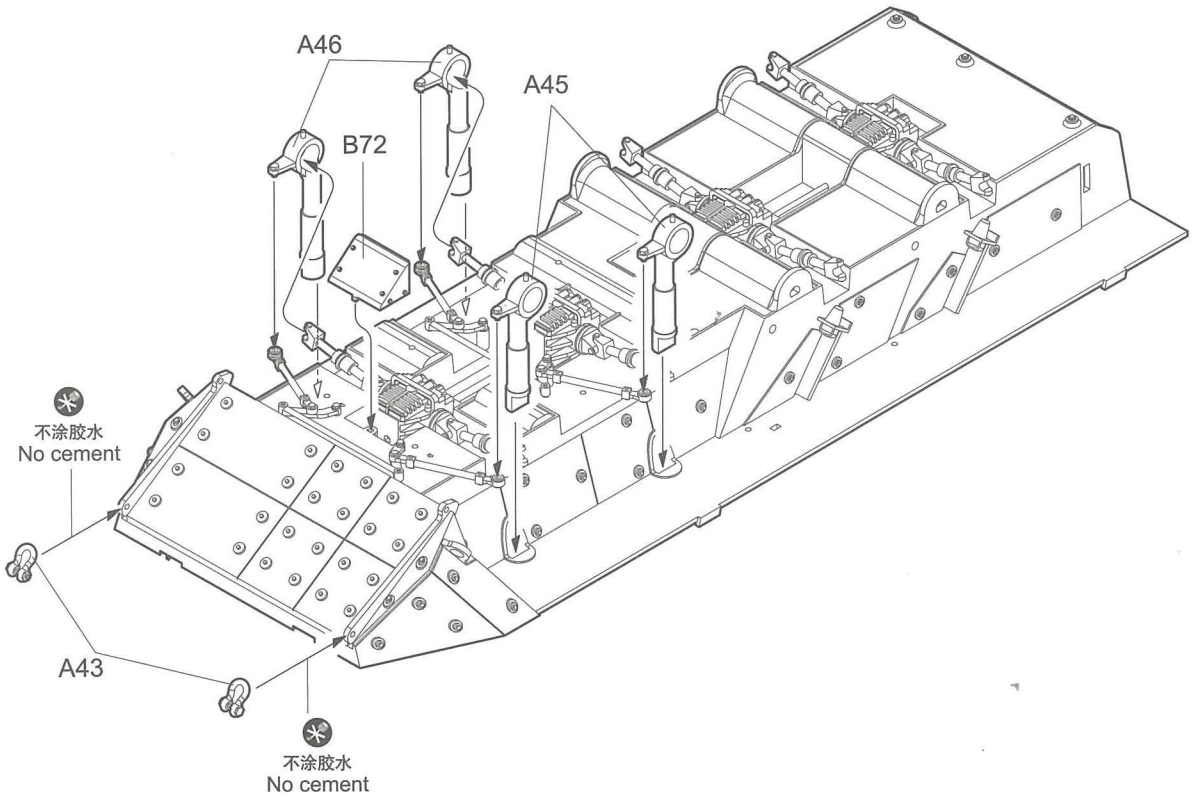

5 车底组装
Lower hull assembly

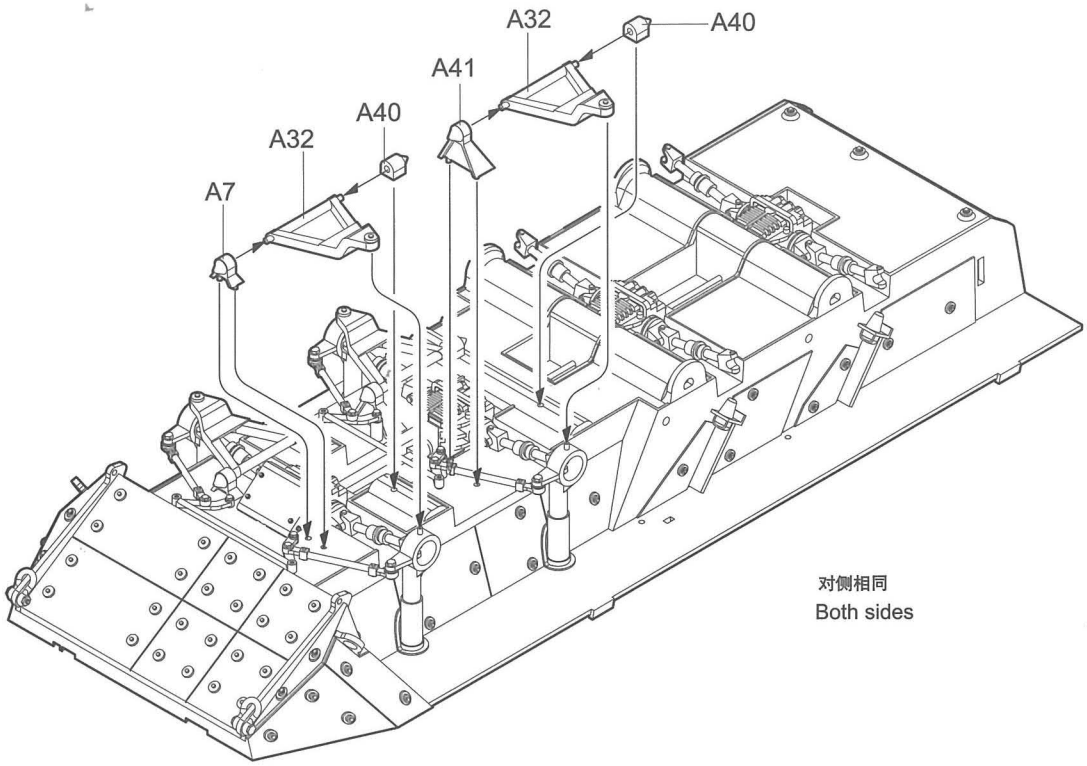


对侧相同
Both sides

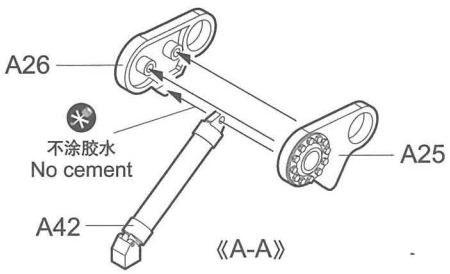


《A-A》

制作2组
Make two

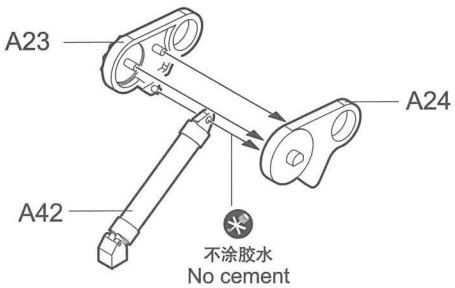


《B-B》

制作2组
Make two

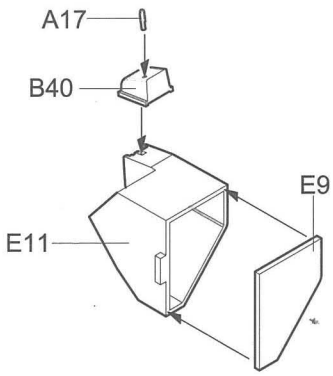


《C-C》

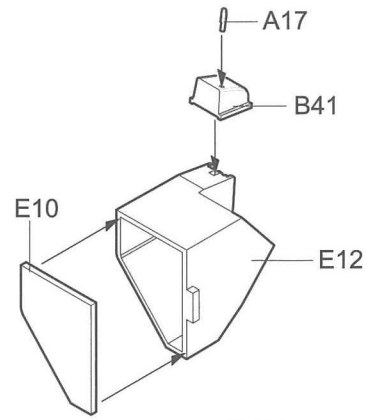


《D-D》

6 车底组装 Lower hull assembly

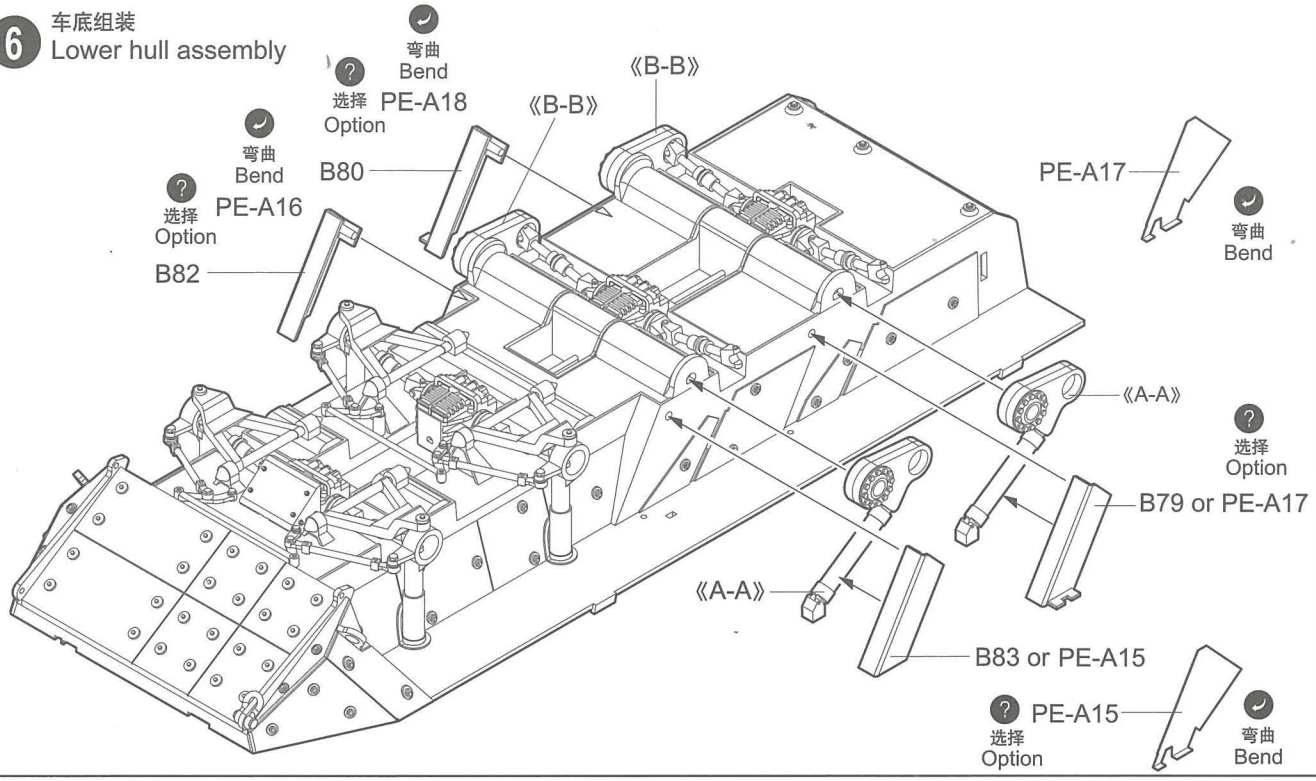


7 车轮安装 Wheel installation

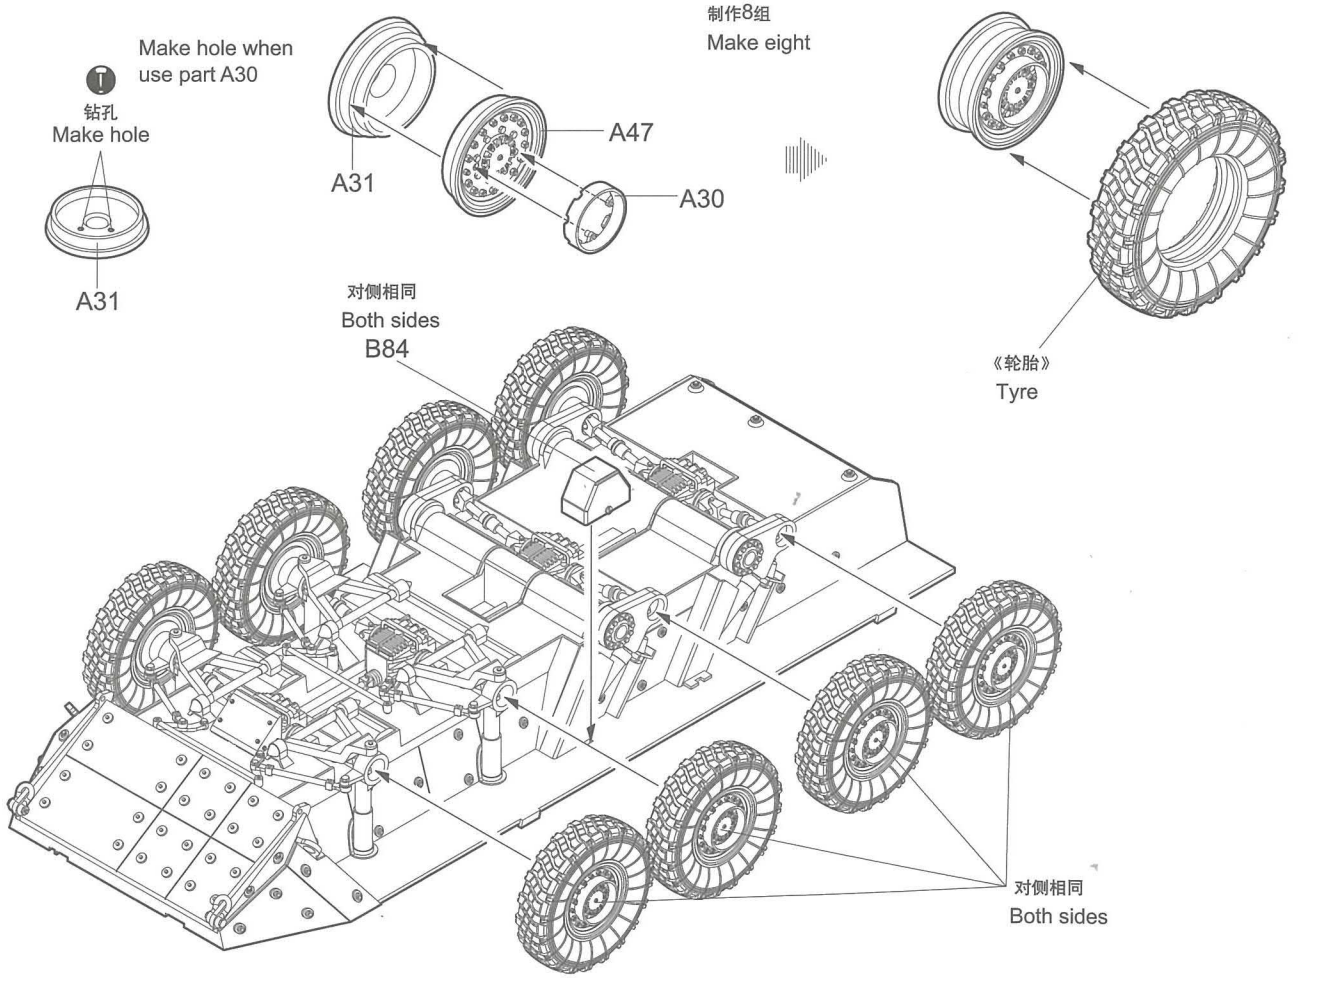


8

《E-E》

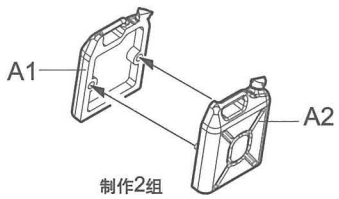


制作2组
Make two

《F-F》

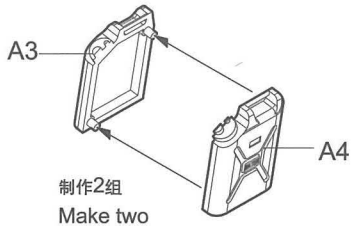



制作2组
Make two

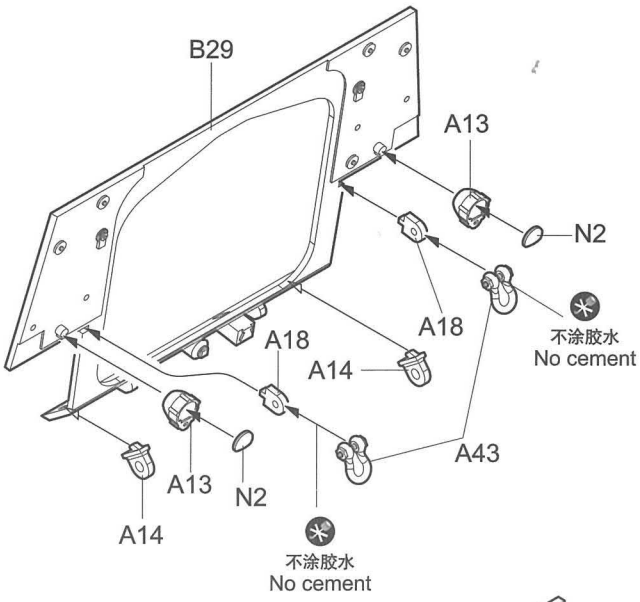



不涂胶水
No cement

不涂胶水
No cement

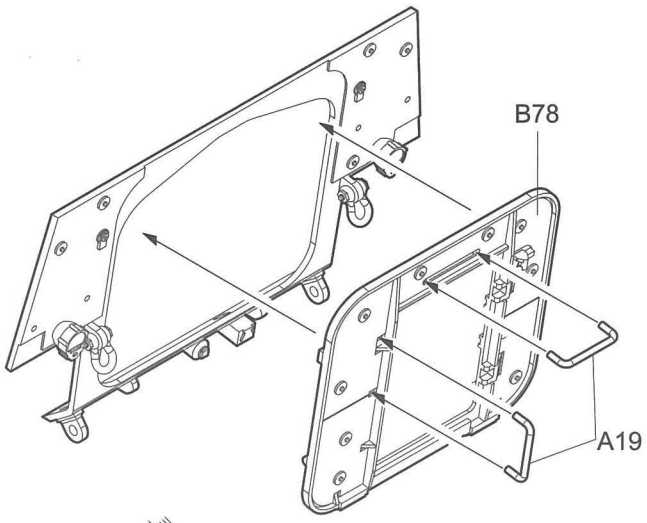


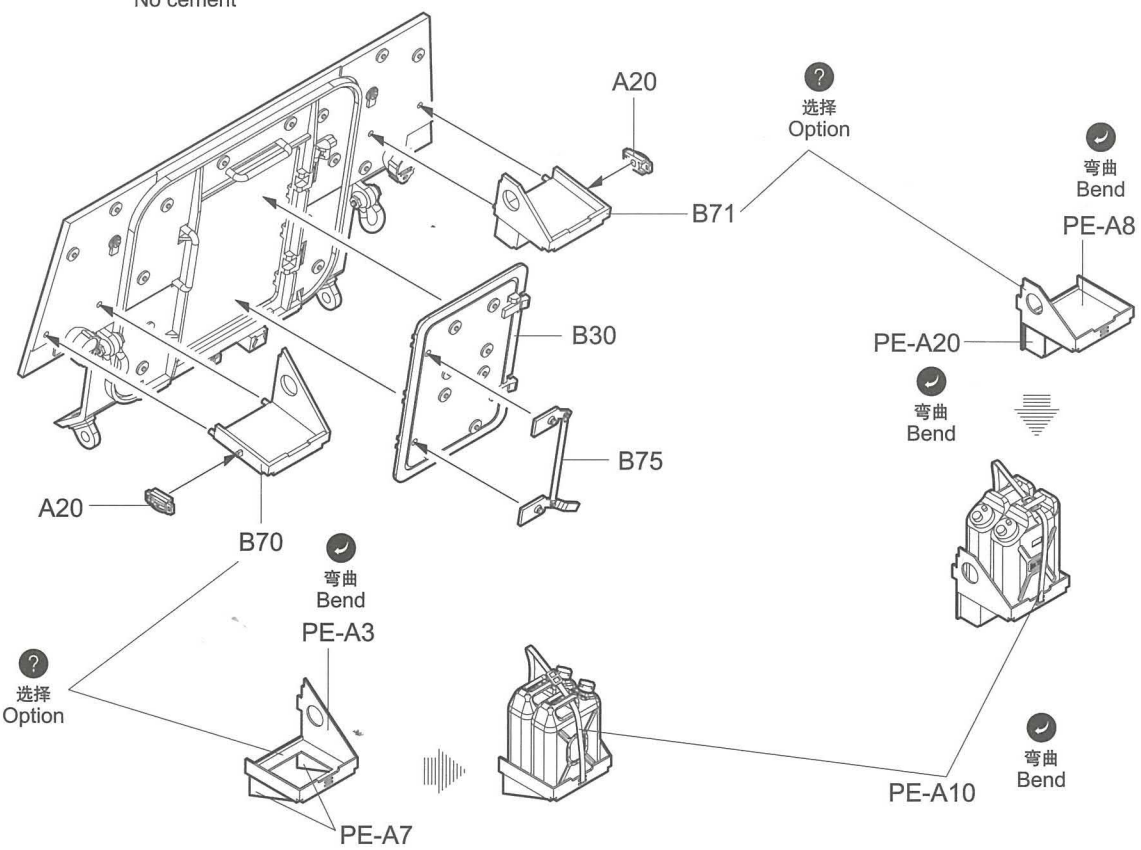

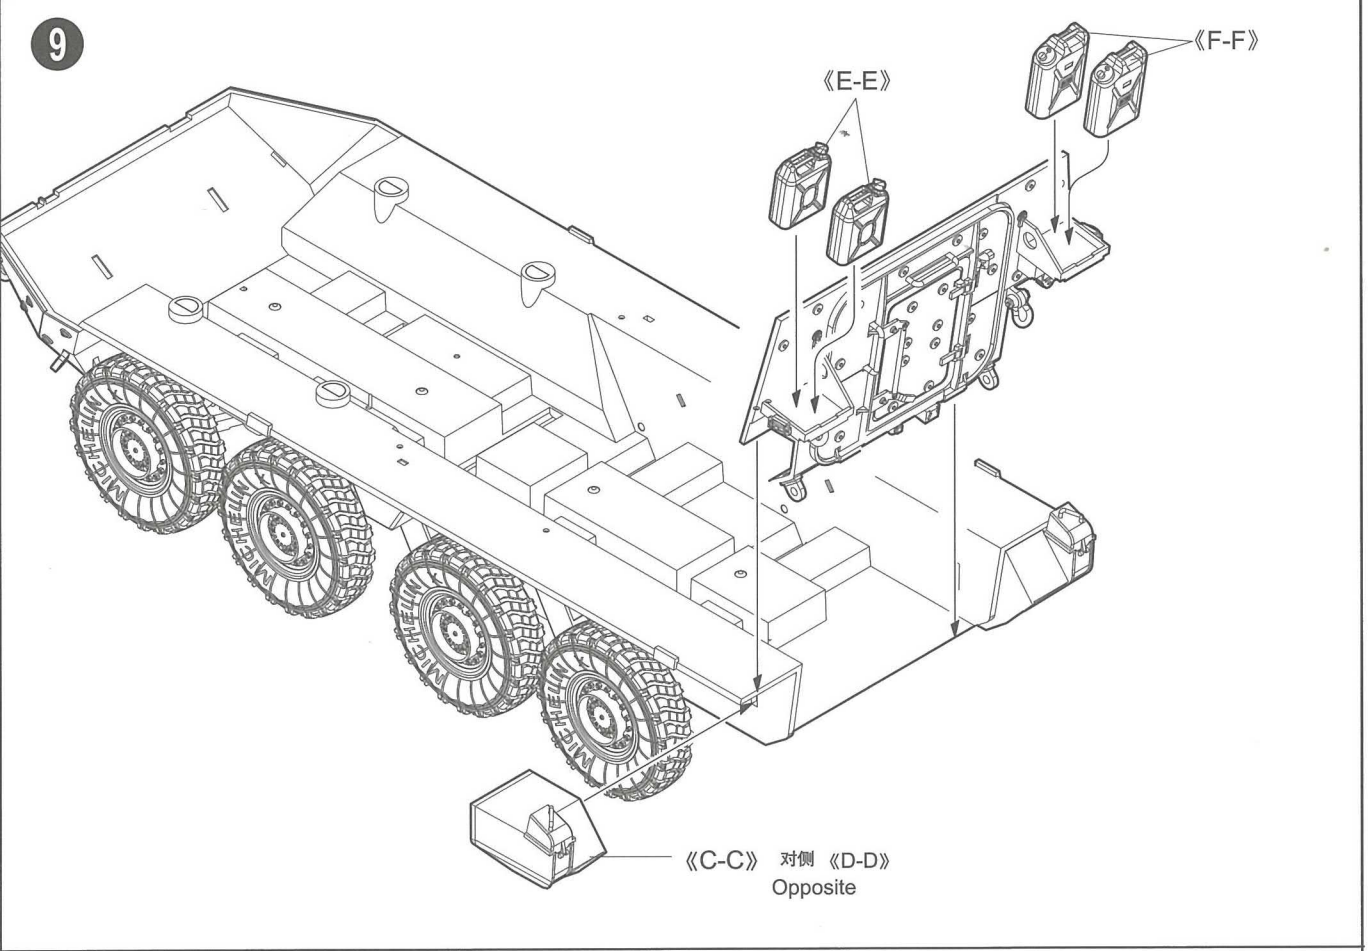

9
《E-E》
《F-F》
《C-C》 对侧 《D-D》
Opposite

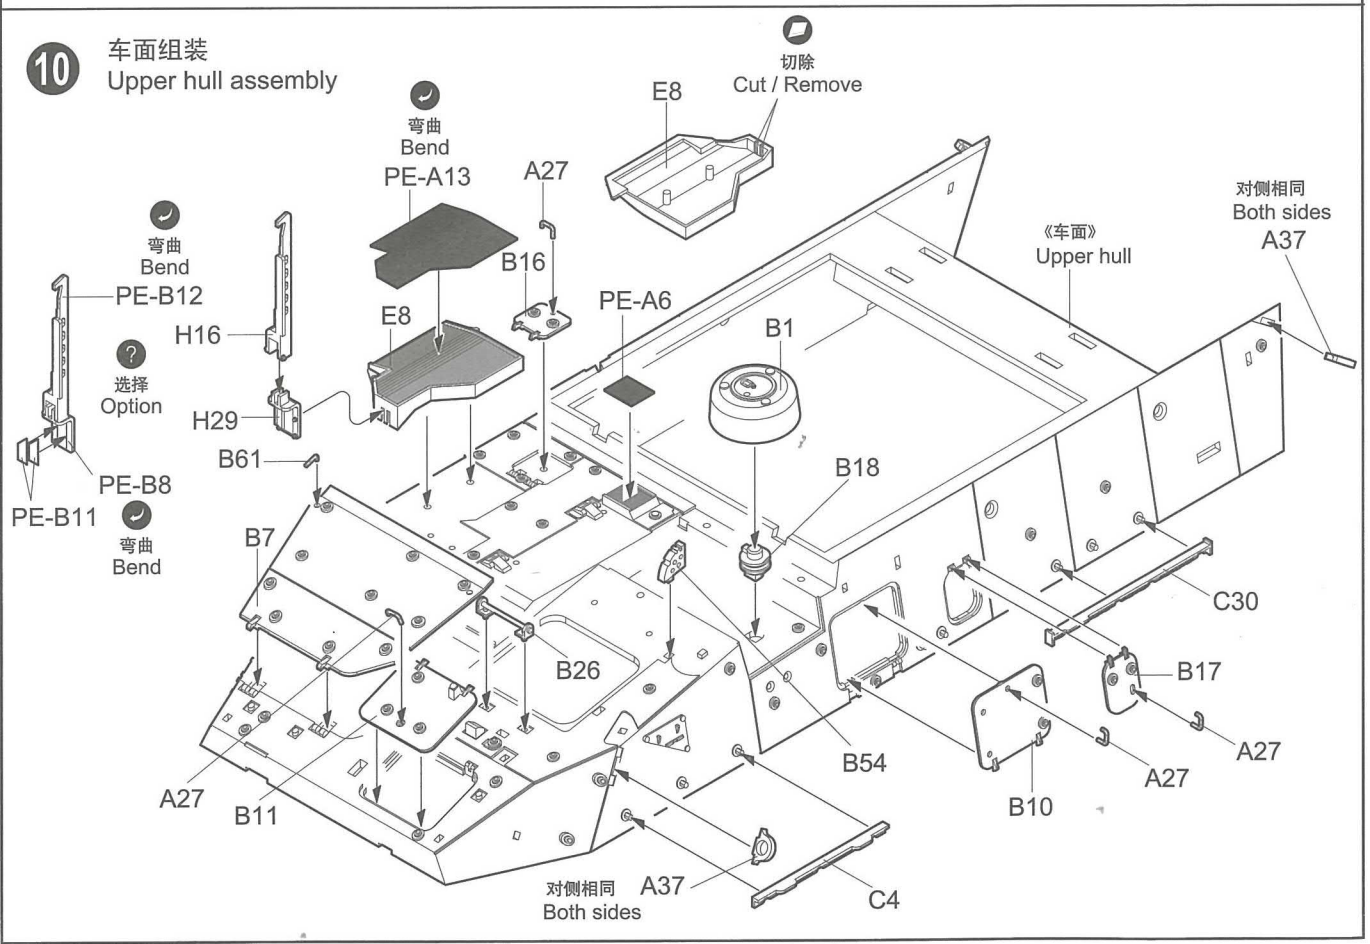

10
车面组装
Upper hull assembly
切除
Cut / Remove
E8
弯曲
Bend
PE-A13
A27
对侧相同
Both sides
《车面》
Upper hull
A37
弯曲
Bend
PE-B12
B16
PE-A6
H16
E8
B1
选择
Option
H29
B61
B18
PE-B8
PE-B11
弯曲
Bend
B7
C30
B26
B17
A27
B54
A27
A27
B11
B10
对侧相同
Both sides
A37
C4


11 车面组装 Upper hull assembly

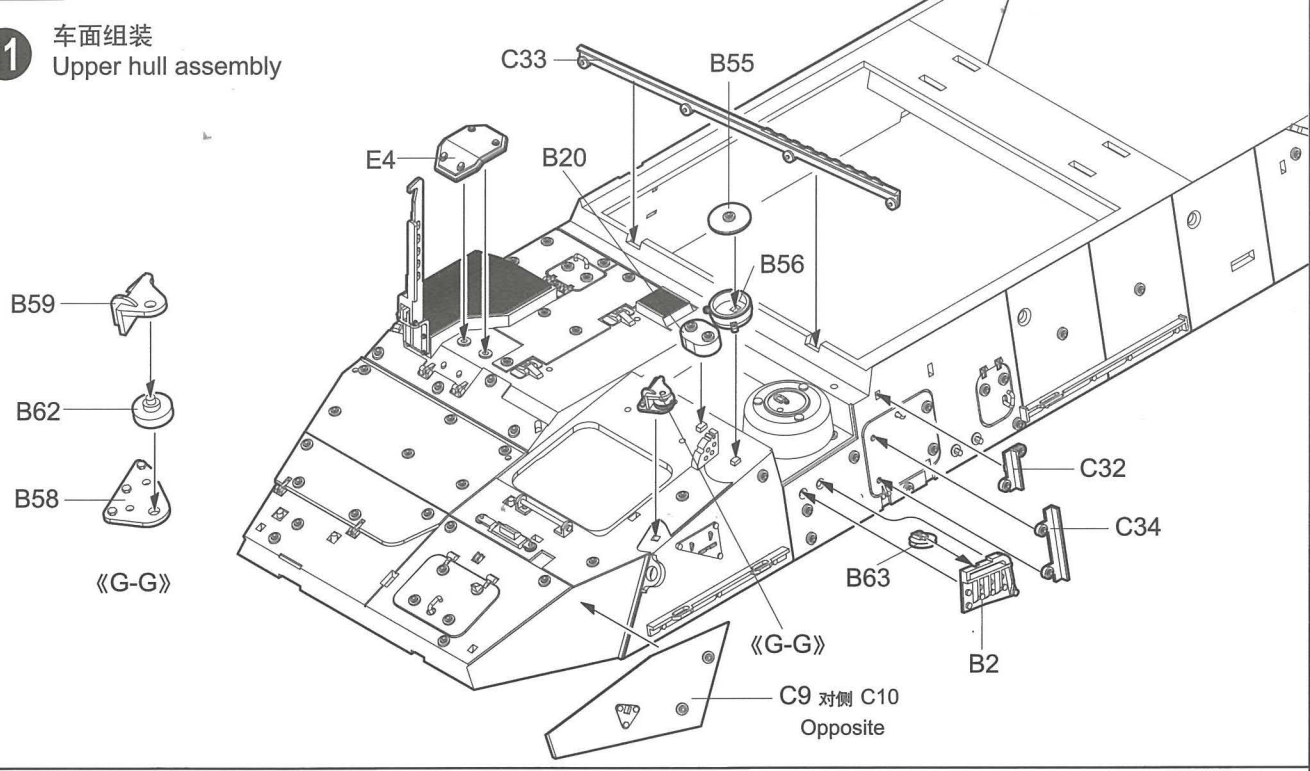



12

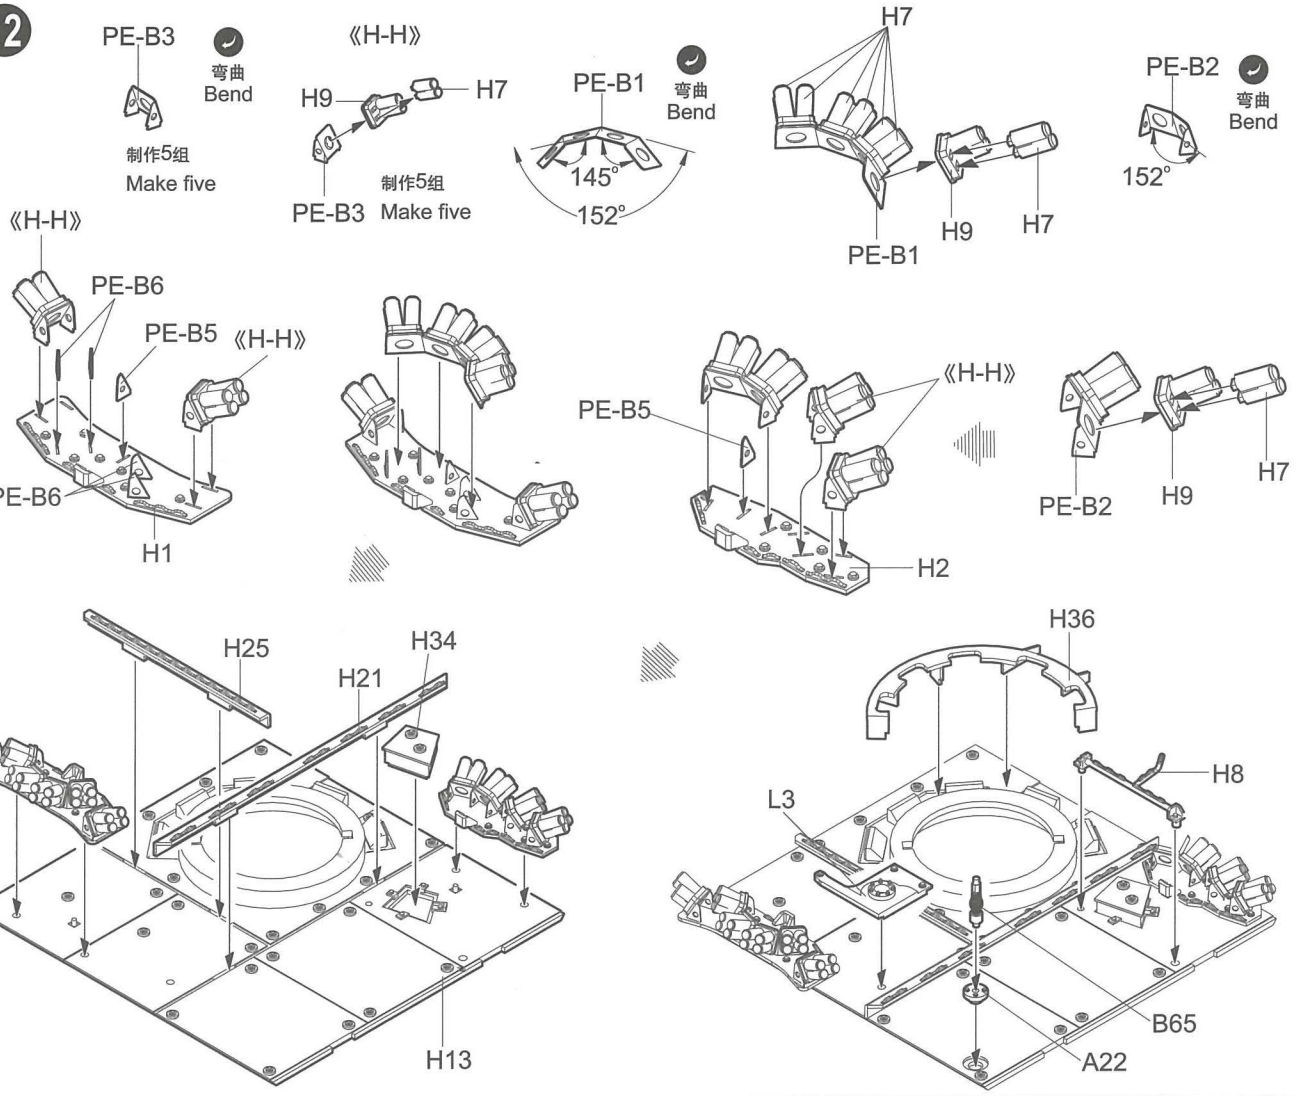


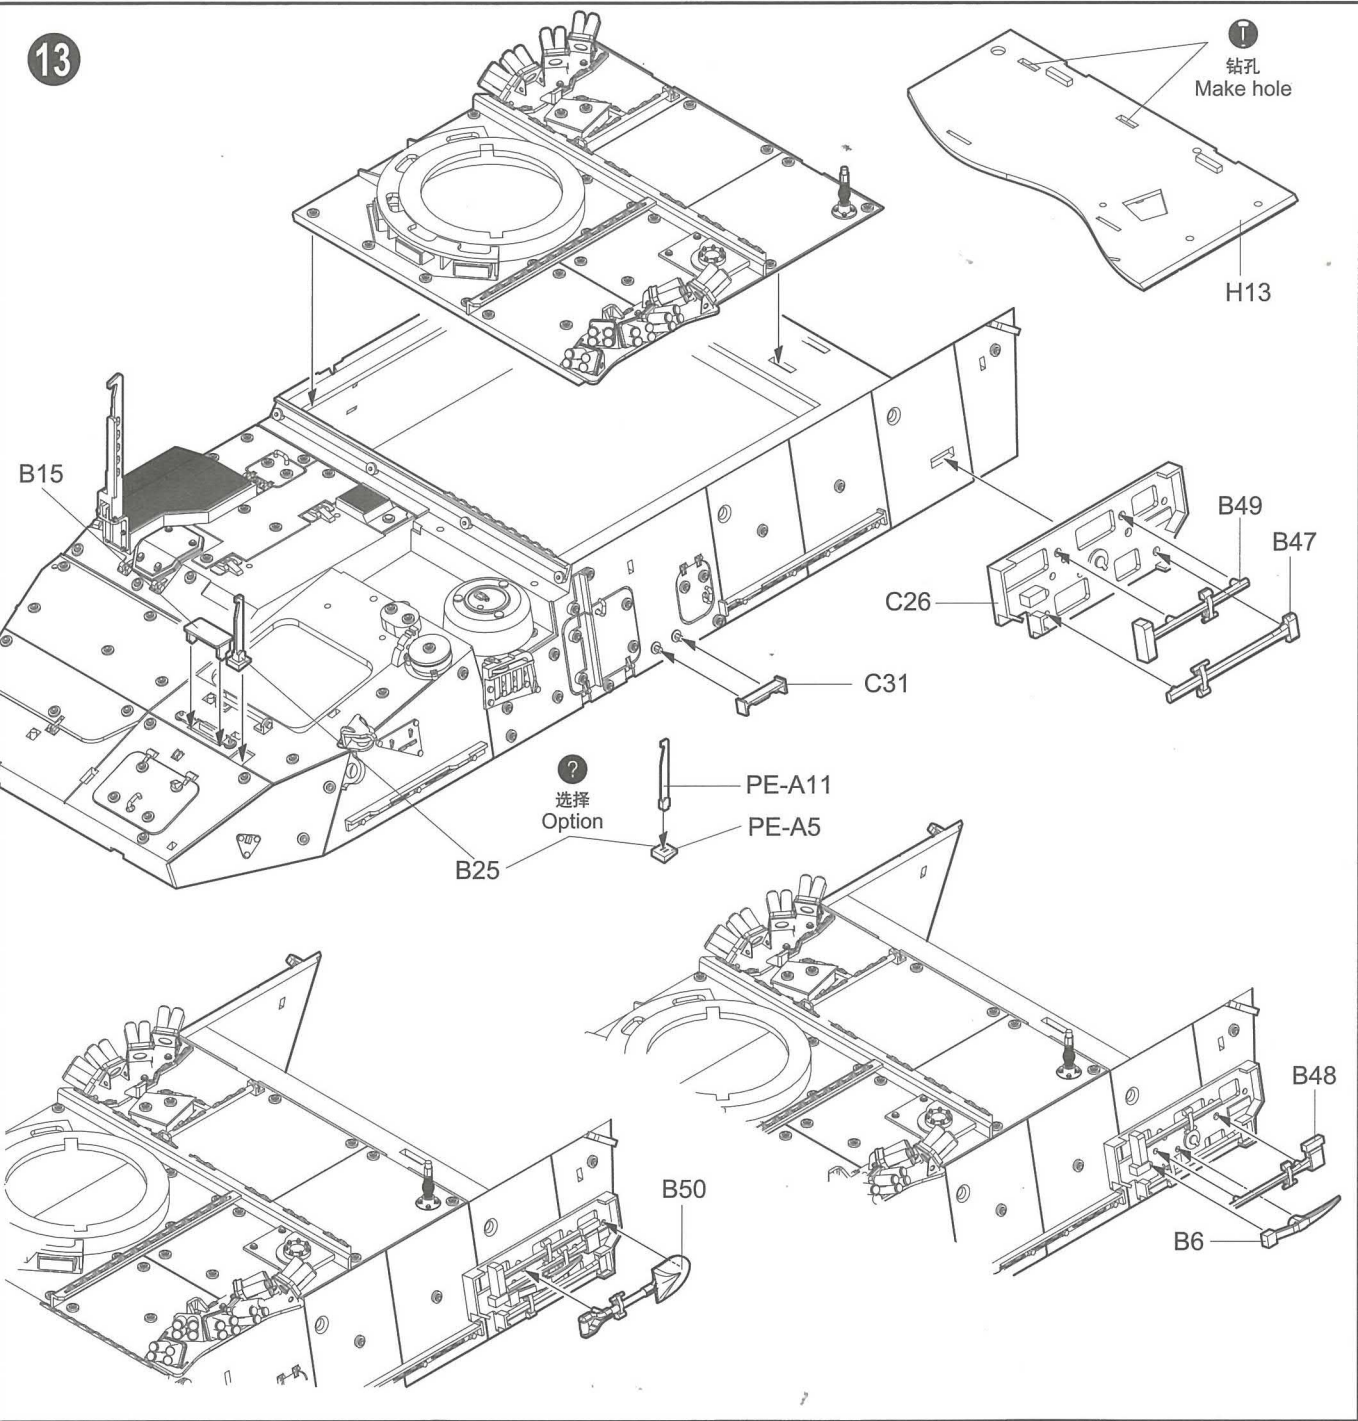

13
钻孔
Make hole
H13
B15
B49
B47
C26
C31
选择
Option
PE-A11
PE-A5
B25
B48
B50
B6

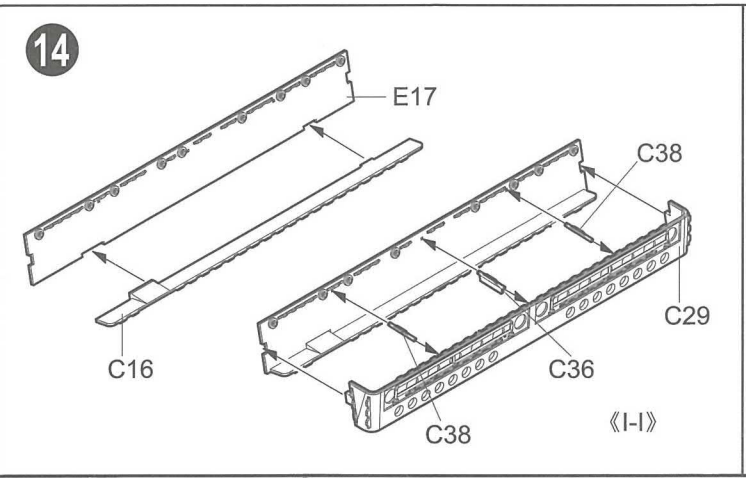

14
E17
C38
C16
C29
C36
C38
《I-I》

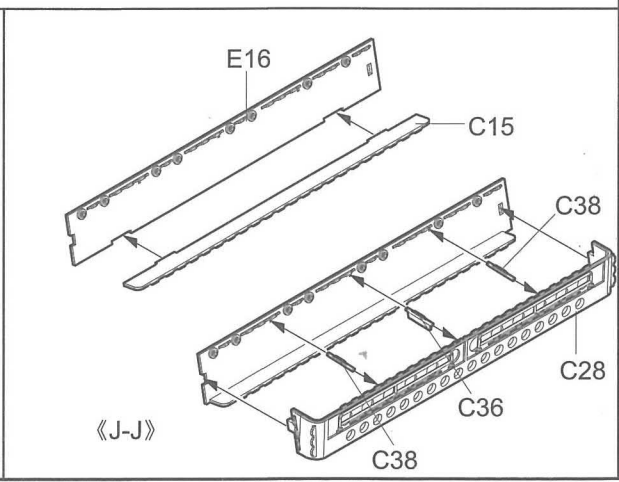

E16
C15
C38
C28
C36
C38
《J-J》

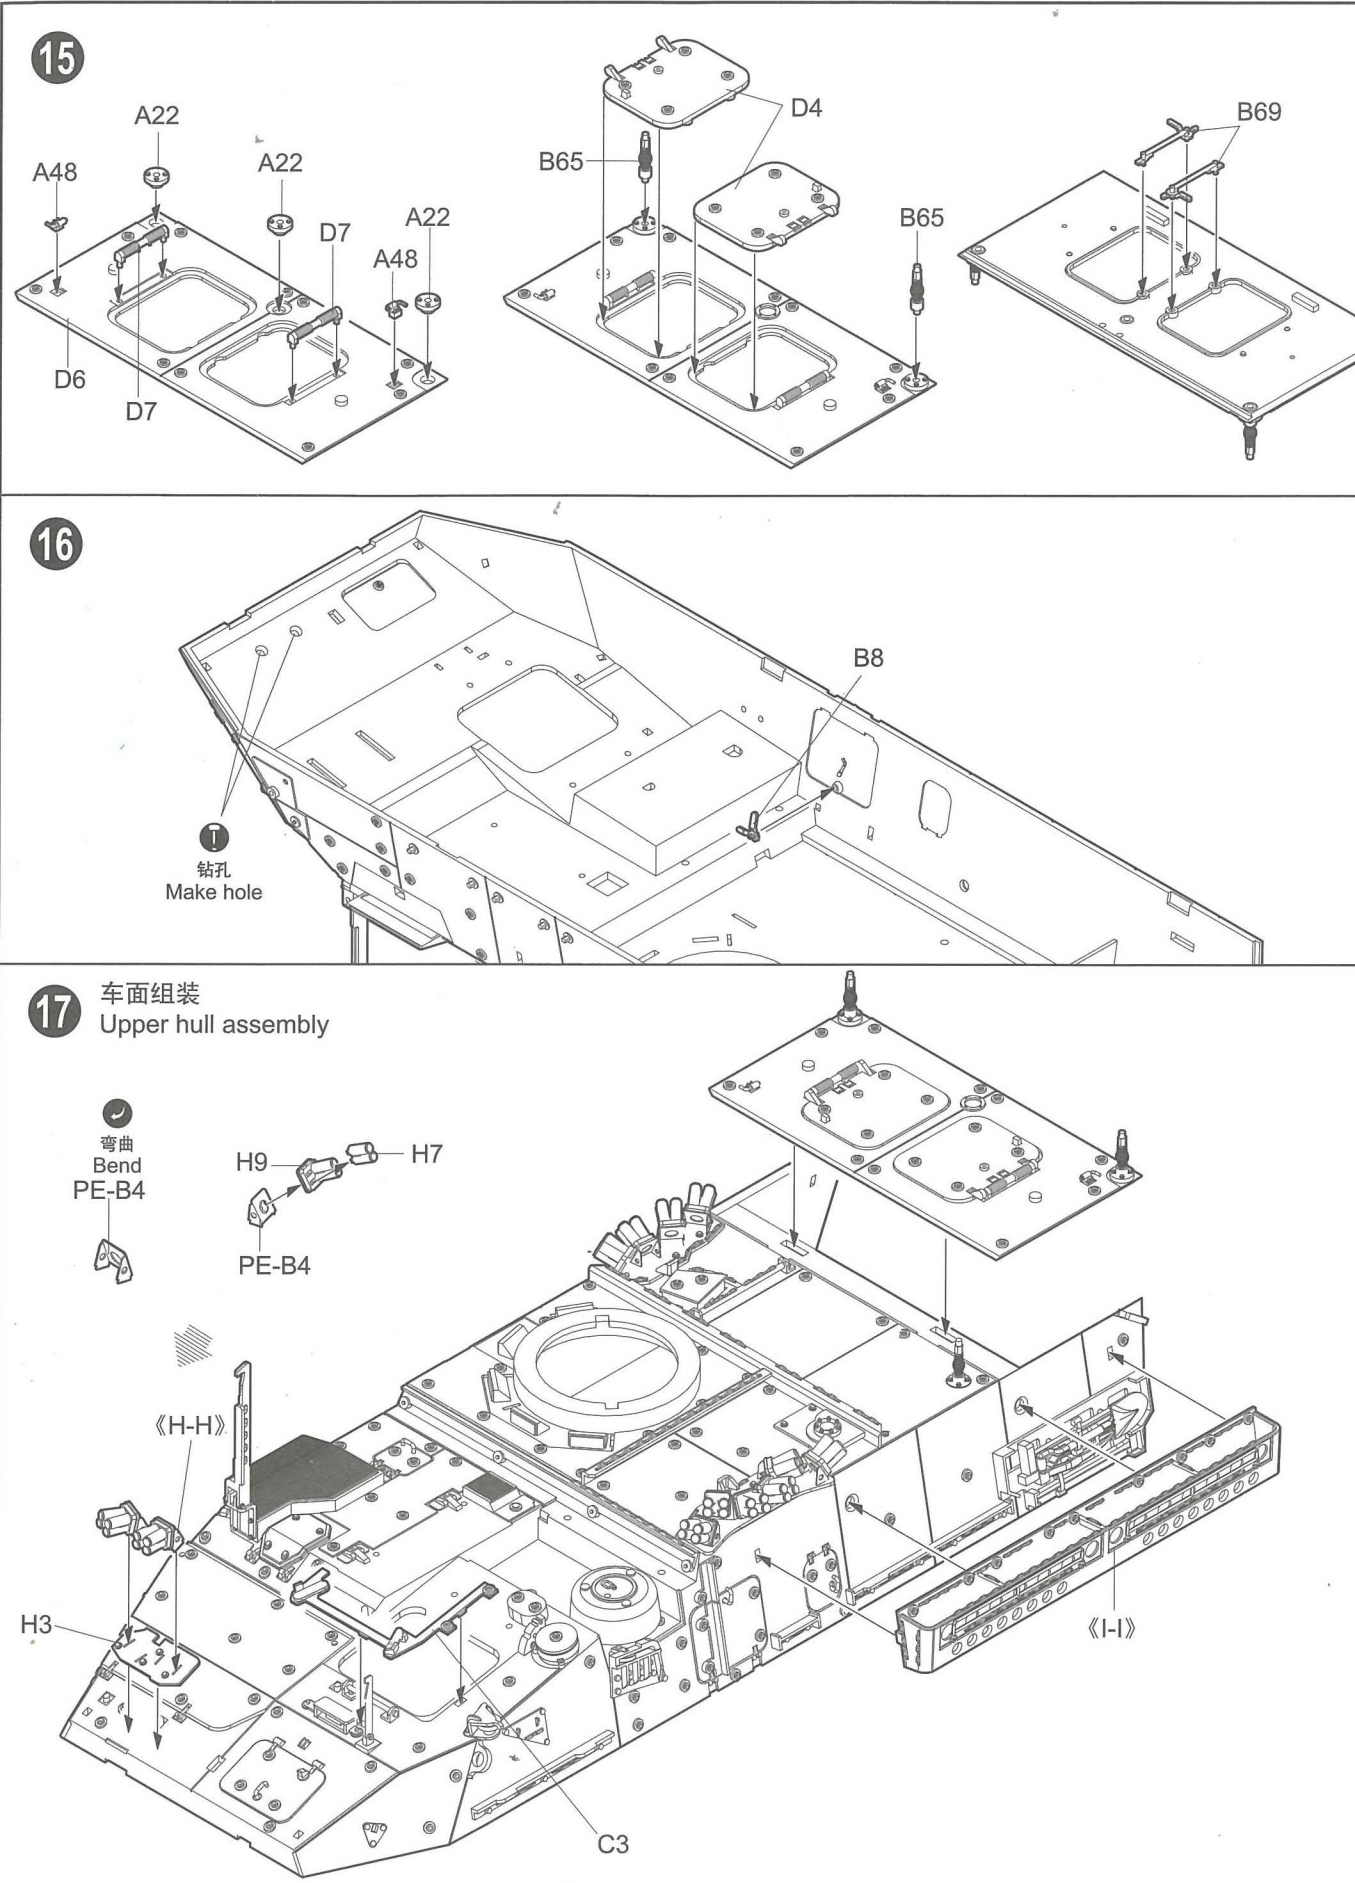
15
A22
A48
A22
D7
A22
A48
D6
D7
D4
B65
B65
B69
16
B8
钻孔
Make hole
17
车面组装
Upper hull assembly
弯曲
Bend
PE-B4
H9
H7
PE-B4
《H-H》
H3
C3
《I-I》

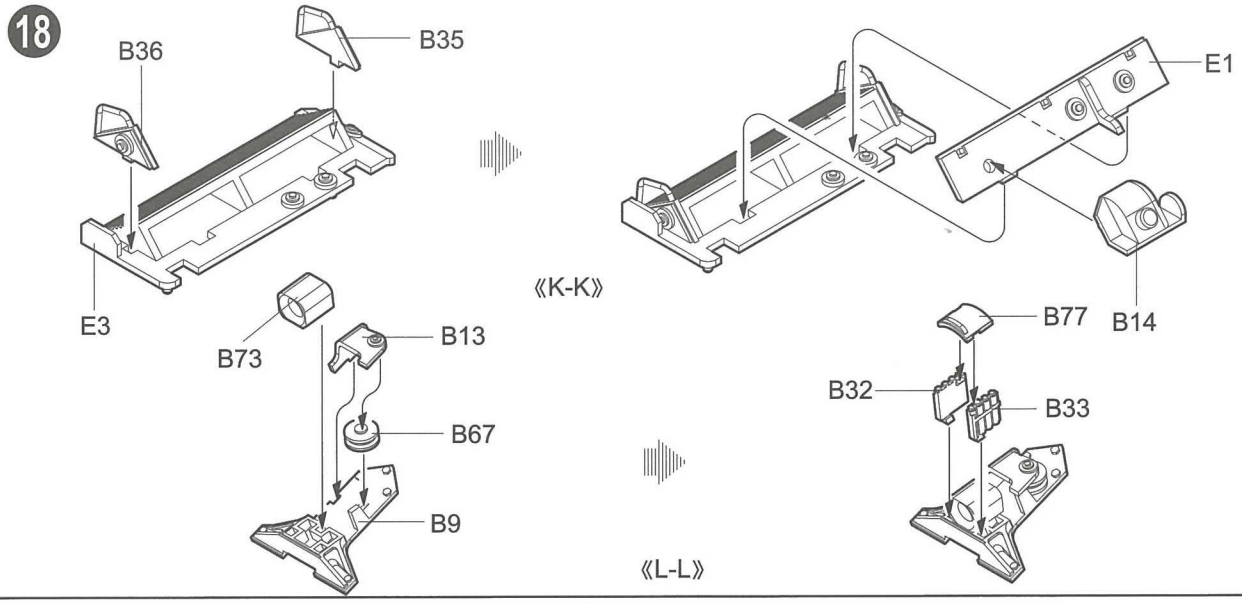

18
B36
B35
E3
B73
B13
B67
B9
《K-K》
E1
B14
B77
B32
B33
《L-L》

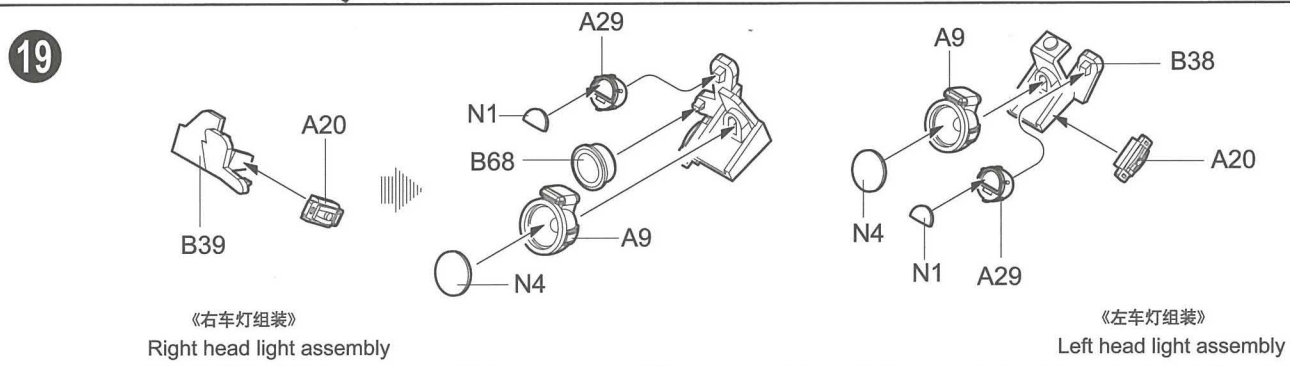
19
A20
B39
《右车灯组装》
Right head light assembly
A29
N1
B68
A9
N4
A9
B38
A20
N4
N1
A29
《左车灯组装》
Left head light assembly

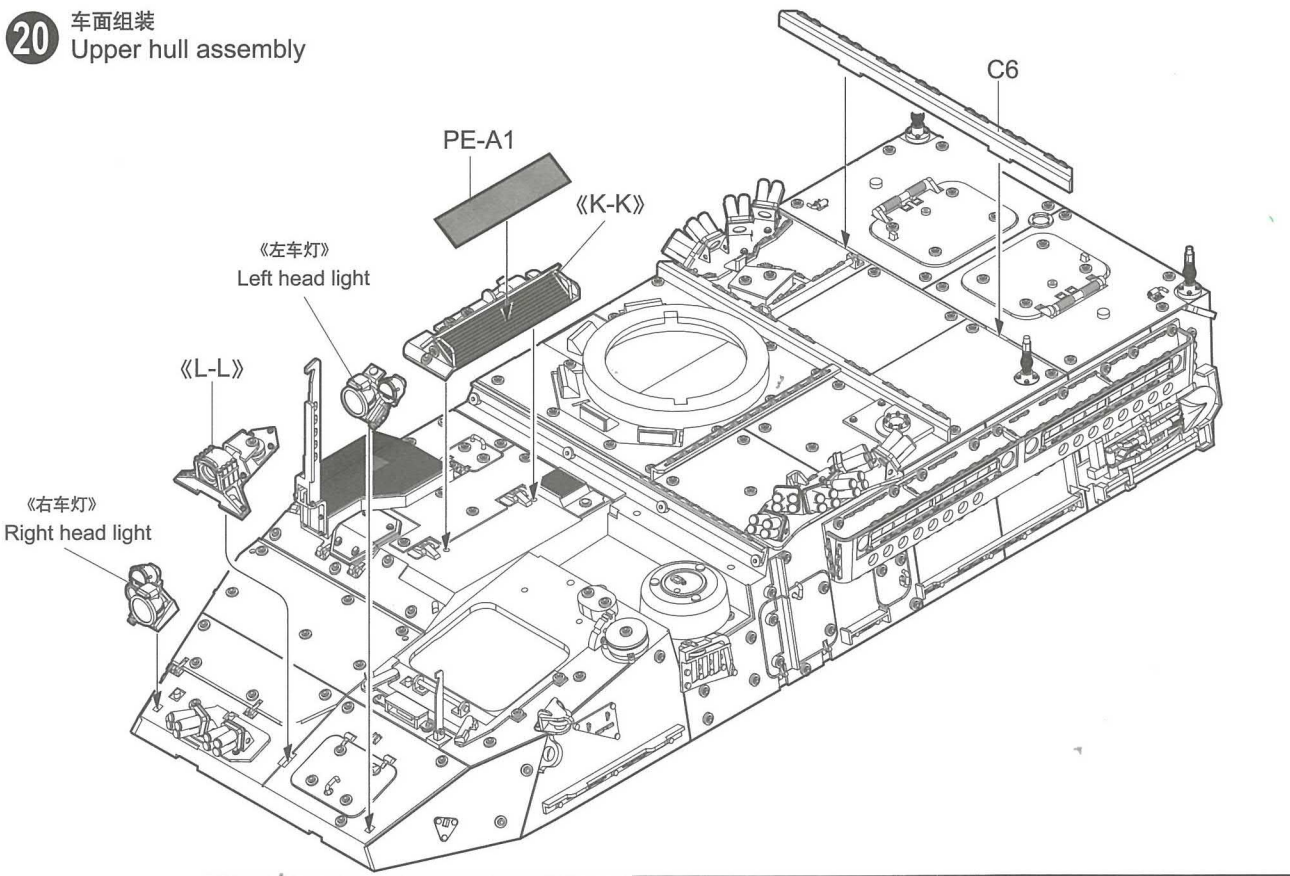

20
车面组装
Upper hull assembly
C6
PE-A1
《K-K》
《左车灯》
Left head light
《L-L》
《右车灯》
Right head light

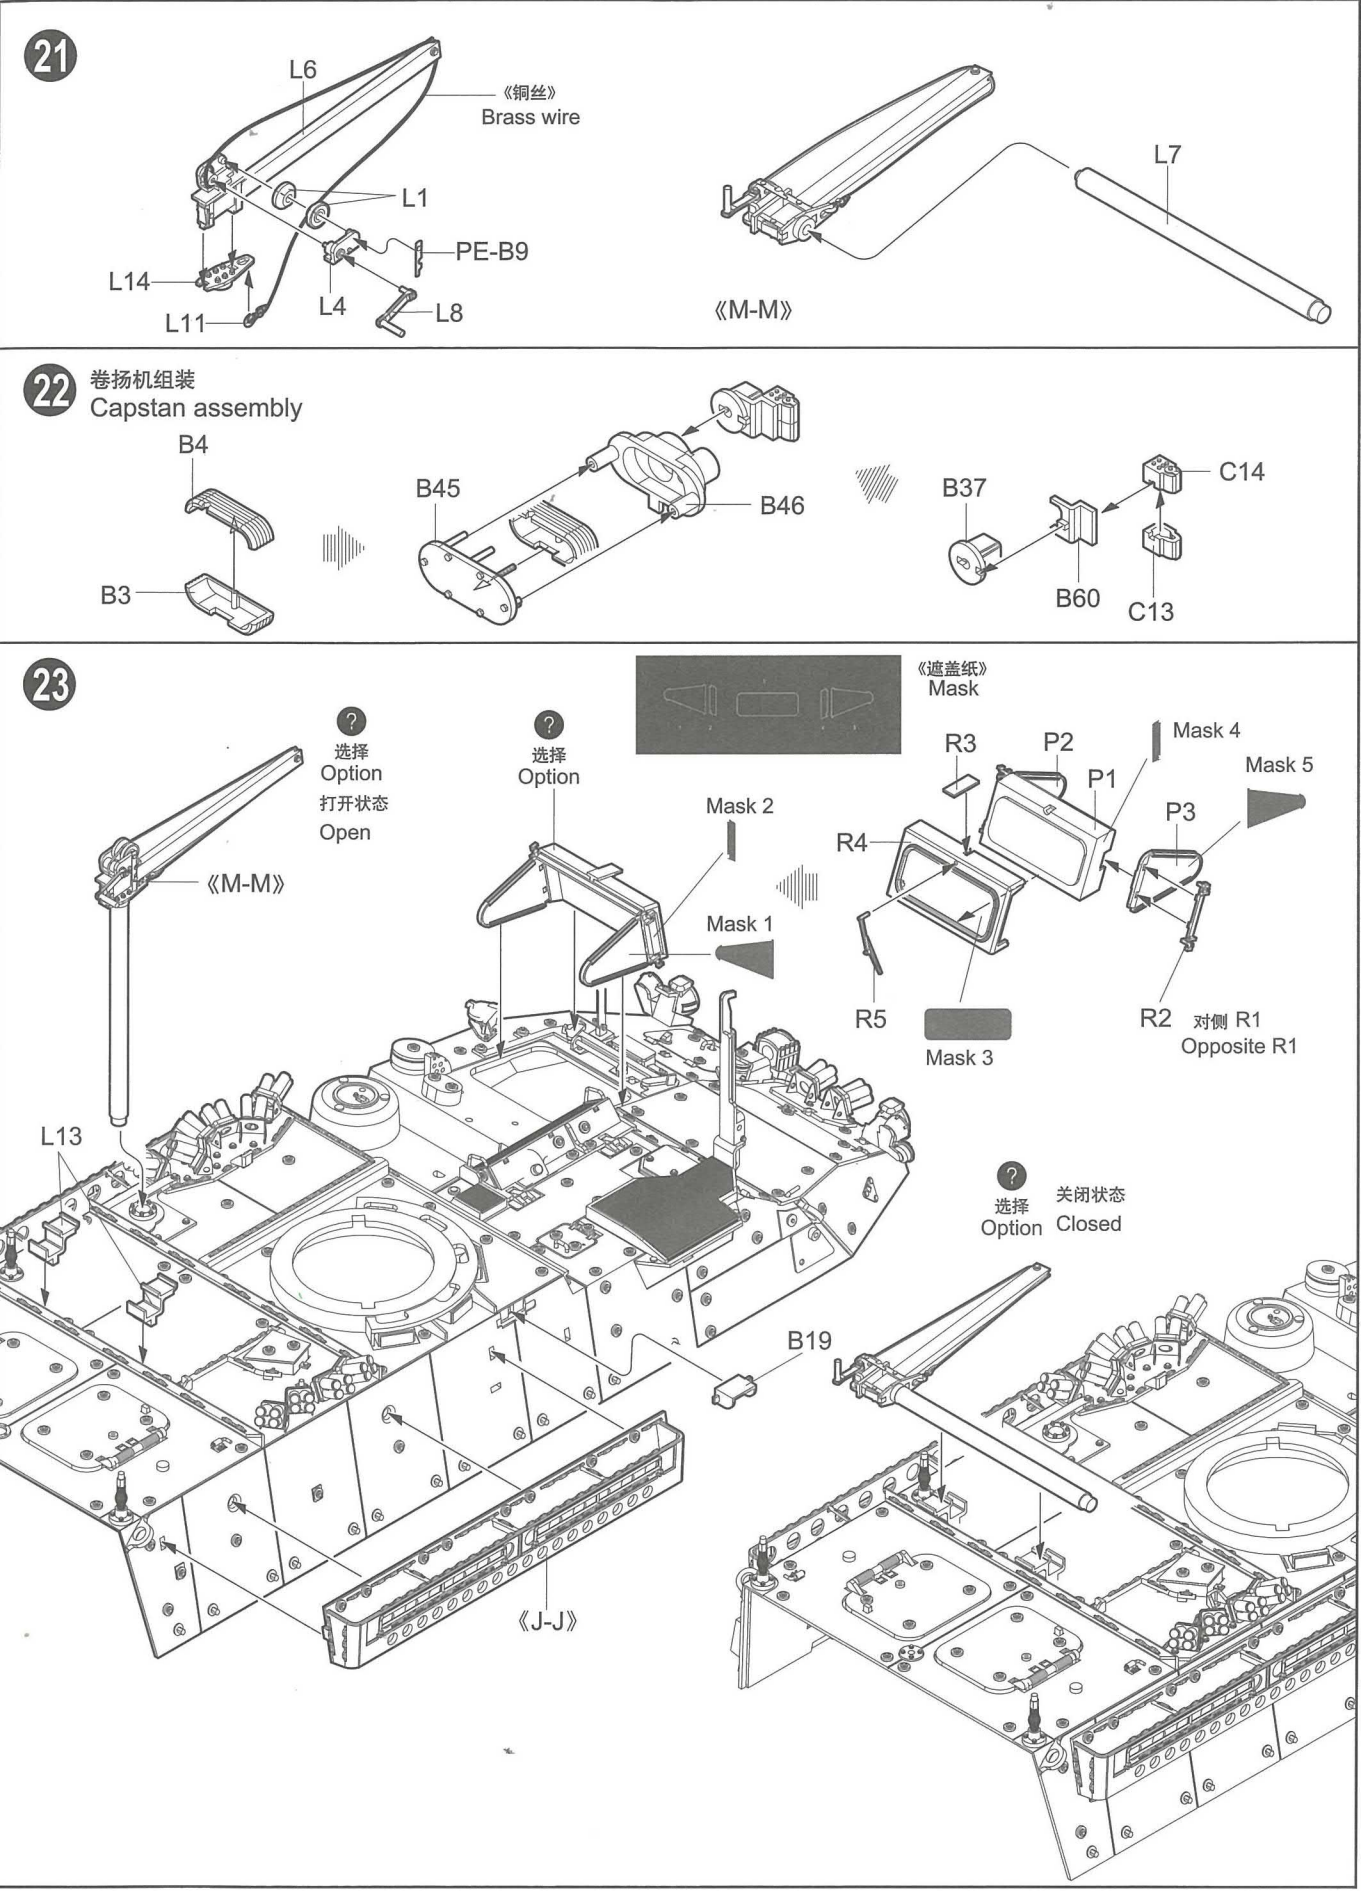

21
L6
《铜丝》
Brass wire
L1
PE-B9
L14
L11
L4
L8
L7
《M-M》
22
卷扬机组装
Capstan assembly
B4
B3
B45
B46
B37
C14
B60
C13
23
《遮盖纸》
Mask
选择
Option
打开状态
Open
《M-M》
选择
Option
Mask 2
Mask 1
R3
P2
Mask 4
P1
Mask 5
P3
R4
R5
Mask 3
R2
对侧 R1
Opposite R1
L13
选择
Option
关闭状态
Closed
B19
《J-J》

24 驾驶员舱盖组装
Driver hatch assembly

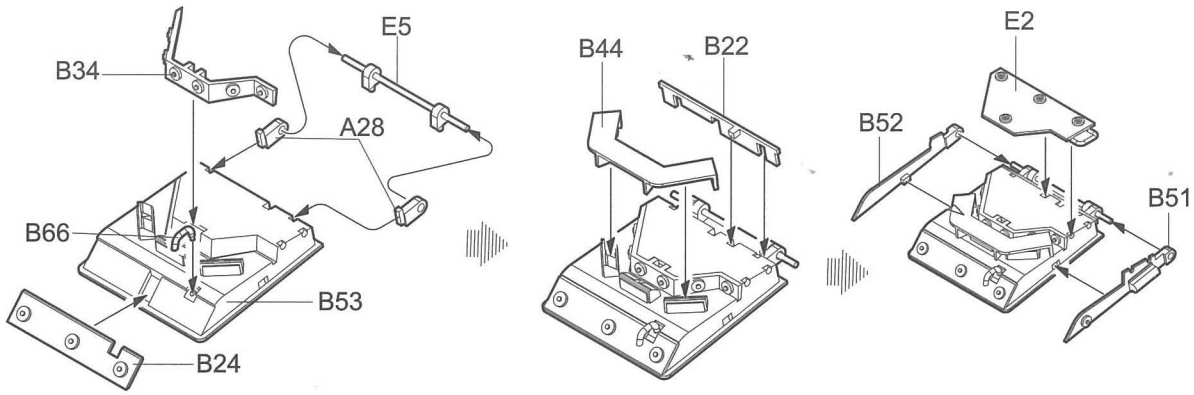


25 车面组装
Upper hull assembly

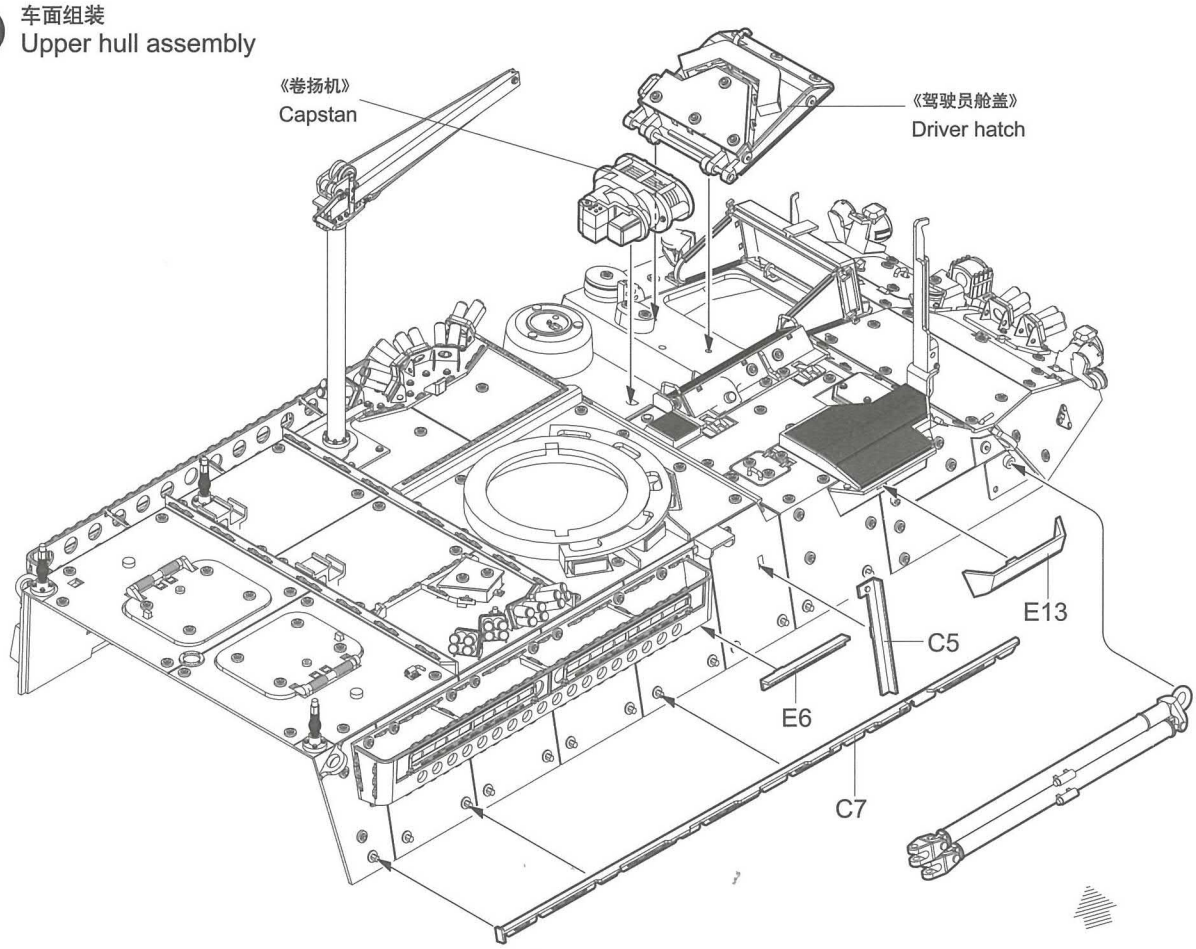


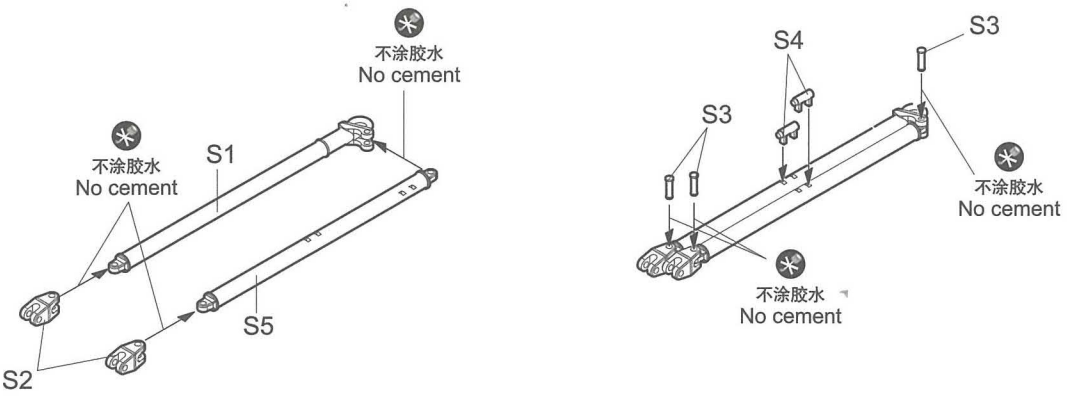


26 车面组装
Upper hull assembly

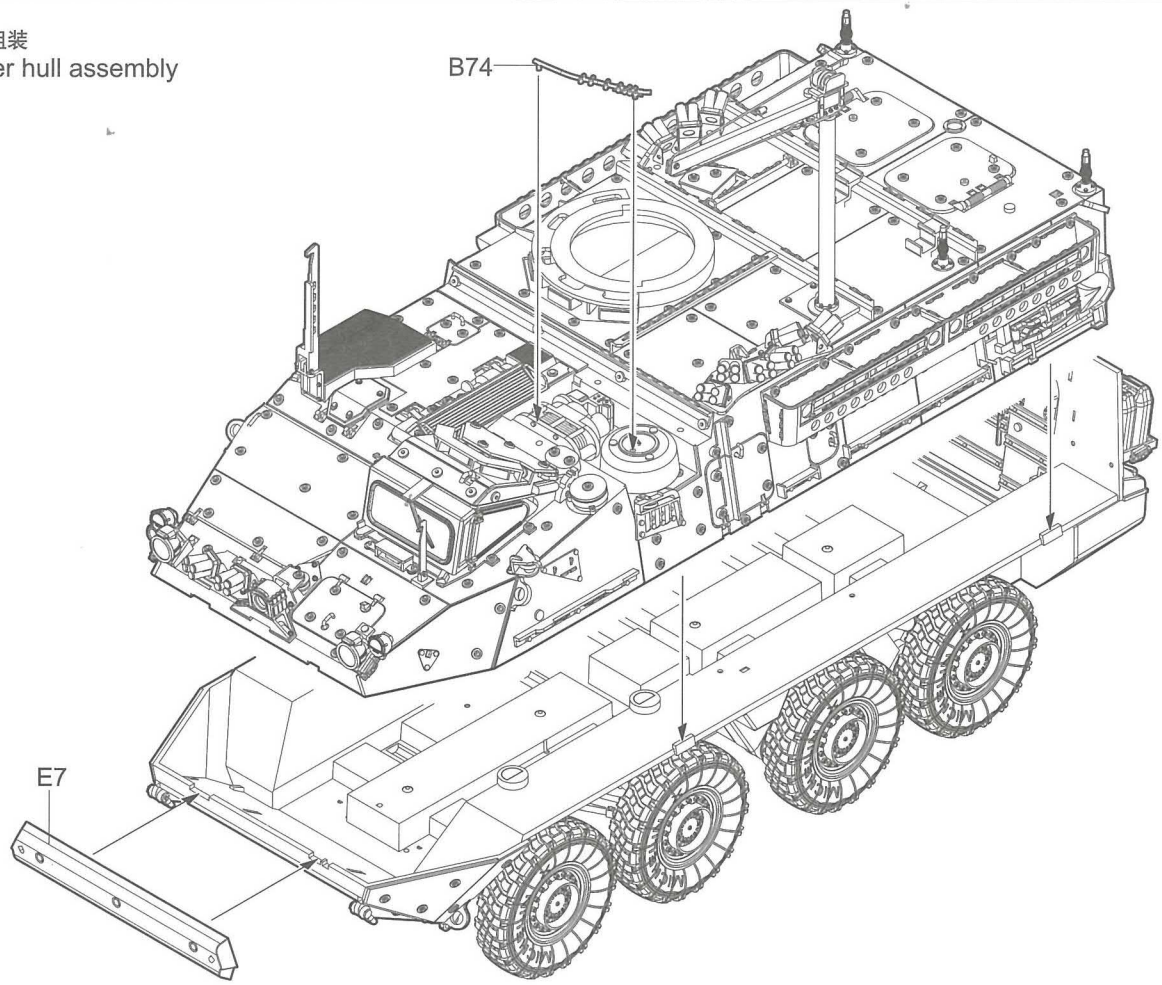


27 车灯护架组装
Light bracket assembly

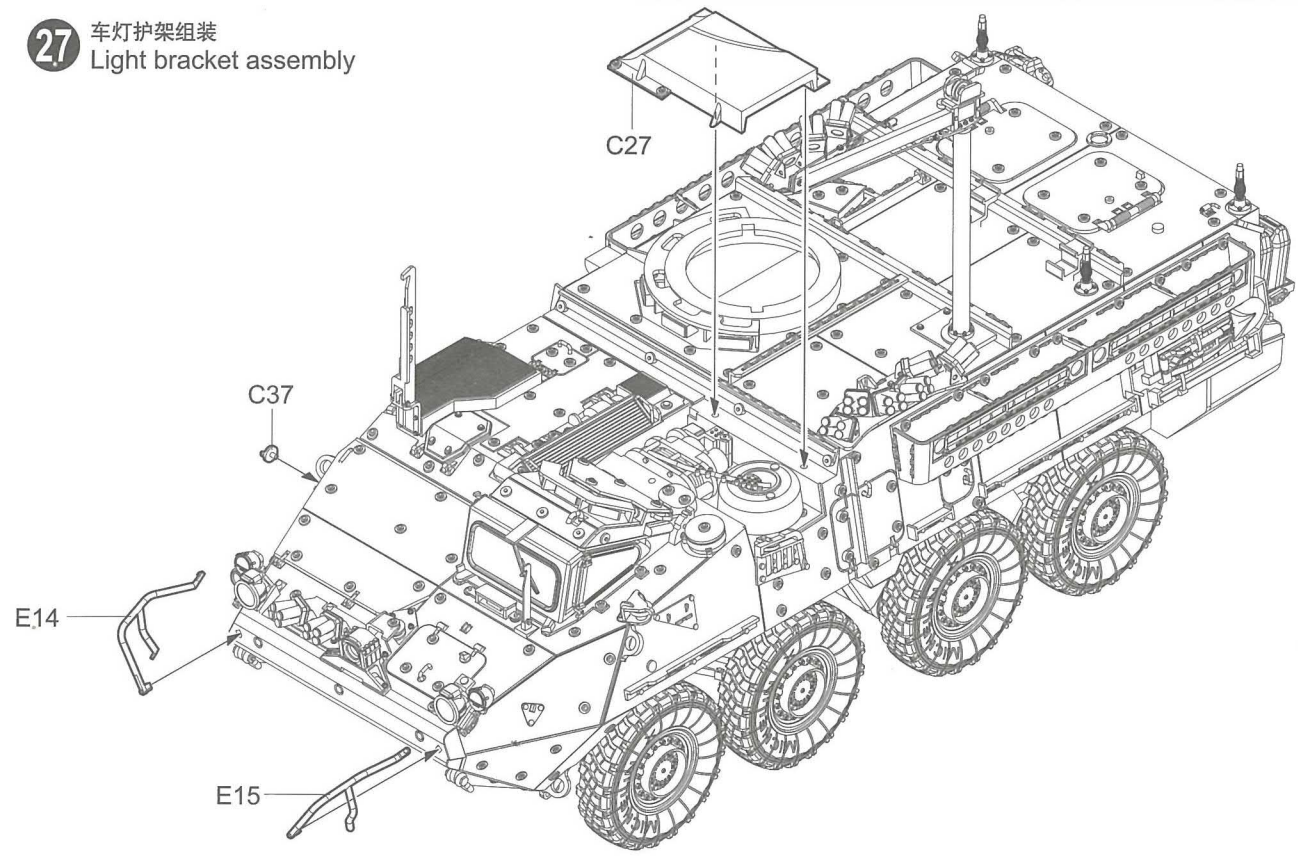


28

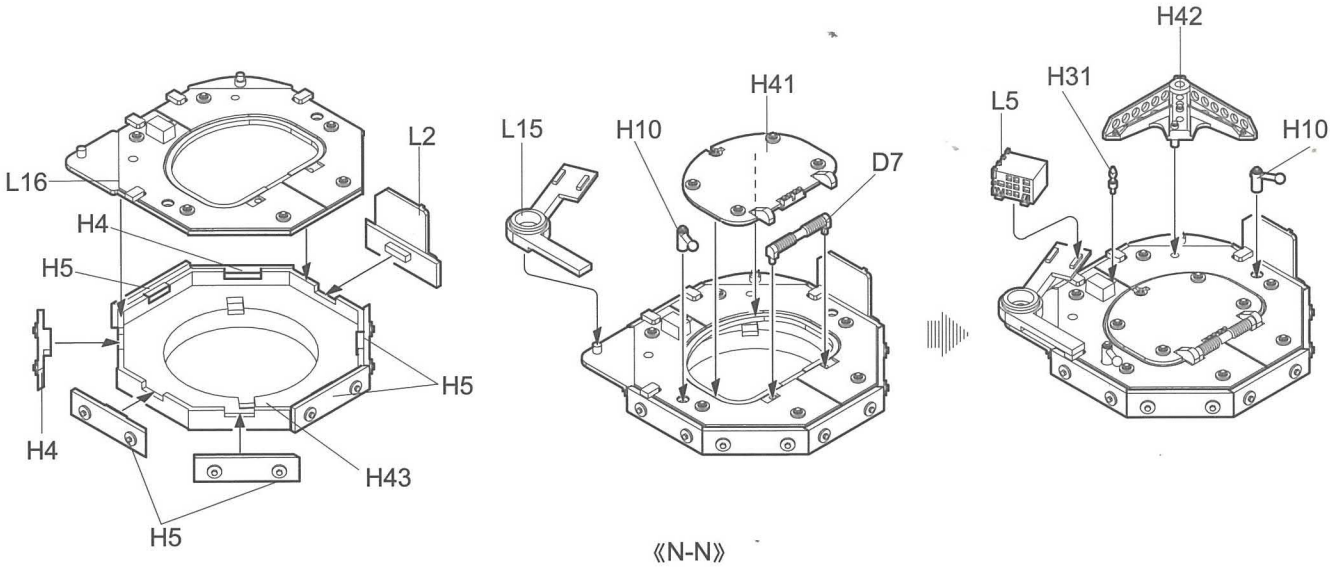
L16
L2
H4
H5
H5
H4
H43
H5
L15
H10
H41
D7
《N-N》
H42
H31
L5
H10

29

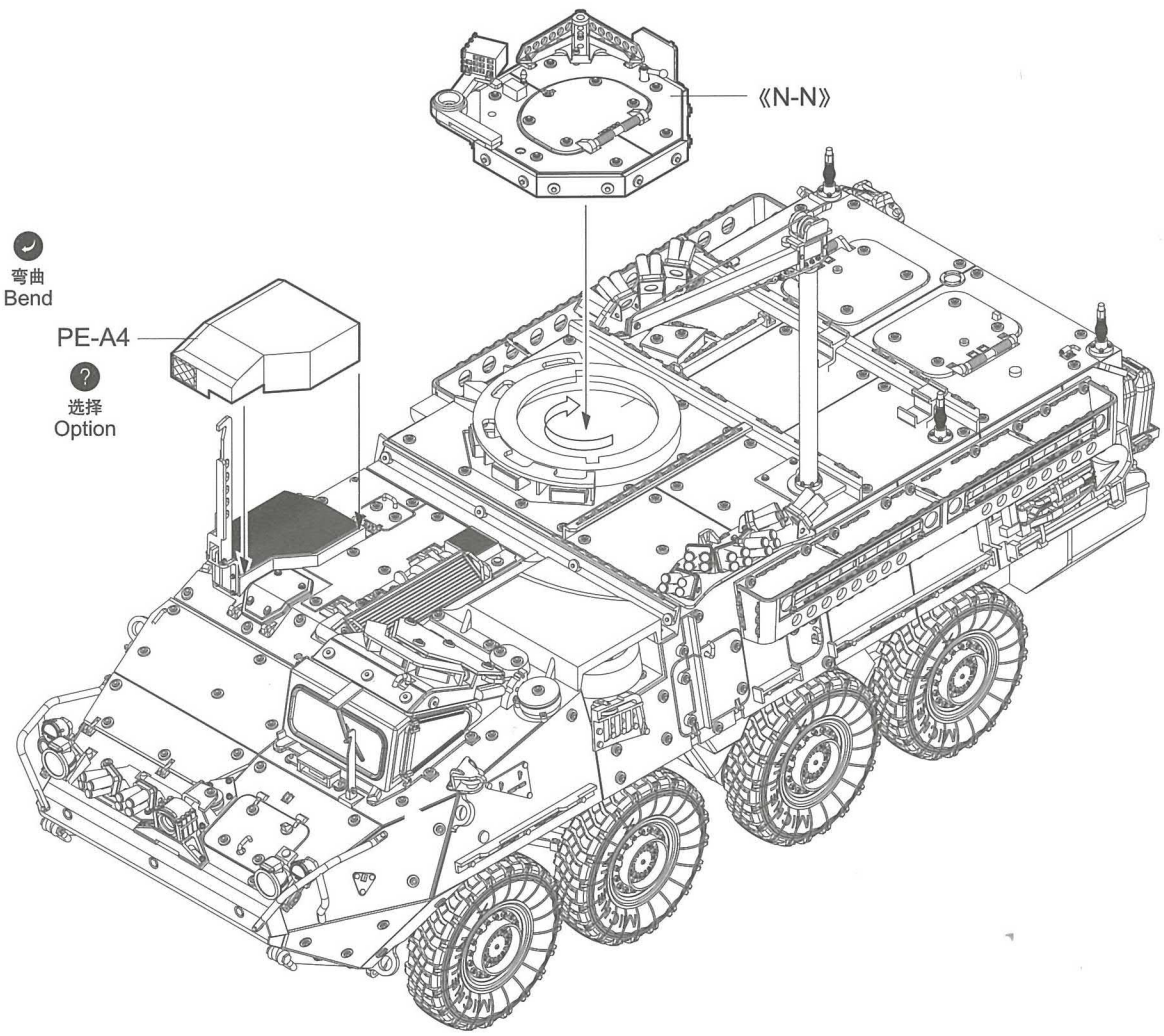
《N-N》
弯曲
Bend
PE-A4
选择
Option

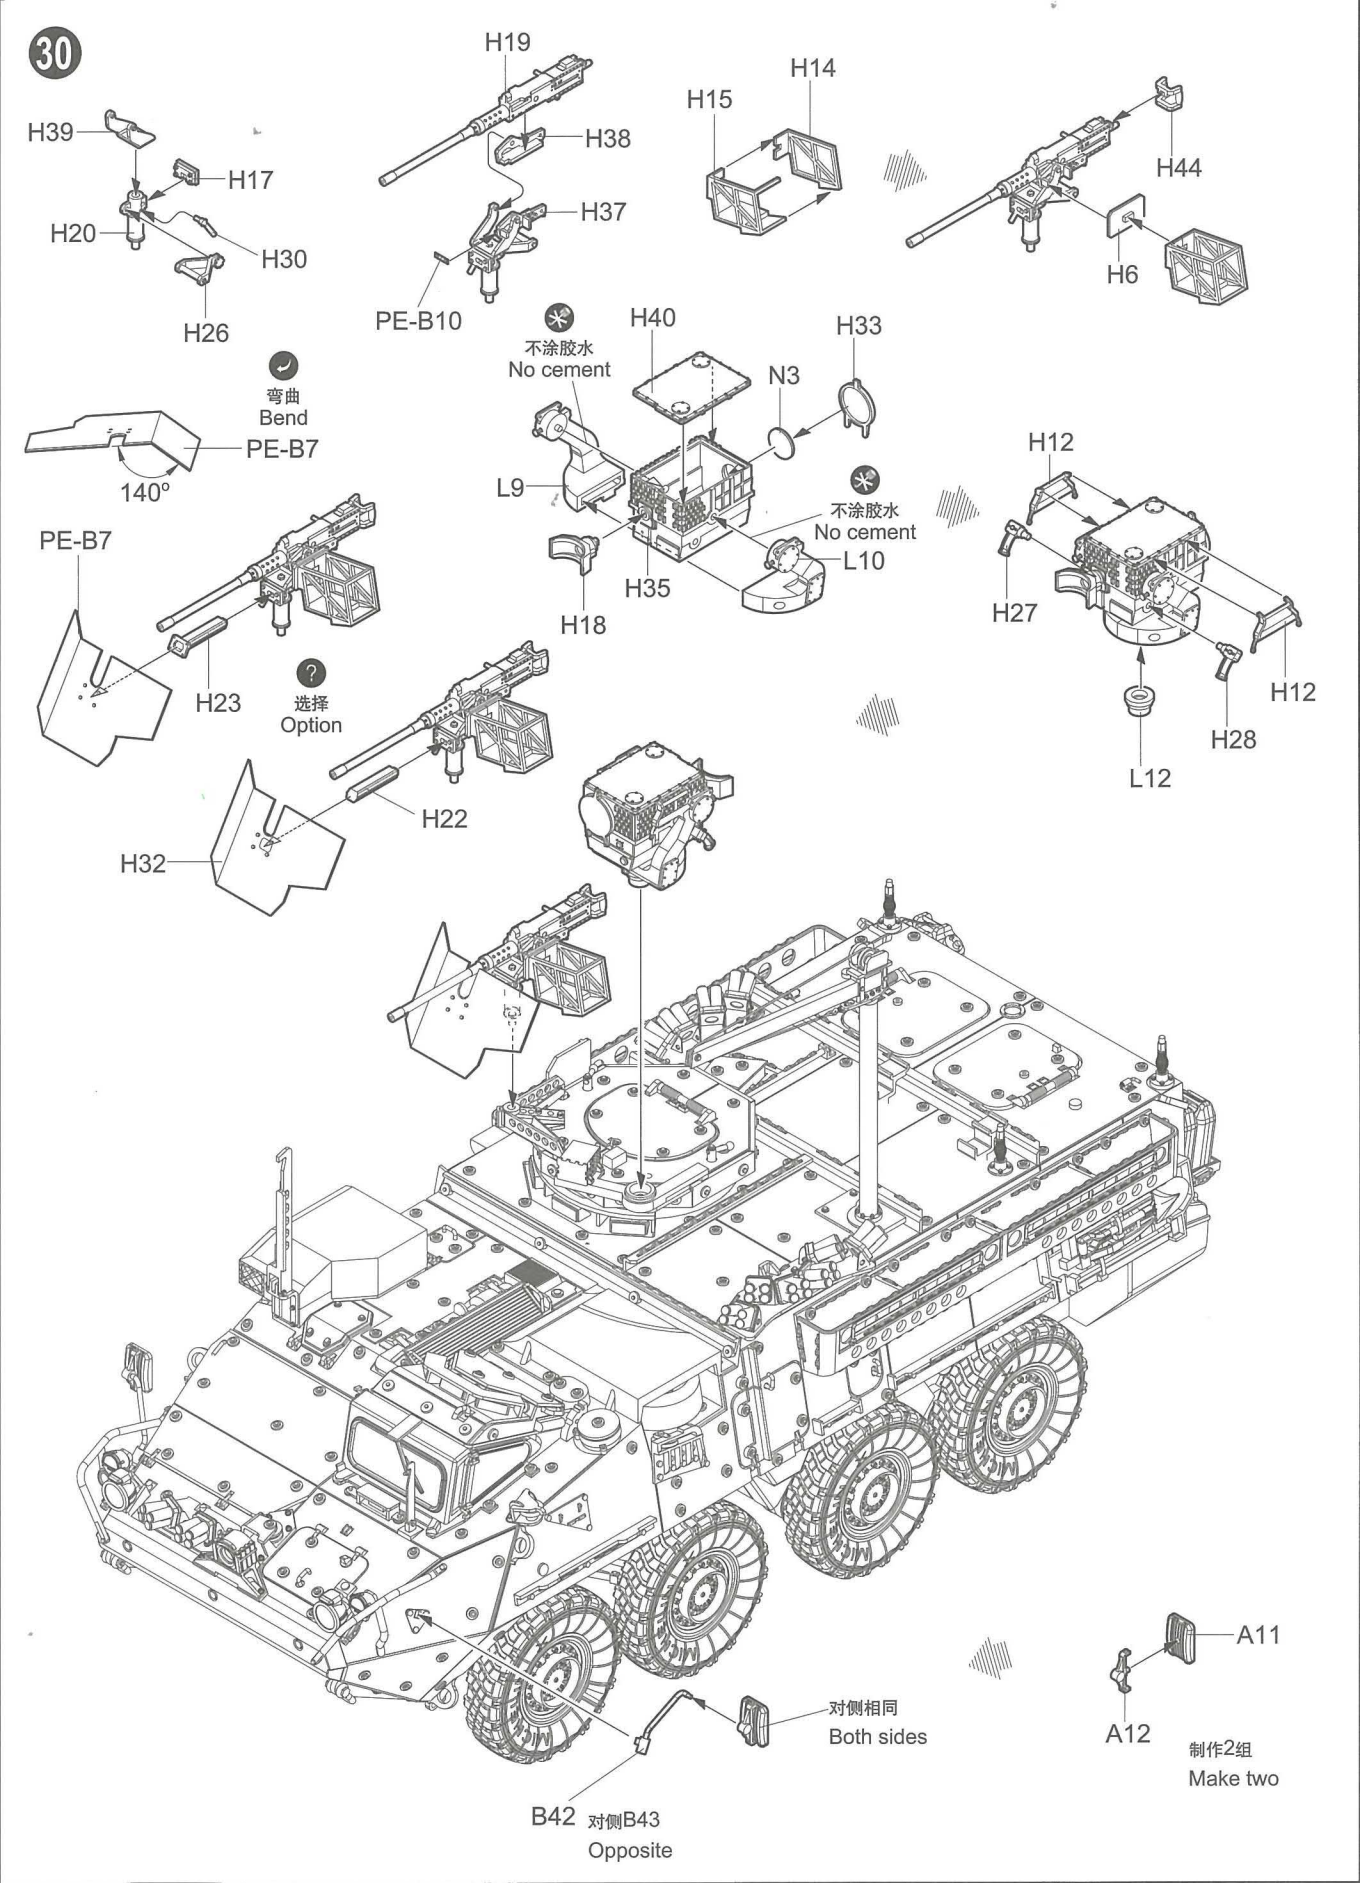
30
H19
H38
H37
PE-B10
H39
H17
H20
H30
H26
H14
H15
H44
H6
不涂胶水
No cement
H40
H33
N3
L9
H35
H18
不涂胶水
No cement
L10
弯曲
Bend
PE-B7
140°
PE-B7
H23
选择
Option
H22
H32
H12
H27
H12
H28
L12
对侧相同
Both sides
B42
对侧B43
Opposite
A11
A12
制作2组
Make two


31 捆扎带安装
Strapping installation


切取适当长度
Cut Length as required






制作32组
Make thirty-two

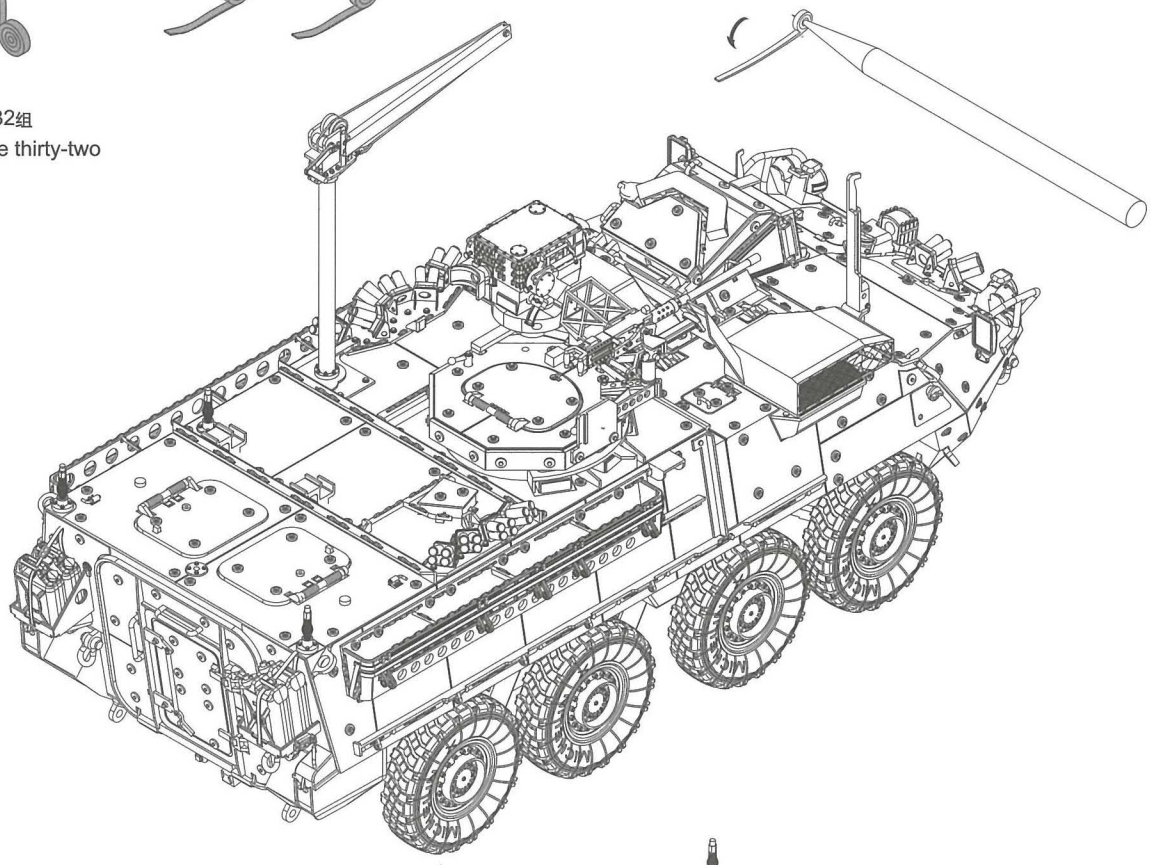


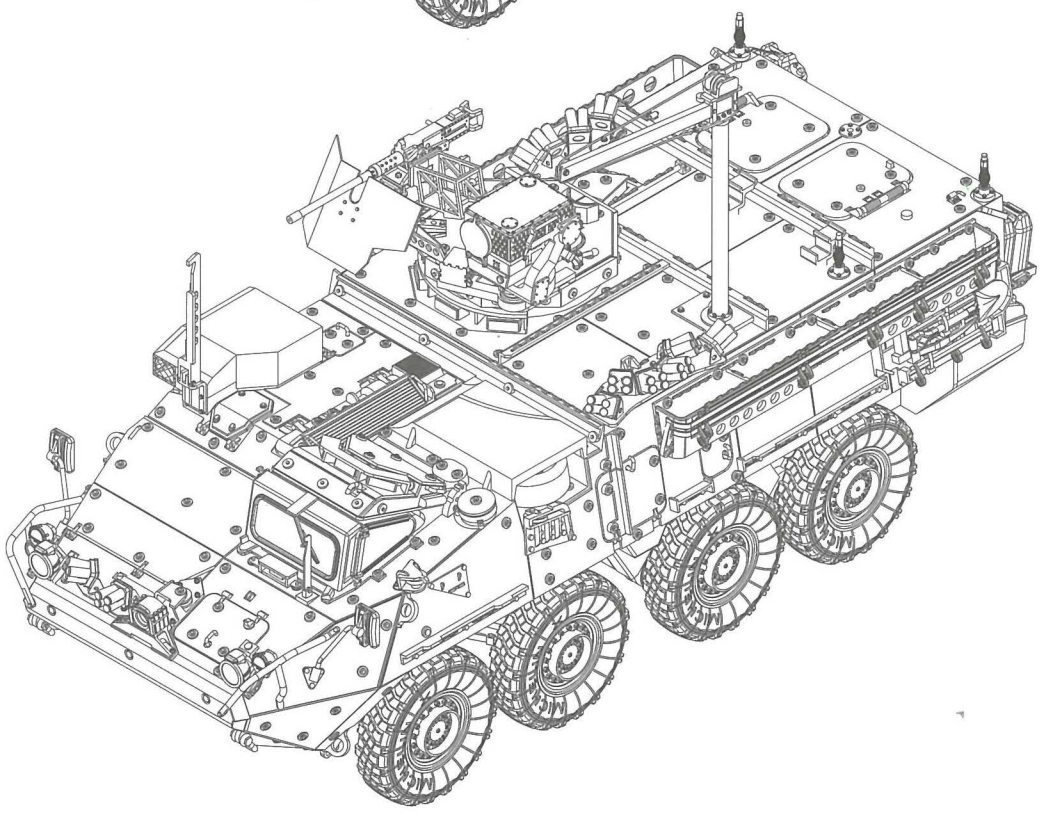

32 人物 Crew

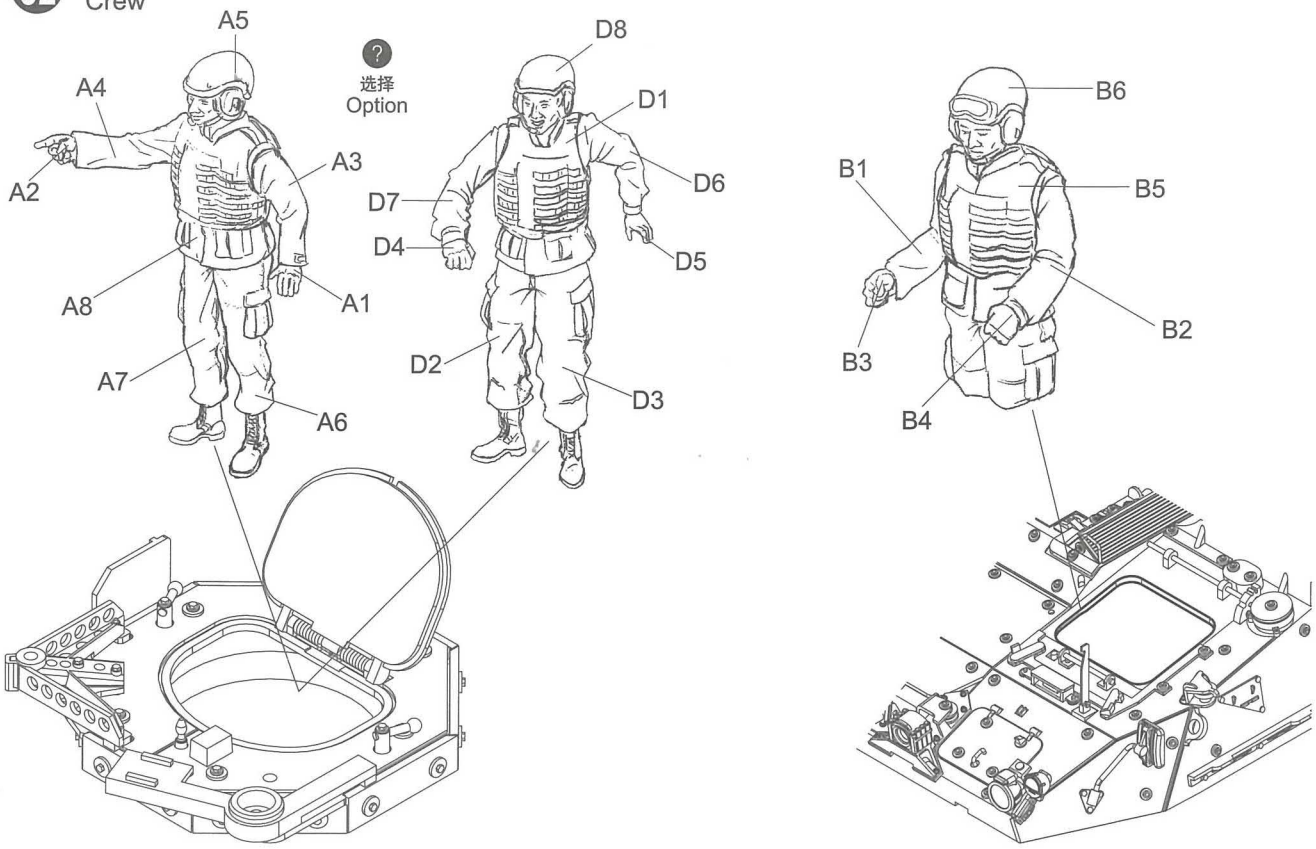



33 人物涂装 Crew Painting

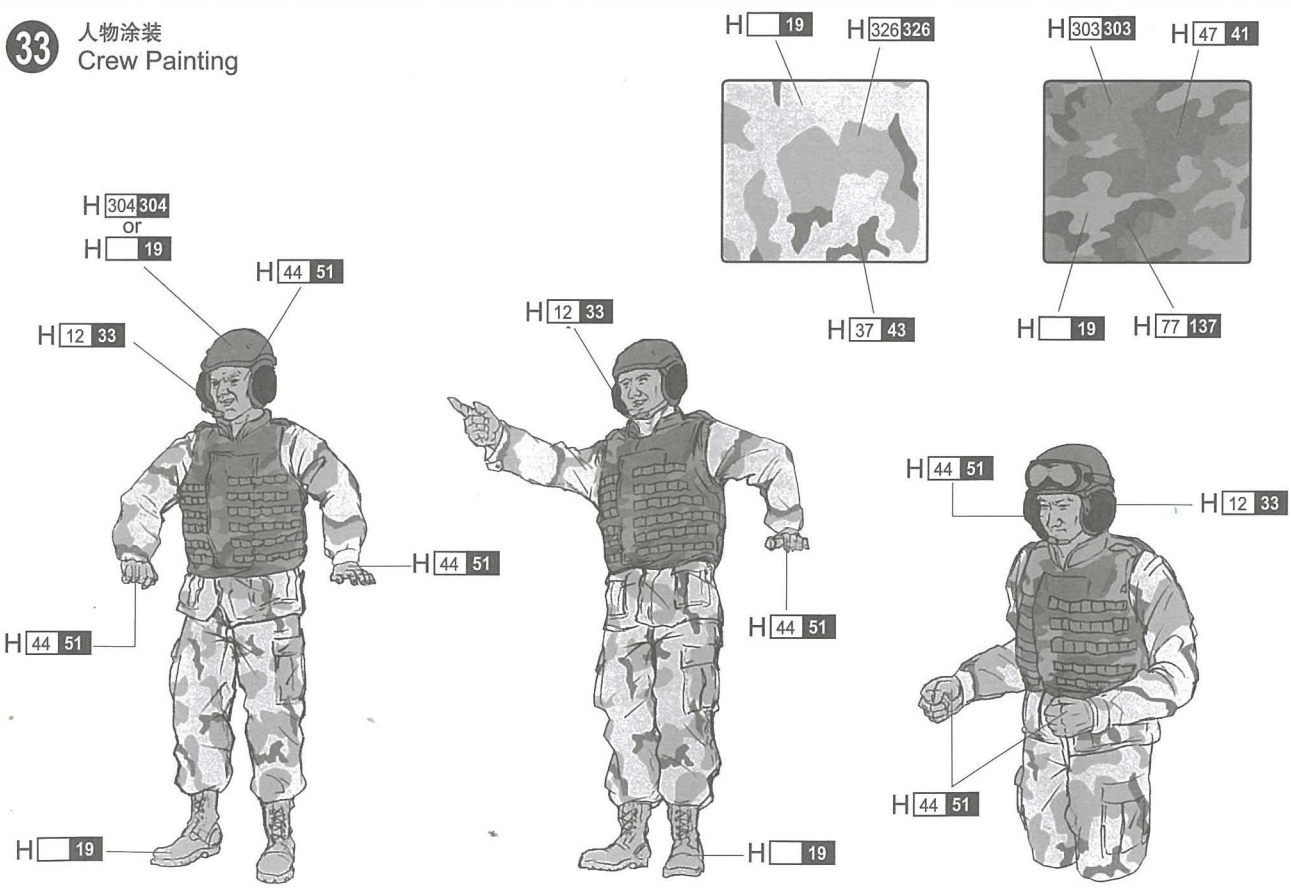

附件:

Stowage Set

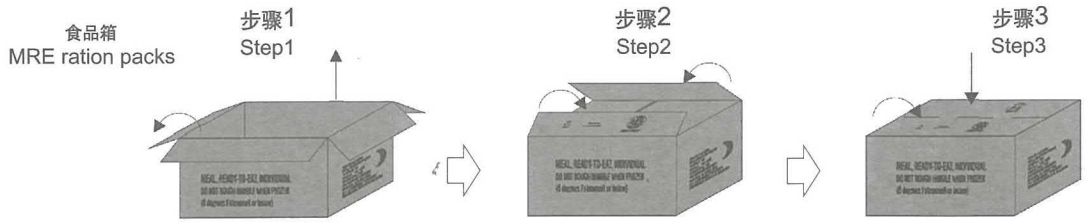


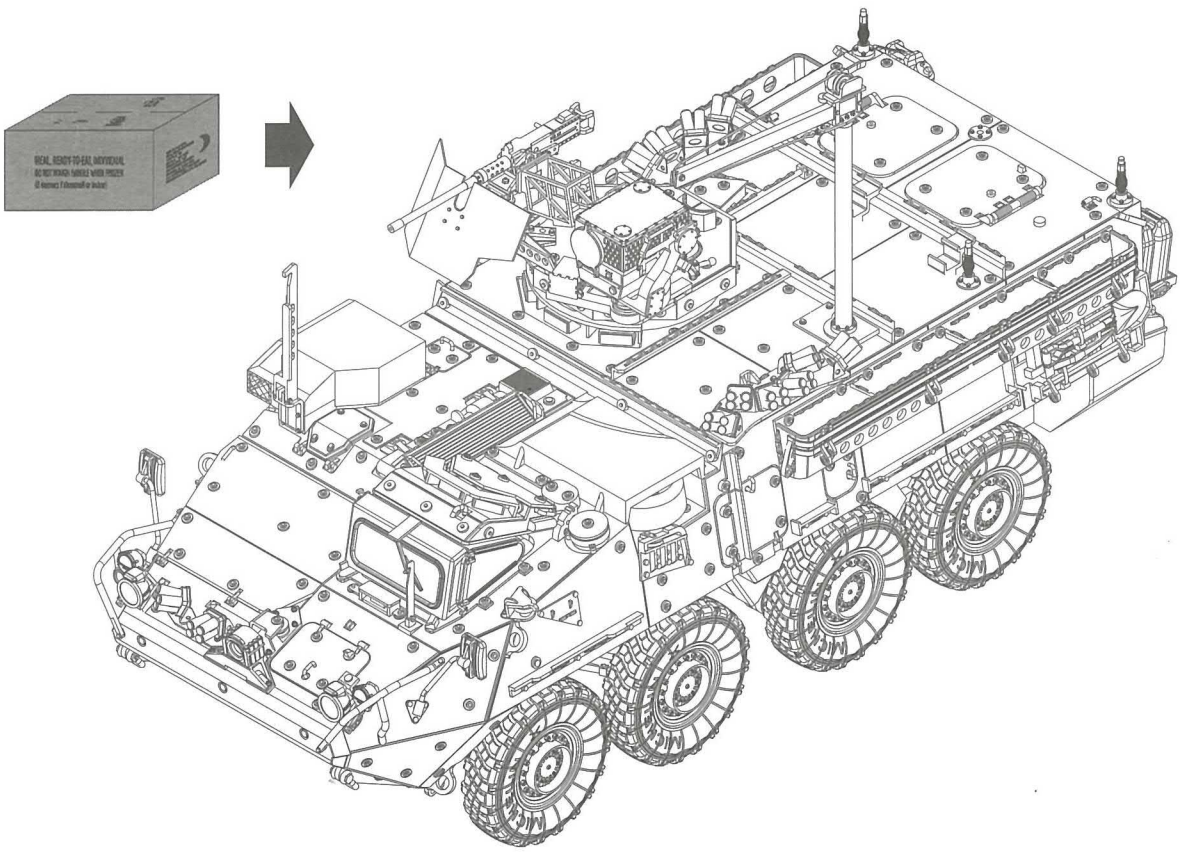



涂装同标贴指示
Painting & Marking guide


PAINT REFERENCE COLOUR


Color	Mr.Hobby	Vallejo	Model Master	Tamiya	Humbrol
Silver 银色	H 8 **8**	997	1546	X11	11
Metal Black 黑铁色	H 18 **28**	864	1402	–	–
Wood Brown 木棕色	H 37 **43**	983	1701	–	186
Red 红色	H 3 **3**	908	1503	X7	19
Light Green 橄榄绿色	H 303 **303**	–	1713	XF20	117
Tire Black 胎黑色	H 77 **137**	–	–	–	–
Khaki 卡其色	H 81 **55**	988	–	XF49	26

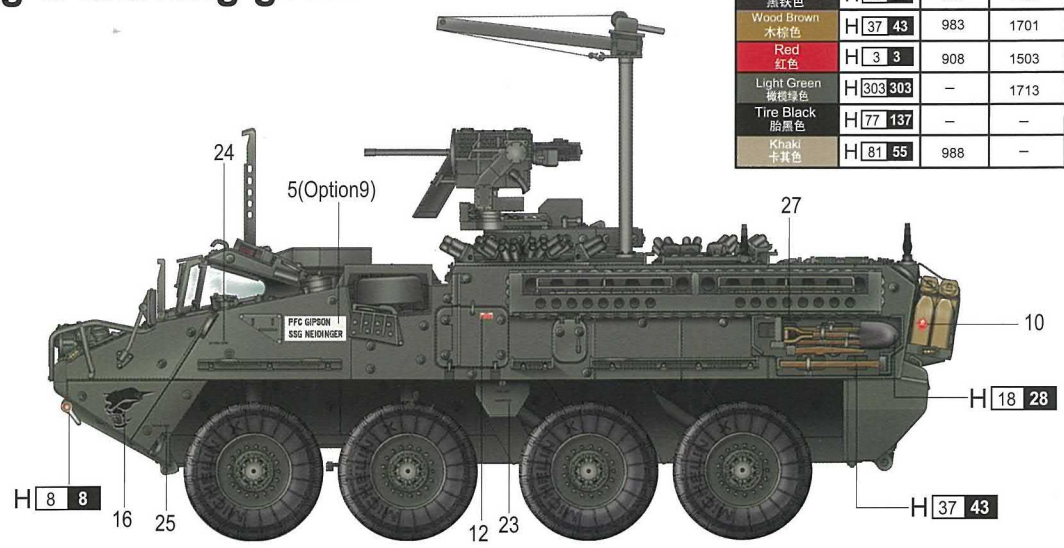

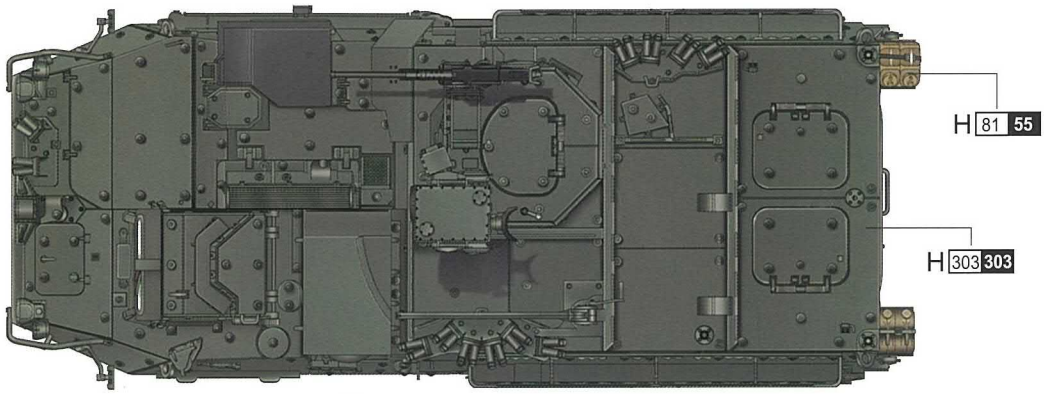

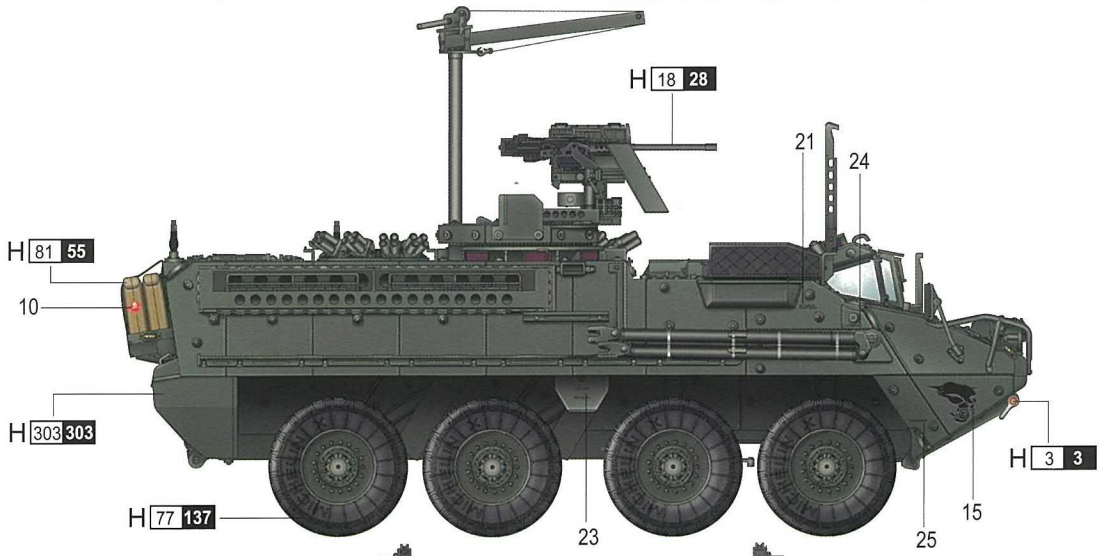

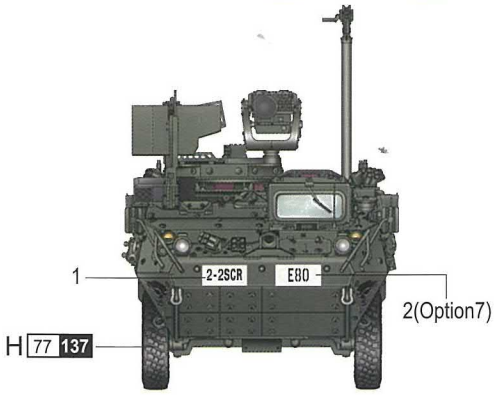

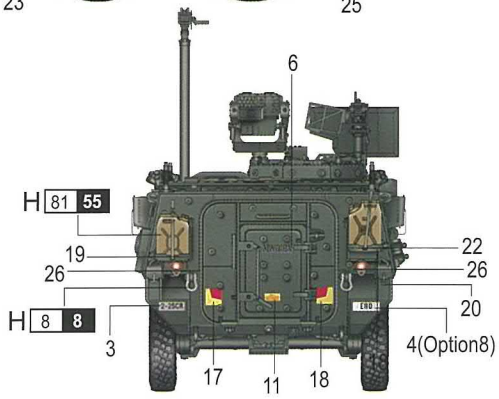

H□ AQUEOUS HOBBY COLOR ■ Mr. COLOR